


# KDE42XBR950/KDE50XBR950

## SERVICE MANUAL

*US Model  
Canadian Model*

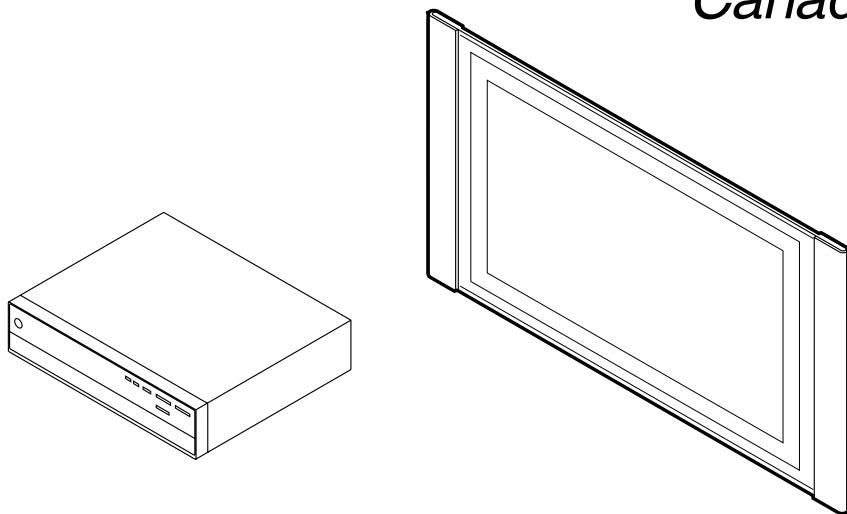

### SPECIFICATIONS

Panel System	Plasma Display panel	
Display resolution	KDE42XBR950	1024 pixels (horizontal) × 768 pixels (vertical)
	KDE50XBR950	1365 pixels (horizontal) × 768 pixels (vertical)
Antenna	75 ohm external terminal for VHF/UHF	
Television System	NTSC, American TV Standard	
Channel Coverage	VHF	2-13
	UHF	14-69
	DTV	1-999
	CATV	1-125
Power Requirements	120V, 60 Hz	
Inputs/Outputs		
DVI-HDTV	1 terminal, 3.3V T.M.D.S., 50 ohms	The DVI-HDTV input terminal is compliant with the EIA-861 standard and is not intended for use with personal computers.
Video (IN)	3 total (1 on front panel)	1 Vp-p, 75 ohms unbalanced, sync negative
SVideo (IN)	3 total (1 on front panel)	Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal), 75 ohms
Audio (IN)	6 total (1 on front panel)	500 mVrms (100% modulation) Impedance: 47 kilohm
Component Video Input	2 (Y, Pb, Pr)	Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative; Pb: 0.7 Vp-p, 75 ohms Pr: 0.7 Vp-p, 75 ohms
CONTROL S (IN)	1	minijack
CONTROL S (OUT)	1	minijack
Digital Audio Optical Output (PCM/Dolby Digital)	1	Optical Rectangular (1)

**FLAT PANEL COLOR TV**  
**SONY®**

i.LINK	3 total (1 on front panel)	4-pin S400 i.LINK terminal
Variable/Fixed Audio (OUT)	1	More than 408 mVrms at the maximum volume setting (Variable) More than 408 mVrms (Fixed) Impedance (output): 2 kilohms
Sub woofer (OUT)	1	phono jack
RF Inputs	2	
Screen Size (measured diagonally)	KDE42XBR950 KDE50XBR950	42 inches 50 inches
Speaker Output	15W × 2	
Dimensions (W × H × D)	PDM-4210  PDM-5010  MBD-XBR950	1352 × 720 × 102 mm (53 1/4 × 28 3/8 × 4 1/8 in)  1573 × 856 × 108 mm (62 1/8 × 33 3/4 × 4 3/8 in)  430 × 79 × 342.8 mm (17 × 3 1/8 × 13 1/2 in)
Mass	Display unit  Media receiver unit  MBD-XBR950: 6.5kg (14 lbs 5 oz)	PDM-4210: 39kg (86 lbs) PDM-5010: 53kg (114 lbs)  MBD-XBR950: 6.5kg (14 lbs 5 oz)
Power Consumption	In Use  In Standby  i.LINK standby	Display unit  Media receiver unit  MBD-XBR950: 53 W  Under 1.5 W  Under 22 W
Supplied Accessories	Media receiver unit  Display unit	RM-Y1000  Frame bars (2) (KDE61XBR950 only) Screws (2) (KDE61XBR950 only)

Design and specifications are subject to change without notice.

## **WARNING AND CAUTIONS**

### **CAUTION**

These servicing instructions are for use by qualified service personnel only To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

### **WARNING!!**

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.

### **⚠ SAFETY-RELATED COMPONENT WARNING!!**

Components identified by shading and  $\triangle$  mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

---

### **ATTENTION!!**

Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

Afin d'éviter tout risque d'électrocution provenant d'un châssis sous tension, un transformateur d'isolement doit être utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur

### **⚠ ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!**

Les composants identifiés par une trame et par une marque  $\triangle$  sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants Sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par Sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:


1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

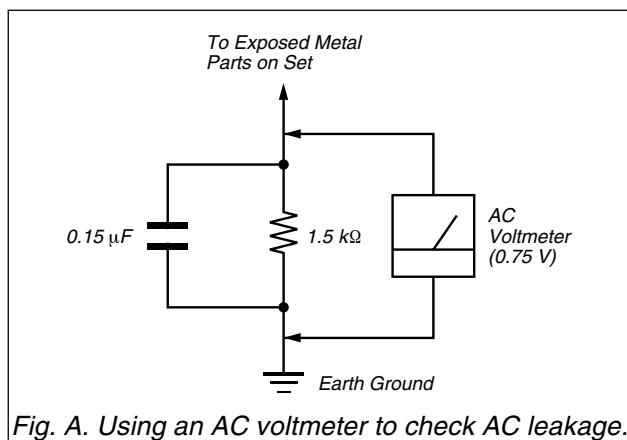

### WARNING!!

**SAFETY-RELATED COMPONENT WARNING!!**  
COMPONENTS IDENTIFIED BY SHADING AND MARK ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

### AVERTISSEMENT!!

**ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!**

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ! SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.


# TABLE OF CONTENTS

<b>1. DISASSEMBLY .....</b>	<b>1-1</b>		
1-1. DISPLAY UNIT (PDM-4210/5010) .....	1-1	(5) Schematic Diagram of R1 and R2 Boards ..... 3-27	
1-1-1. REAR PANEL REMOVAL .....	1-1	3-4-2. MEDIA RECEIVER UNIT (MBD-XBR950) .. 3-28	
1-1-2. F AND K BOARDS REMOVAL.....	1-2	(1) Schematic Diagrams of A Board ..... 3-28	
1-1-3. DEM BOARD REMOVAL .....	1-2	(2) Schematic Diagram of G Board..... 3-33	
1-1-4. G BOARD REMOVAL .....	1-3	(3) Schematic Diagram of H1 Board ..... 3-35	
1-1-5. DISPLAY PANEL ASSY .....	1-3	(4) Schematic Diagram of H2 Board ..... 3-36	
1-1-6. R1 BOARD REMOVAL .....	1-4	(5) Schematic Diagram of H3 and H4 Boards ..... 3-38	
1-1-7. R2 BOARD REMOVAL .....	1-4	(6) Schematic Diagram of IF Board ..... 3-39	
1-2. MEDIA RECEIVER UNIT (MBD-XBR950) ...	1-5	(7) Schematic Diagrams of M Board ..... 3-40	
1-2-1. TOP COVERS REMOVAL .....	1-5	(8) Schematic Diagram of UD Board ..... 3-46	
1-2-2. QH BOARD REMOVAL .....	1-5	3-5. SEMICONDUCTORS ..... 3-48	
1-2-3. H1, H2, H3 AND H4 BOARDS REMOVAL	1-6		
1-2-4. G BOARD REMOVAL .....	1-6		
1-2-5. A BOARD REMOVAL .....	1-7		
1-3. CABLE ARRANGEMENTS FOR MEDIA RE			
CEIVER UNIT (MBD-XBR950) .....	1-8		
1-3-1. CN9401 LEAD ARRANGEMENT ON			
A BOARD .....	1-8	4. EXPLODED VIEWS ..... 4-1	
1-3-2. i-LINK CABLE ARRANGEMENT .....	1-8	4-1. DISPLAY UNIT-1 (PDM-4210/5010) .....	4-2
1-3-3. FAN LEAD, RELAY CABLE, AND PIN CABLE		4-2. DISPLAY UNIT-2 (PDM-4210/5010) .....	4-3
ARRANGEMENT .....	1-8	4-3. MEDIA RECEIVER UNIT-1 (MBD-XBR950) ...	4-4
1-3-4. CABLE ARRANGEMENTS NEAR		4-4. MEDIA RECEIVER UNIT-2 (MBD-XBR950) ...	4-5
ANTENNA SWITCH .....	1-8	4-5. MEDIA RECEIVER UNIT-3 (MBD-XBR950) ...	4-6
1-3-5. CABLE ARRANGEMENTS NEAR		4-6. PACKING MATERIALS FOR DISPLAY UNIT	
BLOCK .....	1-9	(PDM-4210) ..... 4-7	
1-3-6. LVDS CABLE ARRANGEMENT .....	1-9	4-7. PACKING MATERIALS FOR DISPLAY UNIT	
		(PDM-5010) ..... 4-8	
<b>2. ADJUSTMENTS .....</b>	<b>2-1</b>	4-8. PACKING MATERIALS FOR DISPLAY UNIT	
2-1. VS, VD VOLTAGE ADJUSTMENT		(MBD-XBR950) . 4-9	
(PDM-4210/5010) .....	2-1		
2-2. WHITE BALANCE ADJUSTMENT			
(PDM-4210/5010) .....	2-1		
<b>3. DIAGRAMS .....</b>	<b>3-1</b>		
3-1. BLOCK DIAGRAMS .....	3-1		
3-1-1. DISPLAY UNIT (PDM-4210/5010) .....	3-1		
3-1-2. MEDIA RECEIVER UNIT (MBD-XBR950) ..	3-5		
3-2. FRAME DIAGRAM .....	3-11		
3-3. CIRCUIT BOARDS LOCATION .....	3-12		
3-3-1. DISPLAY UNIT (PDM-4210/5010) .....	3-12		
3-3-2. MEDIA RECEIVER UNIT (MBD-XBR950) ..	3-12		
3-4. SCHEMATIC DIAGRAMS AND PRINTED			
WIRING BOARDS .....	3-12		
3-4-1. DISPLAY UNIT (PDM-4210/5010) .....	3-13		
(1) Schematic Diagram of F Board .....	3-13		
(2) Schematic Diagram of G Board .....	3-14		
(3) Schematic Diagram of K Board .....	3-16		
(4) Schematic Diagrams of DEM Board .....	3-18		


## SECTION 1 DISASSEMBLY

### 1-1. DISPLAY UNIT (PDM-4210/5010)


#### 1-1-1. REAR PANEL REMOVAL

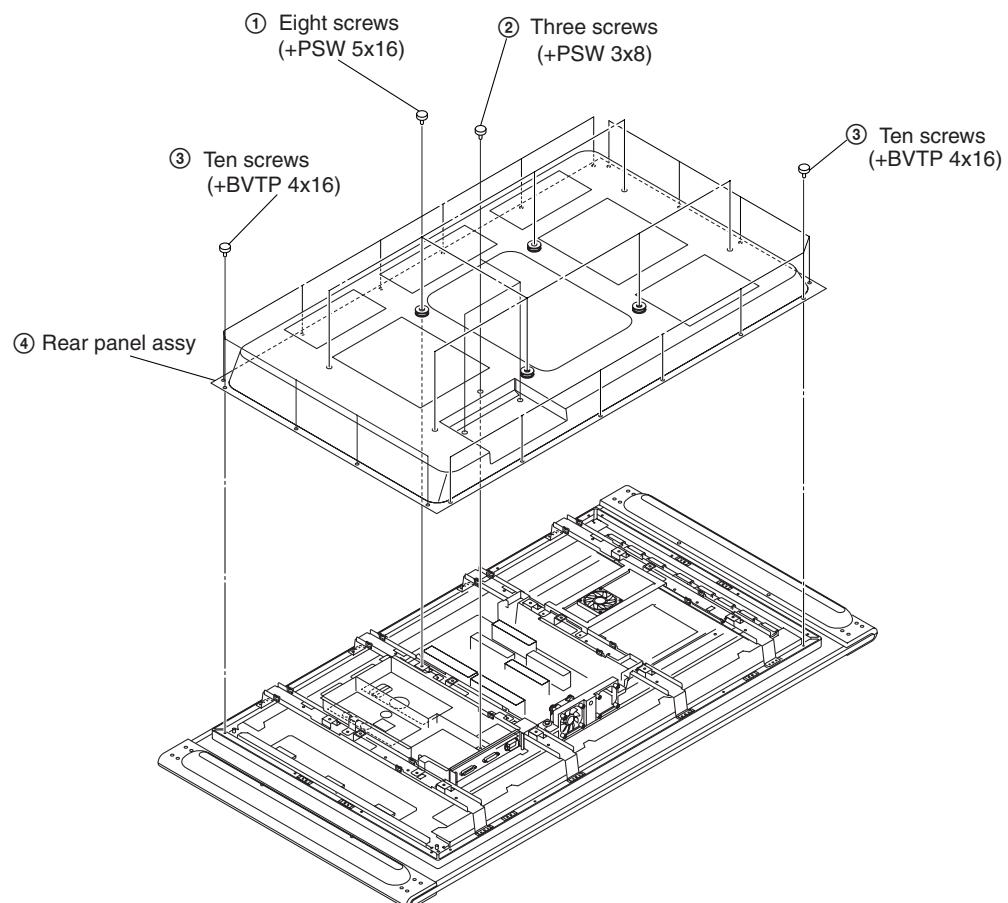


## 1-1-2. F AND K BOARDS REMOVAL

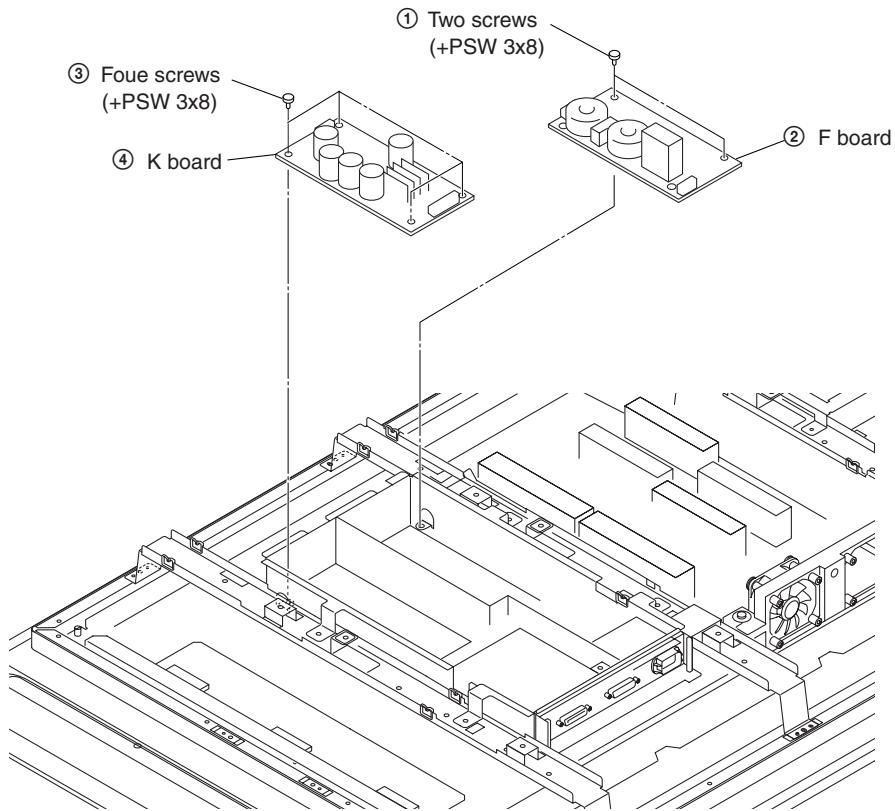


## 1-1-3. DEM BOARD REMOVAL

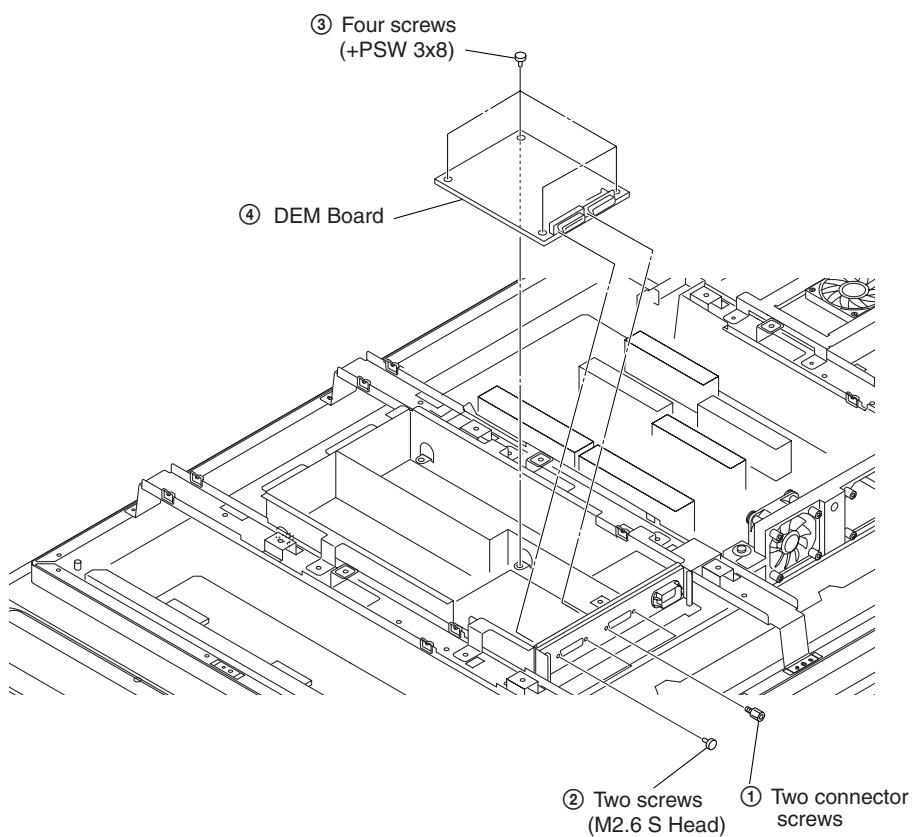


#### 1-1-4. G BOARD REMOVAL

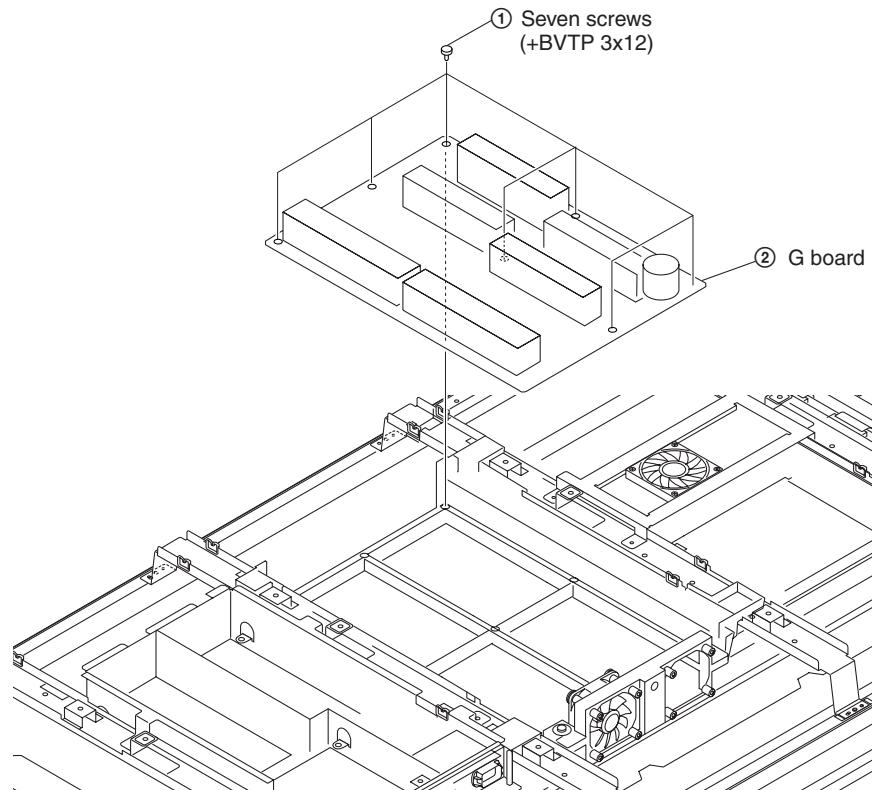


#### 1-1-5. DISPLAY PANEL ASSY

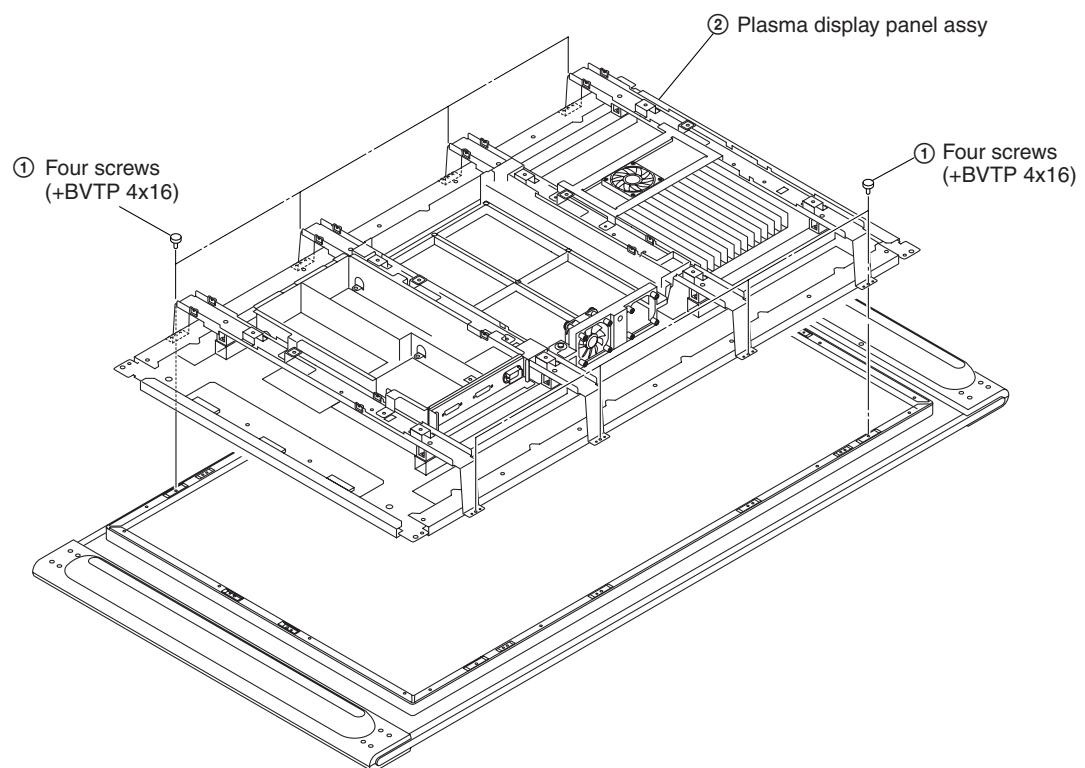

## 1-1-6. R1 BOARD REMOVAL

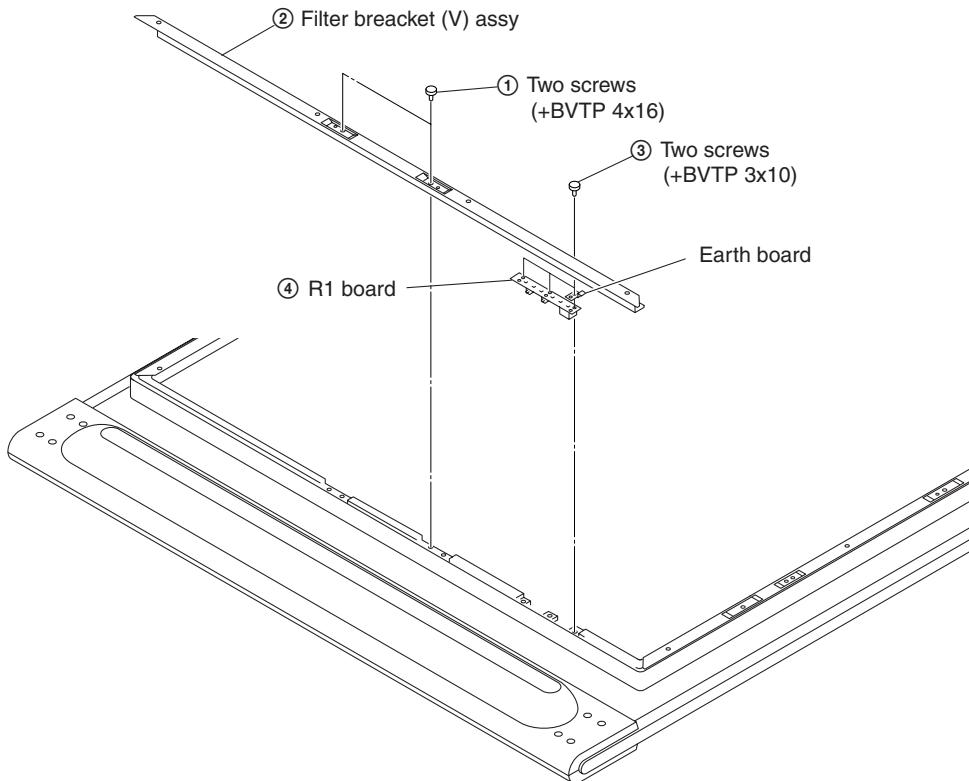


## 1-1-7. R2 BOARD REMOVAL

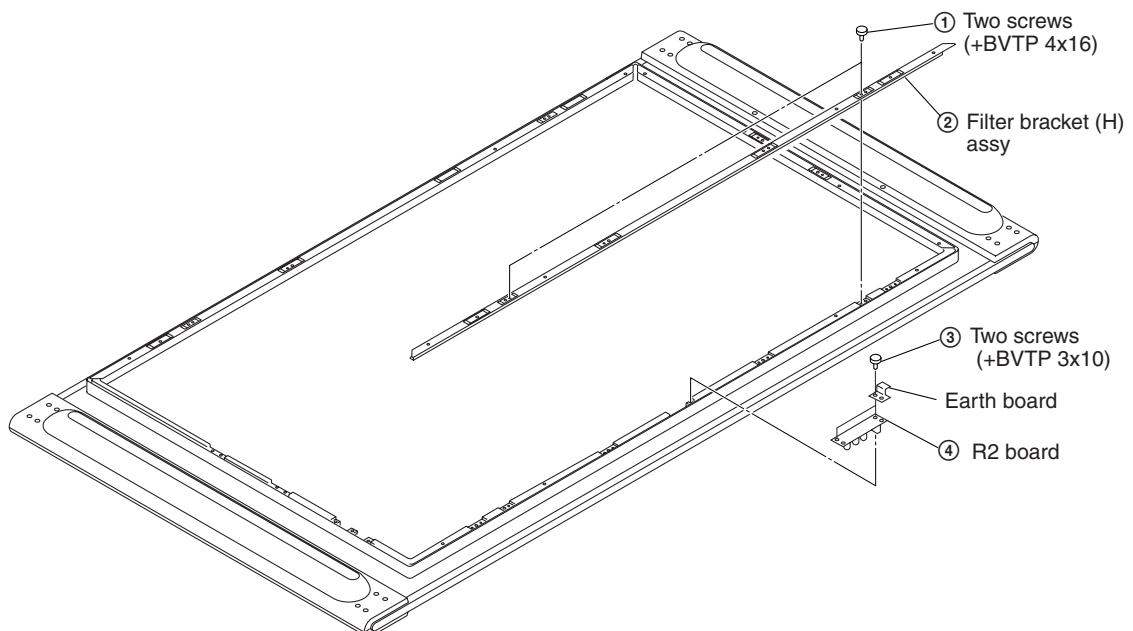


## 1-2. MEDIA RECEIVER UNIT (MBD-XBR950)


### 1-2-1. TOP COVERS REMOVAL

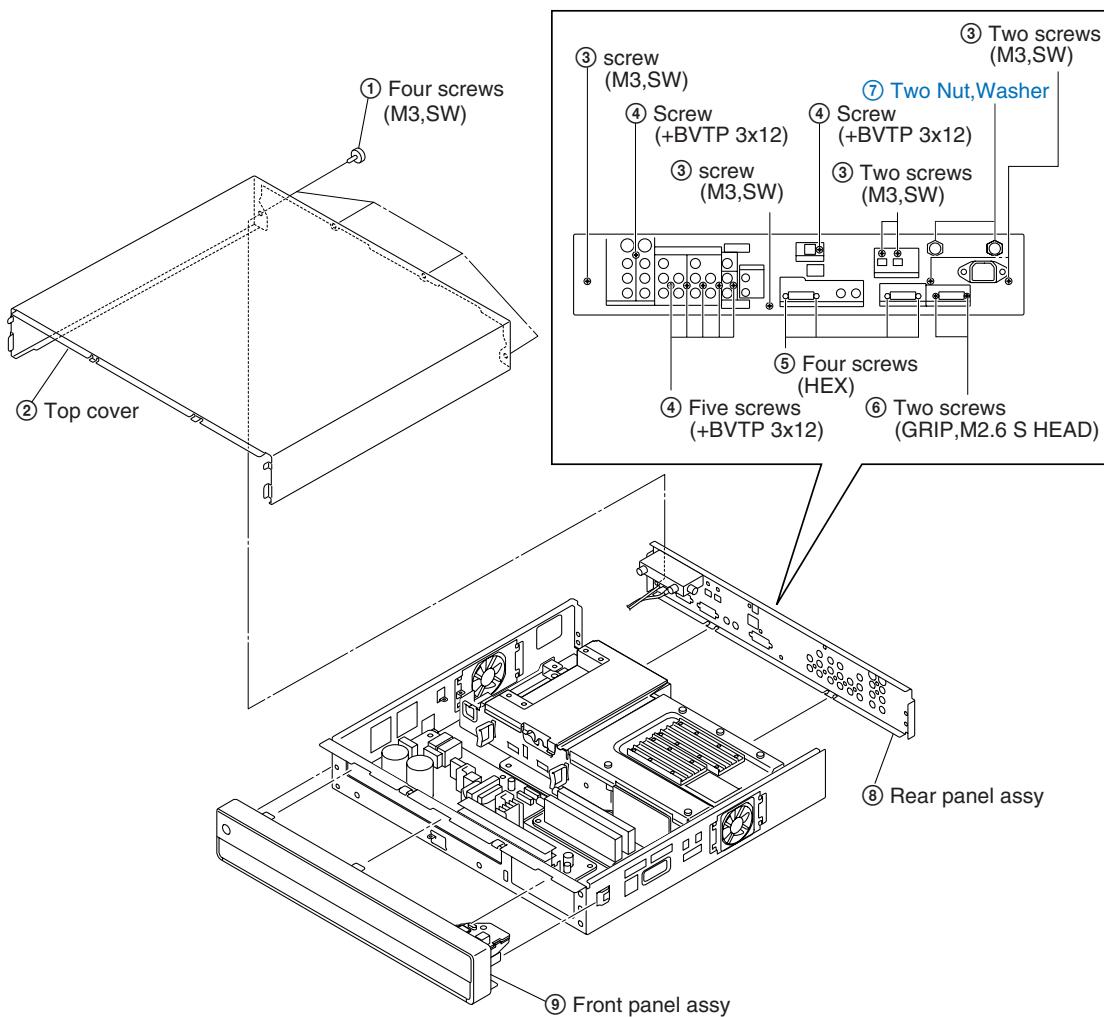


### 1-2-2. QH BOARD REMOVAL

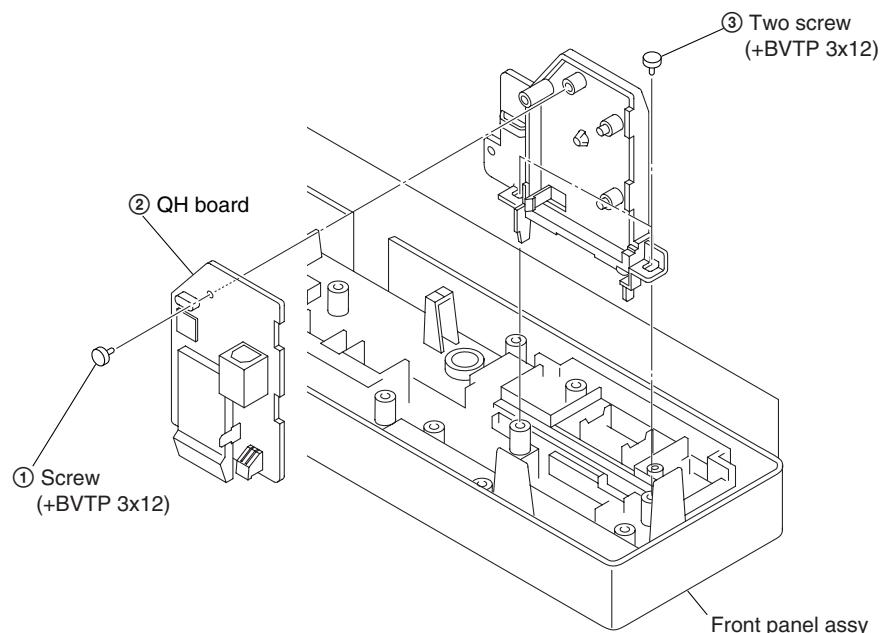


### 1-2-3. H1, H2, H3 AND H4 BOARDS REMOVAL

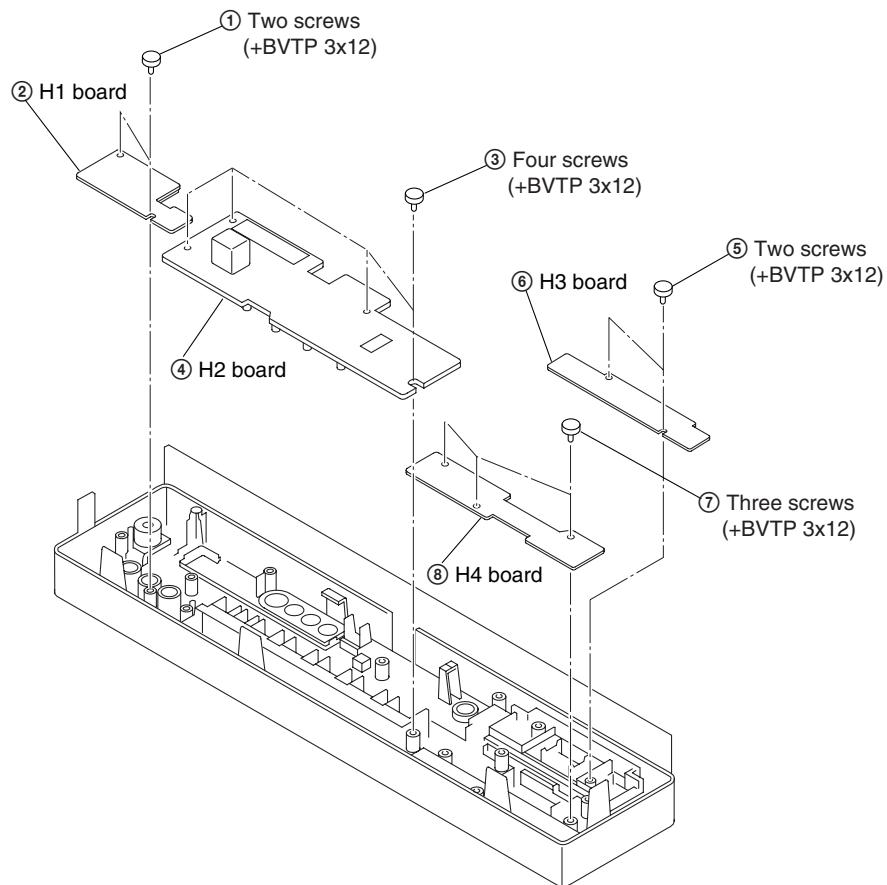

### 1-2-4. G BOARD REMOVAL


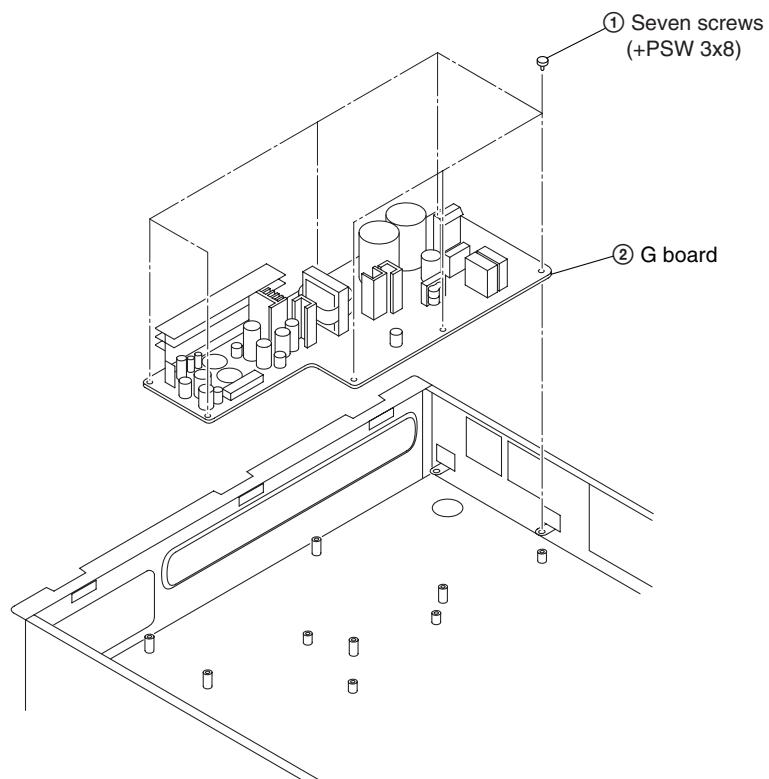


### 1-2-5. A BOARD REMOVAL


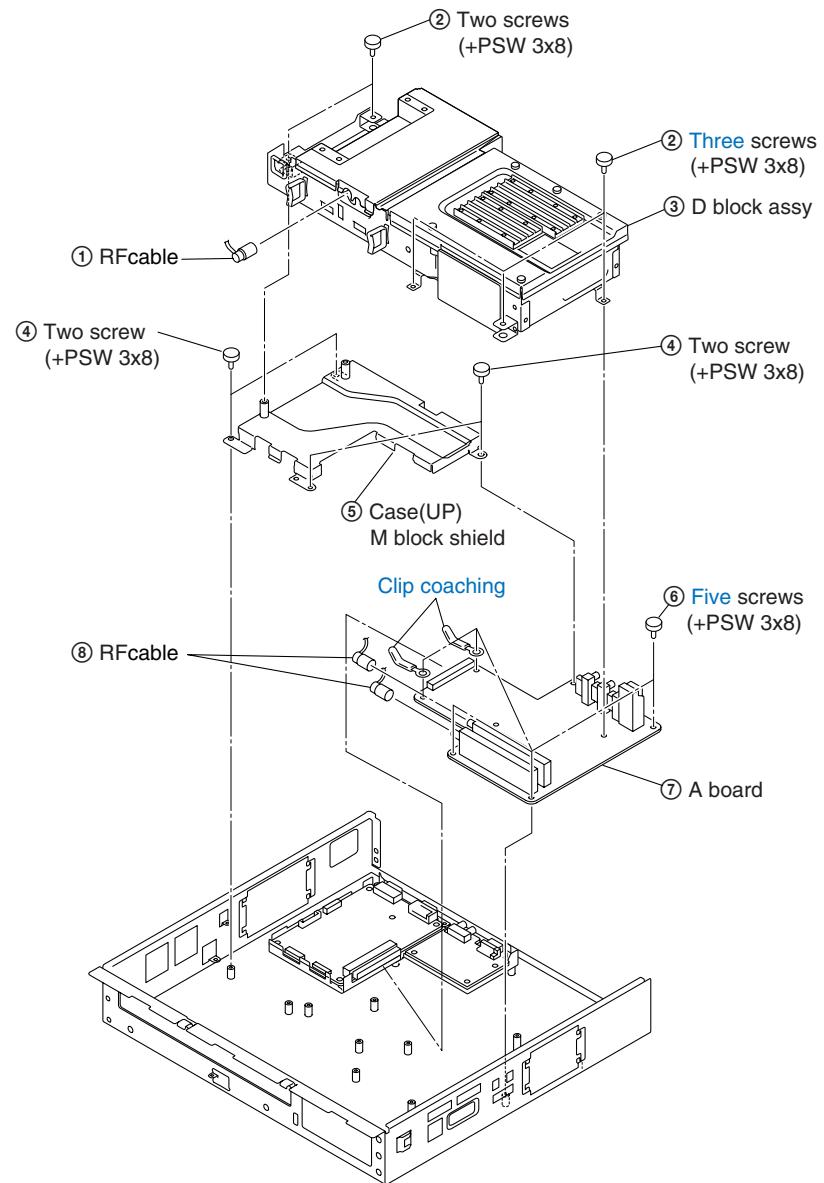


### 1-3. CABLE ARRANGEMENTS FOR MEDIA RECEIVER UNIT(MBD-XBR950)


#### 1-3-1. CN9401 LEAD ARRANGEMENT ON A BOARD

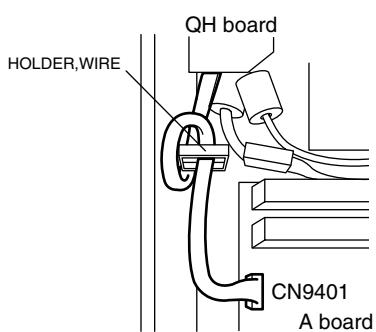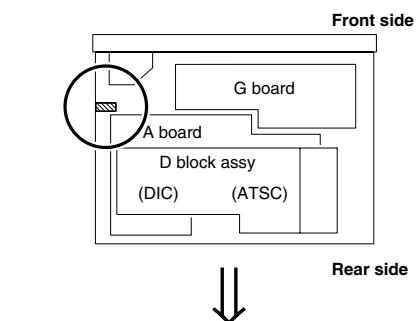



#### 1-3-3. FAN LEAD, RELAY CABLE, AND PIN CABLE ARRANGEMENTS

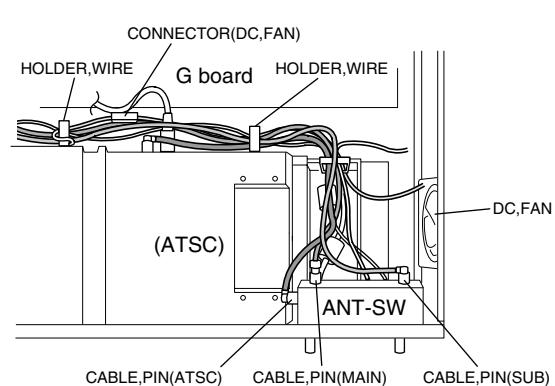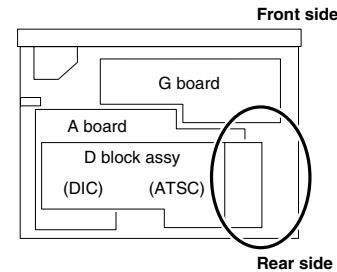

#### 1-3-2. i-LINK CABLE ARRANGEMENT

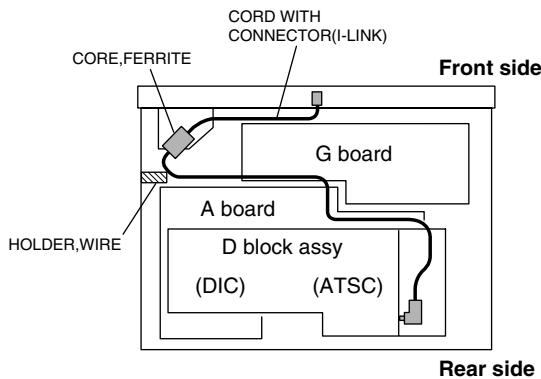

#### 1-3-4. CABLE ARRANGEMENTS NEAR ANTENNA SWITCH

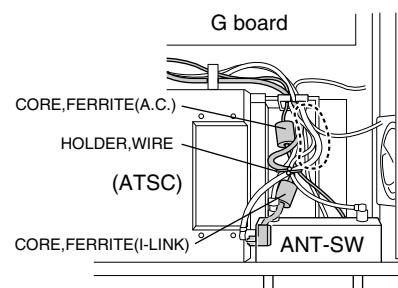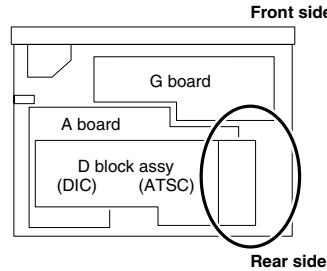

### 1-3-5. CABLE ARRANGEMENTS NEAR D BLOCK

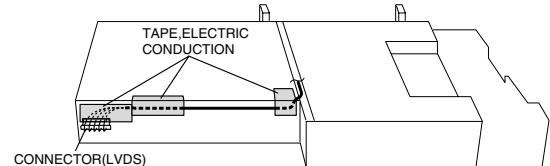
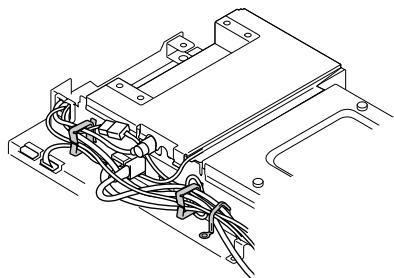
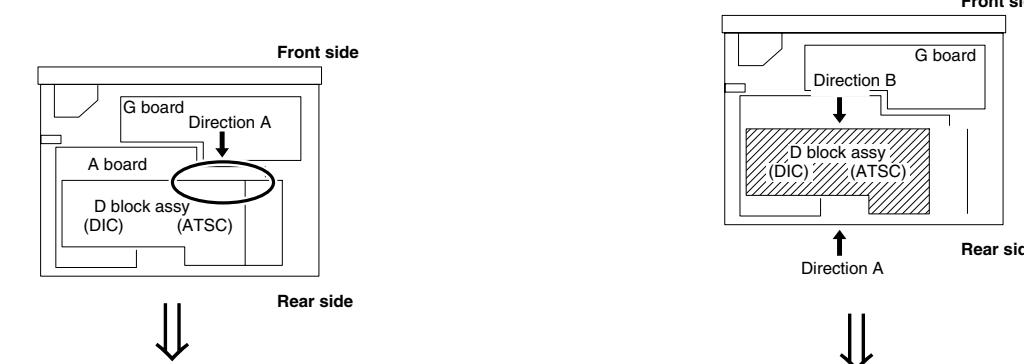


Fig.1

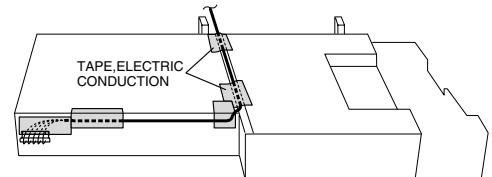


Fig.2

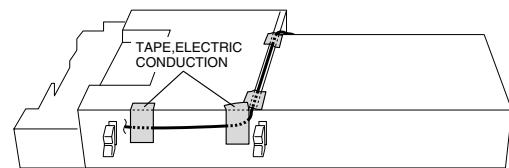


Fig.3

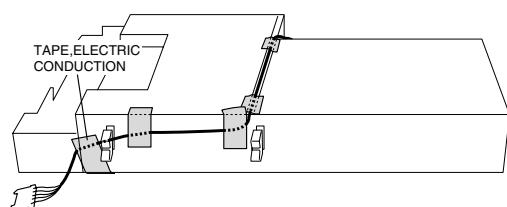


Fig.4

### 1-3-6. LVDS CABLE ARRANGEMENT

(Countermeasure against EMI)

To secure margin against EMI of around 400 MHz, route the LVDS harness using the following procedure:

1. Route the LVDS connector upward from the exit of the D block, and secure it on the side of the shield upper cover of the D block with conductive tape.(Fig.1)
2. Secure the tape (white) portion bundling the LVDS harness to the corner of the DIC shield upper cover of the D block with conductive tape, and bend the harness as shown in Fig. 1.(Fig.2)
3. Route the LVDS harness through the slot on the DIC and ATSC and secure it with conductive tape.(Fig.2)
4. Secure the LVDS harness under the drop-safe part; as a guide, attach tape on the side edge of the shield upper cover.(Fig.3)
5. Secure the LVDS harness upward near the shield clamer of the D block with conductive tape; as a guide, attach tape above the connector on the chassis of the D block. (Fig.4)
6. Route the LVDS harness through the clamper, and secure it with conductive tape so that it is held on the top in the clamper.(Fig.4)

#### Note :

1. Ensure that the LVDS harness has no slack in steps 1 through 6.
2. When attaching the drop-safe part, be careful not to entangle it in the portions of LVDS harness described in steps 3 and 4.  
The drop-safe part needs to be removed before the above procedure.

The size of each conductive tape should be 19 mm x 40 mm, which is the same size as 4-101-007-01 attached on the exit of the LVDS connector.

## SECTION 2

### ADJUSTMENTS

#### **2-1. VS, VD Voltage Adjustment (PDM-4210/5010)**

##### • Preparation for adjustment

1. Slide the DIP switch (S3201) No. 8 of P board to on position with no silkscreen mark ●.
2. Connect a digital voltmeter to the following terminals of G board.  
VS voltage=G board TP1701 (VS)-TP1502 (GND)  
VD voltage=G board TP1501 (VD)-TP1502 (GND)
3. Connect a AC cord in DISPLAY UNIT.
4. Perform the adjustment in 10 seconds after connecting the cord.

##### • Procedure for adjustment

1. Slide the DIP switch (S3201) No. 7 of P board to on position with no silkscreen mark ●.
2. Confirm the lighting of SONY LOGO LED.
3. Adjust the VS voltage to the following voltage value.  
VS voltage  $\frac{+6V}{-0V}$  of proper value for each model.  
Ex.) VS proper value=185V thru 185.6V at 185V.  
(Check the proper value with a seal on upper left of panel unit. Refer to right Fig.)
4. Adjust the VD voltage to the following voltage value.  
VD voltage  $\pm 0.3V$  of proper value for each model.  
Ex.) VD proper value=64.7V thru 65.3V at 65.0V.  
(Check the proper value with a seal on upper left of panel unit. Refer to right Fig.)
5. Check a Fan rotation.
6. Slide the DIP Switch (S3201) No. 7 of P board to the off position with the silkscreen mark ●.
7. Slide the DIP Switch (S3201) No. 8 of P board to the off position with the silkscreen mark ●.
8. Disconnect an AC cord of DISPLAY UNIT.
9. Reconnect the AC cord in one second.
10. Assure that “POWER ON/STANDBY” LEDs is flashing amber.

#### **2-2. White Balance Adjustment (PDM-4210/5010)**

##### • Measurement equipment

1. Color analyzer (CA-100 manufactured by MINOLTA)
1. Signal generator (ASTRO DESIGN VG-828D)

##### • Measuring procedure

1. Dab the W/B adjustment jig (CA-100) at the glass face of the panel.
2. Connect the Signal generator (VG-828D) to the DVI terminal.
3. Input All-white signal and set the picture mode to DYNAMIC.
4. Select “PNLCTRL” in the service mode menu and set “0 WBNO” at “0”
5. Select “SCNR” “SCNB” or “PDPWB” in the service mode menu, and then adjust following W/B standardized

values of 6500K, 8000K, 9300K, 10000K and 13550K to following values of X/Y.

##### **W/B standardized values:**

	6500K+8MPCD	8000K+8MPCD	9300K+8MPCD
W/B	0	1	2
X	0.3133±0.003	0.2944±0.003	0.2838±0.003
Y	0.3297±0.003	0.3100±0.003	0.2981±0.003


	10000K	13550K
W/B	3	4
X	0.2806±0.003	0.2684±0.003
Y	0.2883±0.003	0.2700±0.003


6. After adjusting the values, at the values of the “SCNR” or “SCNB” exceeding 128 (initialize value).
  - 1) Reset a larger value of the “SCNR” or “SCNB” at 128.
  - 2) Set the White Balances with the last of items and “SCNG” to the X/Y values above.
7. After the above step, when these items are nonqualified following conditions, set the largest one at 128 and readjust the White Balance with the last two items.
  - 1) No one of “SCNR”, “SCNB” and “SCNG” exceeding 128.
  - 2) Confirm the item value 128 at least one item.
8. As a result above, input the sequential number of value to the “SCNR”, “SCNB” and “SCNG”.
9. Repeat the same step 5 thru 8 for the W/B 1 thru 4 after setting the “0 WBNO” at each W/B number.
10. Input following signals from the Signal generator (VG-828D).
  - 1) All-white signal (255/255) input  
Y (luminance)=45cd/m<sup>2</sup> or more
  - 2) 1/25Window (255/255) input  
Y (luminance)=45cd/m<sup>2</sup> or more

## SECTION 3 DIAGRAMS


### 3-1. BLOCK DIAGRAMS





#### 3-1-1. DISPLAY UNIT (PDM-4210/5010)

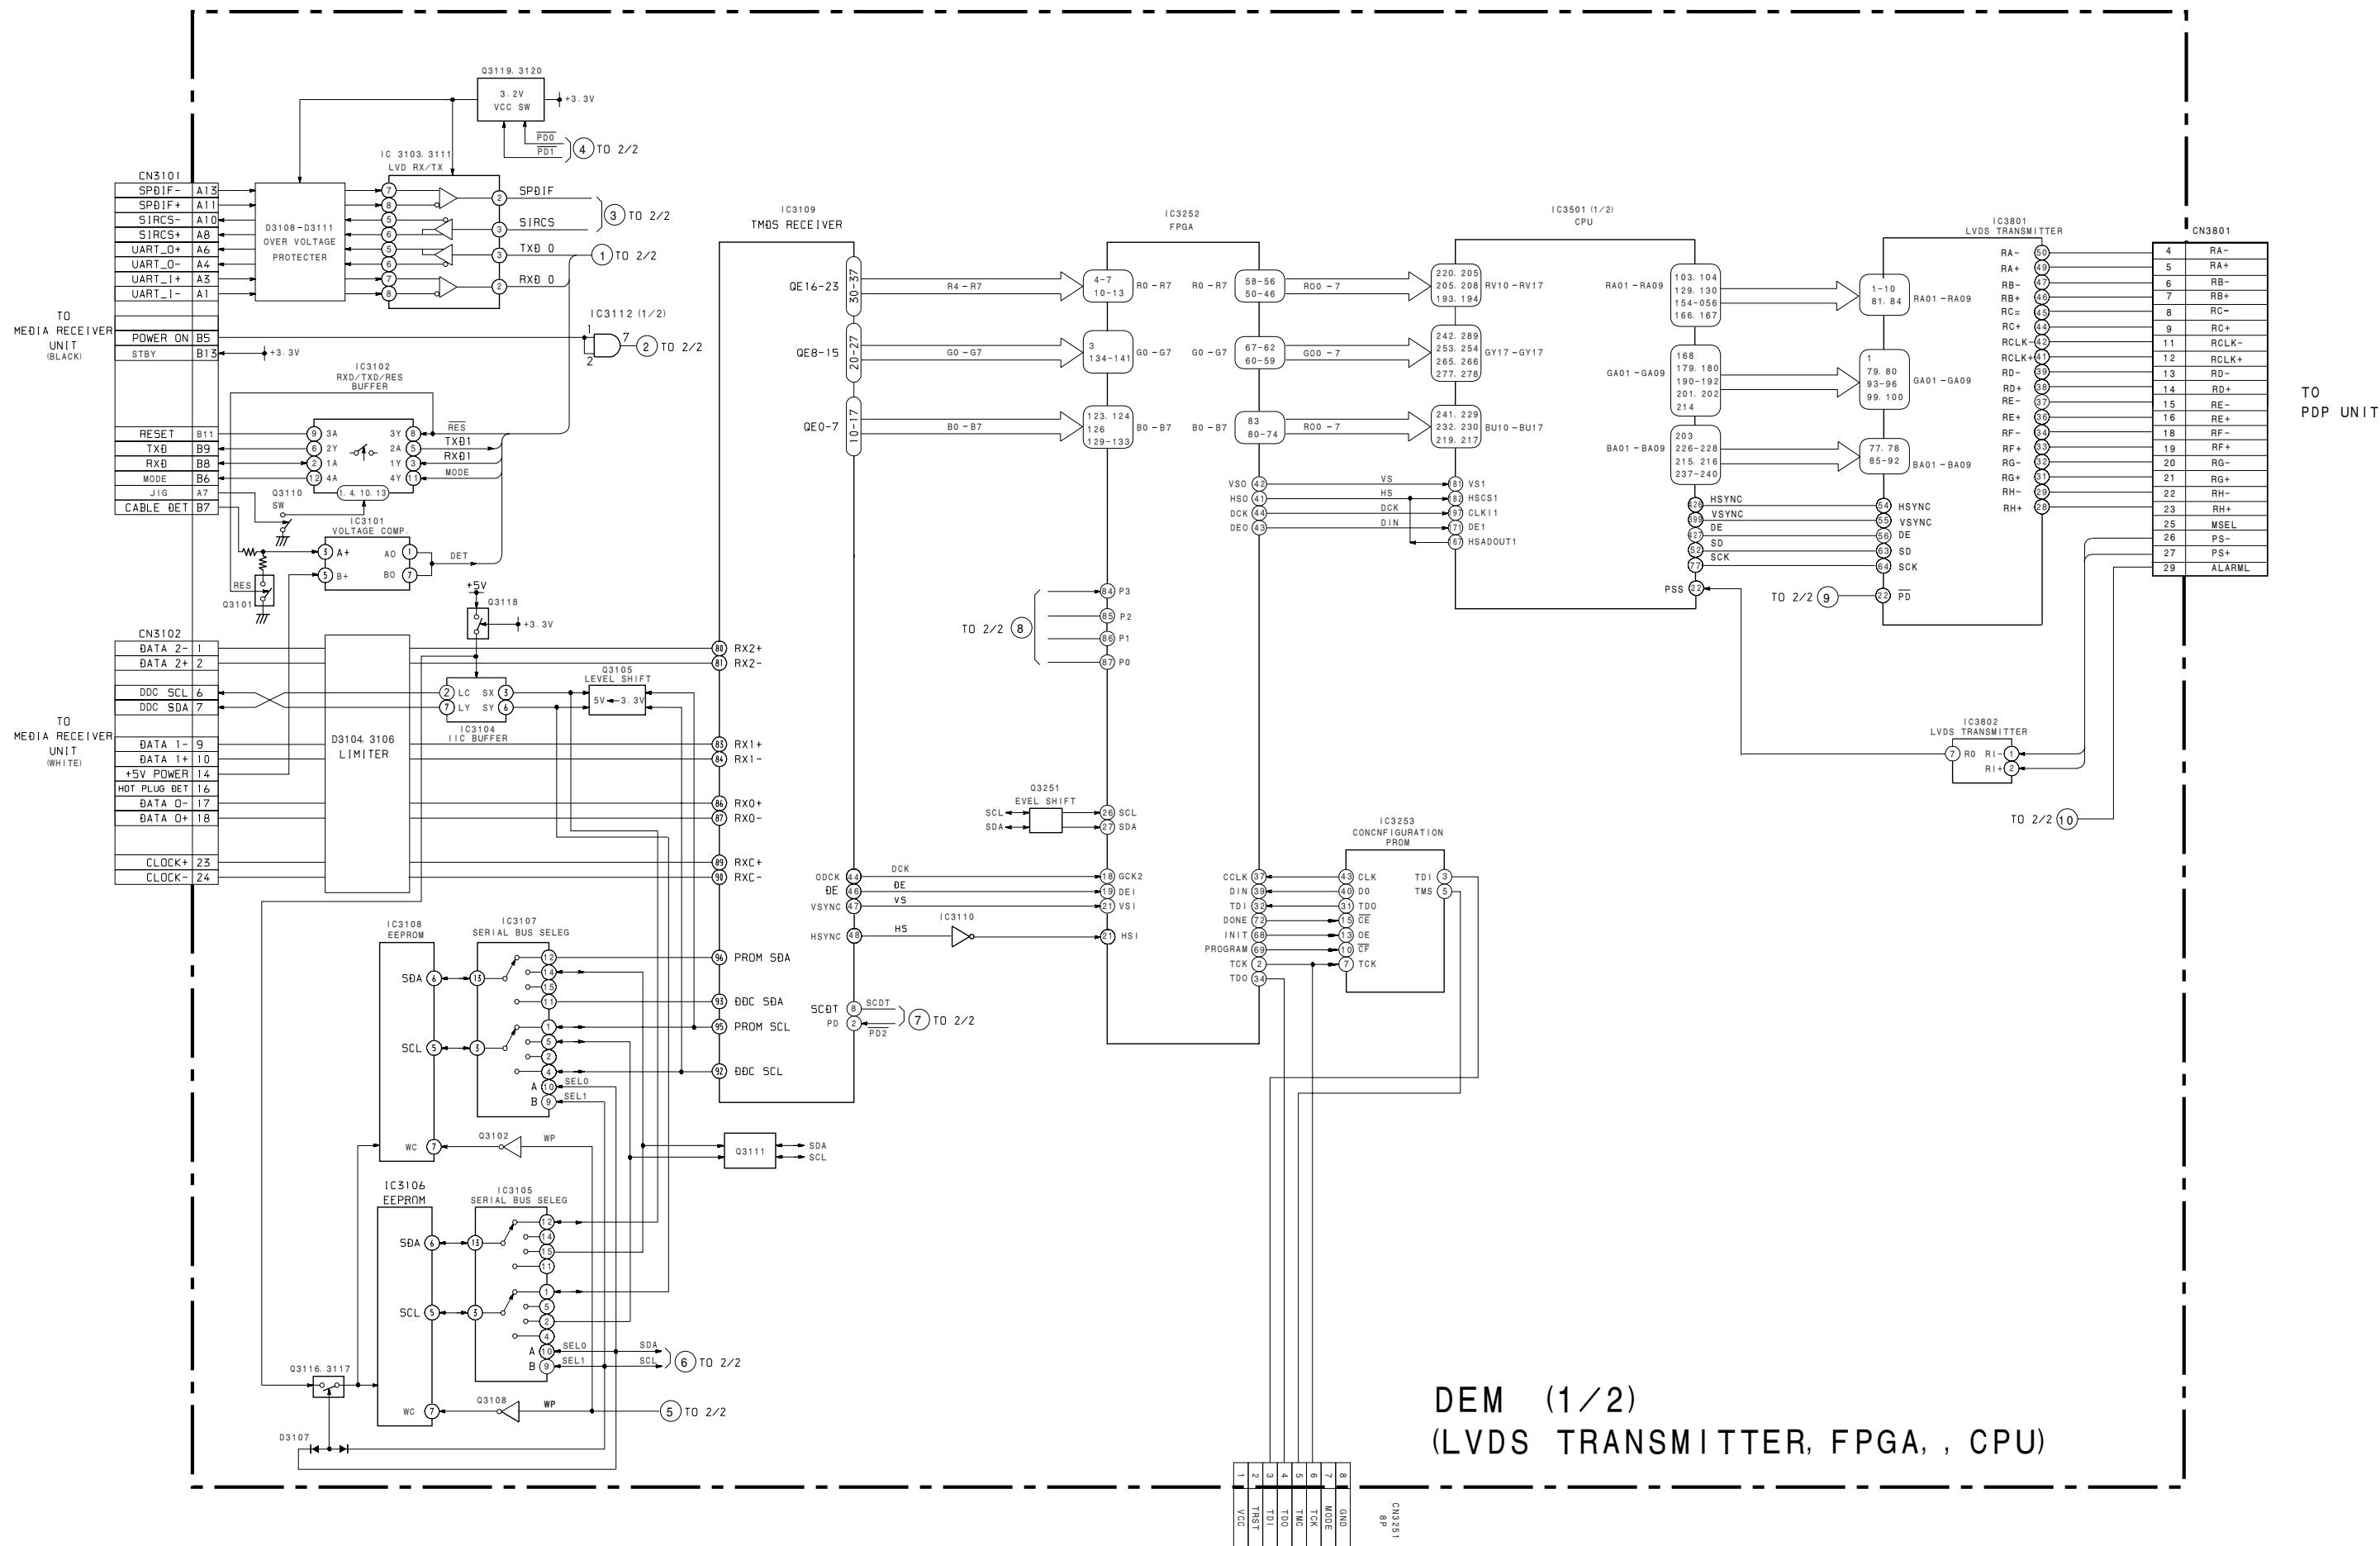

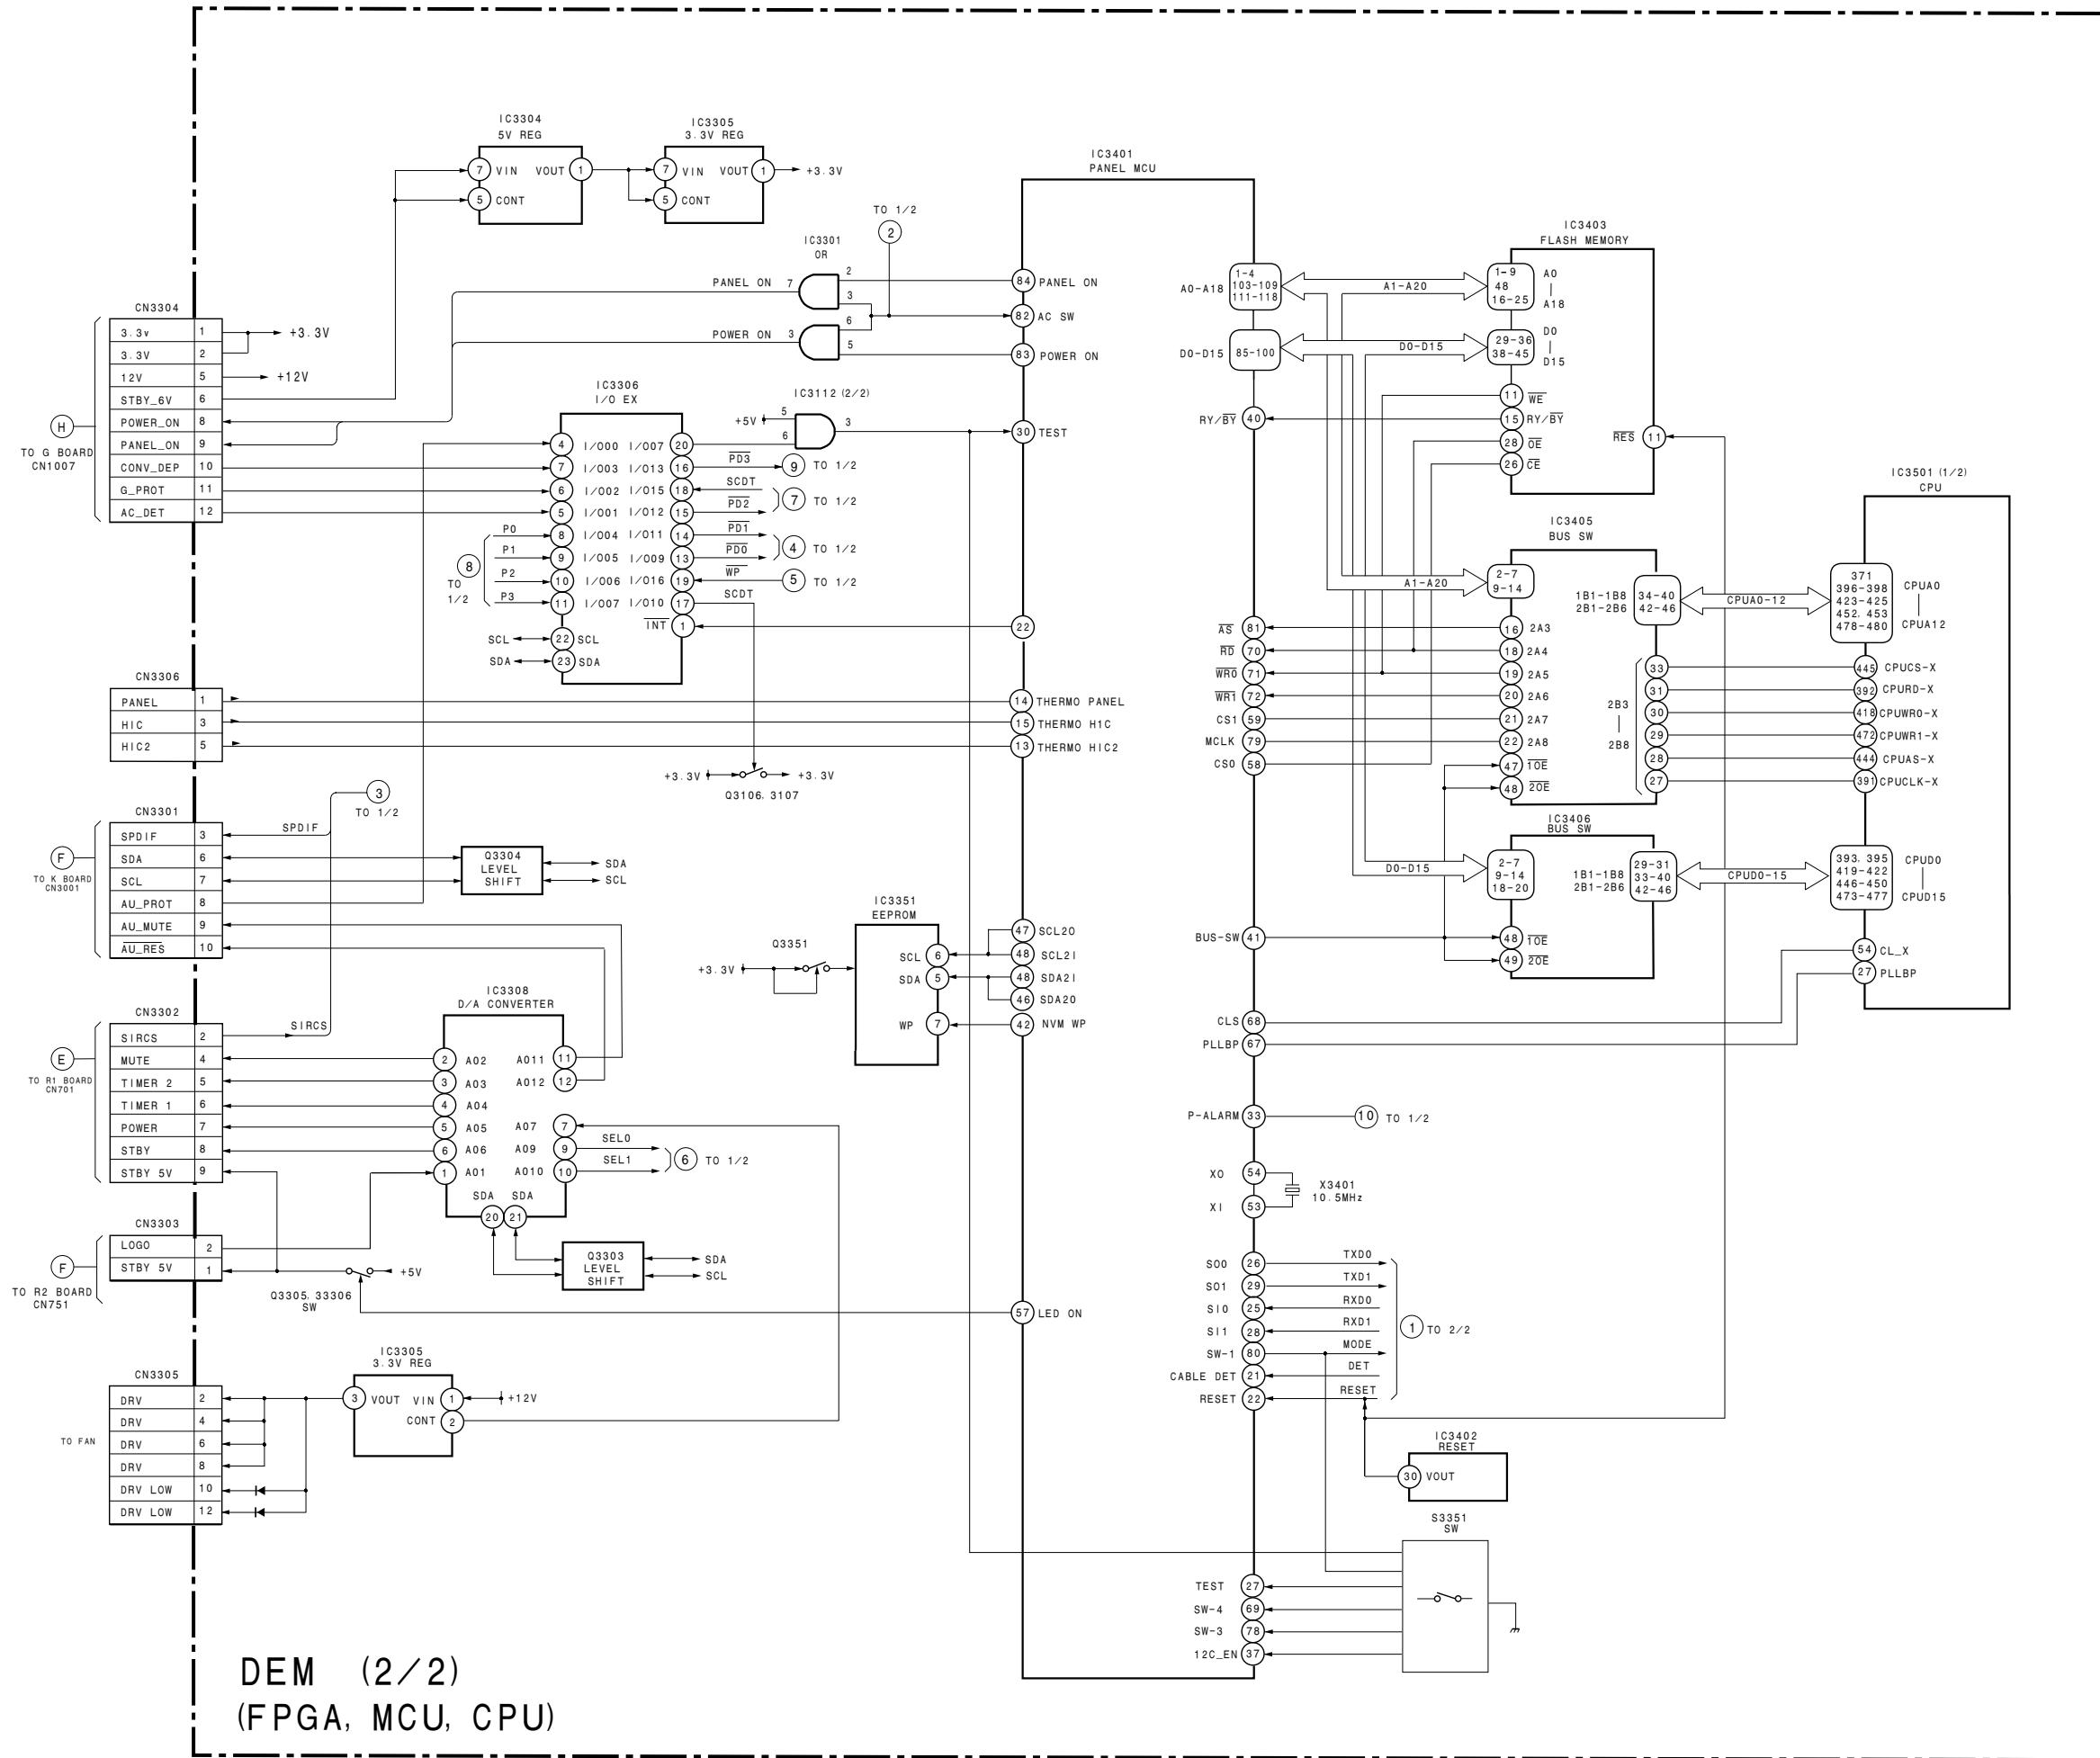



DEM (2/2)  
(FPGA, MCU, CPU)


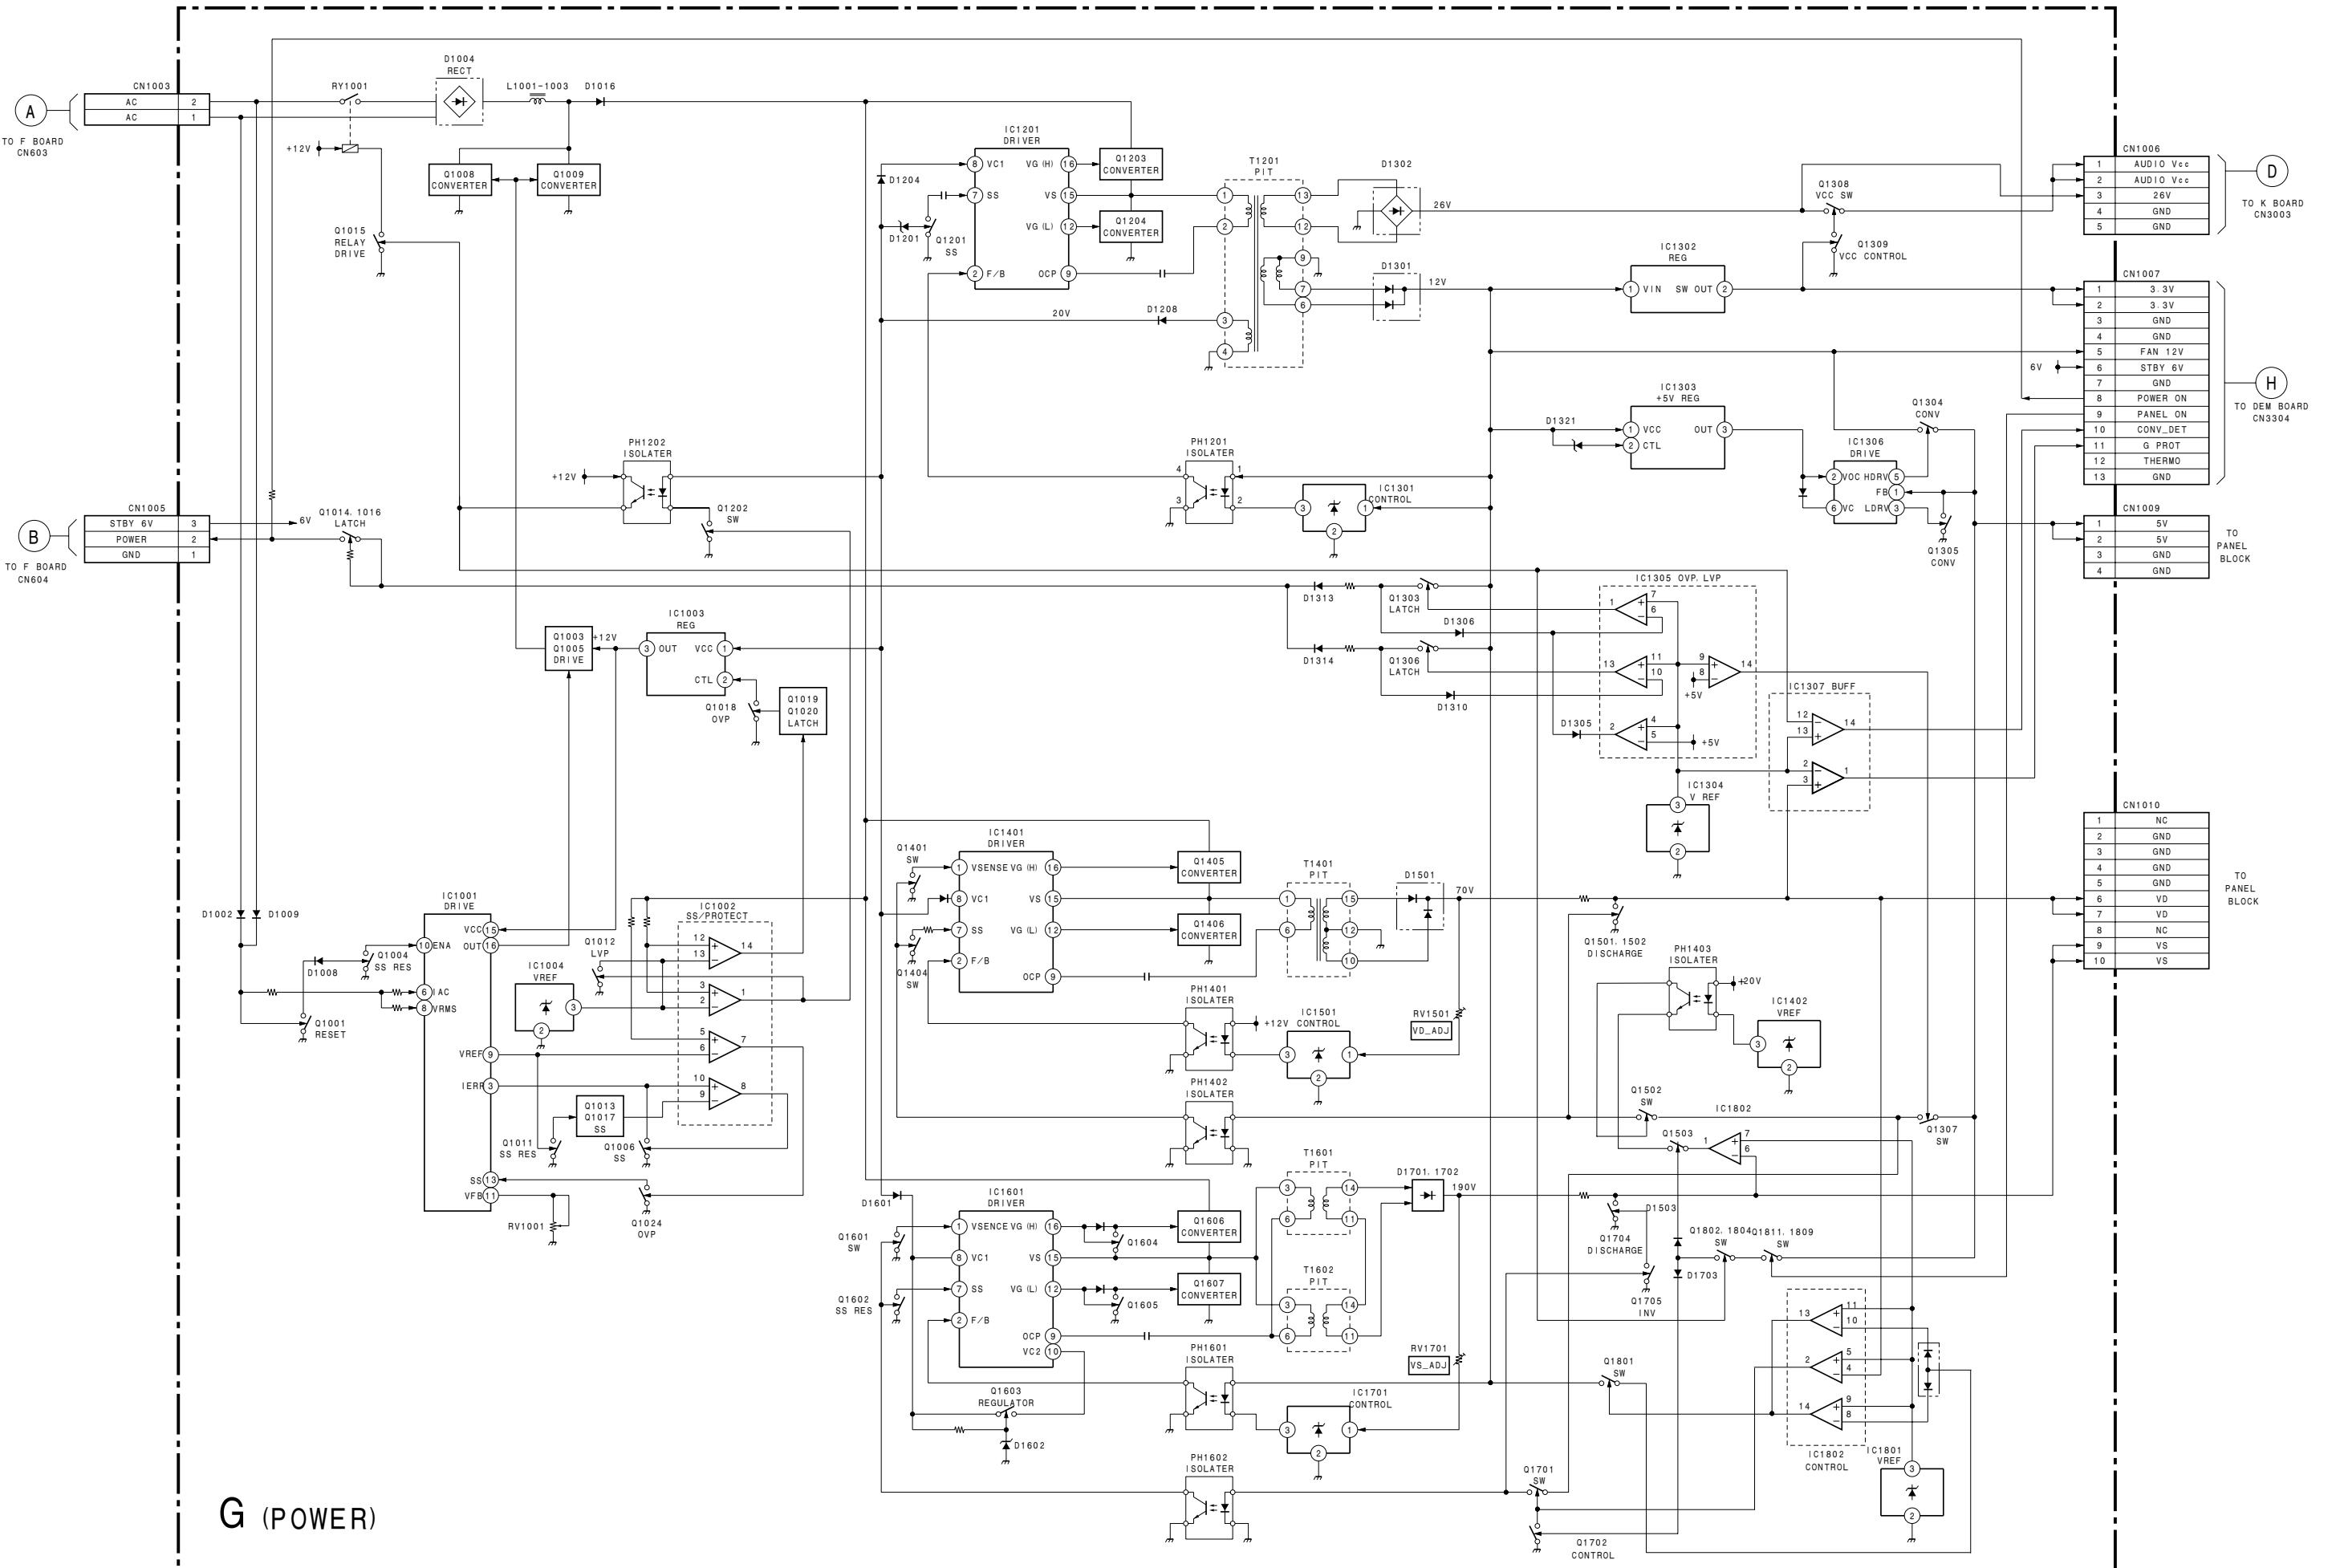


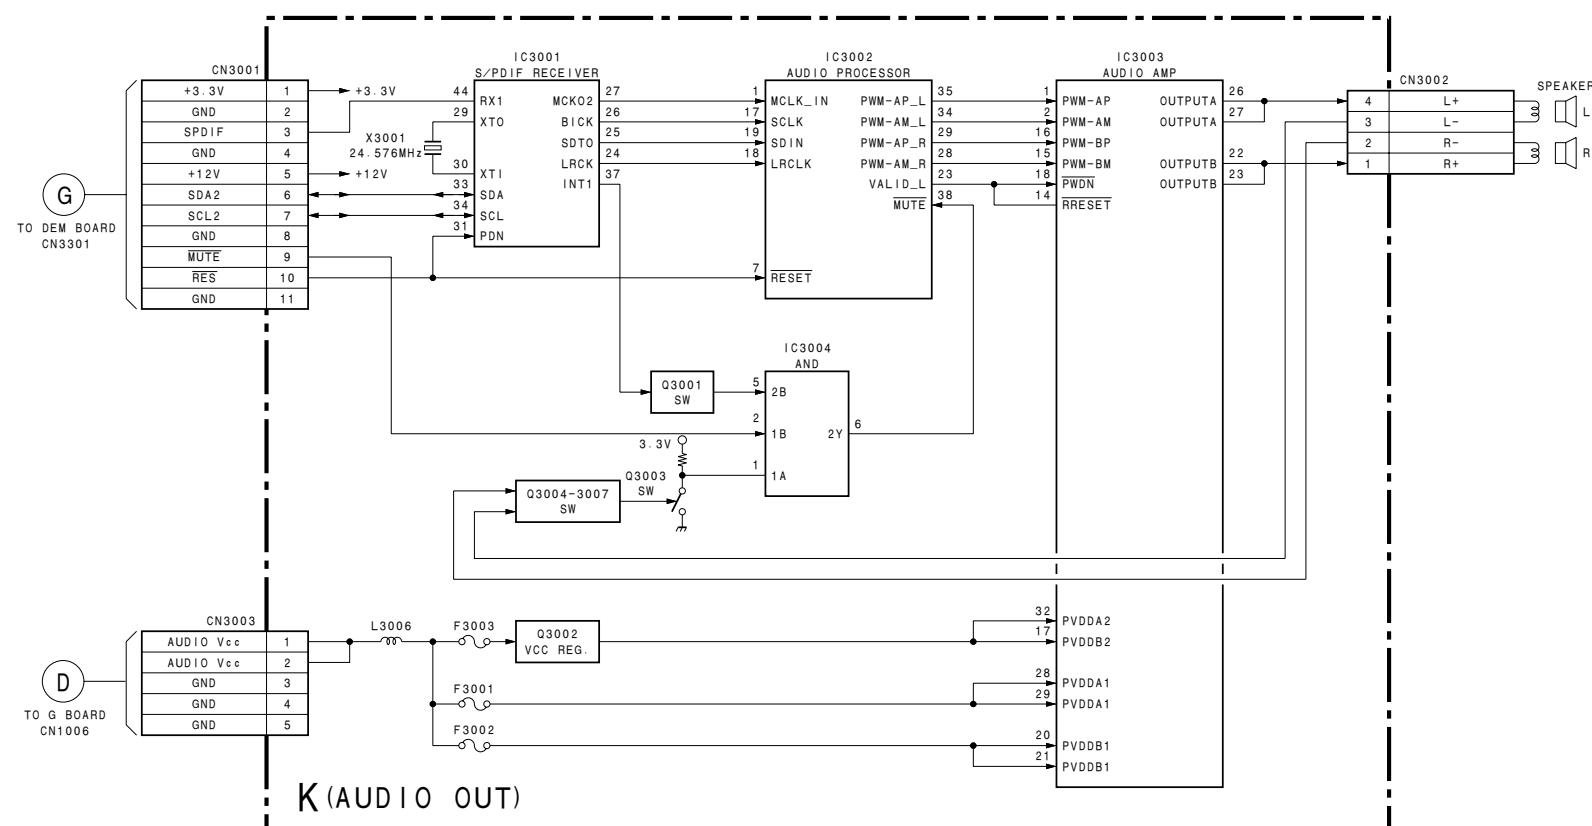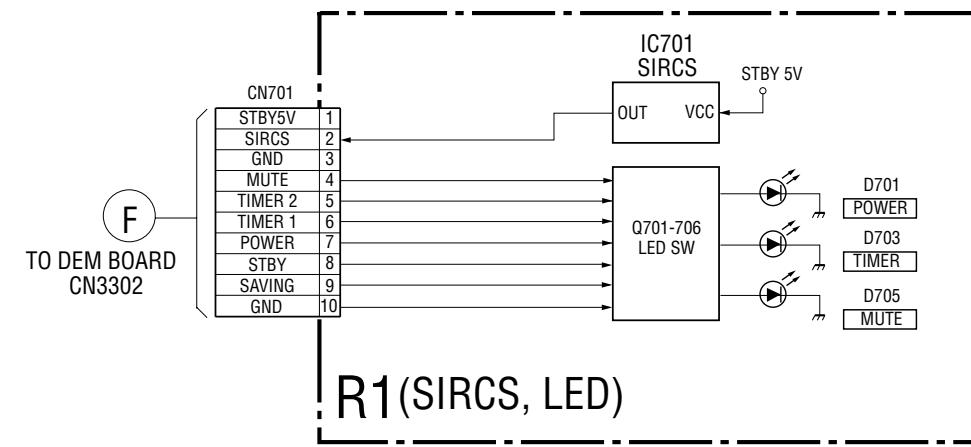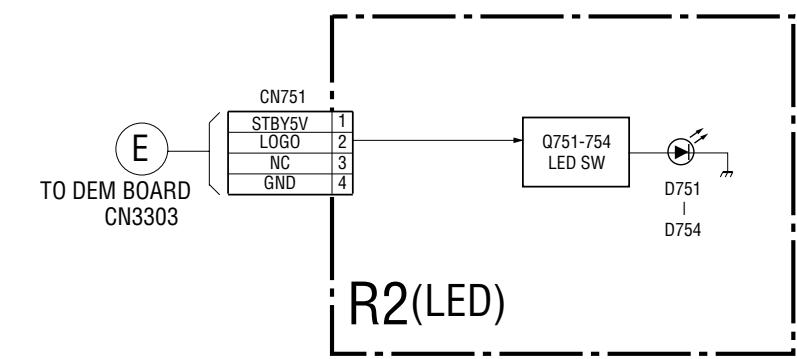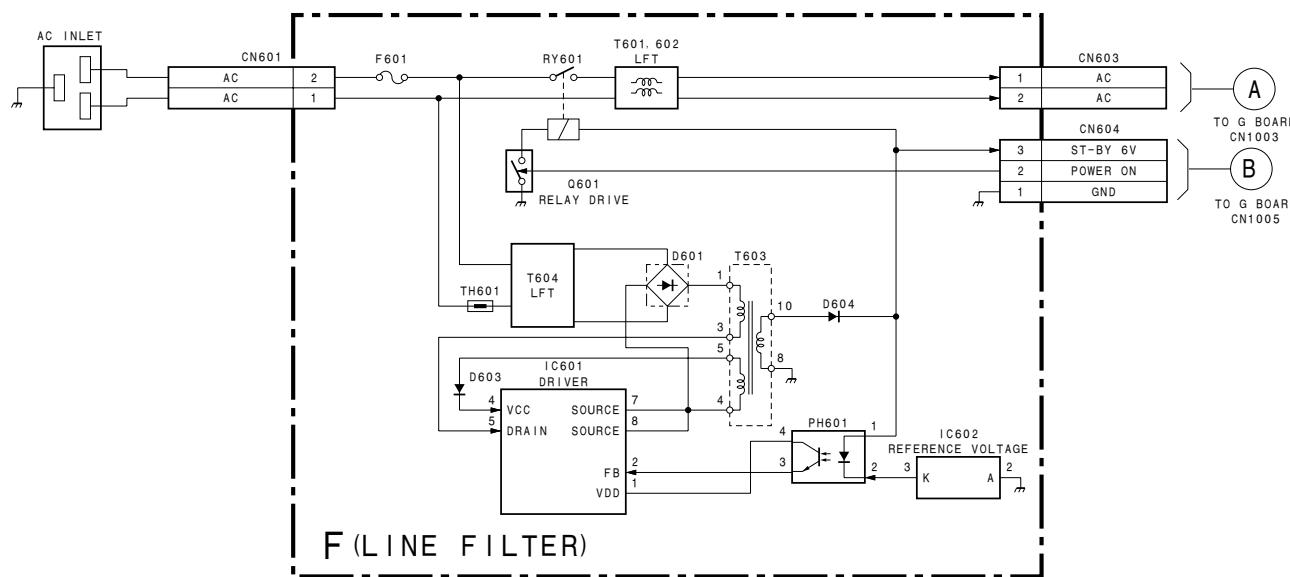



### **3-1-2. MEDIA RECEIVER UNIT (MBD-XBR950)**

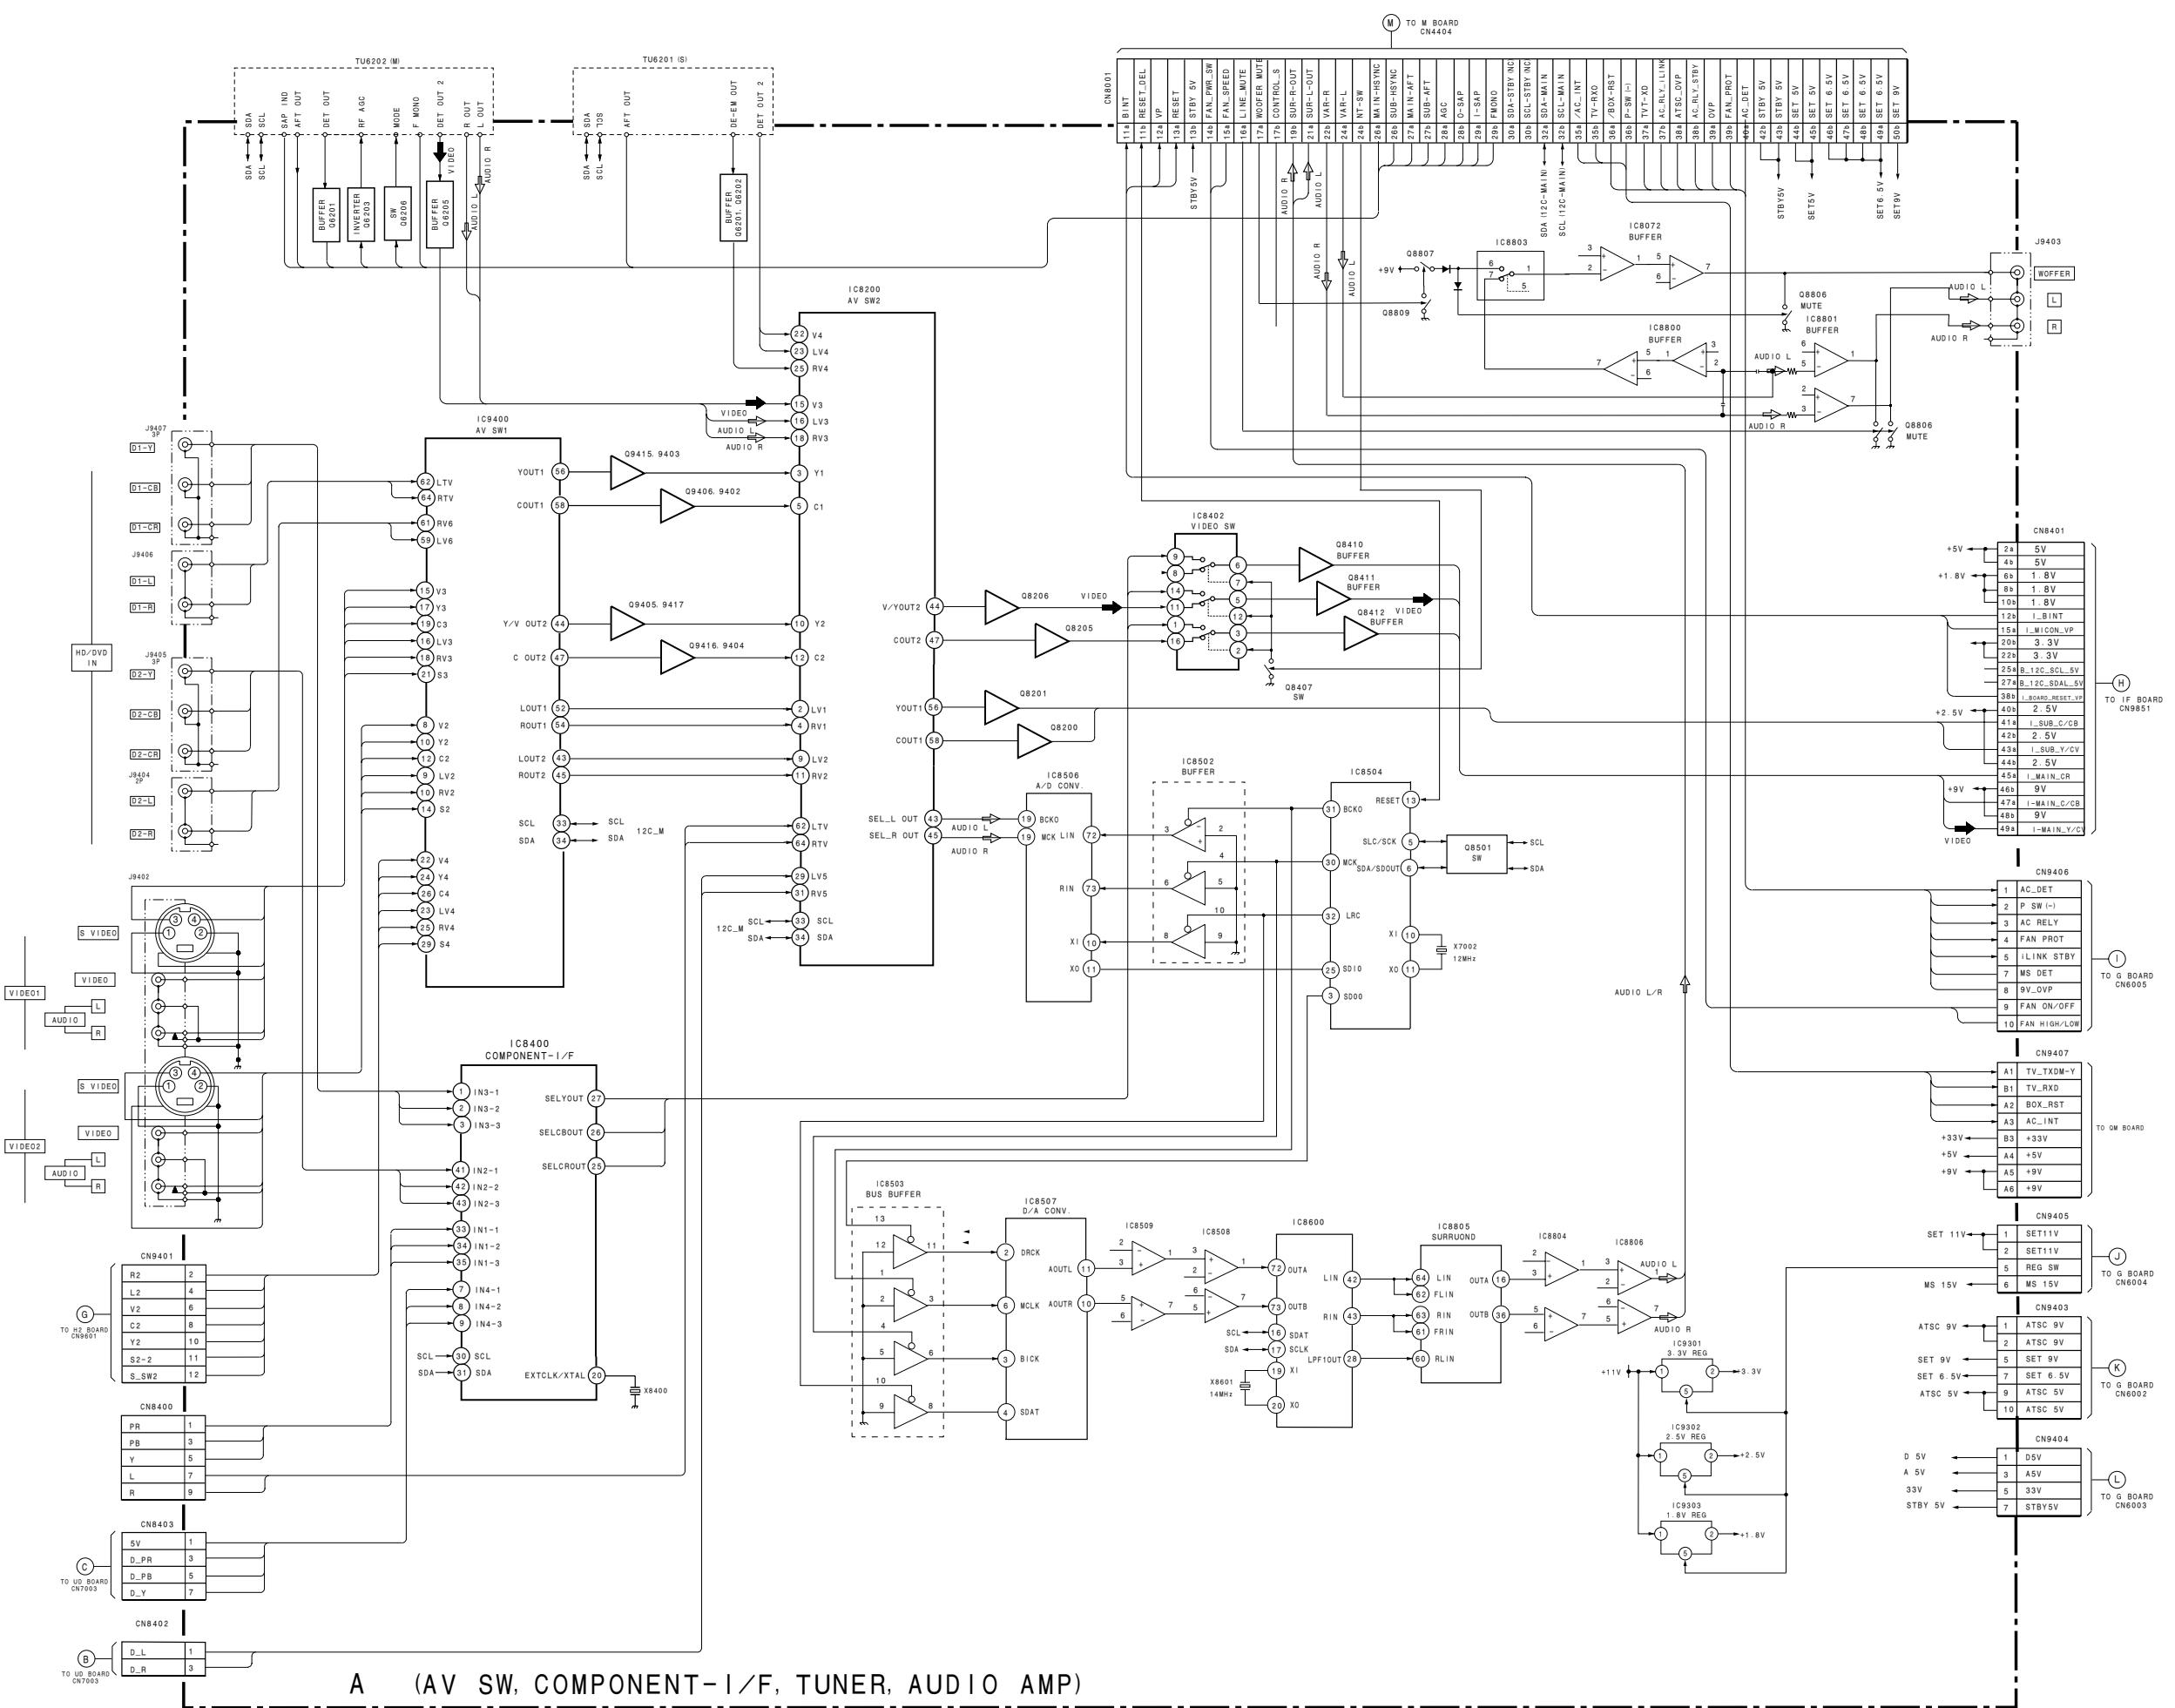


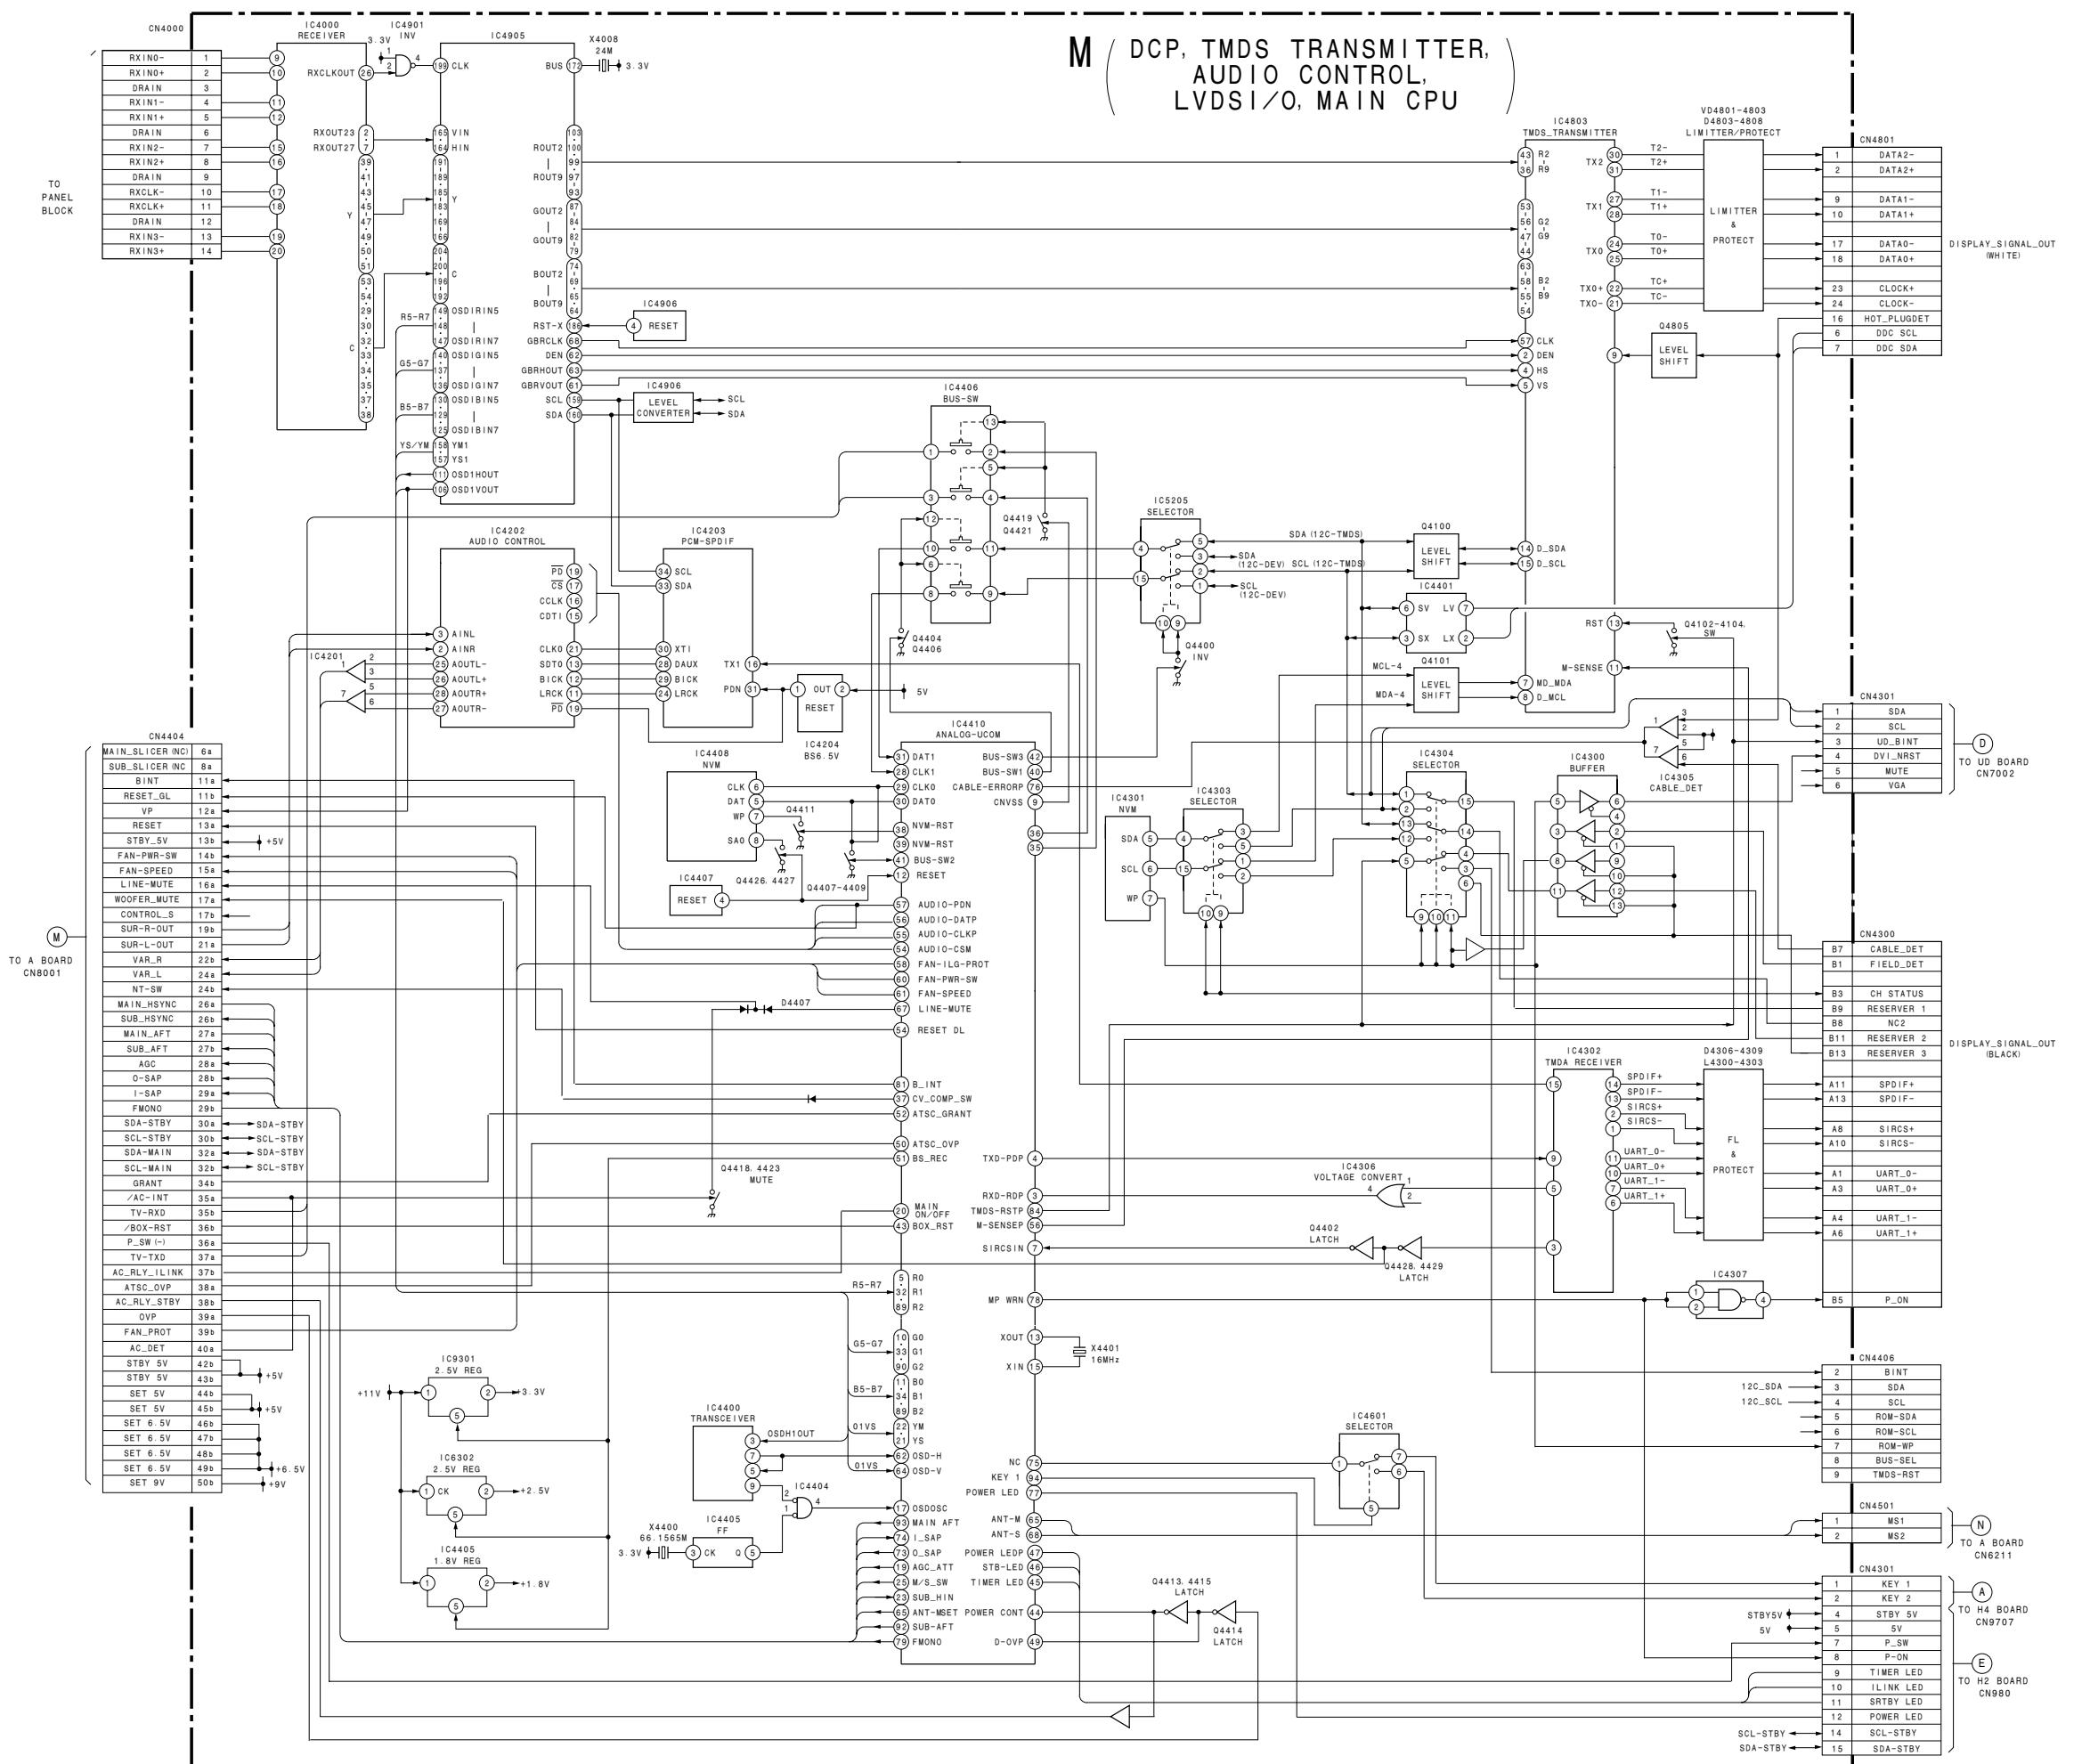

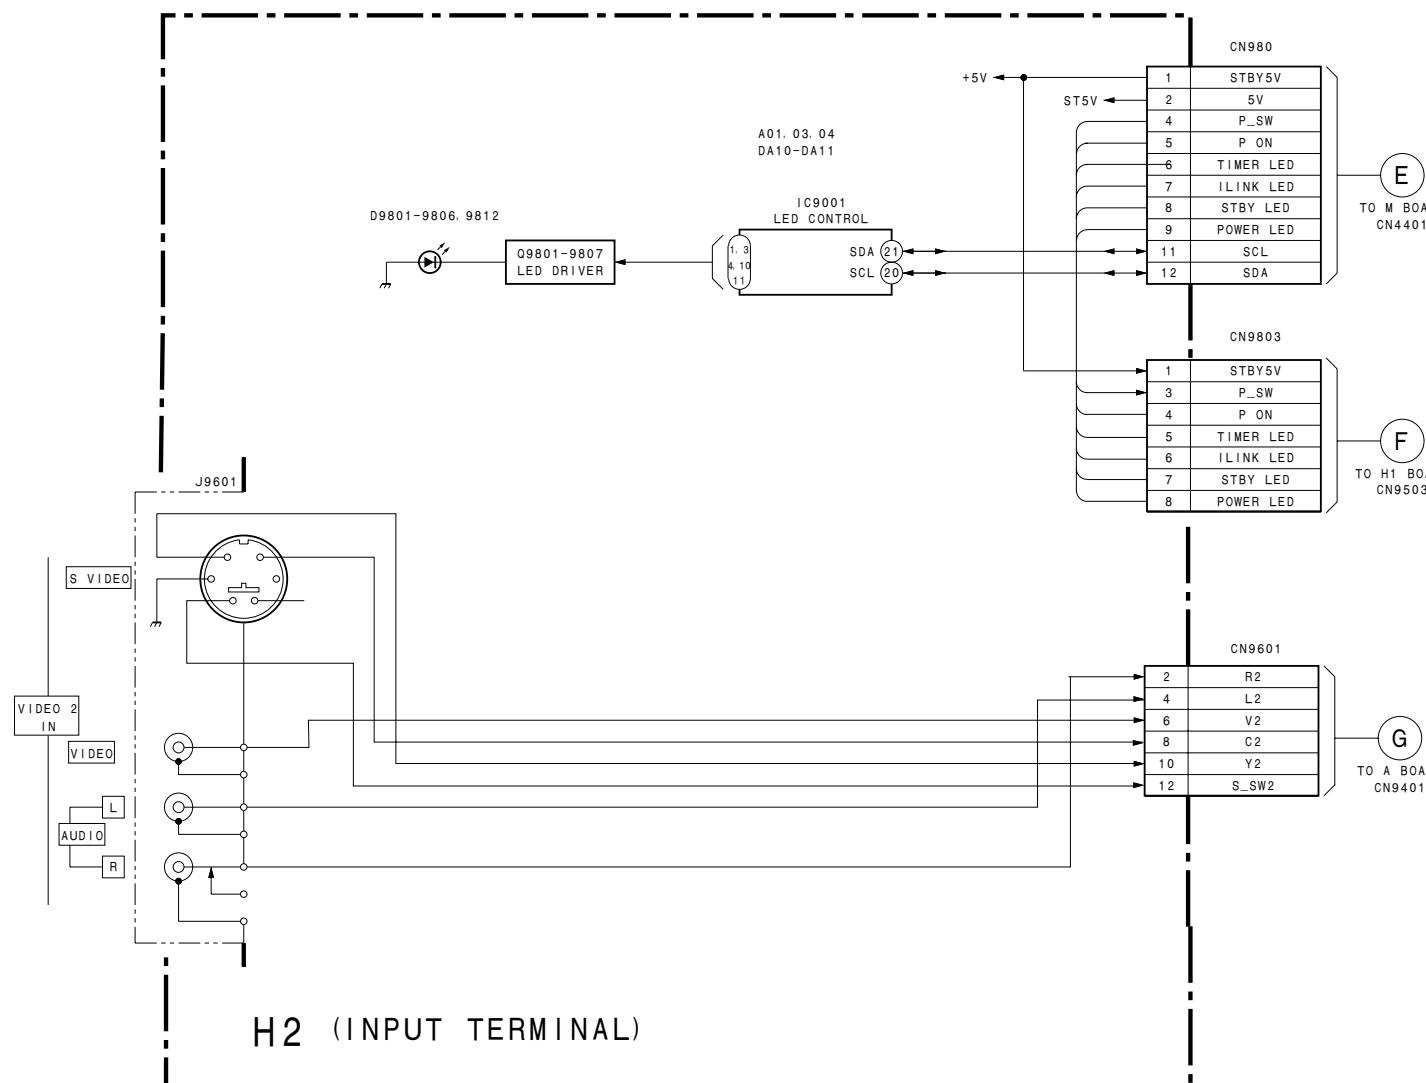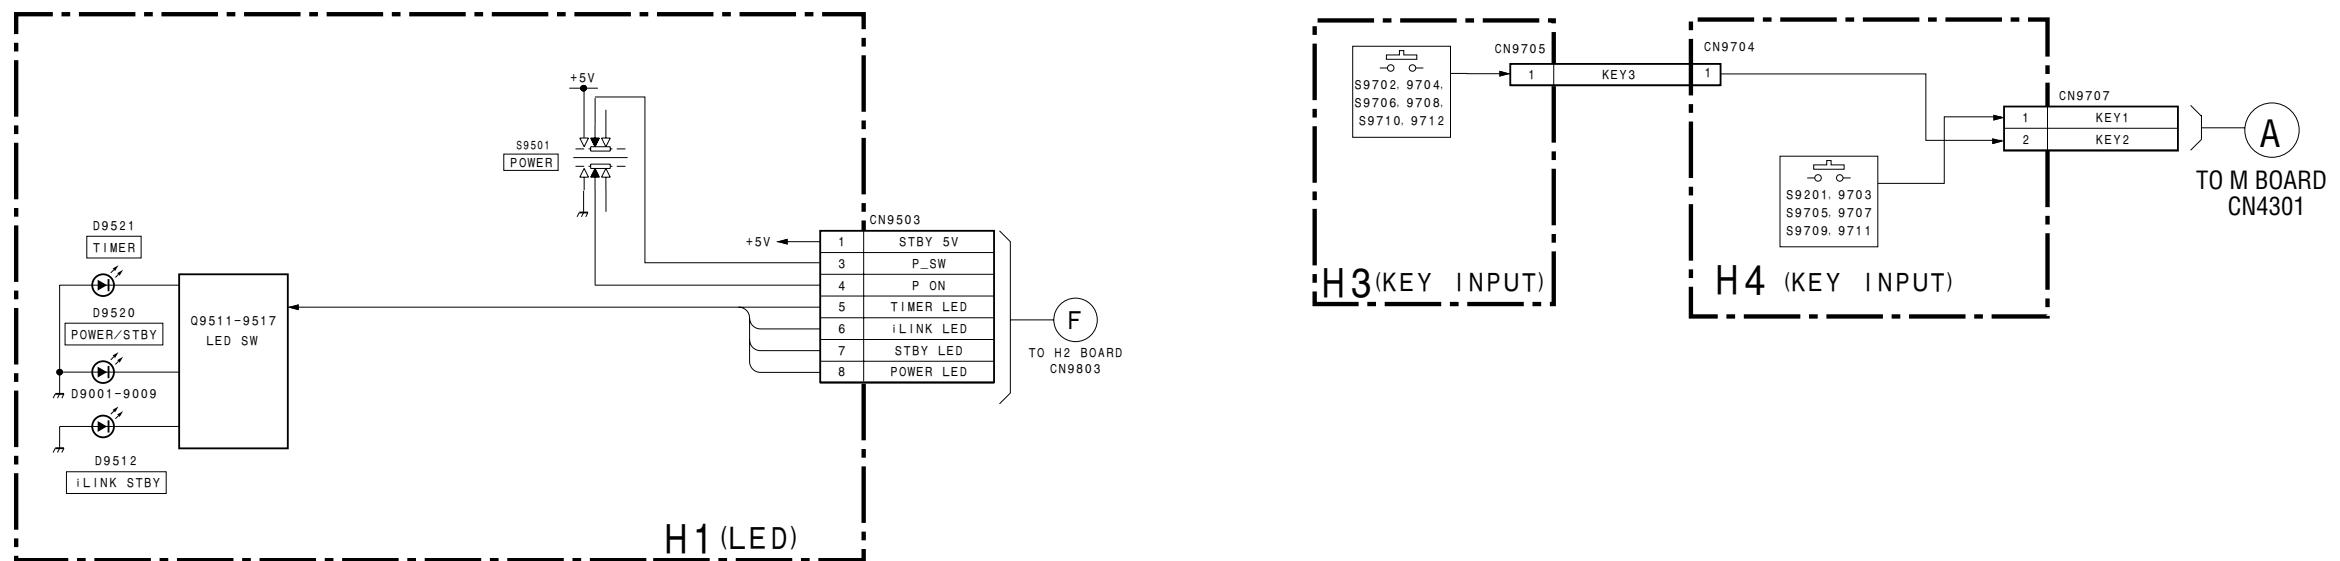


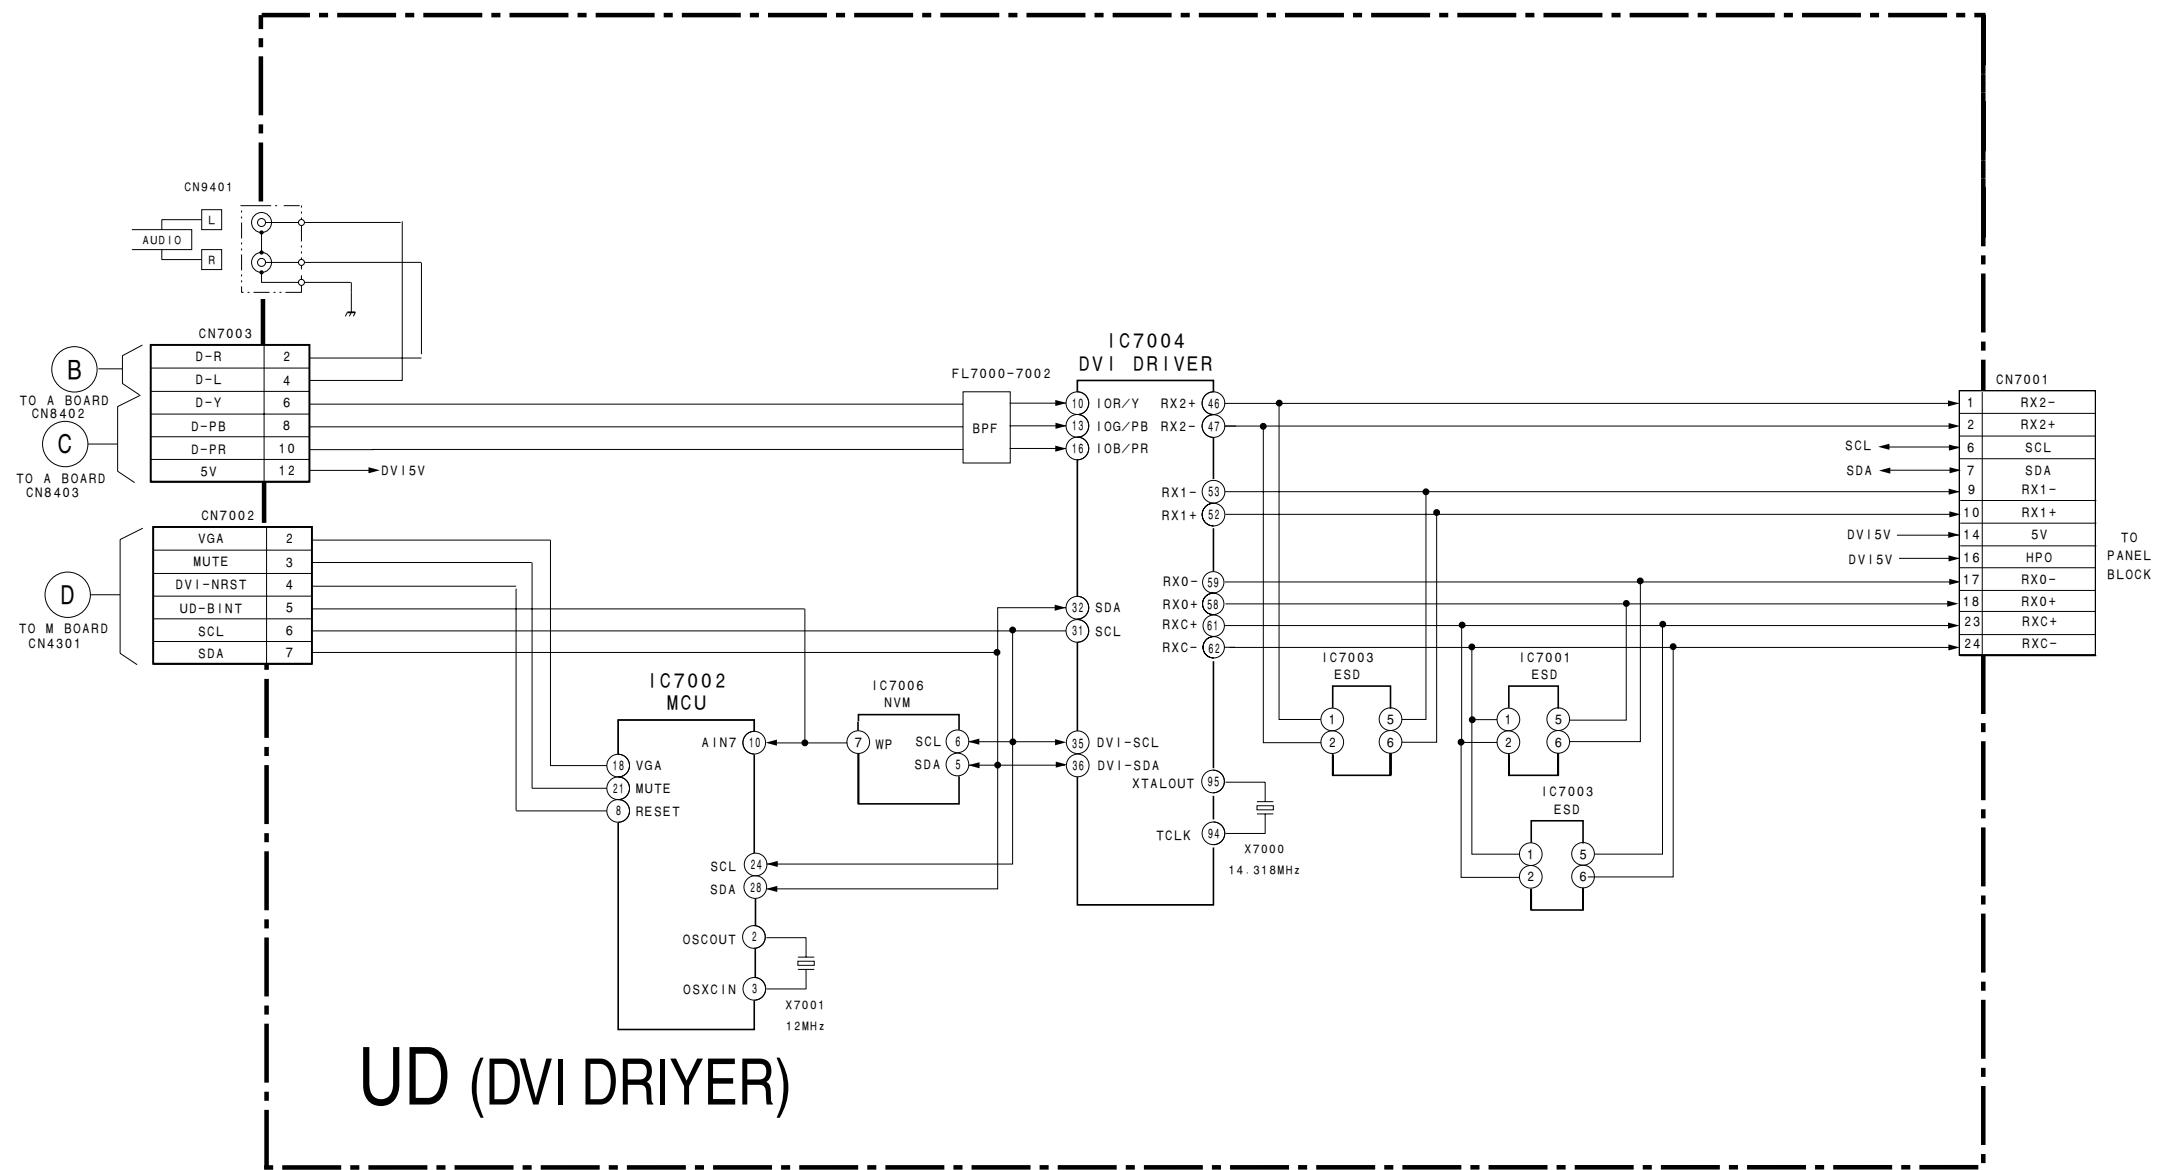

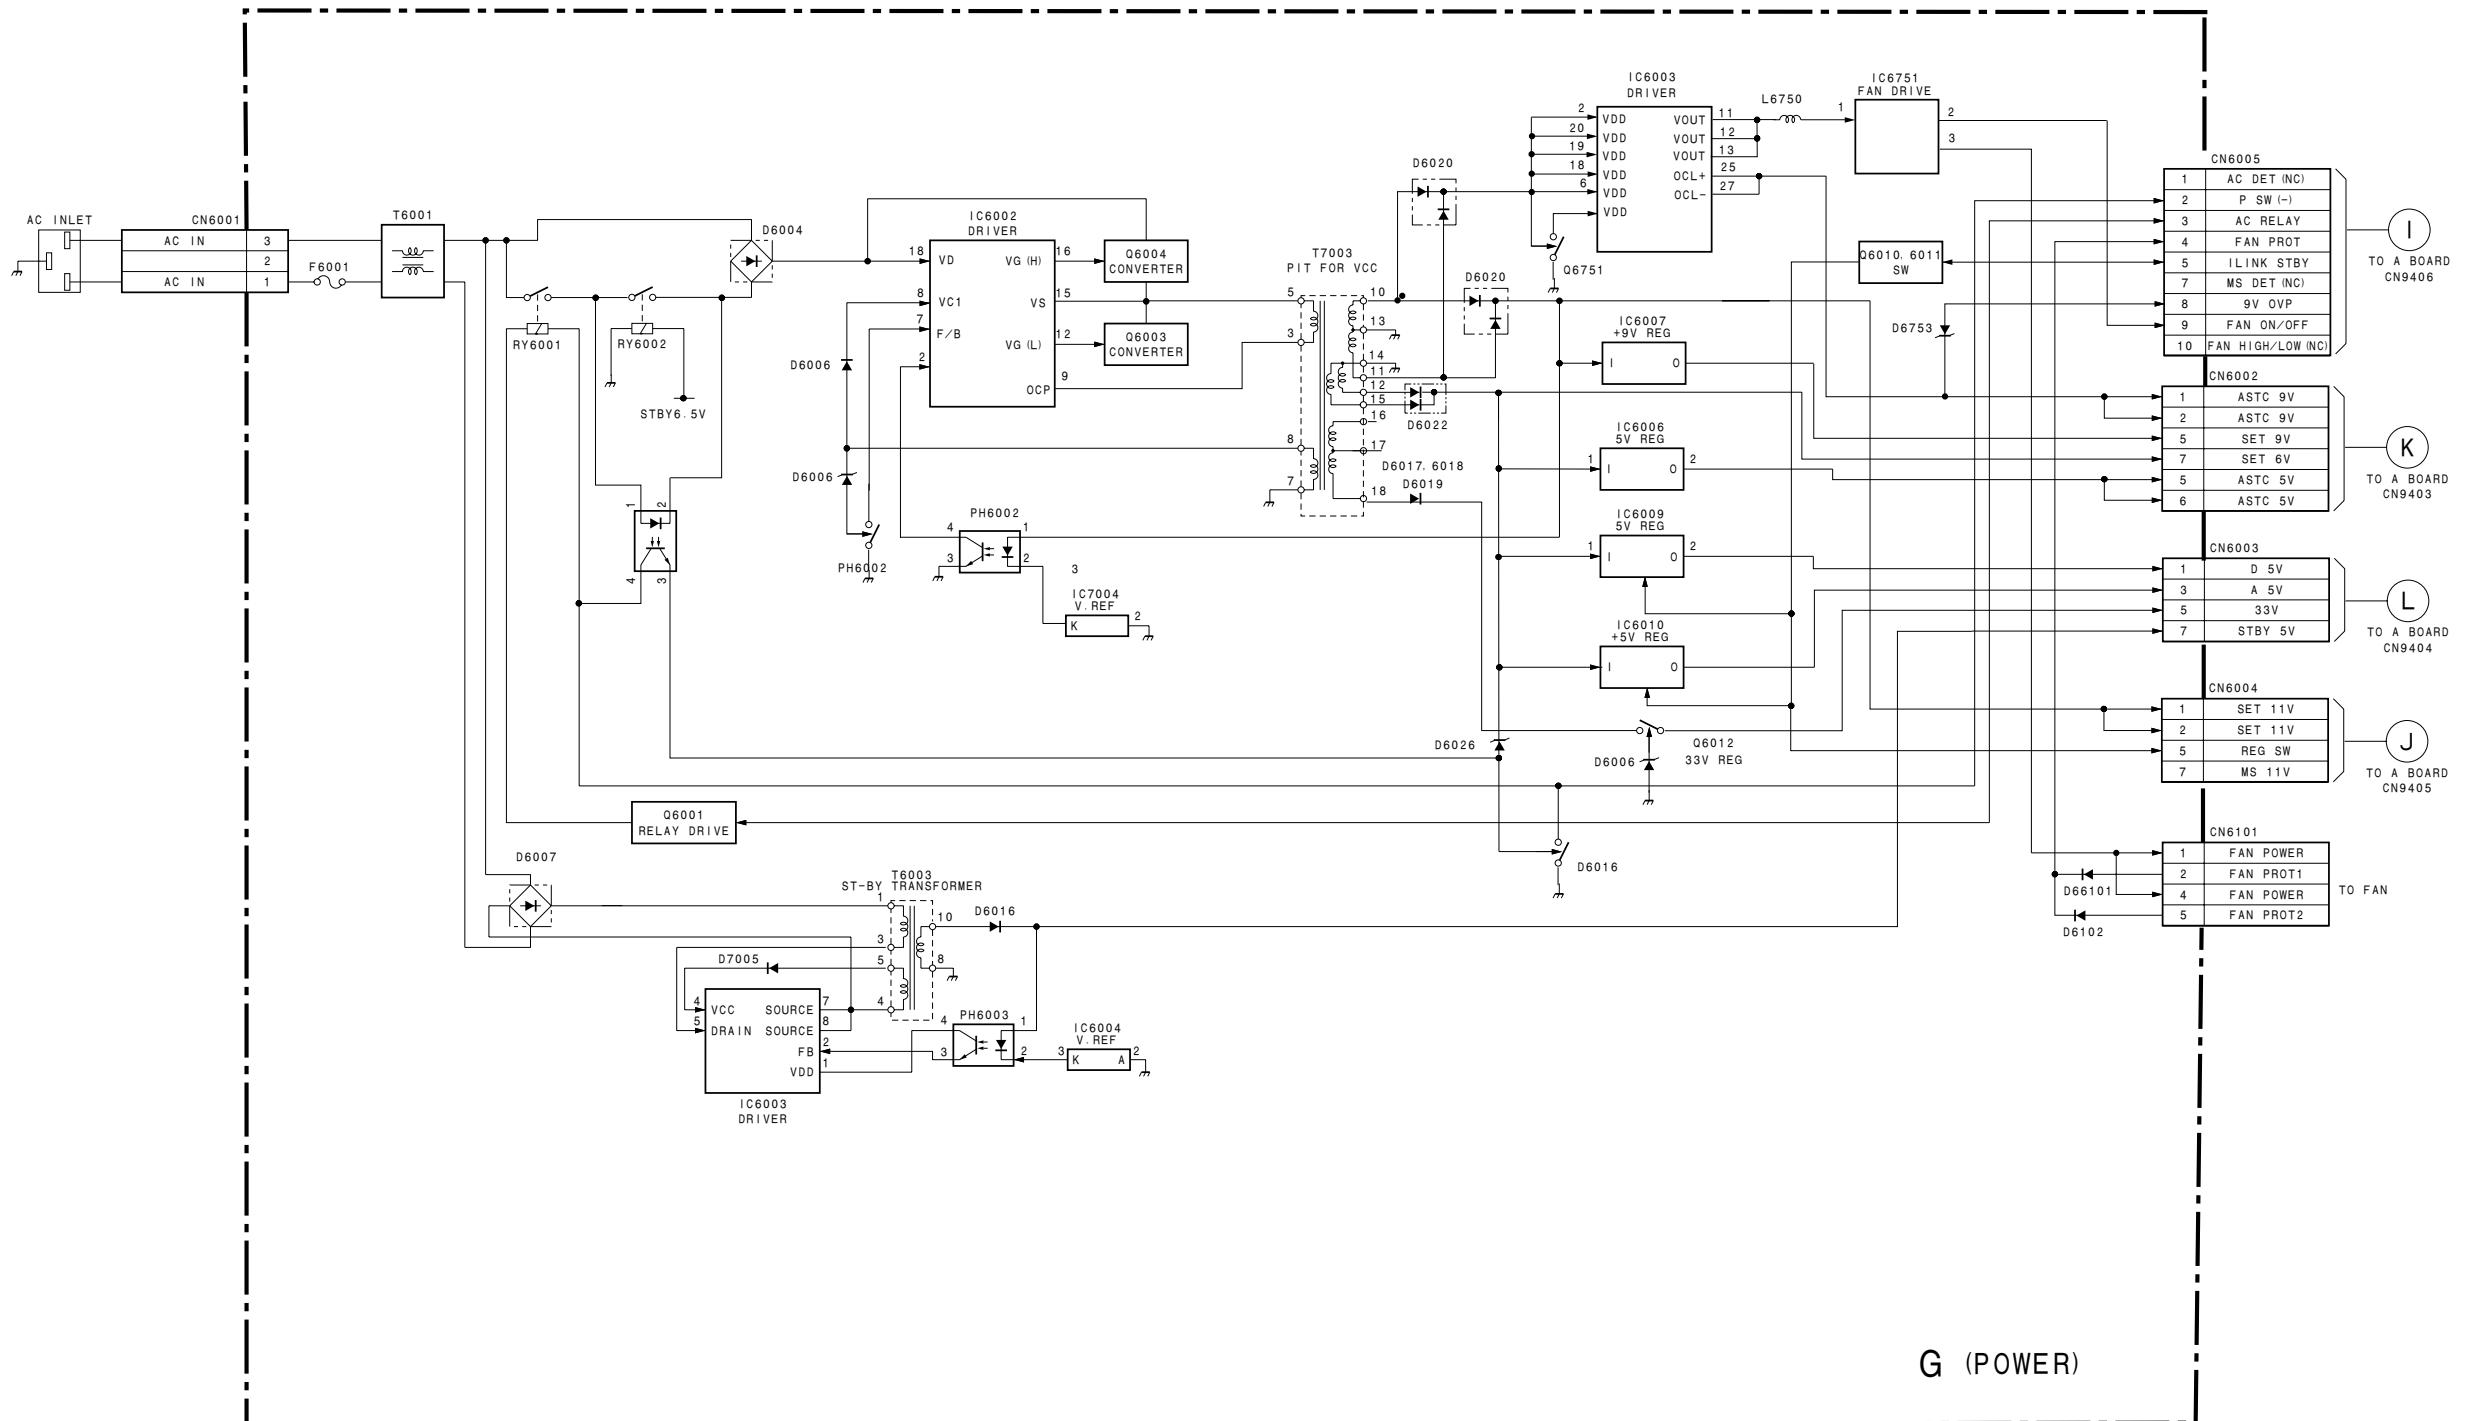

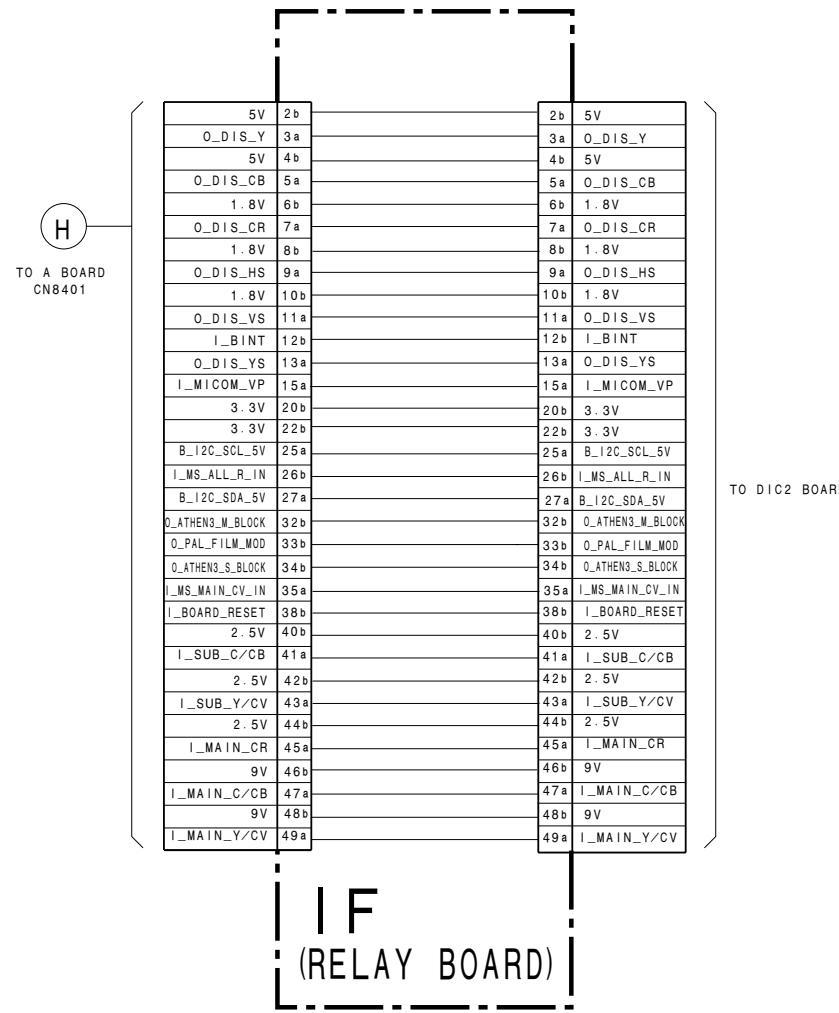


### **3-2. FRAME DIAGRAM**

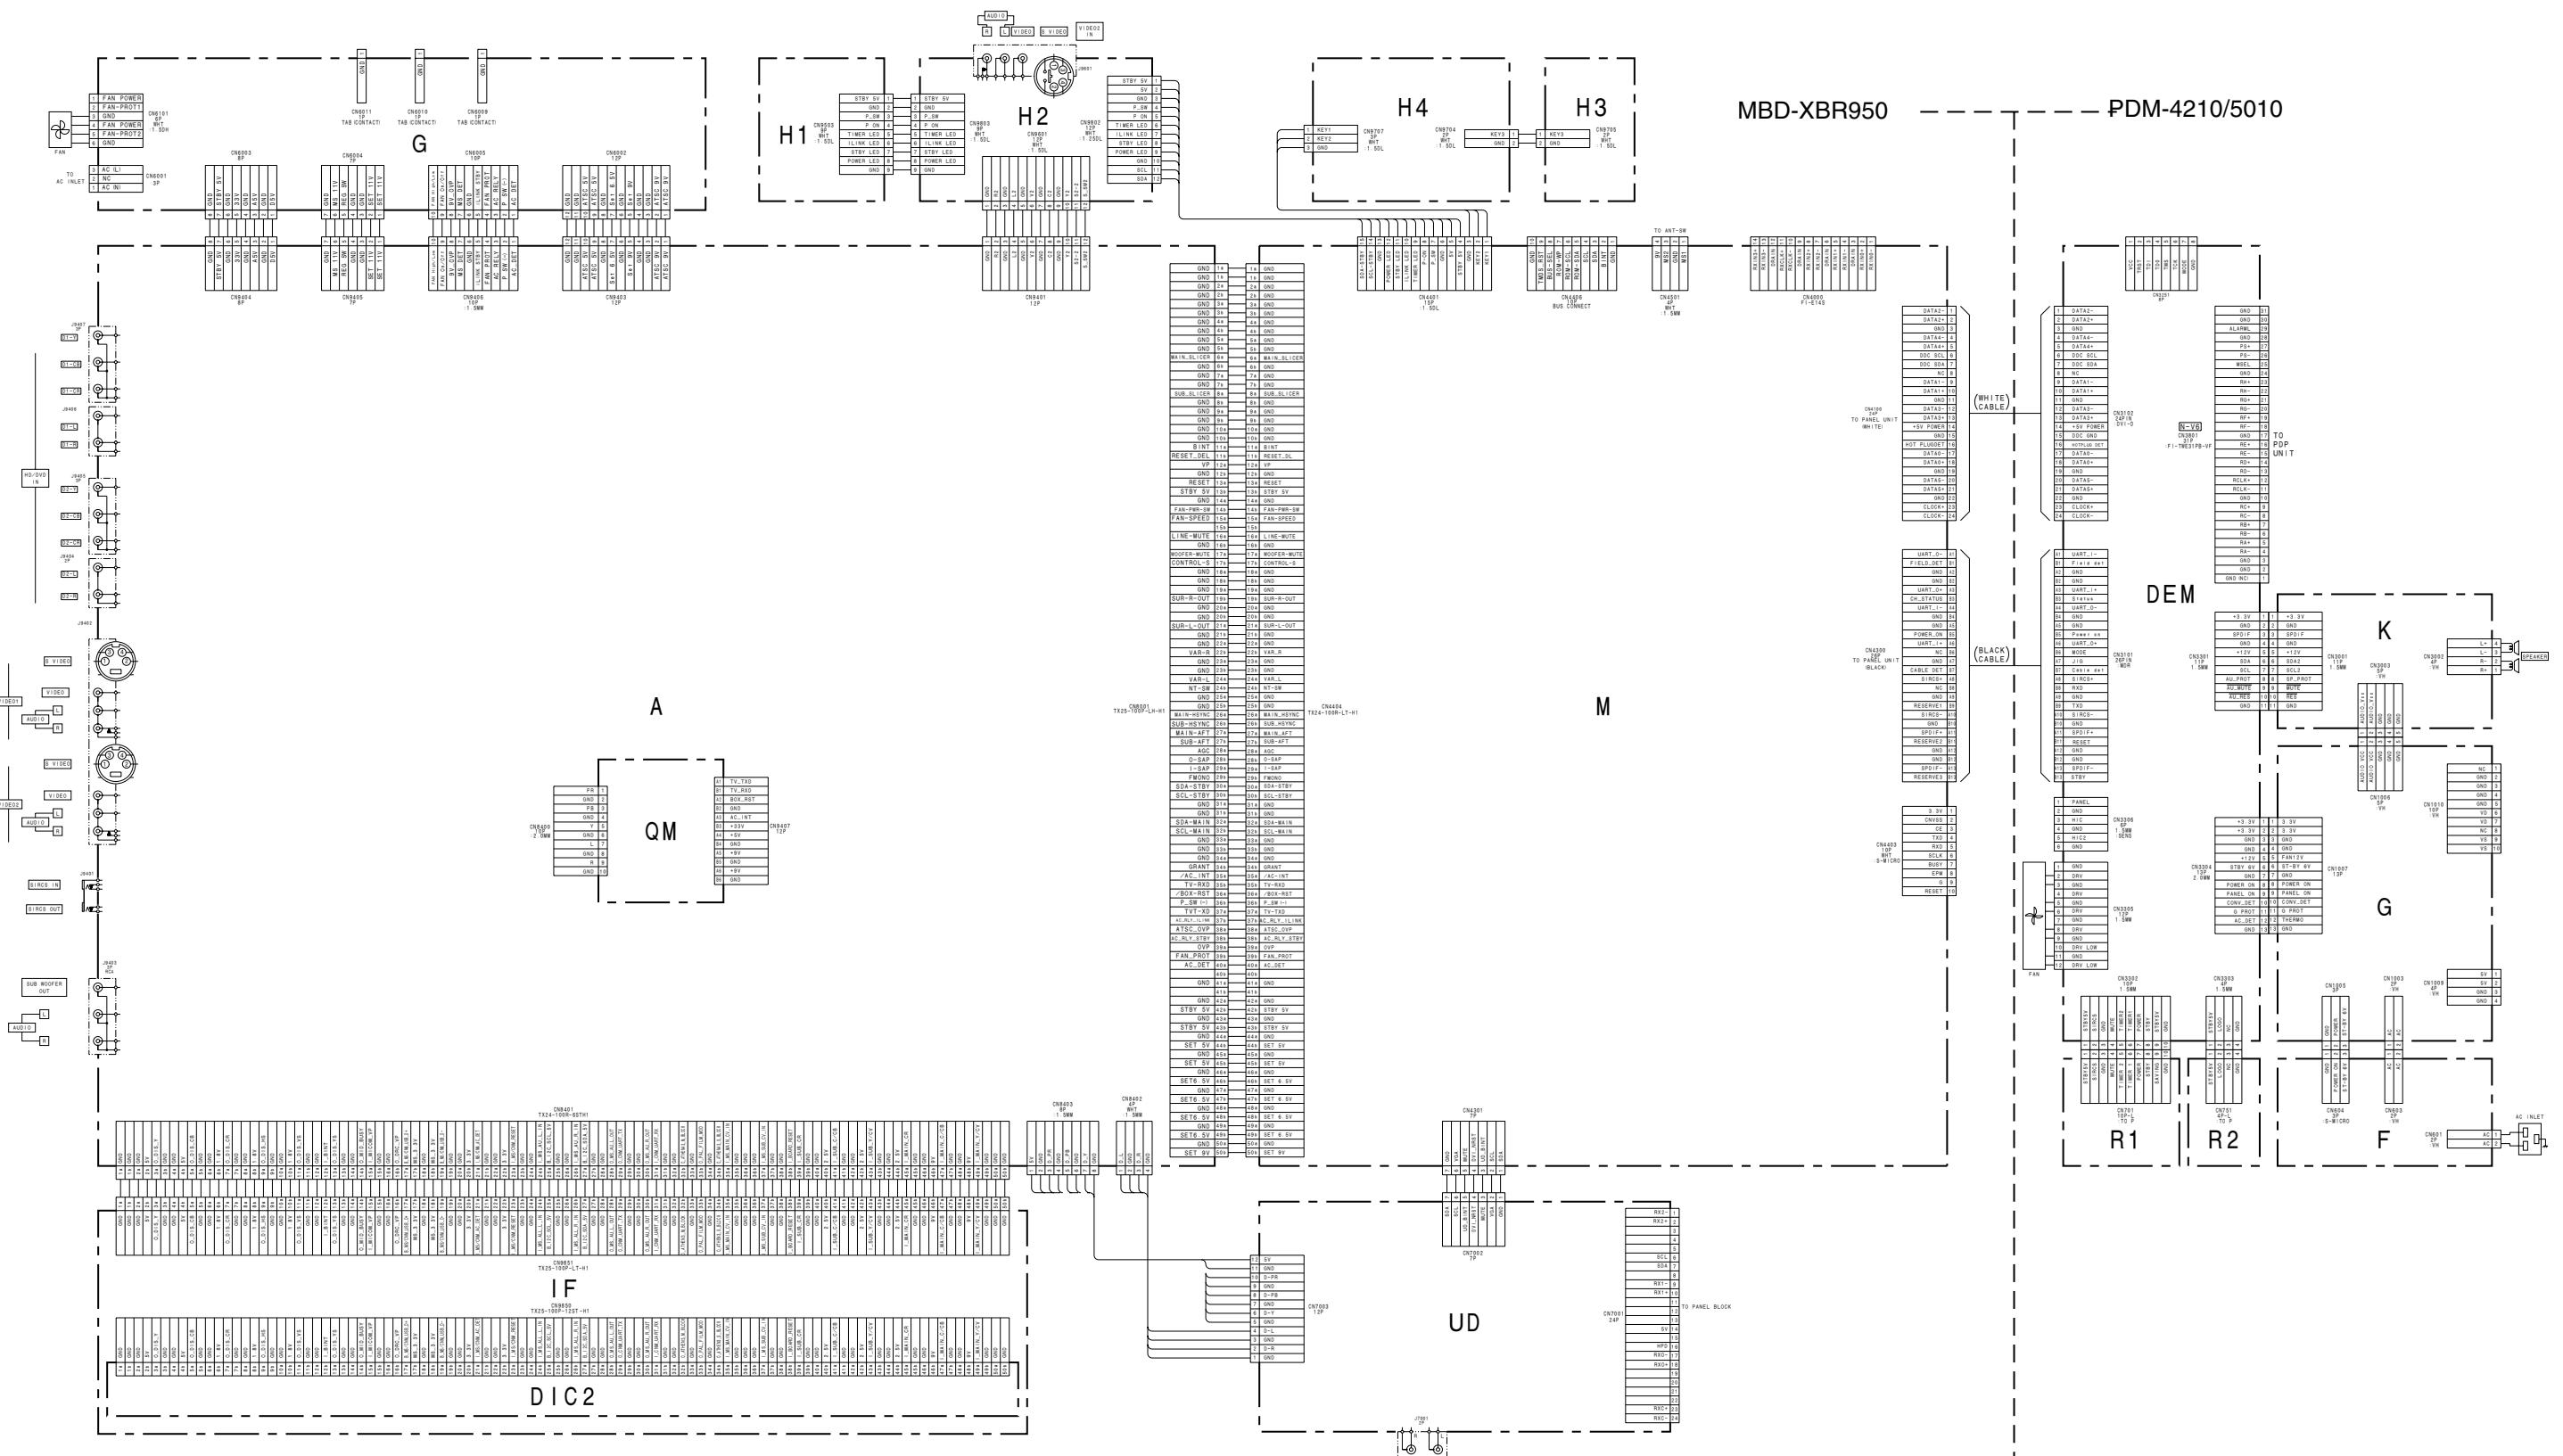


### 3-3. CIRCUIT BOARDS LOCATION

#### 3-3-1. DISPLAY UNIT (PDM-4210/5010)

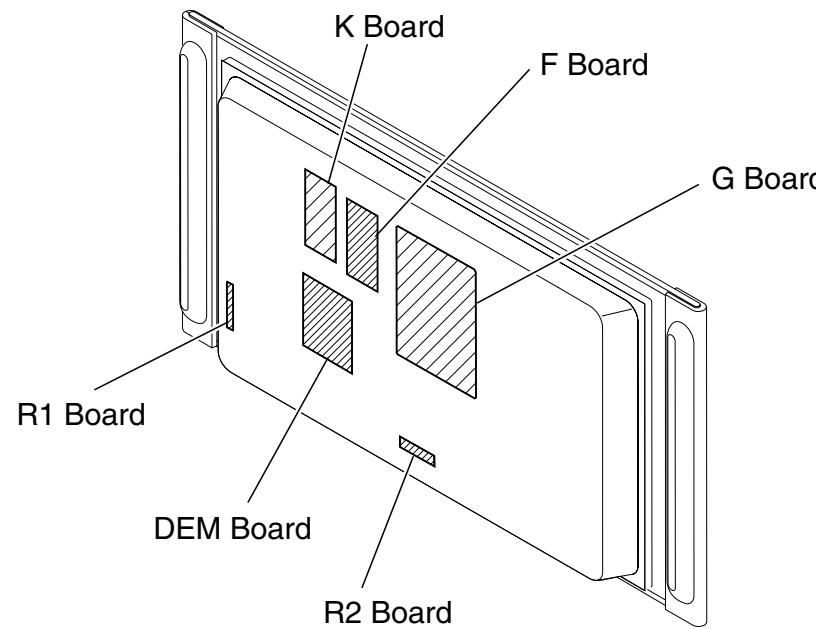

#### 3-3-2. MEDIA RECEIVER UNIT (MBD-XBR950)

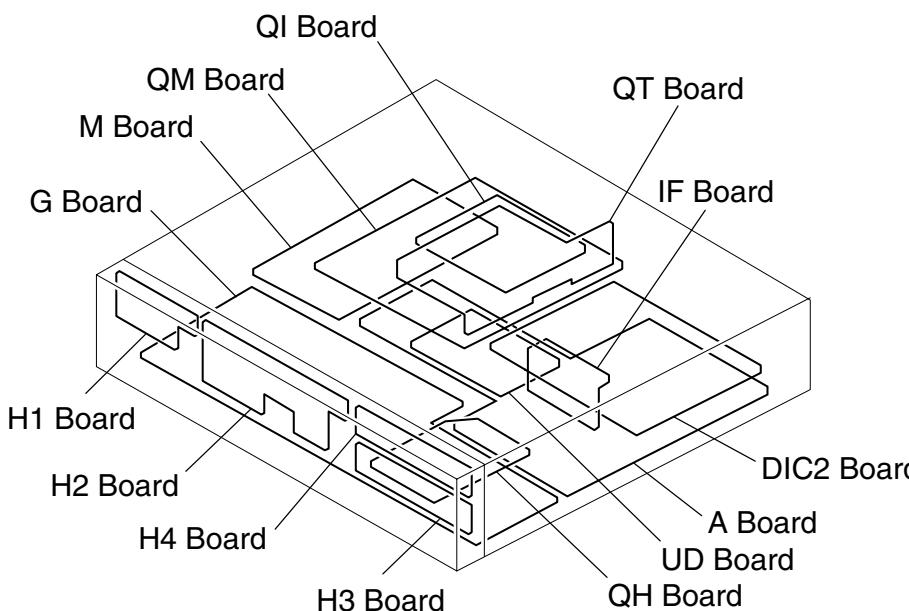

### 3-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

#### Note:

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. ( $\text{pF}$ :  $\mu\text{pF}$ )  
Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm

Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth-ground.
- : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 M digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- \* : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B - bus.
- : Signal path.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

#### Terminal name of semiconductors in silk screen printed circuit (\*)


Device	Printed symbol	Terminal name	Circuit
① Transistor		Collector Base Emitter	
② Transistor		Collector Base Emitter	
③ Diode		Cathode Anode	
④ Diode		Cathode Anode (NC)	
⑤ Diode		Cathode Anode (NC)	
⑥ Diode		Common Anode Cathode	
⑦ Diode		Common Anode Cathode	
⑧ Diode		Common Anode Anode	
⑨ Diode		Common Anode Anode	
⑩ Diode		Common Cathode Cathode	
⑪ Diode		Common Cathode Cathode	
⑫ Diode		Anode Anode Cathode Anode Anode	
⑬ Transistor (FET)		Drain Source Gate	
⑭ Transistor (FET)		Drain Source Gate	
⑮ Transistor (FET)		Source Drain Gate	
⑯ Transistor		Emitter Collector Base	
⑰ Transistor		C2 B1 E1 E2 B2 C1	
⑱ Transistor		C1 B2 E2 E1 B1 C2	
⑲ Transistor		C1 B2 E2 E1 B1 C2	
⑳ Transistor		C1 B2 E2 E1 B1 C2	
㉑ Transistor		E2 B1 E1 C2 C1(B2)	
㉒ Transistor		B1 E1 E2 C1 C2	
㉓ Transistor		E2 E1 B1 C2 C1	
—		Discrete semiconductor	

(Chip semiconductors that are not actually used are included.)

Ver.1.6

### **3-4-1. DISPLAY UNIT (PDM-4210/5010)**

## (1) Schematic Diagram of F Board

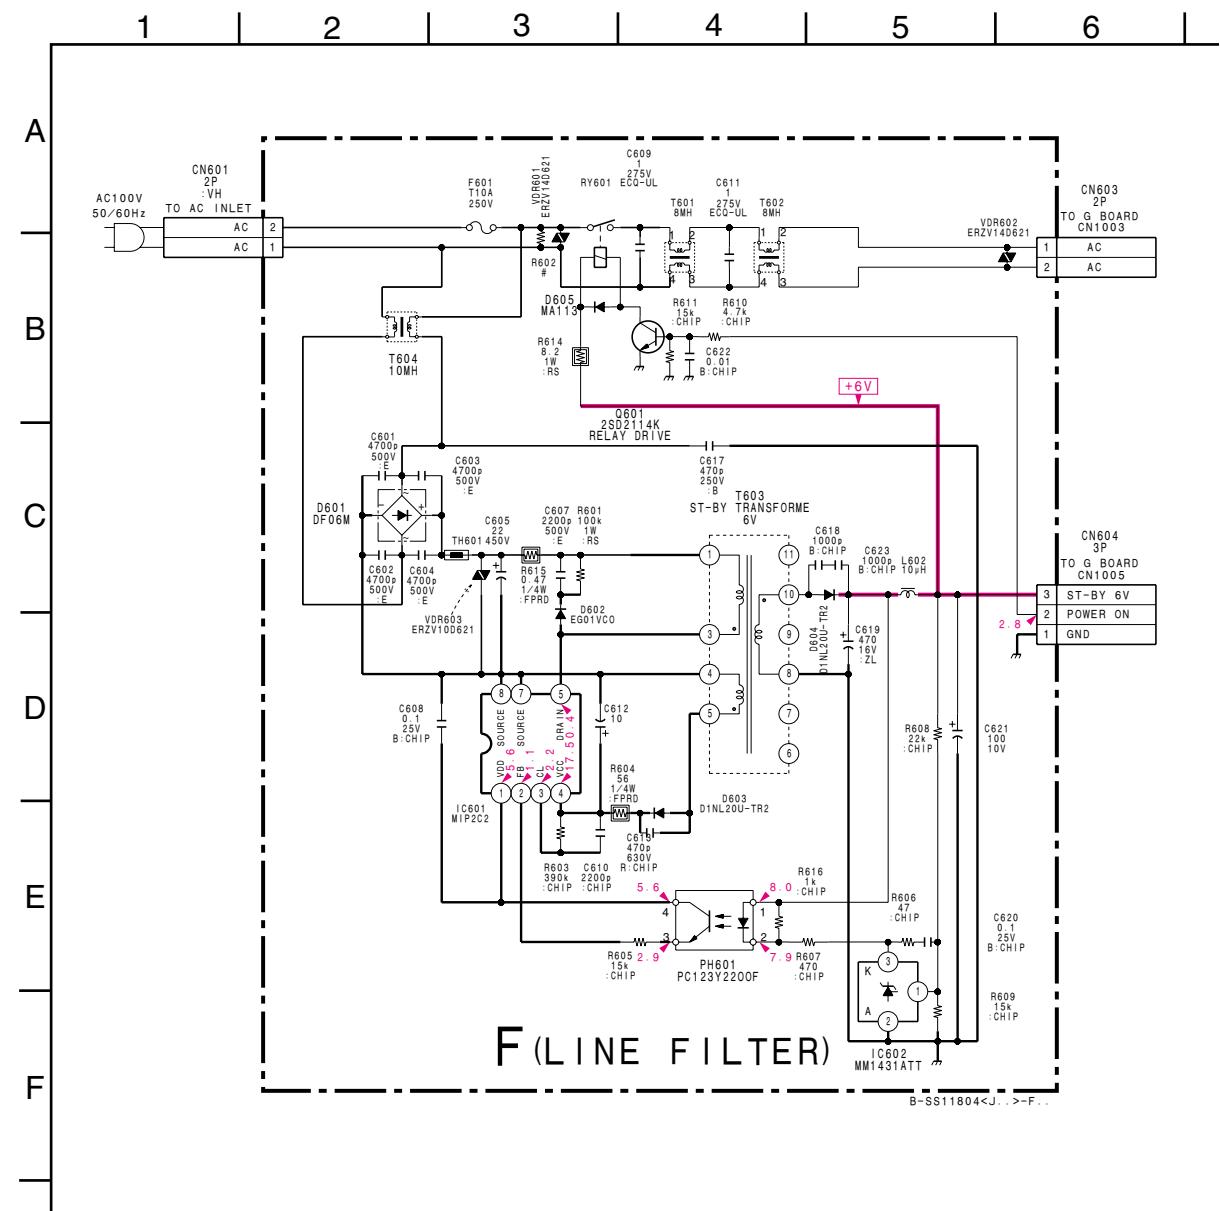


- F BOARD SEMICONDUCTOR LOCATION

		IC
	(Component Side)	(Conductor Side)
IC601	A-2	
IC602	A-1	
<b>TRANSISTER</b>		
	(Component Side)	(Conductor Side) *
Q601	A-1	①
<b>DIODE</b>		
	(Component Side)	(Conductor Side) *
D601	A-3	-
D602	A-2	-
D603	A-2	-
D604	A-1	-
D605	A-1	③


\*: Refer to Terminal name of  
semiconductors in silk screen  
printed circuit (see page 3-12)

**F** [LINE FILTER]

— F BOARD —

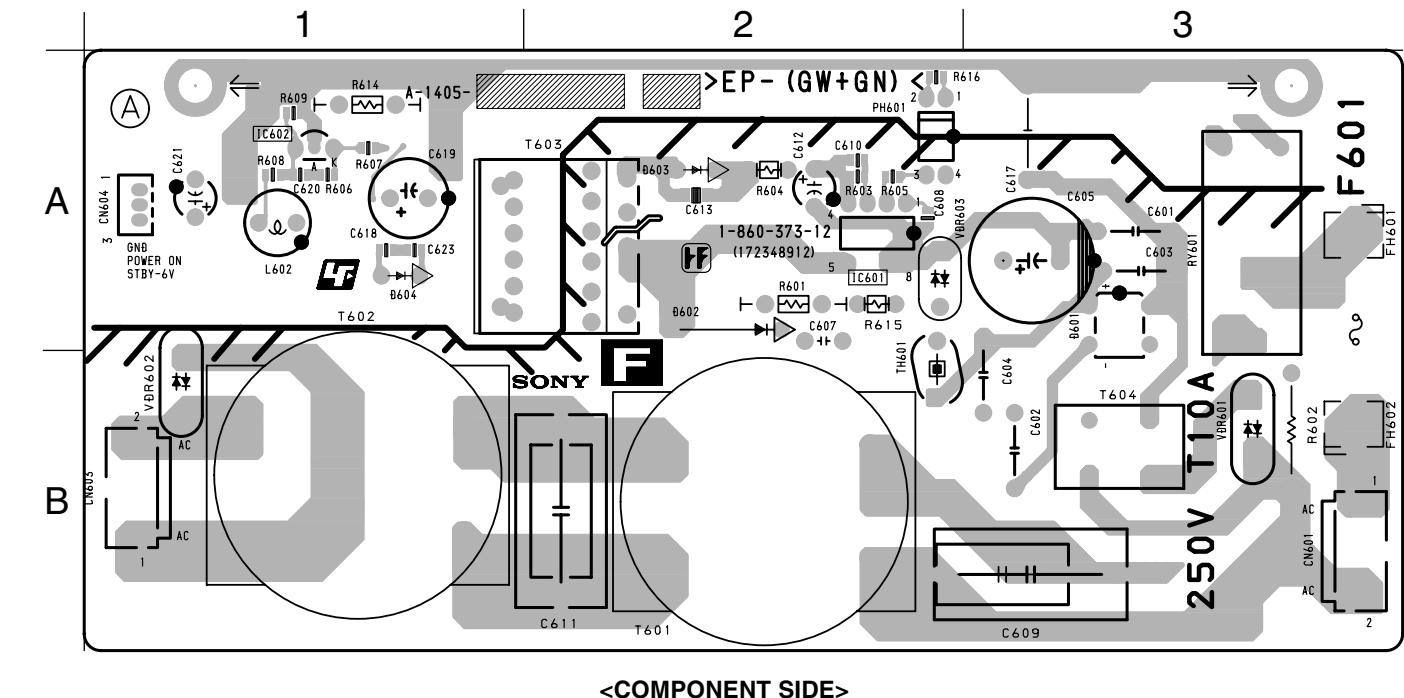


<COMPONENT SIDE>

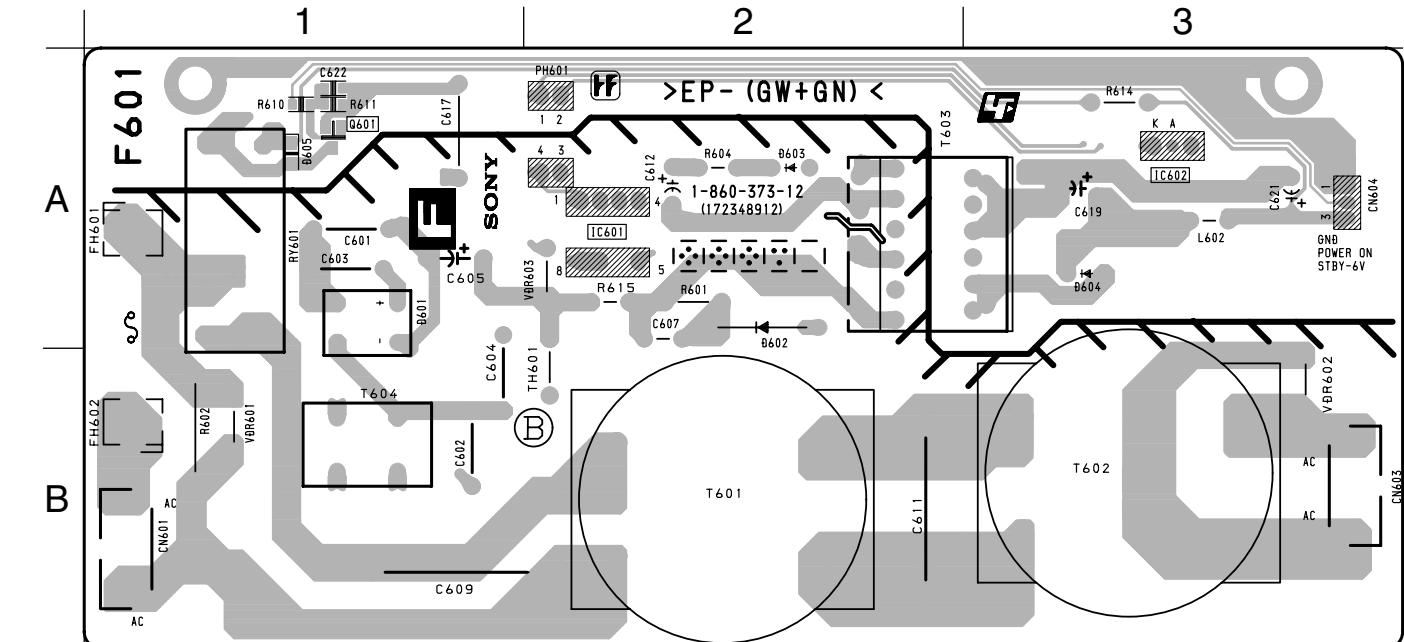


**<CONDUCTOR SIDE>**

## (2) Schematic Diagram of G Board

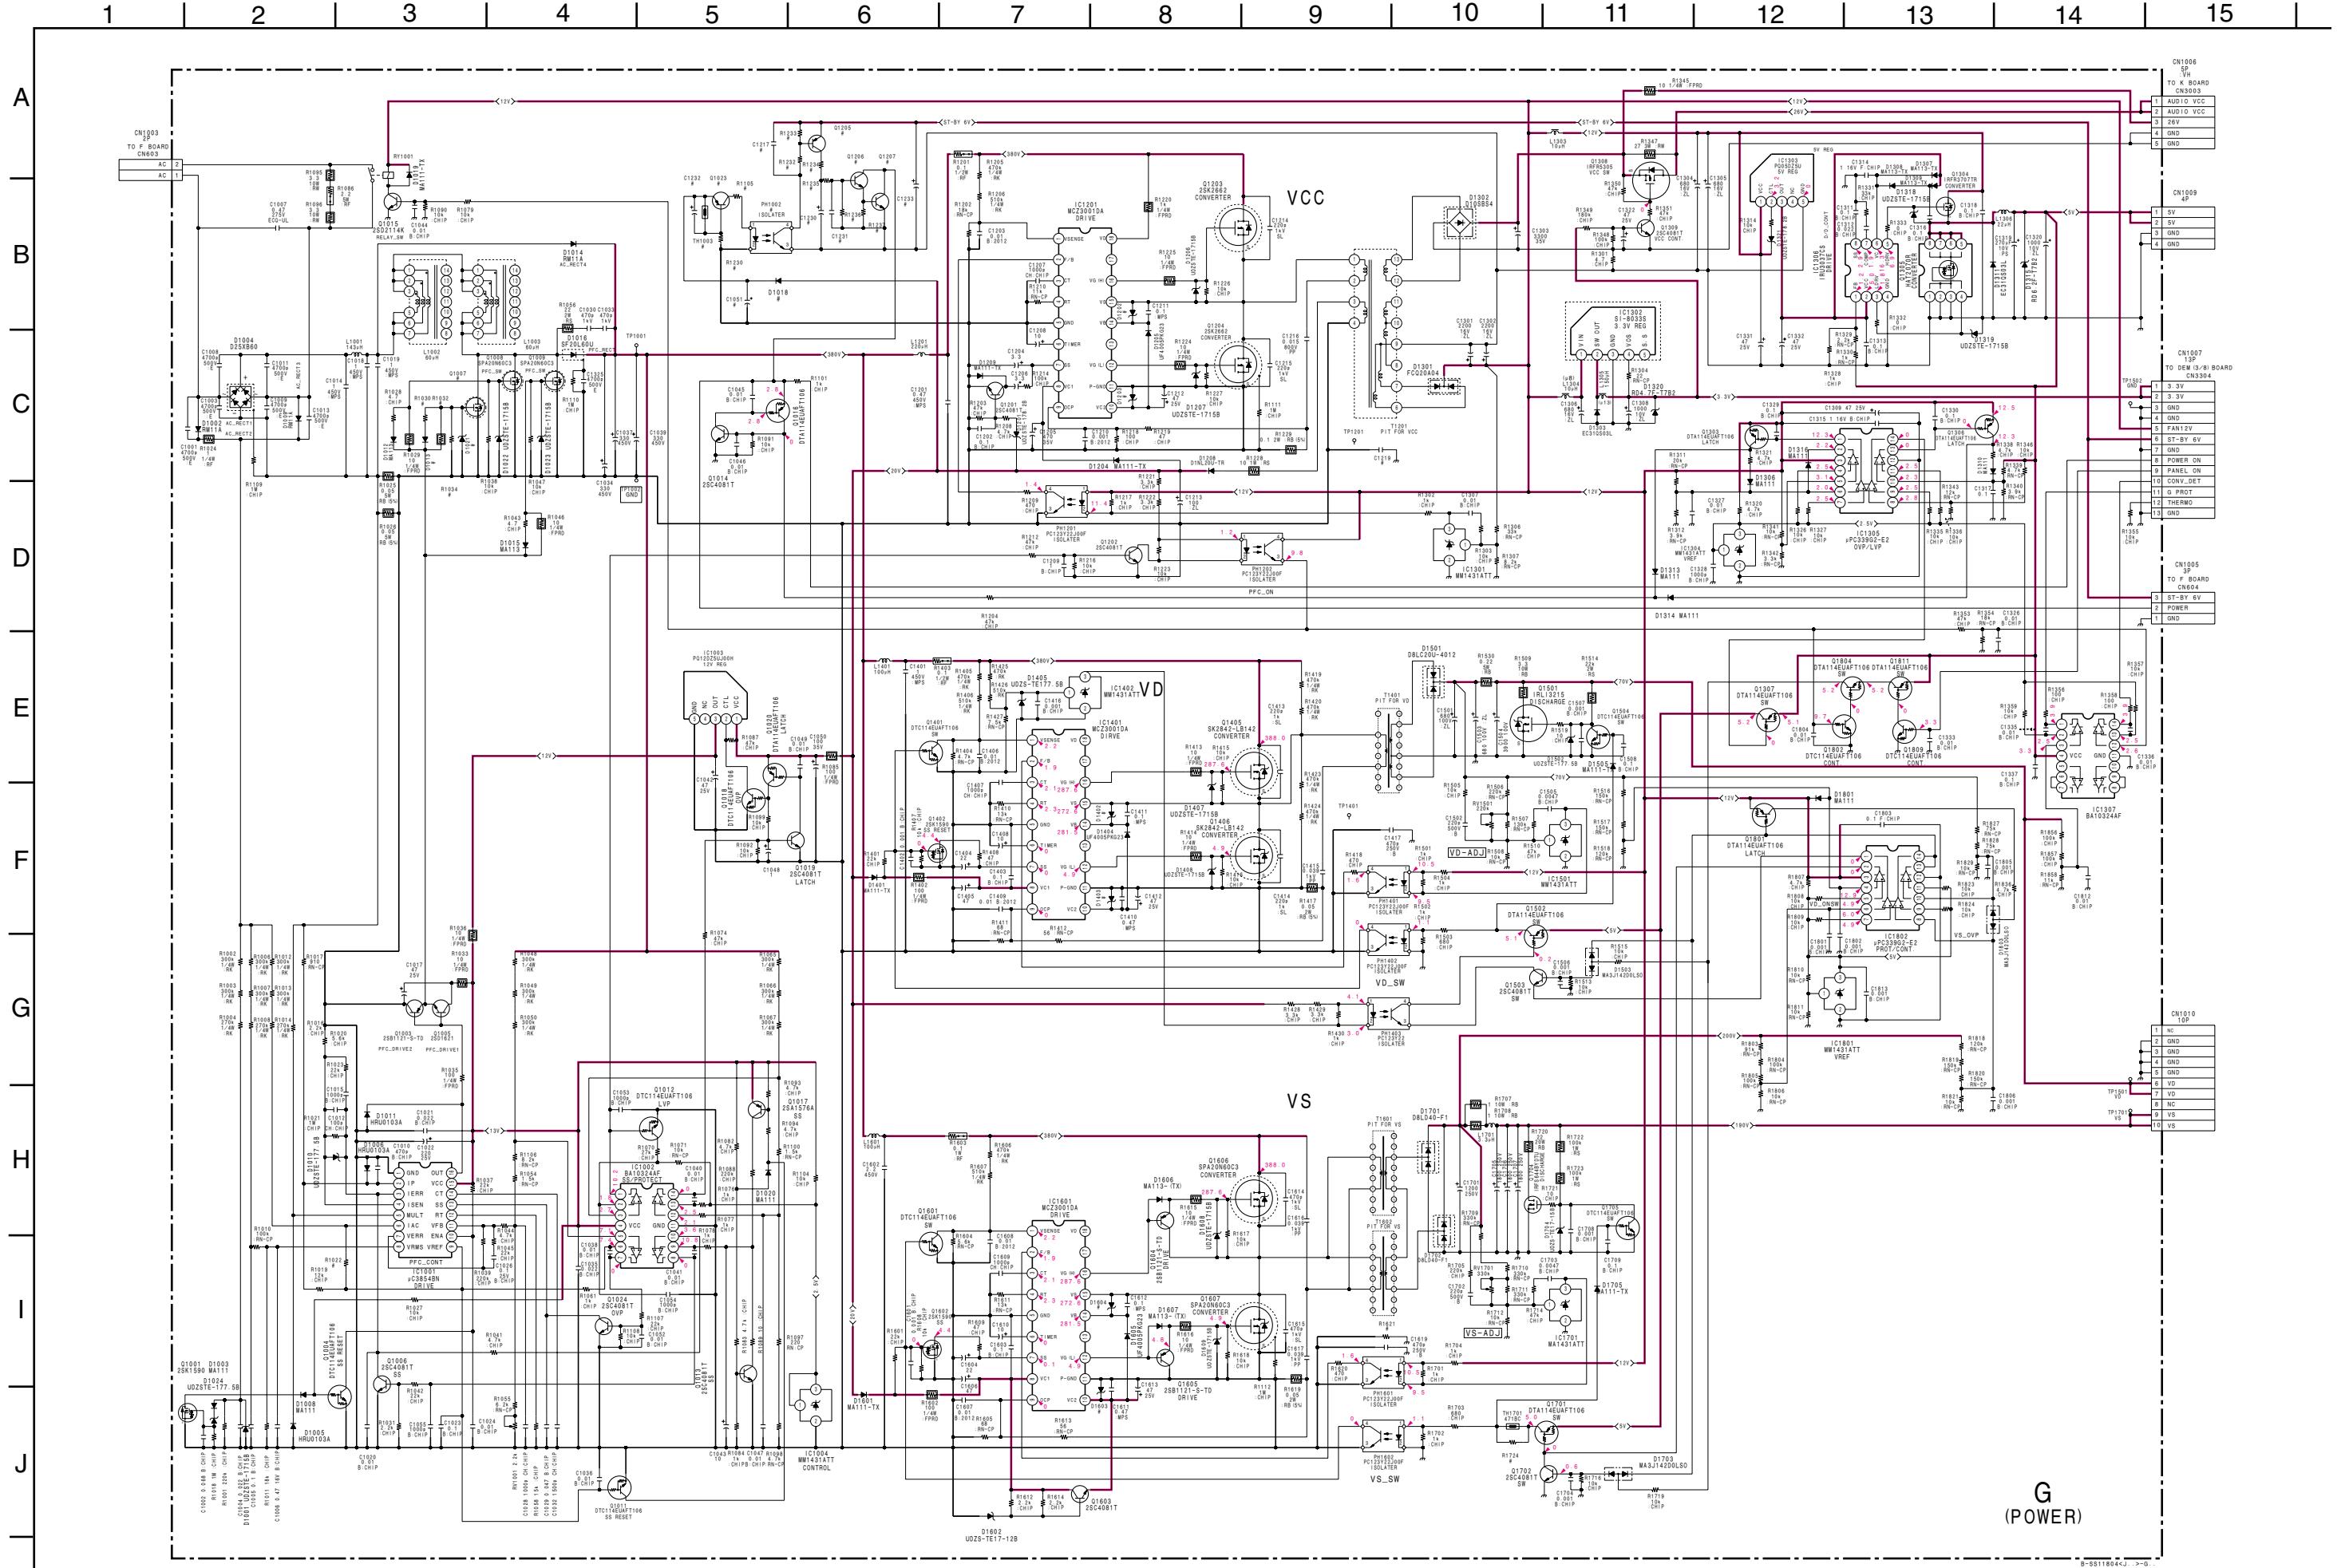


# G [POWER]

## — G BOARD —

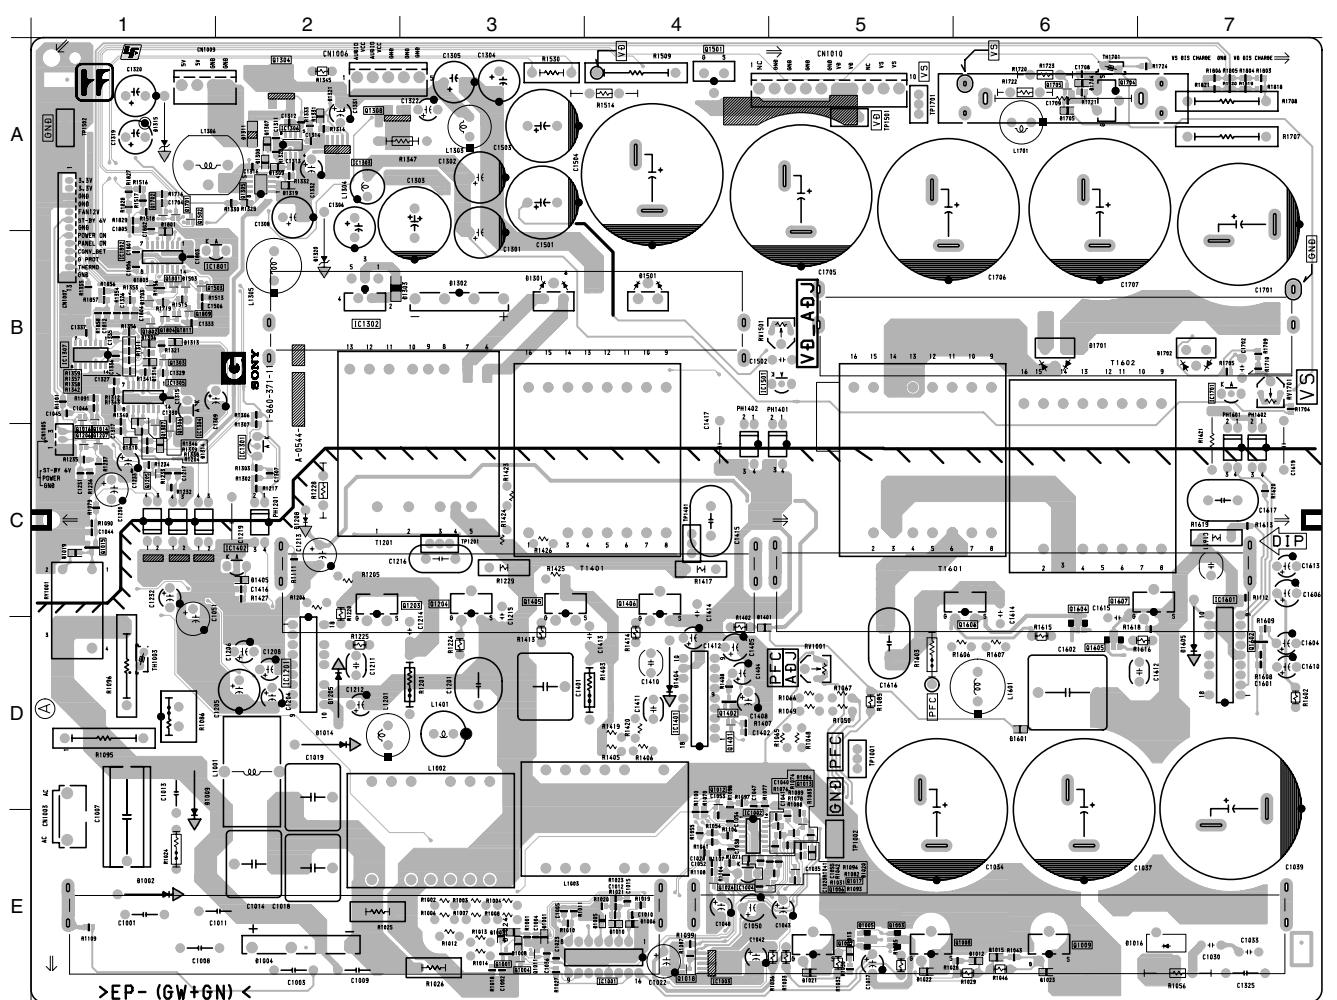

<COMPONENT SIDE>

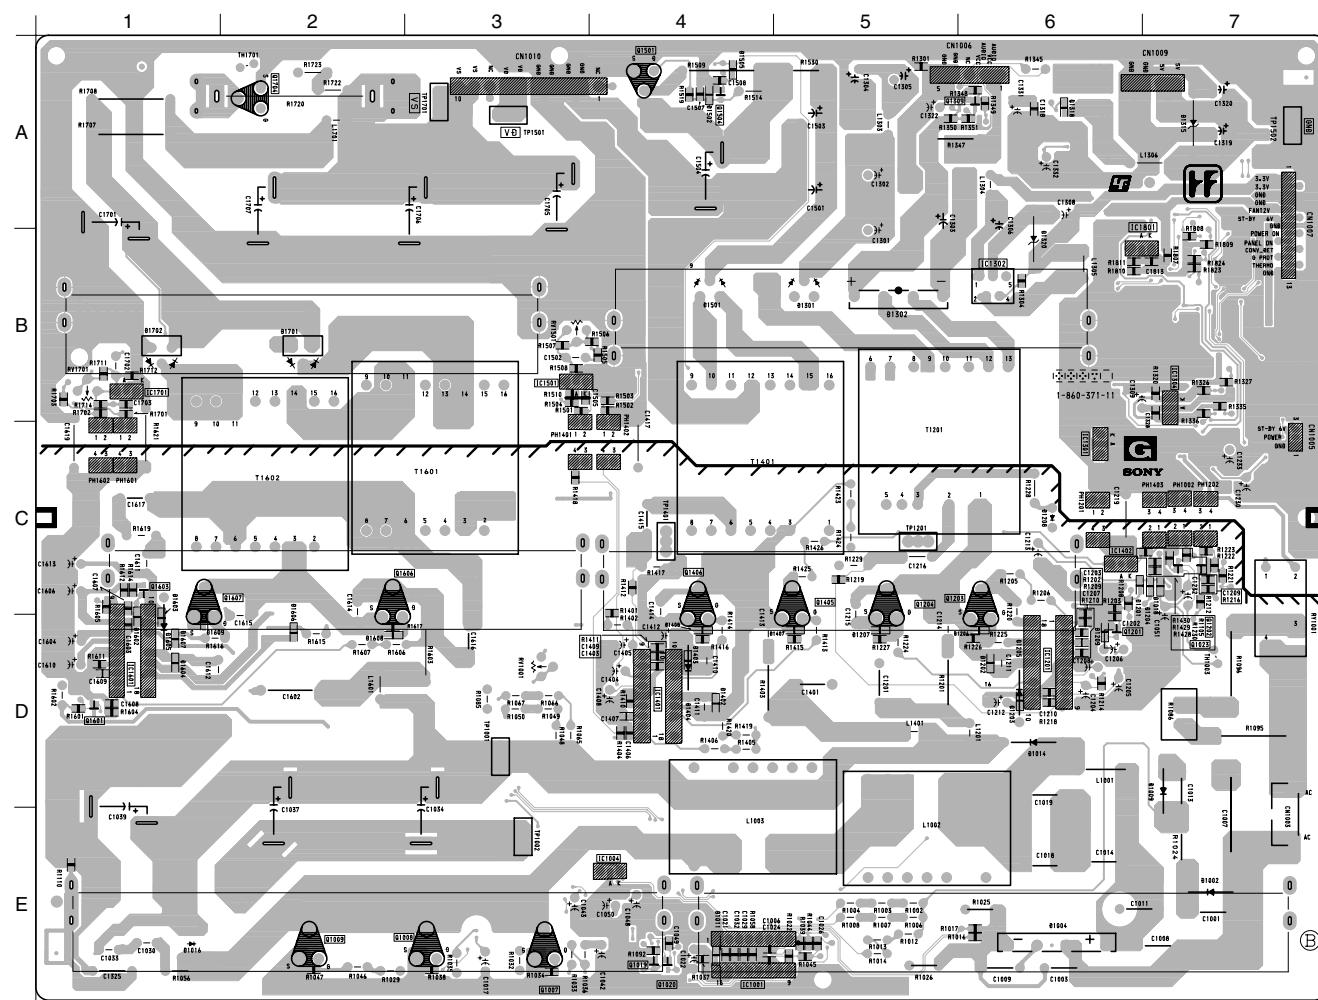


<CONDUCTOR SIDE>

## • G BOARD SEMICONDUCTOR LOCATION

IC	TRANSISTER	(Component Side)	(Conductor Side)	Q1207	C-1	(②)	Q1804	B-1	(②)	D1024	E-3	(③)	D1403	D-4	(③)	
IC1001	E-4	Q1001	E-3	Q1303	B-1	(⑩)	Q1809	B-1	(②)	D1201	C-6	(③)	D1404	D-4	-	
IC1002	E-4	Q1003	E-5	-	Q1304	A-2	-	Q1811	B-1	(②)	D1202	D-6	(③)	D1405	C-2	(③)
IC1003	E-4	Q1004	E-3	(②)	Q1306	C-1	(②)				D1203	D-6	(③)	D1407	D-5	(③)
IC1004	E-4	Q1005	E-5	-	Q1307	C-1	(⑩)				D1204	C-7	(③)	D1408	D-4	(③)
IC1201	D-2	Q1006	E-5	(②)	Q1308	A-2	(⑩)				D1205	D-2	(③)	D1501	B-4	-
IC1301	C-2	Q1007	E-5	-	Q1401	D-4	(②)				D1206	D-6	(③)	D1502	A-4	(③)
IC1302	B-2	Q1008	E-5	-	Q1402	D-4	(⑩)				D1207	D-5	(③)	D1503	B-1	(⑩)
IC1303	A-2	Q1009	E-6	-	Q1405	D-3	-				D1208	C-2	(③)	D1505	-	
IC1304	B-1	Q1011	E-3	(②)	Q1406	D-4	-				D1209	D-6	(③)	D1601	D-6	(③)
IC1305	B-1	Q1012	D-4	(②)	Q1501	A-4	-				D120	D-5	(③)	D1602	D-1	(③)
IC1306	A-2	Q1013	E-5	(②)	Q1502	A-1	(⑩)				D120	D-6	(③)	D1603	D-1	(③)
IC1307	B-1	Q1014	B-1	(②)	Q1503	B-1	(⑩)				D120	D-5	(③)	D1604	D-1	(③)
IC1401	D-4	Q1015	C-1	(②)	Q1504		A-4				D1008	E-3	(③)	D1605	C-7	-
IC1402	C-2	Q1016	B-1	(②)	Q1601		D-1				D1009	D-1	(③)	D1606	D-2	(③)
IC1501	B-5	Q1017	E-5	(②)	Q1602	D-7	(⑩)				D100	E-4	(③)	D1607	D-1	(③)
IC1601	D-7	Q1018	E-4	(②)	Q1603		C-1				D1011	E-4	(③)	D1608	D-2	(③)
IC1701	B-7	Q1019	E-4	(①)	Q1604	D-6					D1012	E-6	(③)	D1609	D-1	(③)
IC1801	B-2	Q1020	E-4	(①)	Q1605	D-6	-				D1013	E-5	(③)	D1701	B-6	-
IC1802	B-1	Q1023	C-7	(①)	Q1606	D-6	-				D1014	D-2	(③)	D1702	B-7	-
		Q1024	E-4	(②)	Q1607	D-7					D1015	E-6	(③)	D1703	B-1	(⑩)
											D1016	E-7	(③)	D1704	A-6	-
											D1017	E-6	(③)	D1705	A-6	(③)
											D1018	C-1	(③)	D1801	B-1	(③)
											D1019	C-1	(③)	D1802	B-1	(⑩)
											D1020	E-5	(③)			
											D1021	E-5	(③)			
											D1022	E-5	(③)			
											D1023	E-6	(③)			
											D1024	D-4	(③)			


\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

(3) Schematic Diagram of K Board

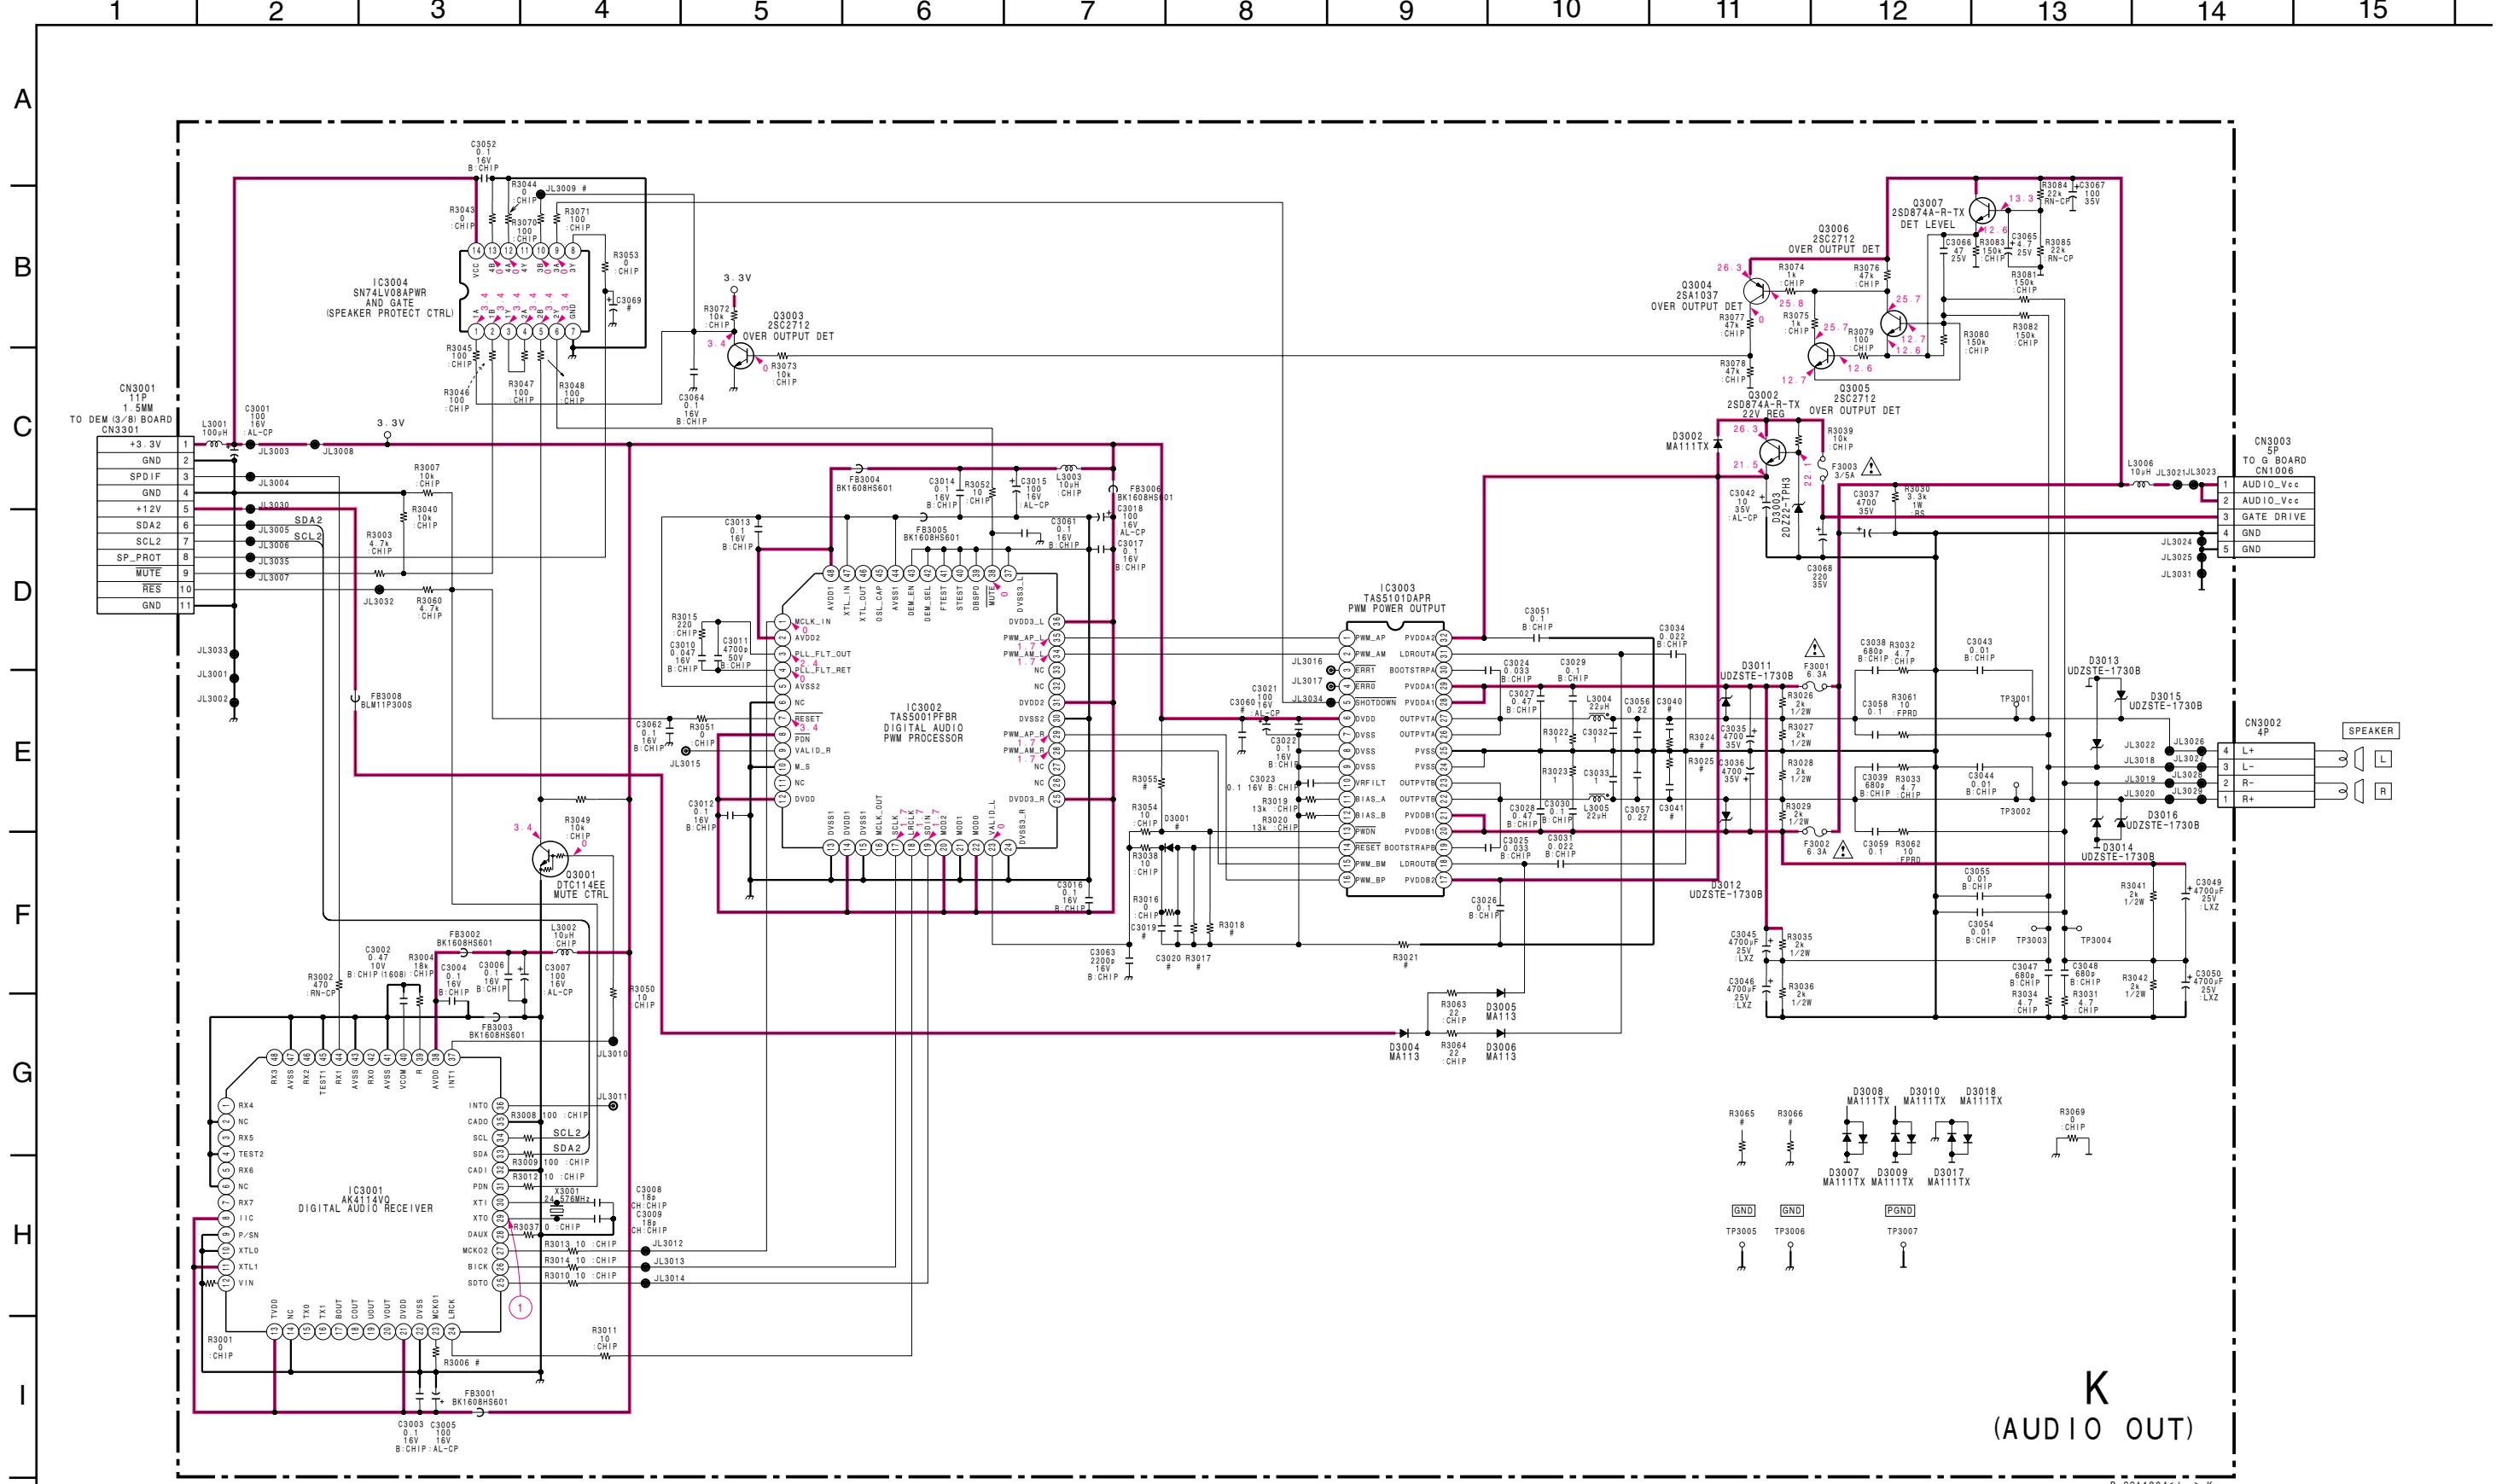

K  
(AUDIO OUT)


• K BOARD WAVEFORM

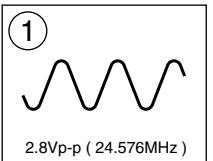



[AUDIO OUT]


— K BOARD —

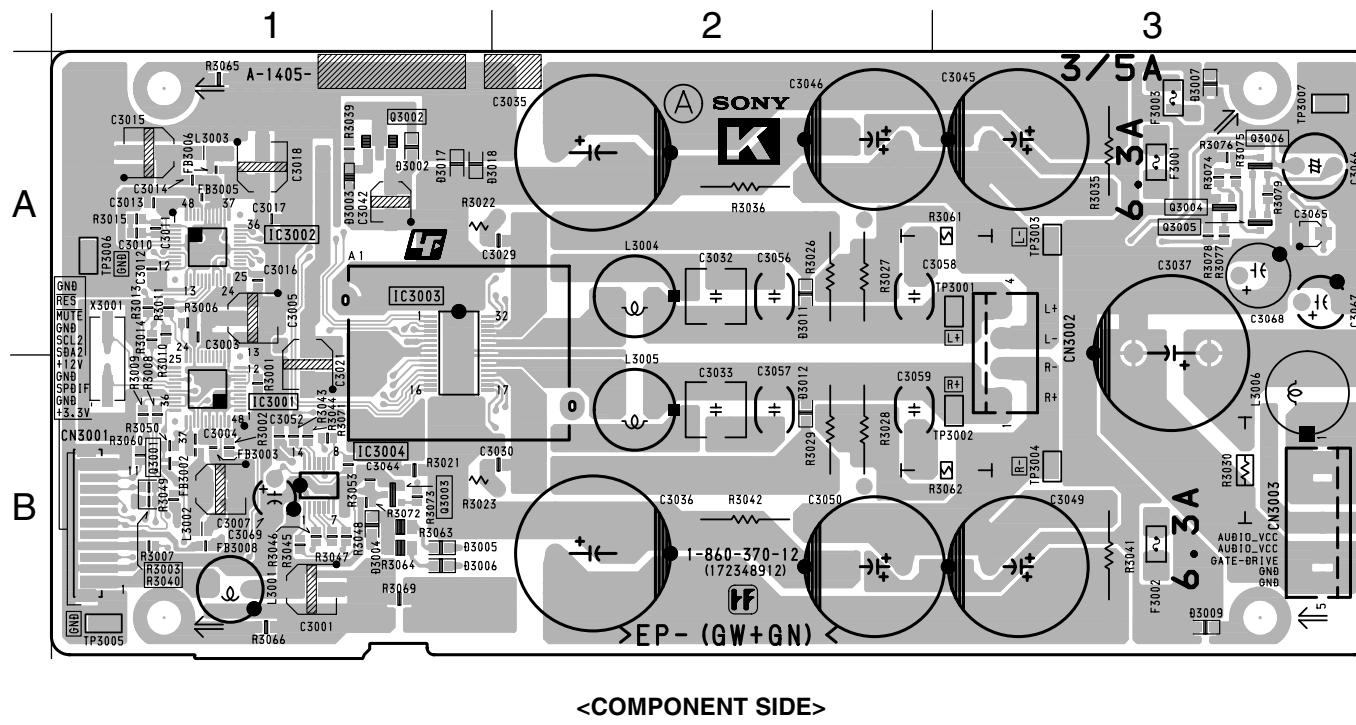


• K BOARD SEMICONDUCTOR LOCATION

IC	DIODE
(Component Side)	(Conductor Side)
IC3001 B-1	D3001 B-3 ③
IC3002 A-1	D3002 A-1 ③
IC3003 A-1	D3003 A-1 ③
IC3004 B-1	D3004 B-1 ③
IC3005 B-1	D3005 B-1 ③
IC3006 B-1	D3006 B-1 ③
IC3007 A-3	D3007 A-3 ③
IC3008 A-1	D3008 A-1 ③
IC3009 B-3	D3009 B-3 ③
Q3001 B-1 ②	D3010 B-1 ③
Q3002 A-1	D3011 A-2 ③
Q3003 B-1	D3012 B-2 ③
Q3004 A-3	D3013 A-1 ③
Q3005 A-3	D3014 B-1 ③
Q3006 A-3	D3015 A-1 ③
Q3007 A-1	D3016 B-1 ③
	D3017 A-1 ③
	D3018 A-1 ③


\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12 )

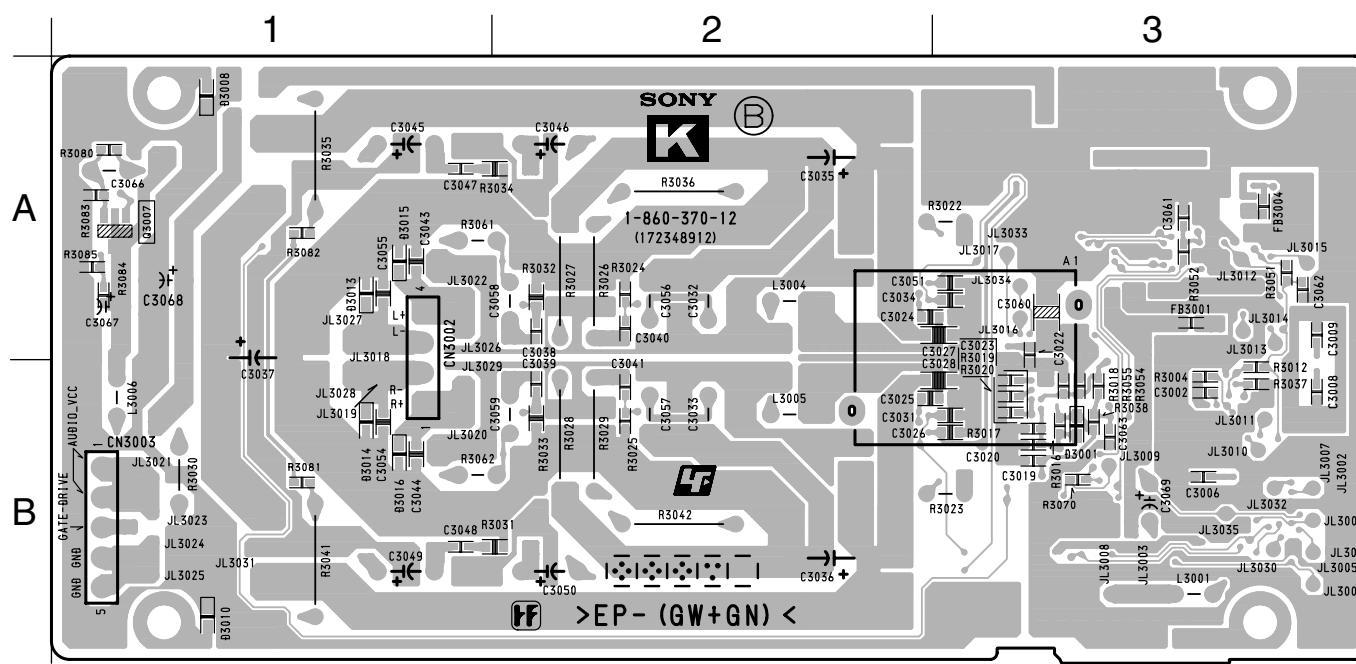


#### (4) Schematic Diagrams of DEM Board

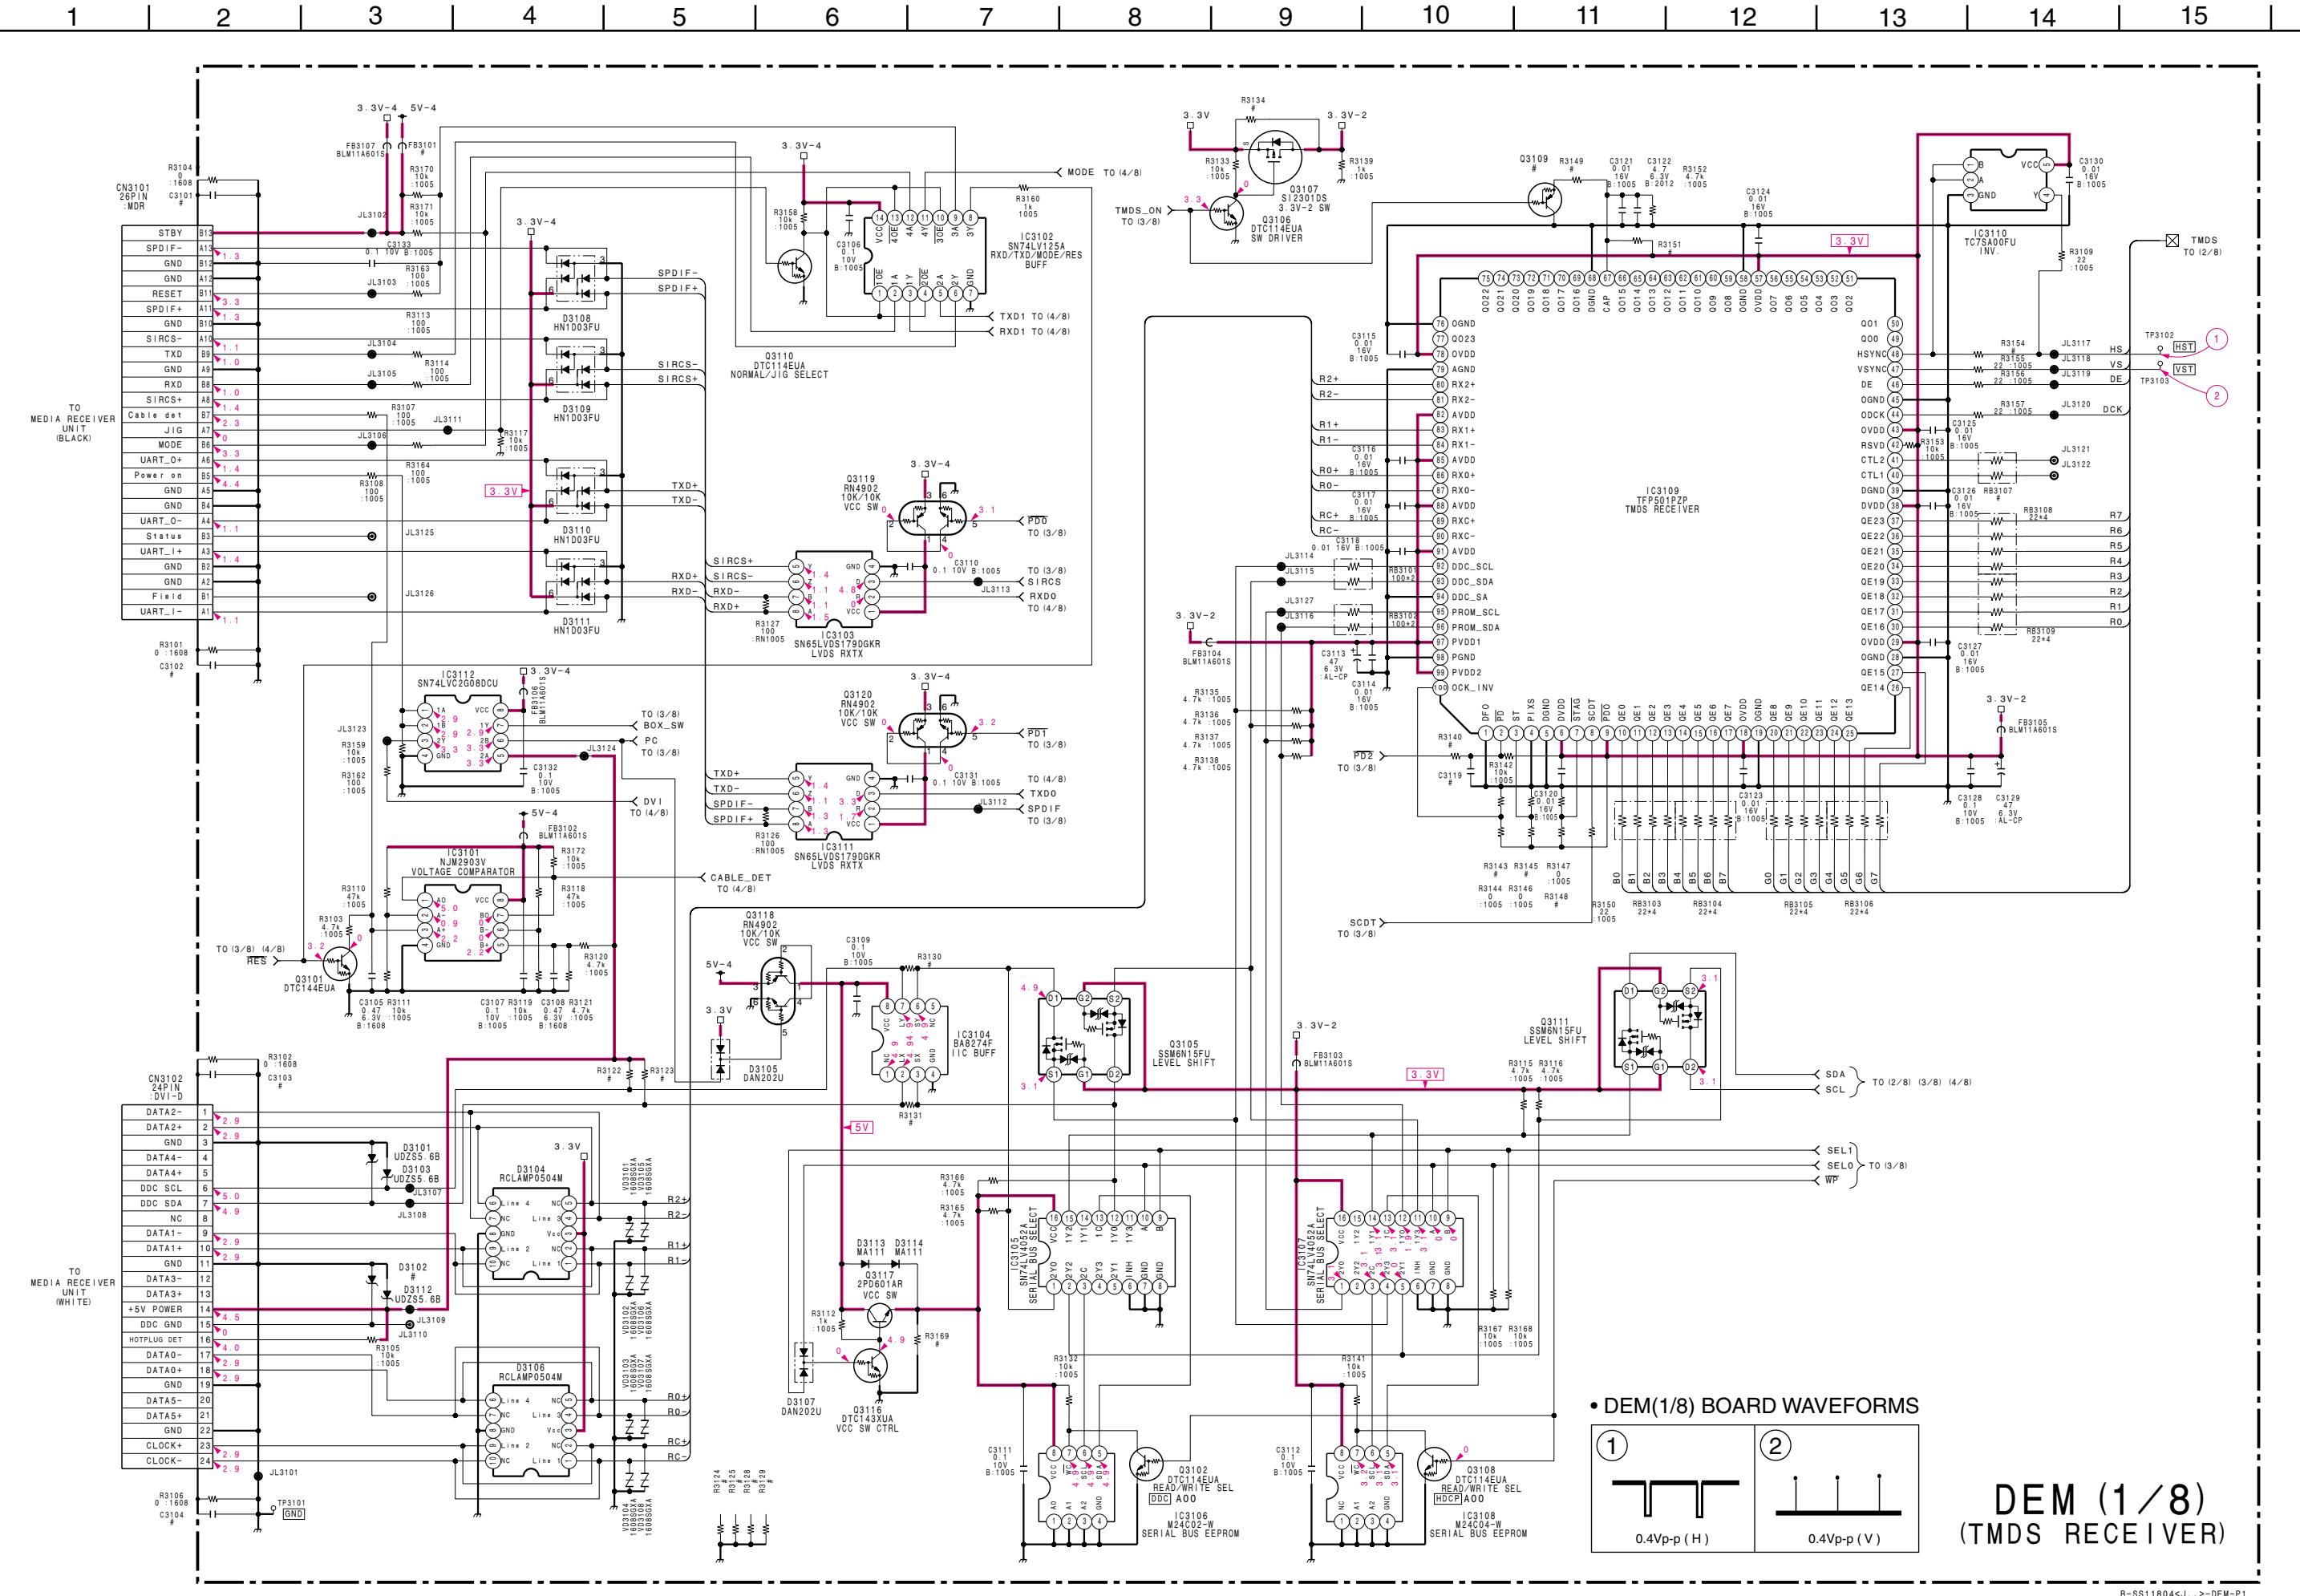


- DEM(1/8) BOARD WAVEFORMS

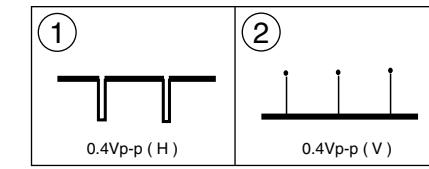


**DEM (1/8)**  
**(TMDS RECEIVER)**

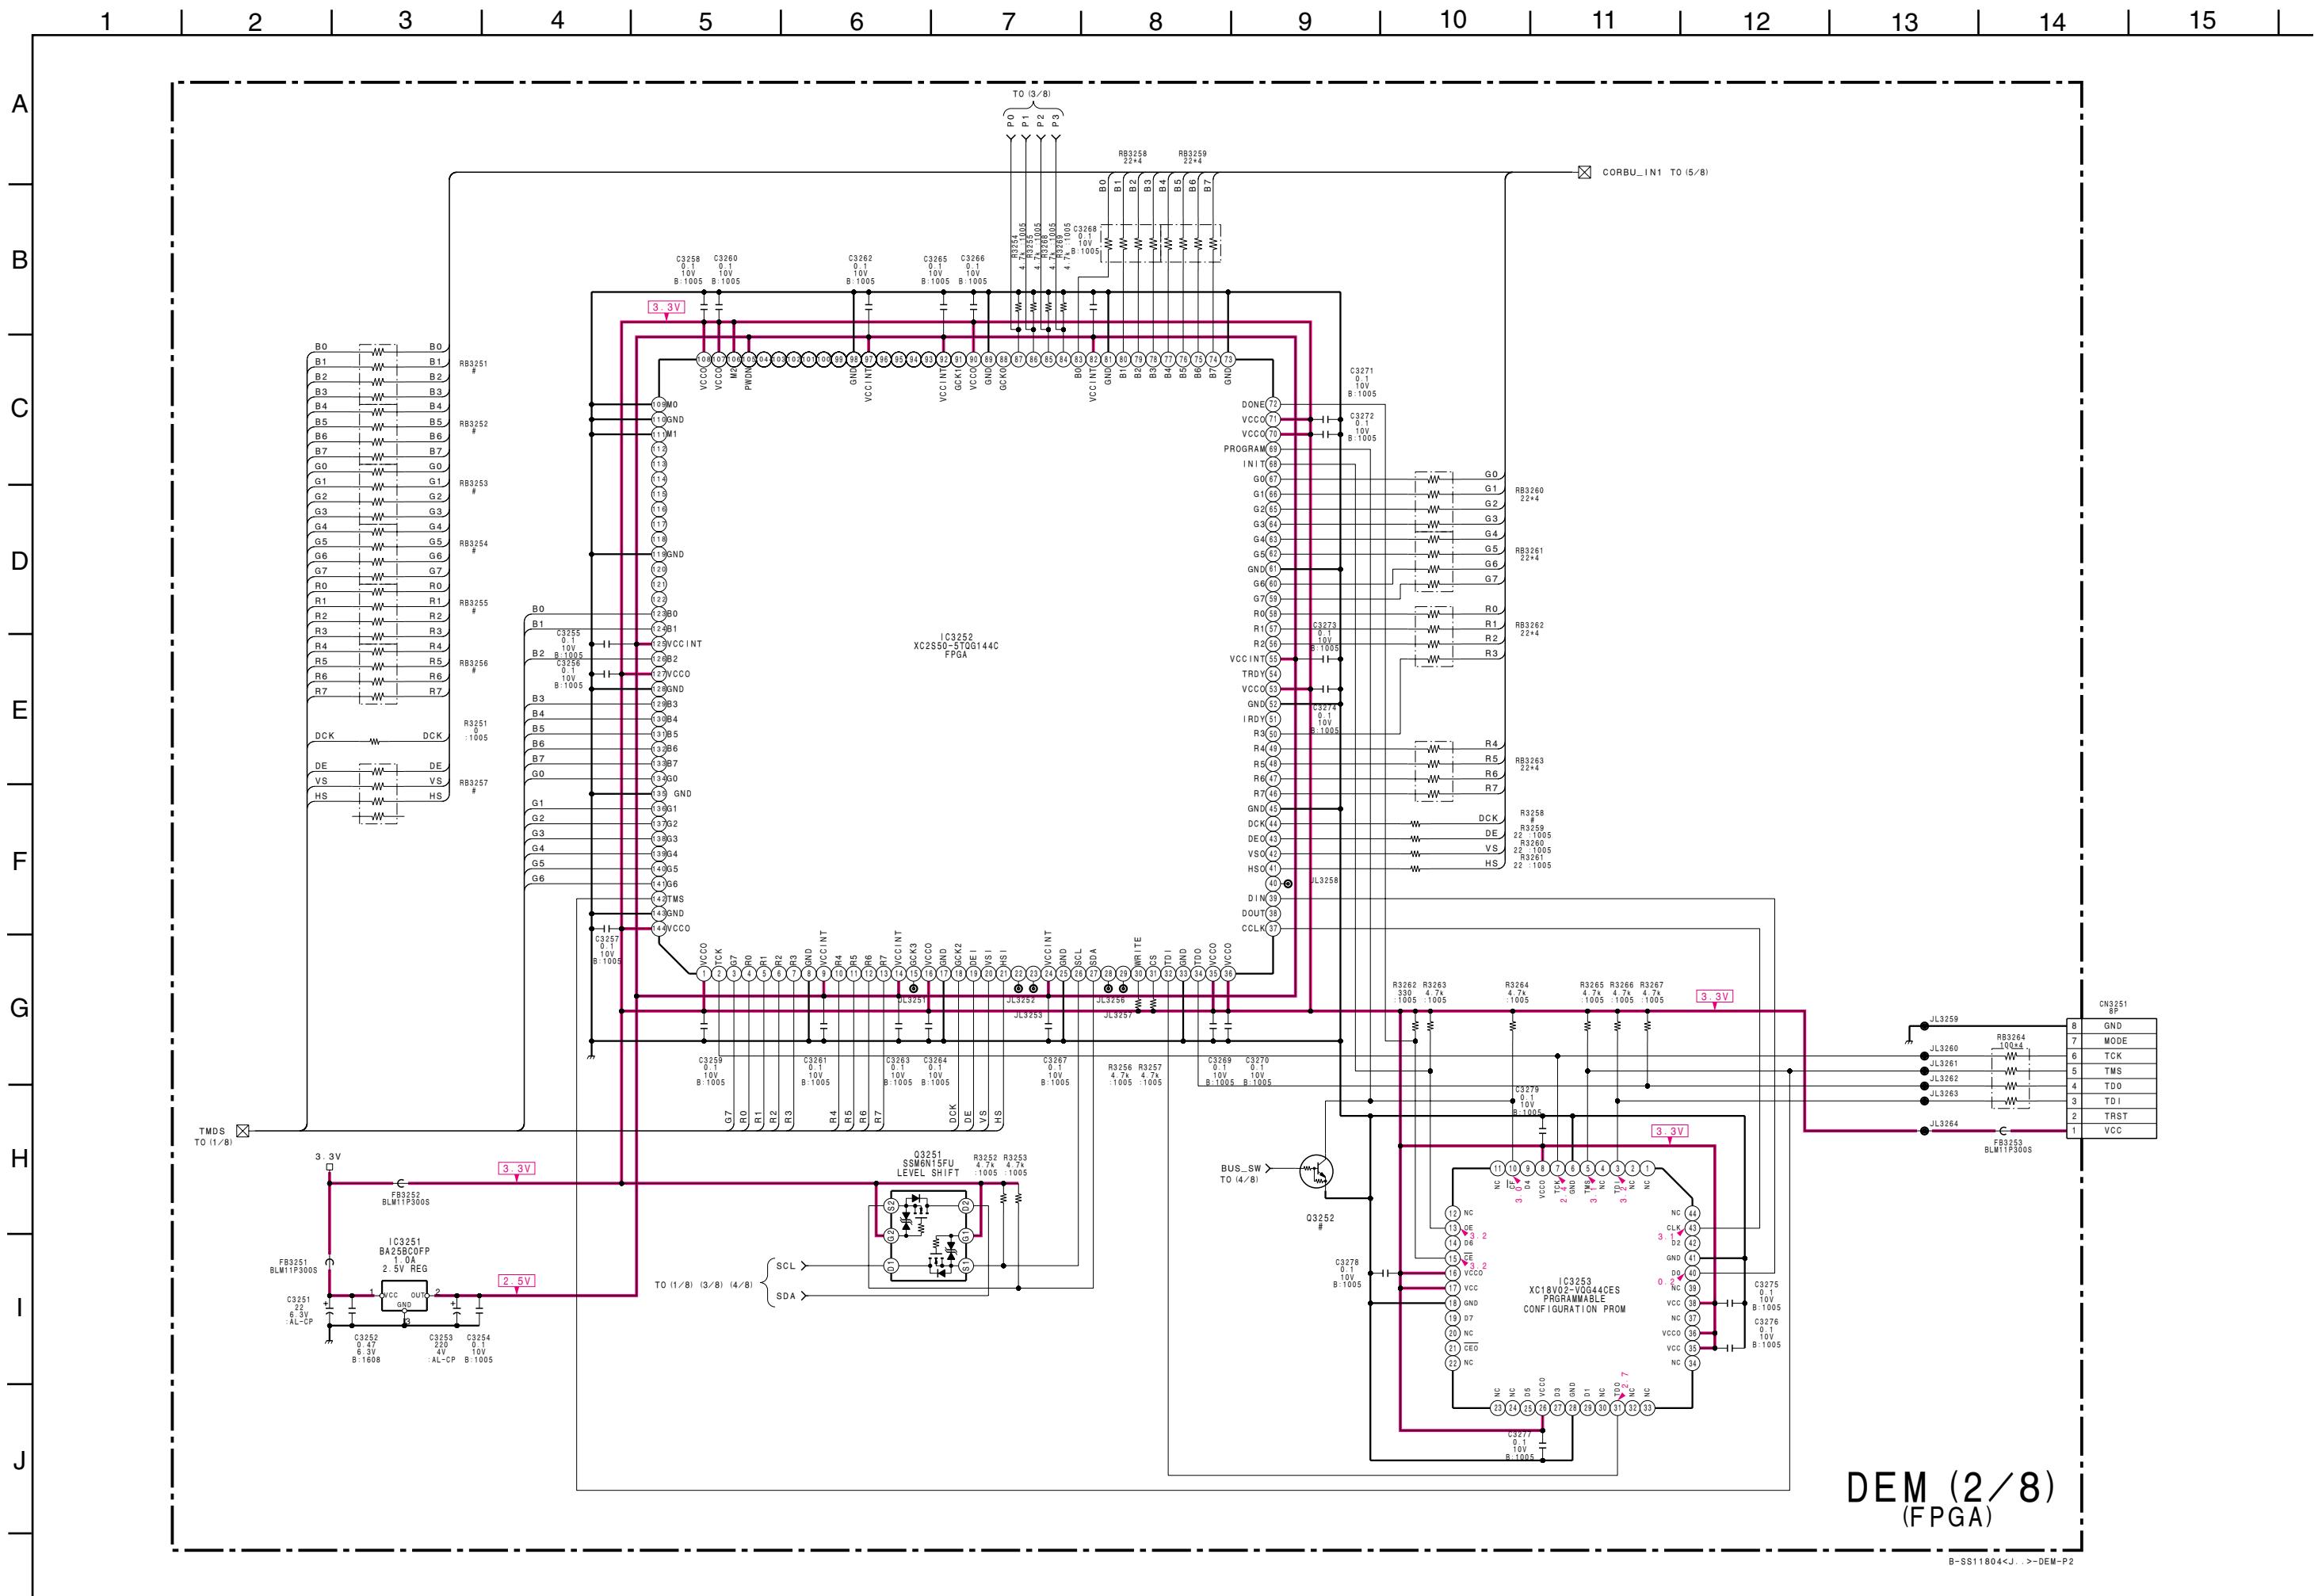

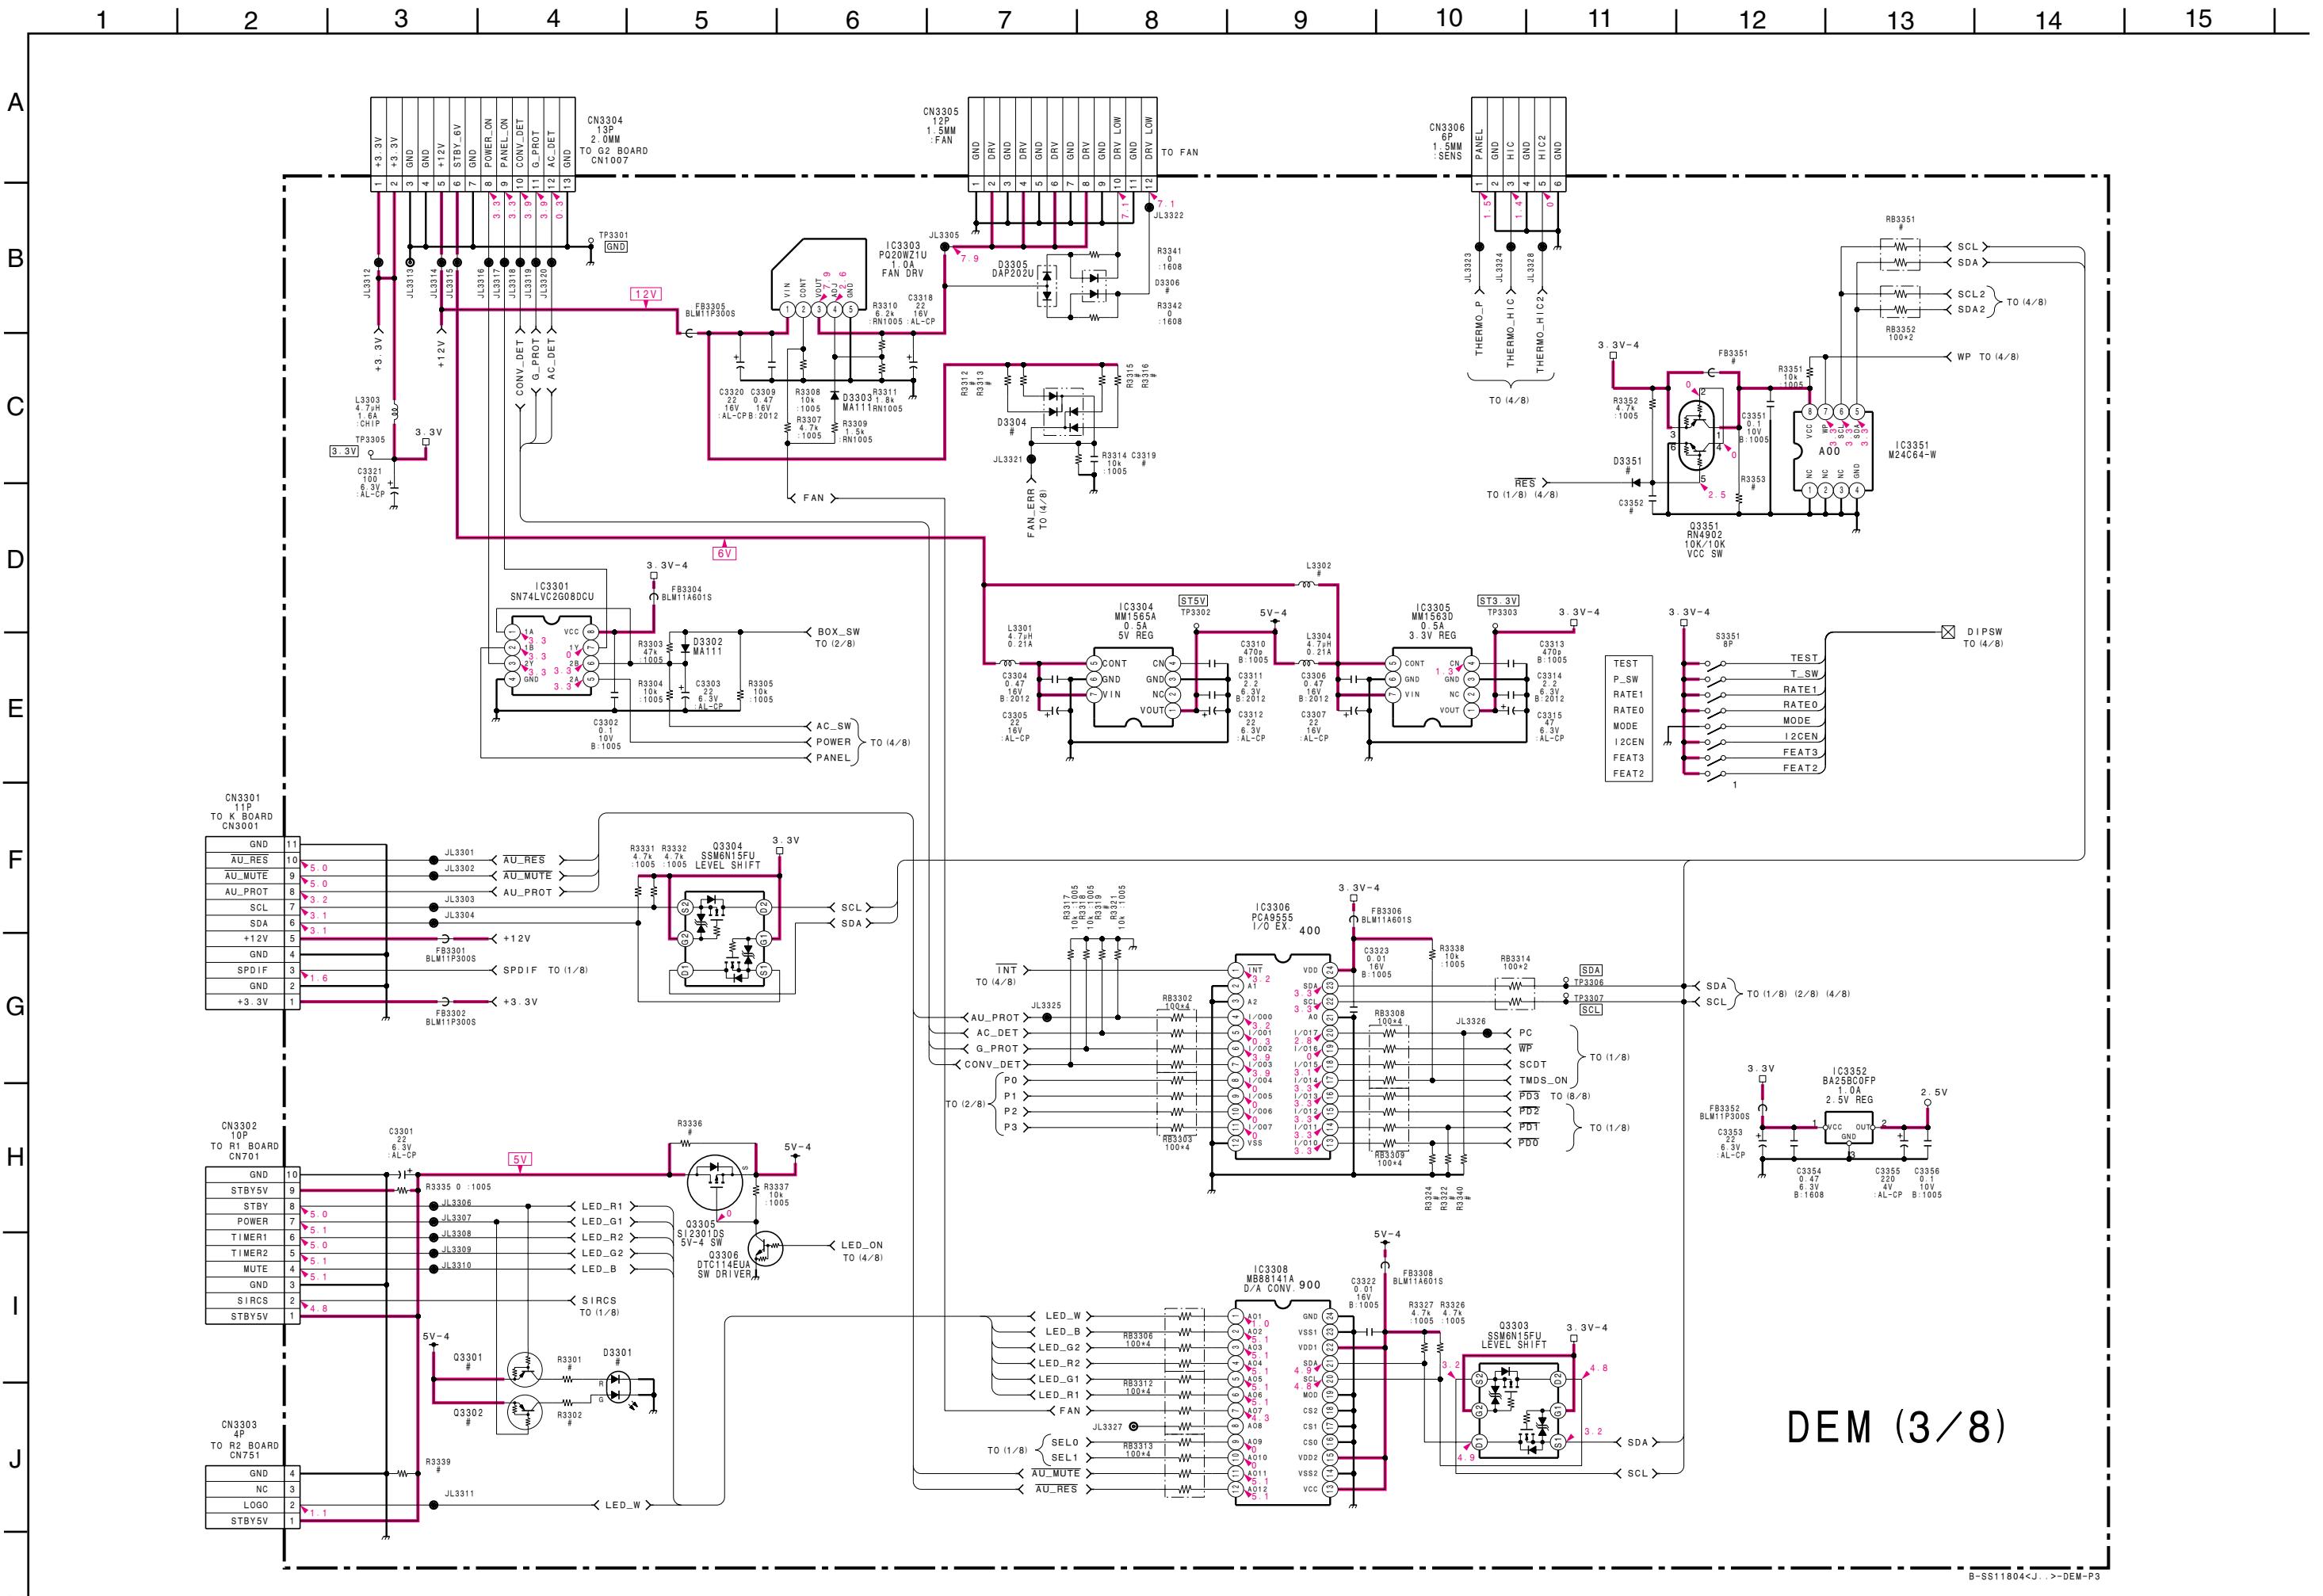

DEM (3 / 8)

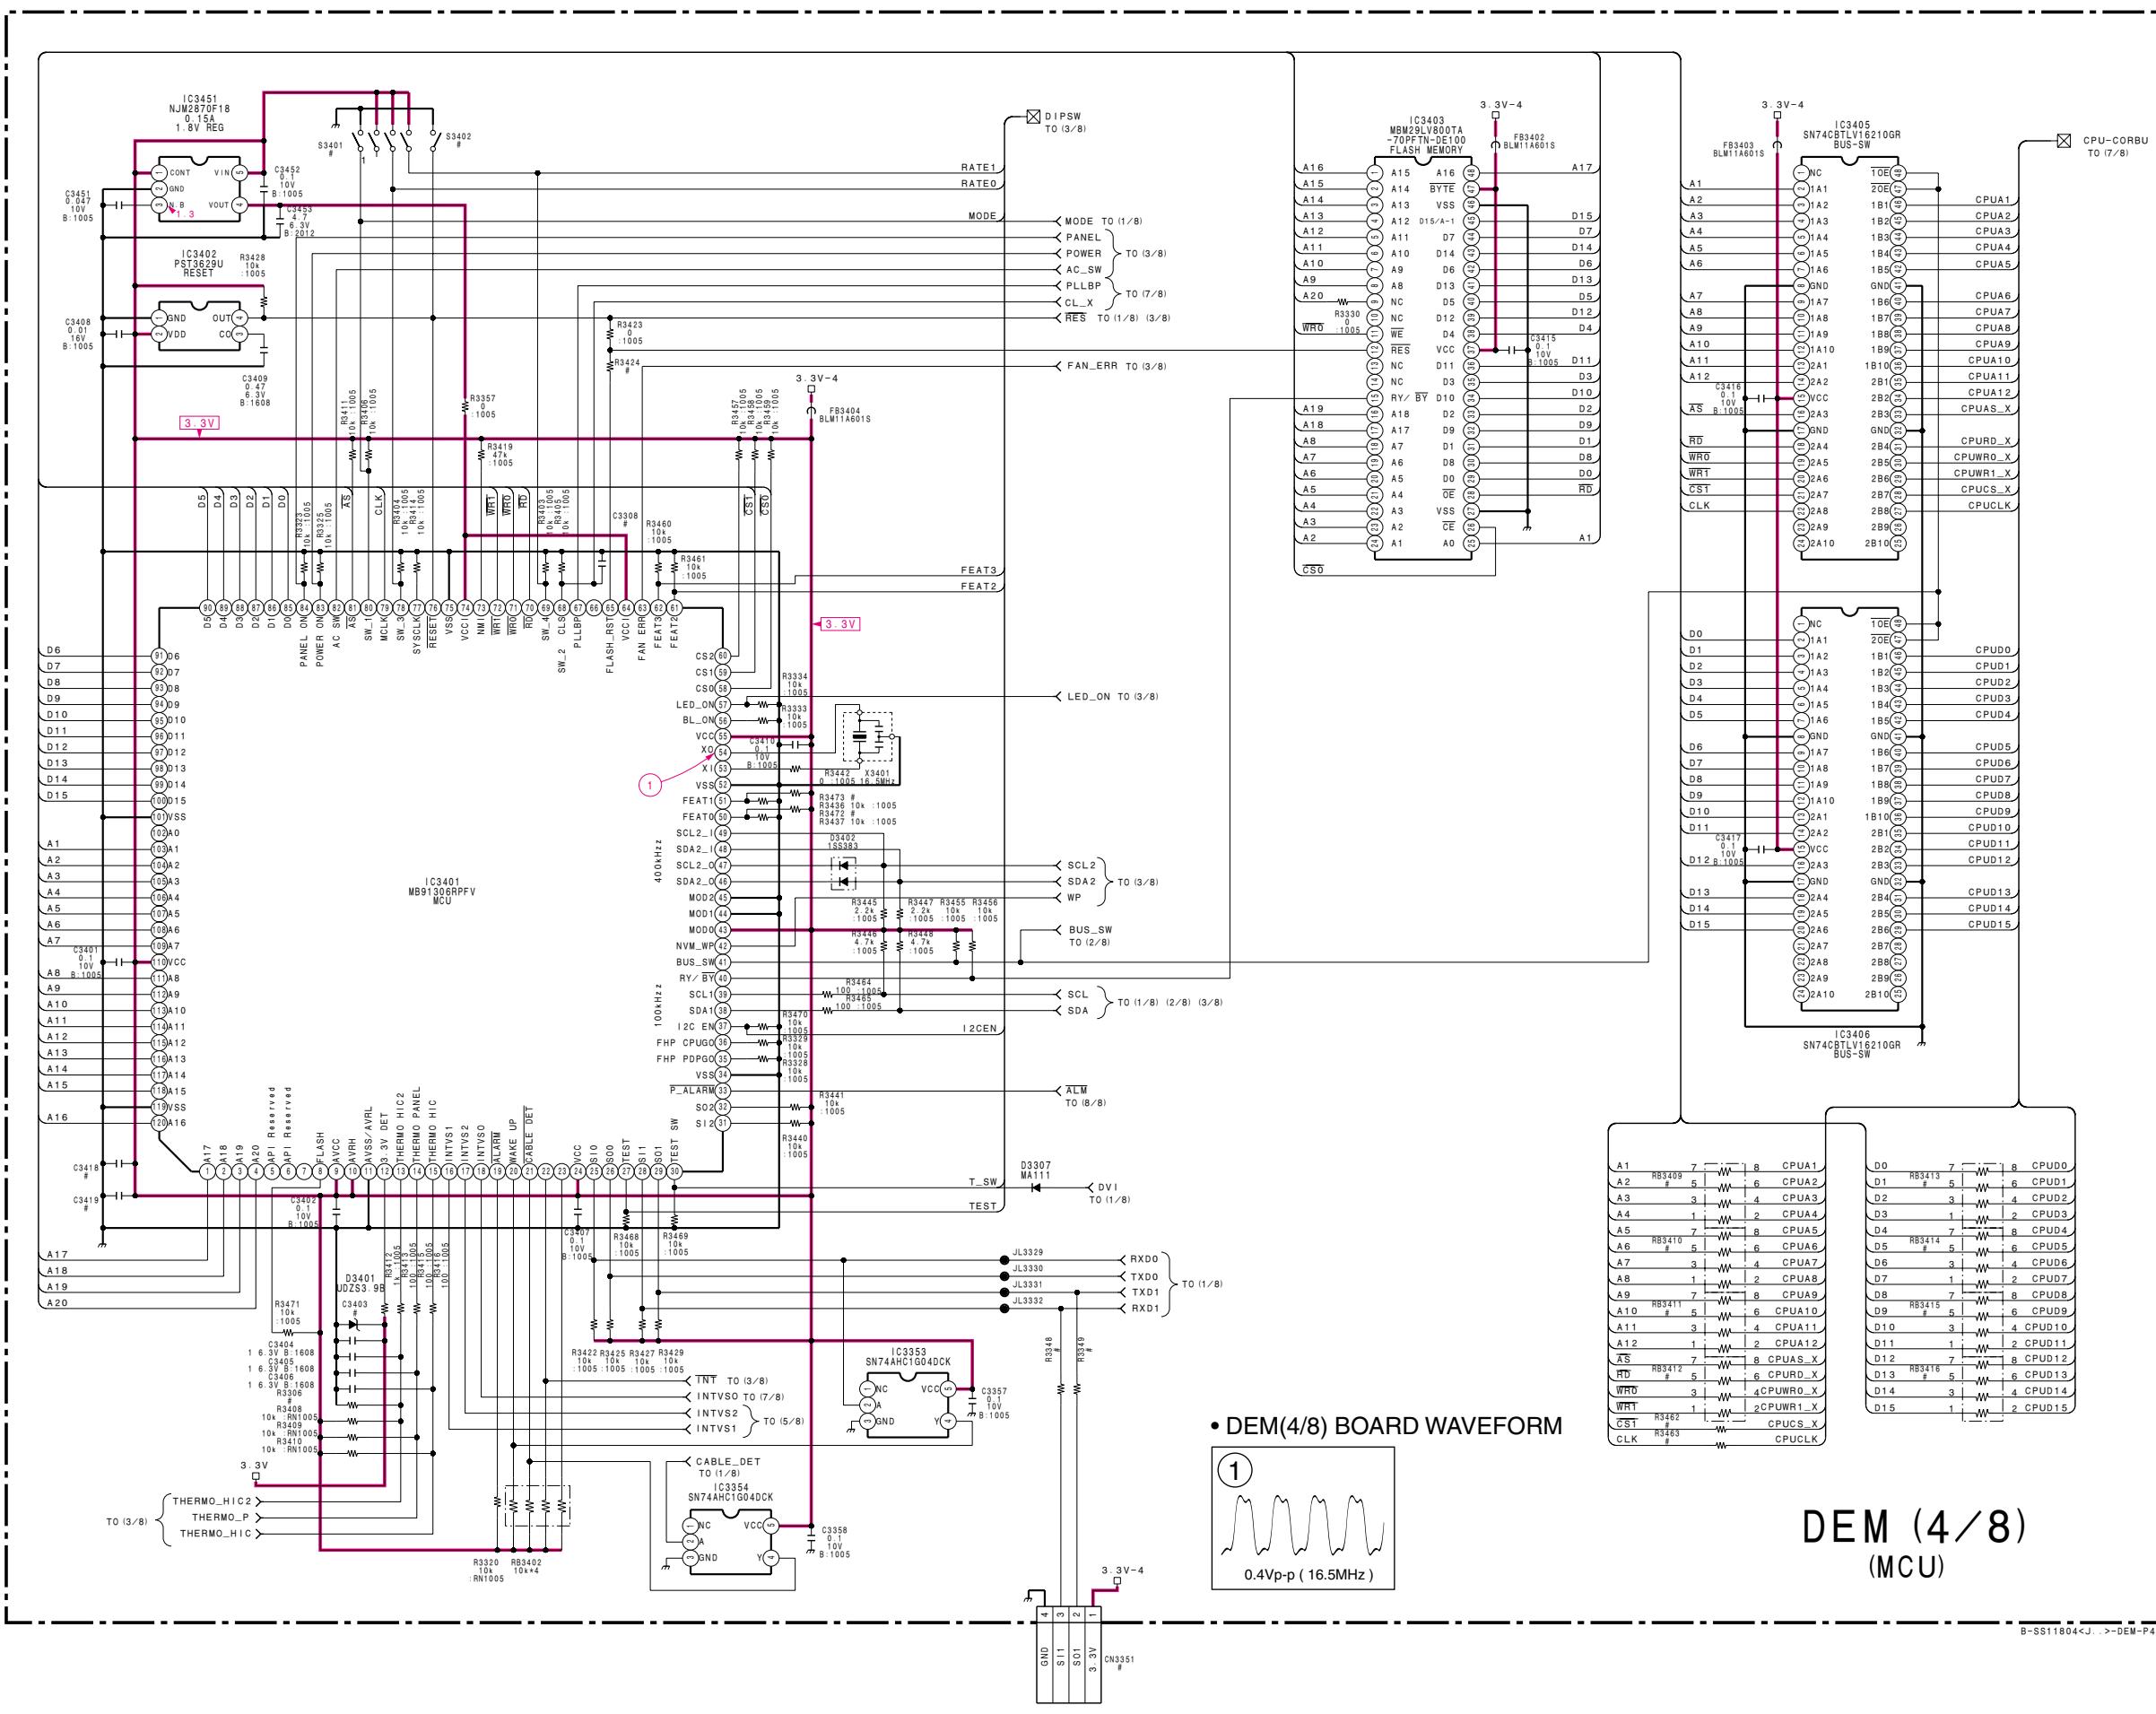A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |

A

B

C

D

E


F

G

H

I

J

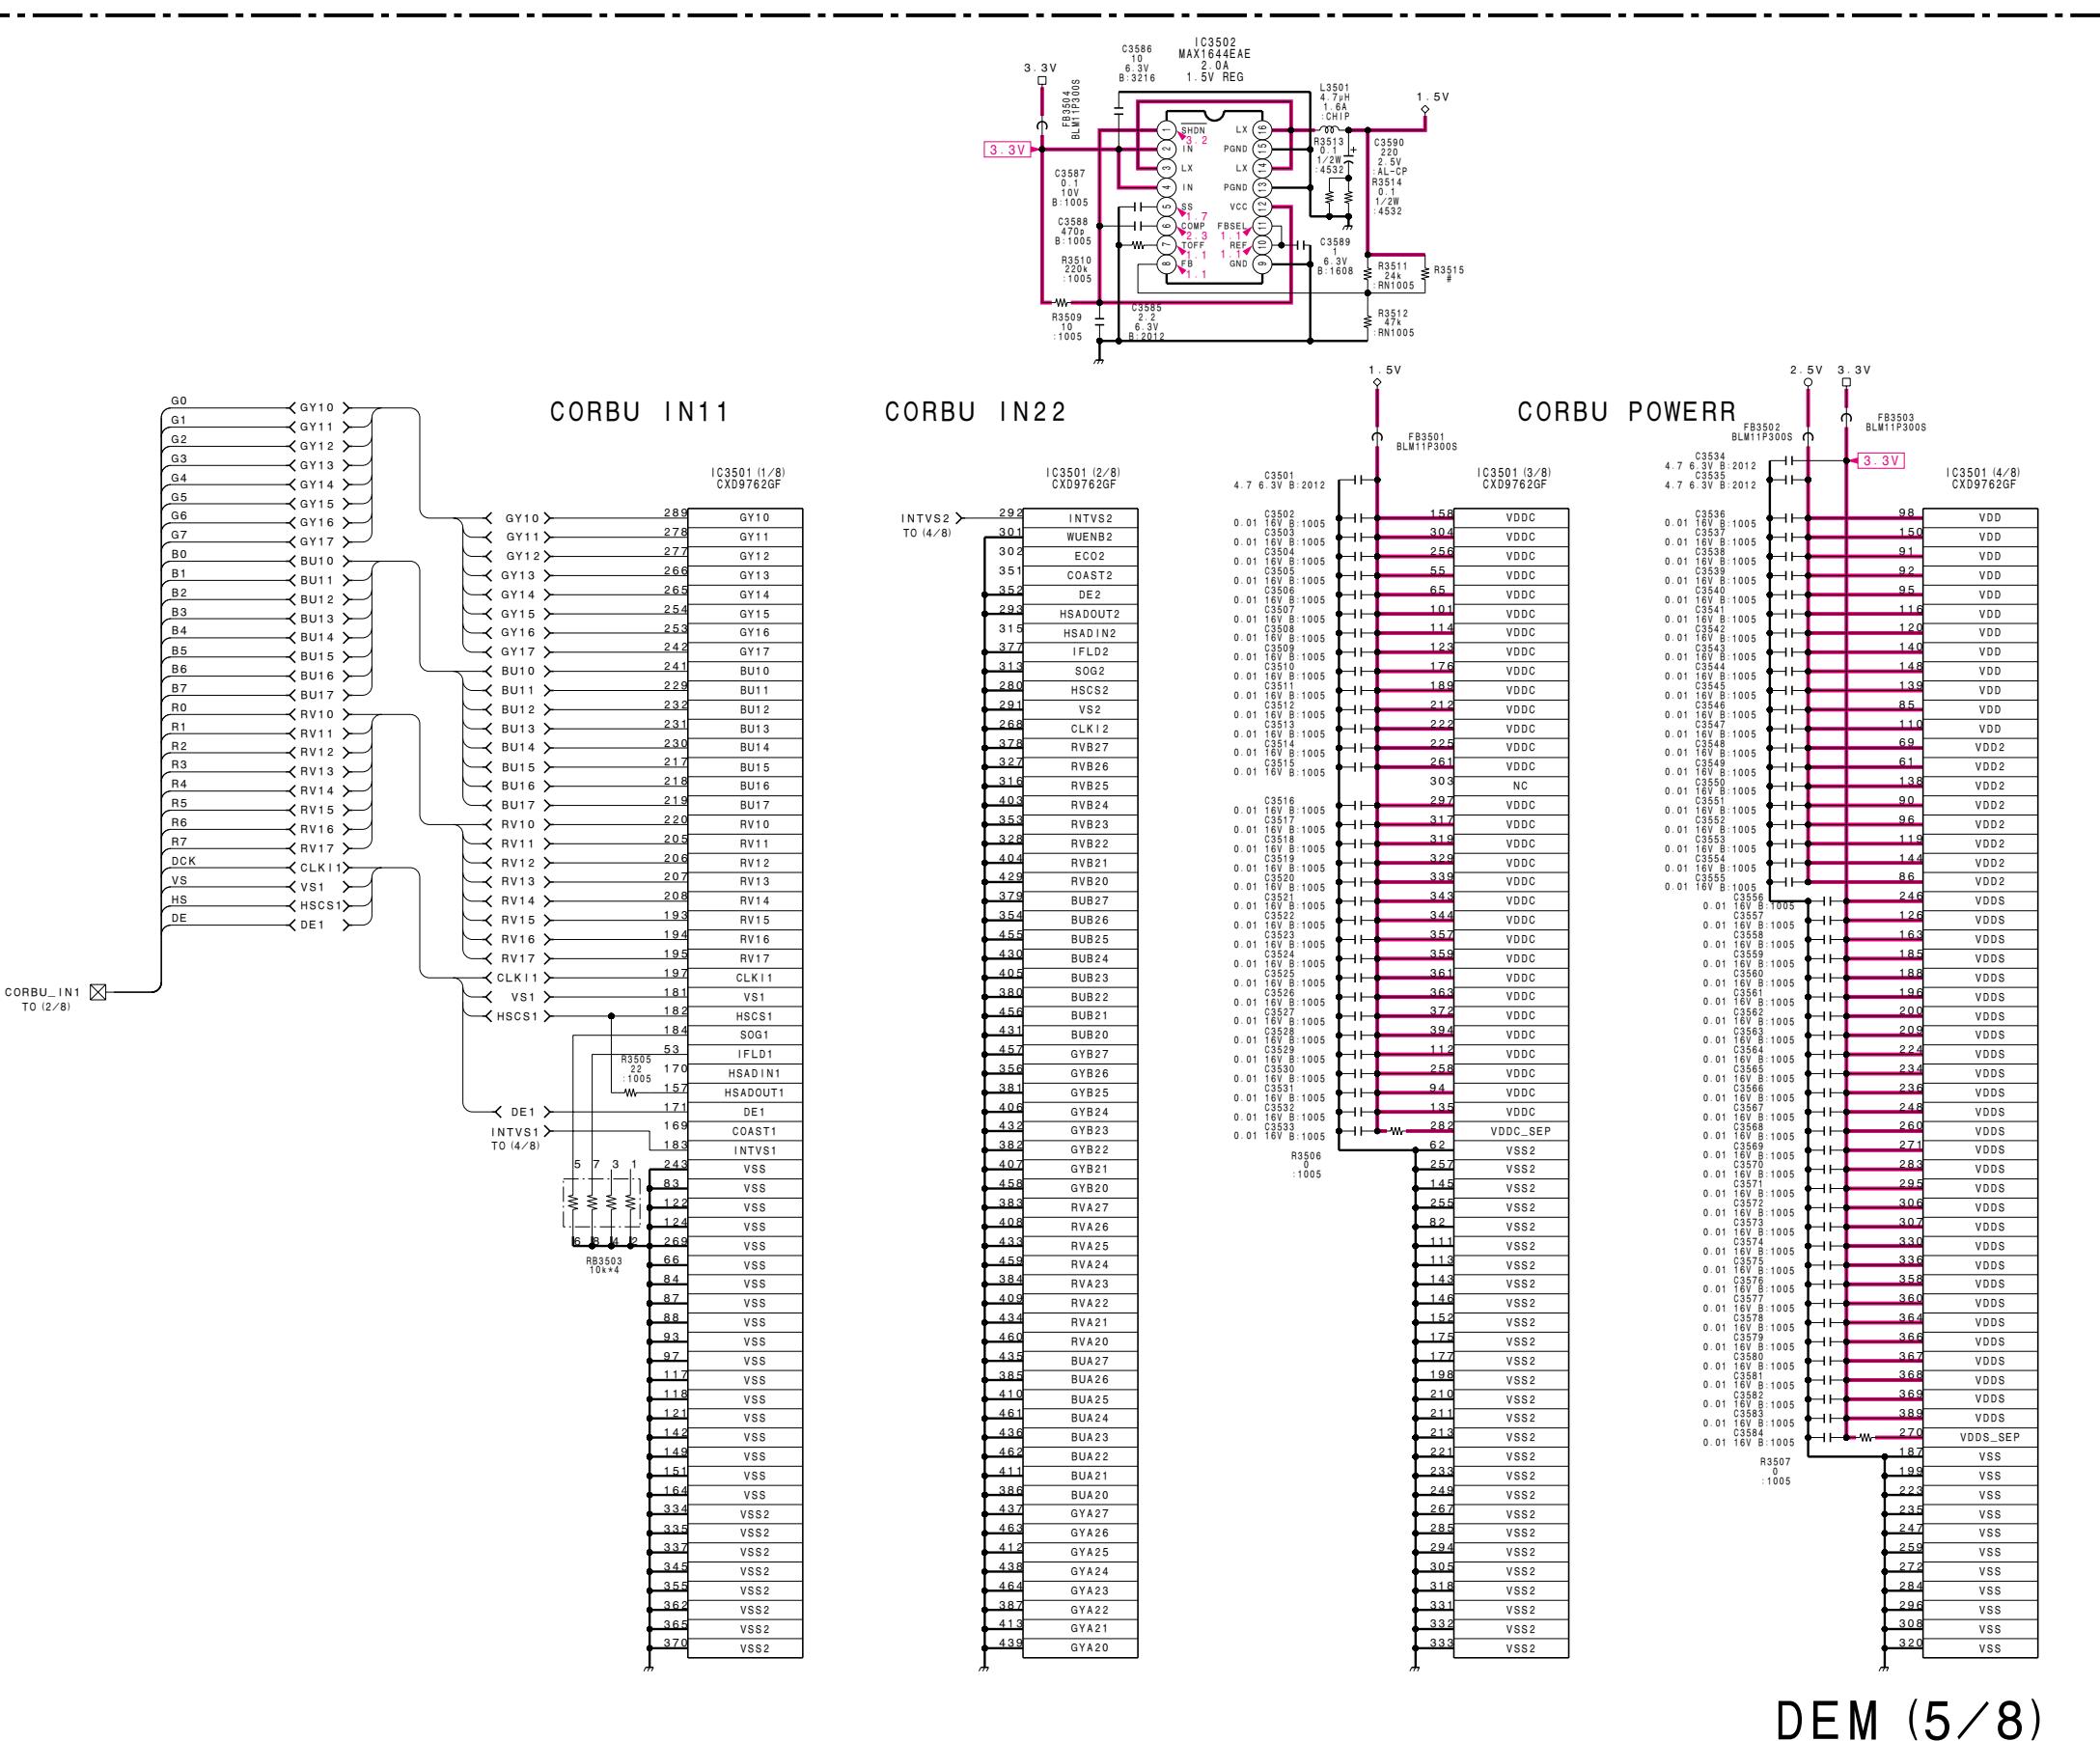

DEM (5/8)

B-SS11804<J...>-DEM-P5

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15

A

B

C

D

E


F

G

H


I

J

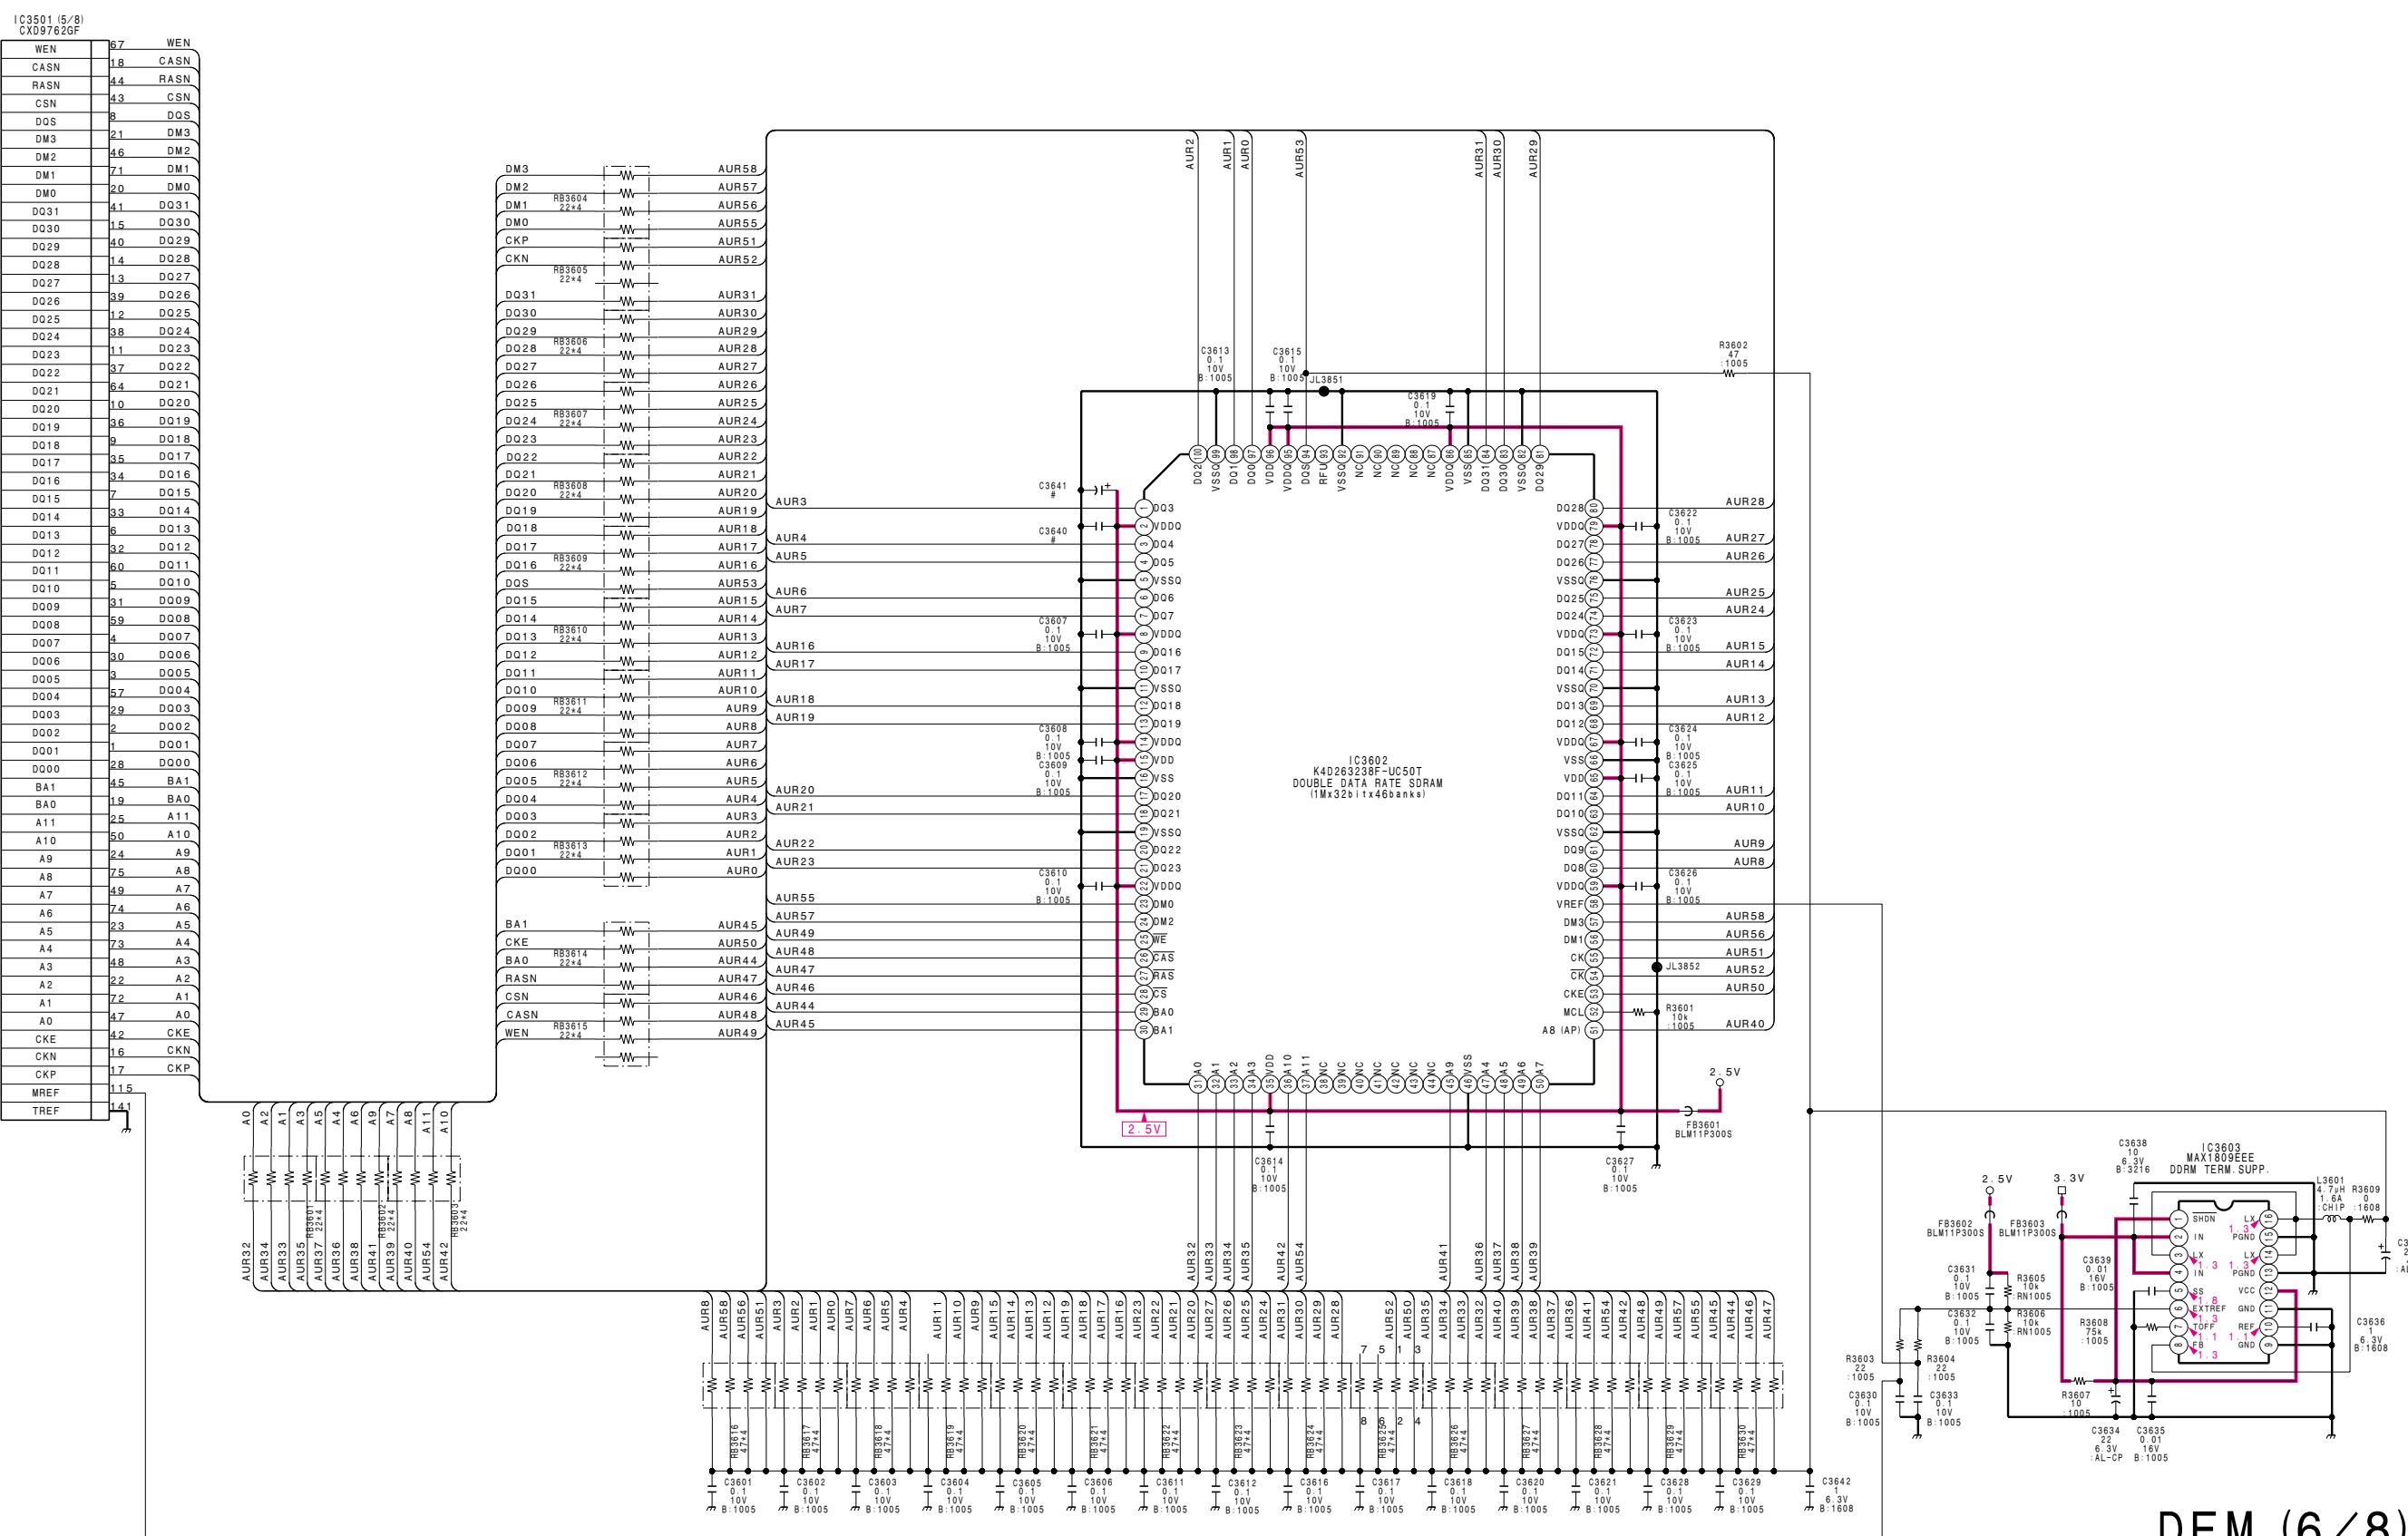



DEM (6/8)

B-SS11804<J..>DEM-P6

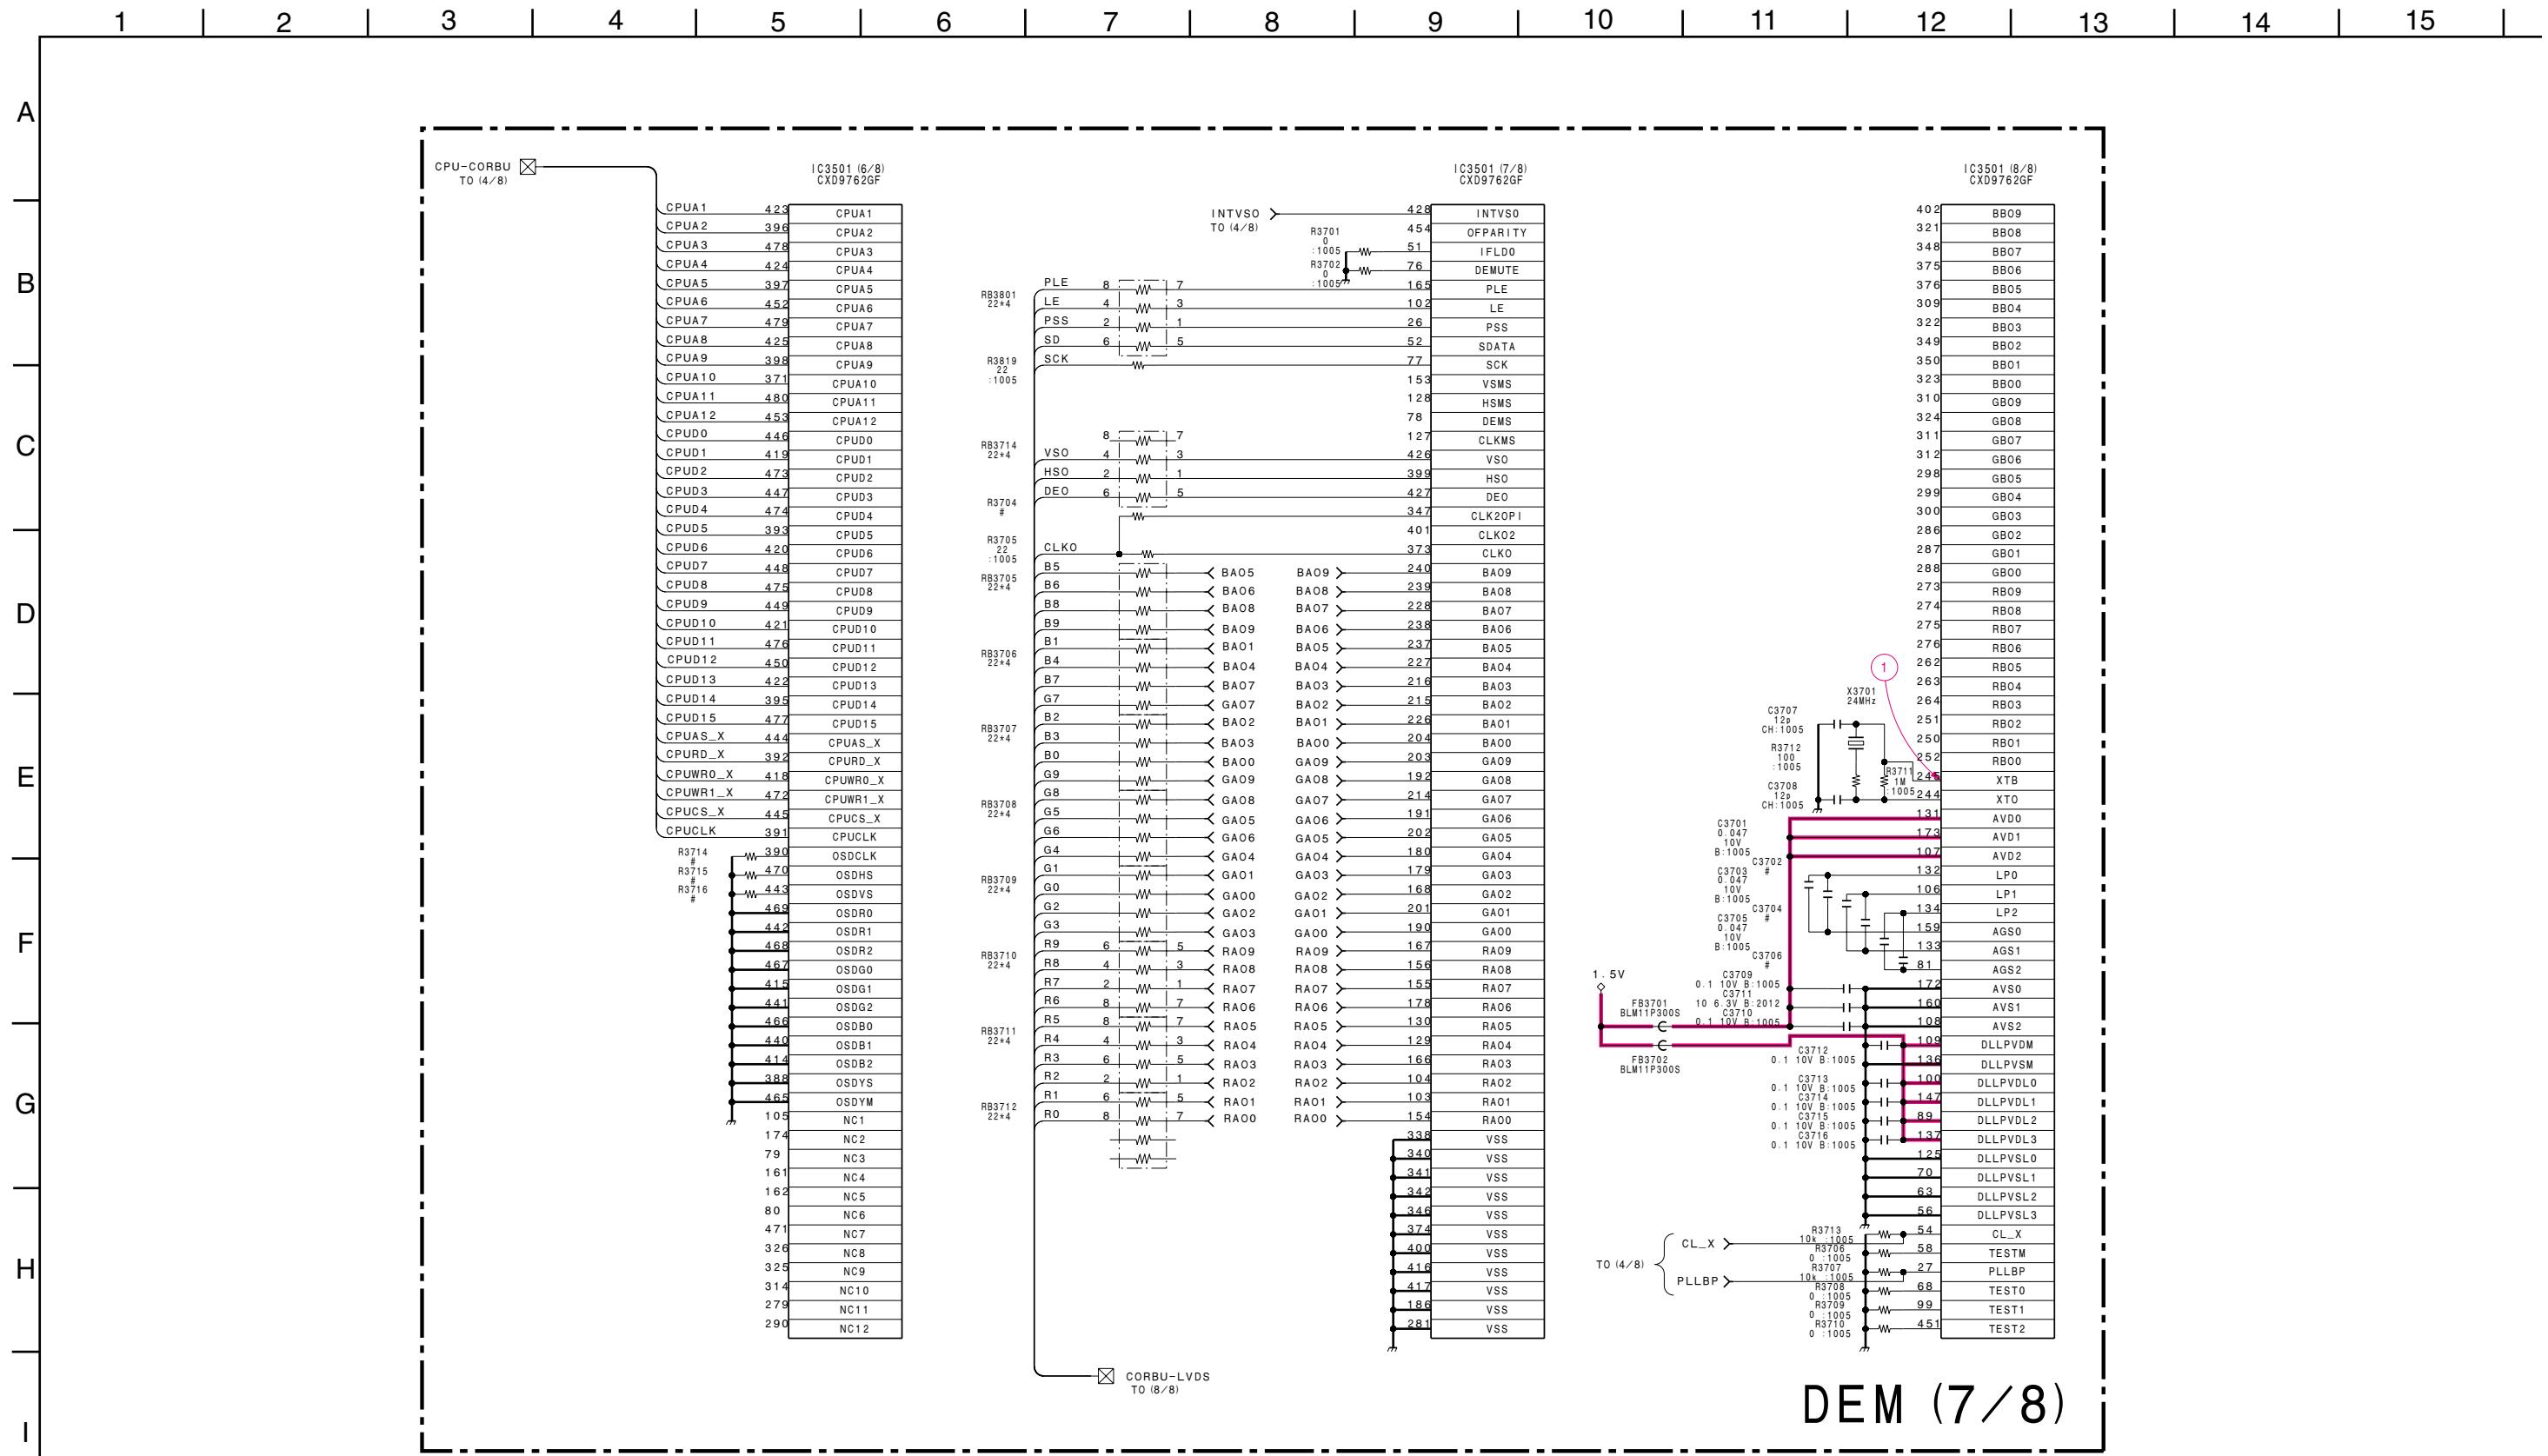

- DEM(7/8) BOARD WAVEFORM

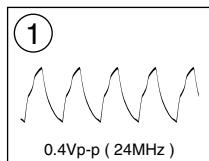


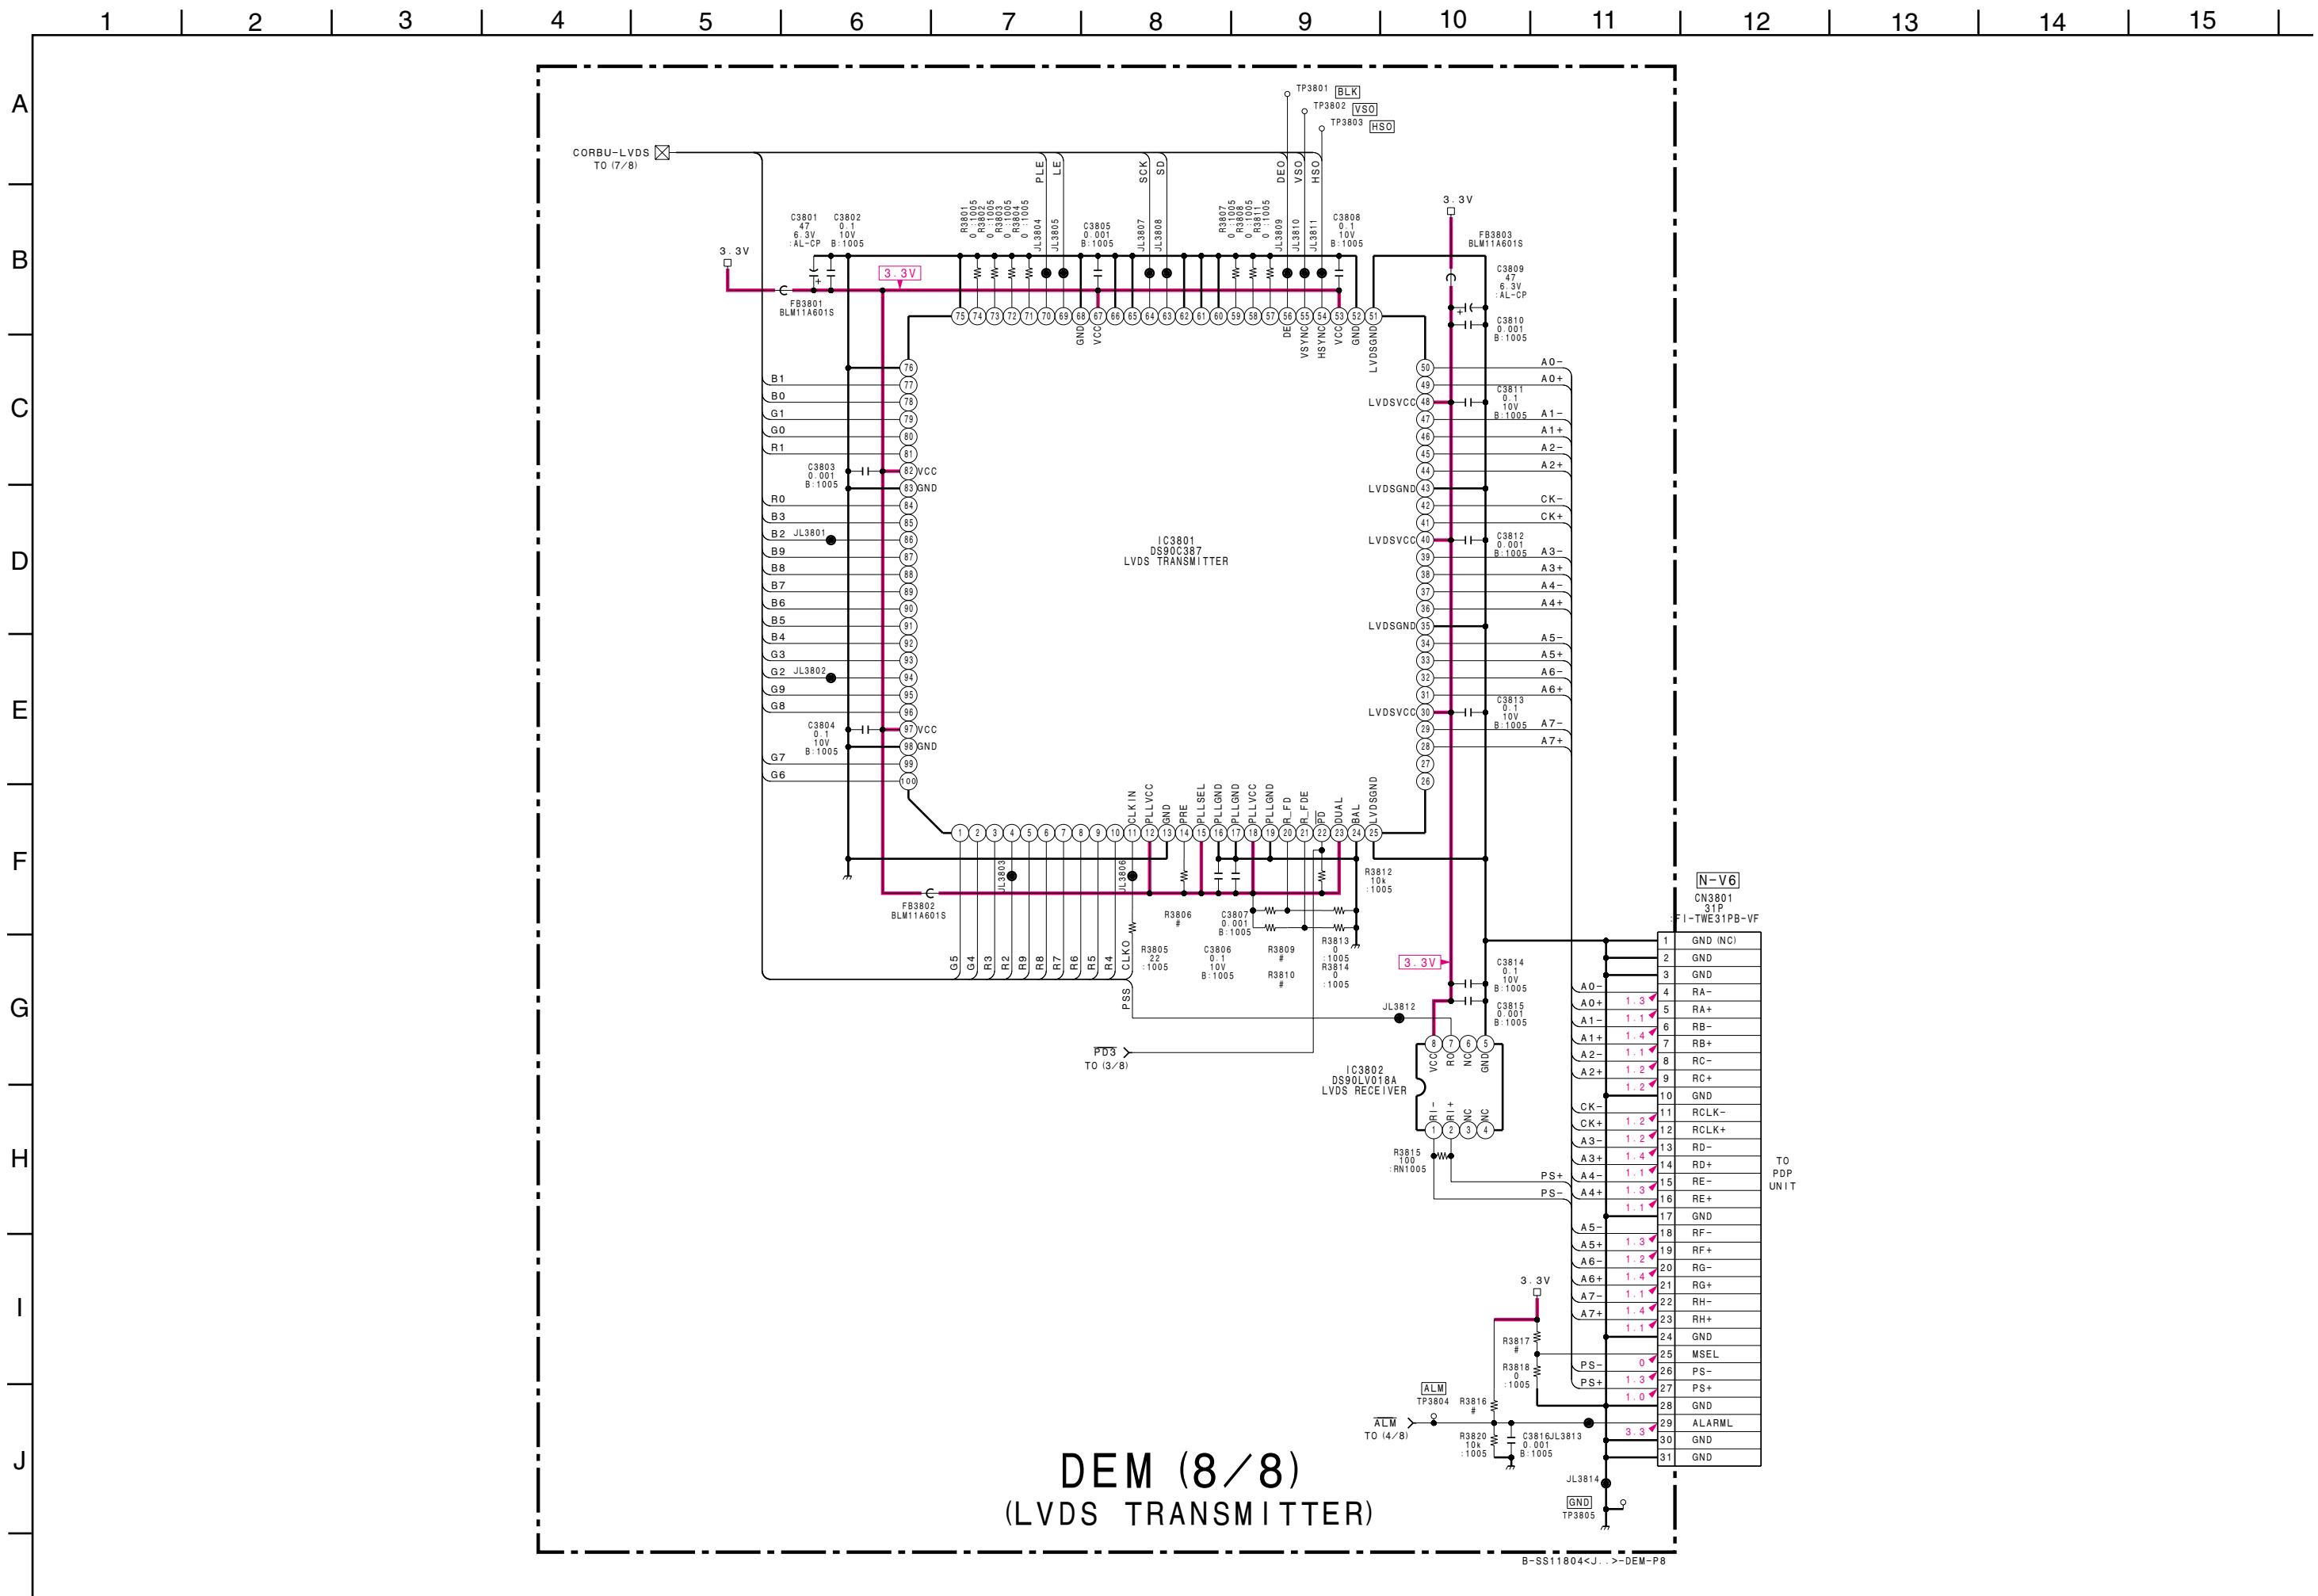


# DEM

[TMDS RECEIVER, MCU, FPGA, LVDS TRANSMITTER]

## — DEM BOARD —

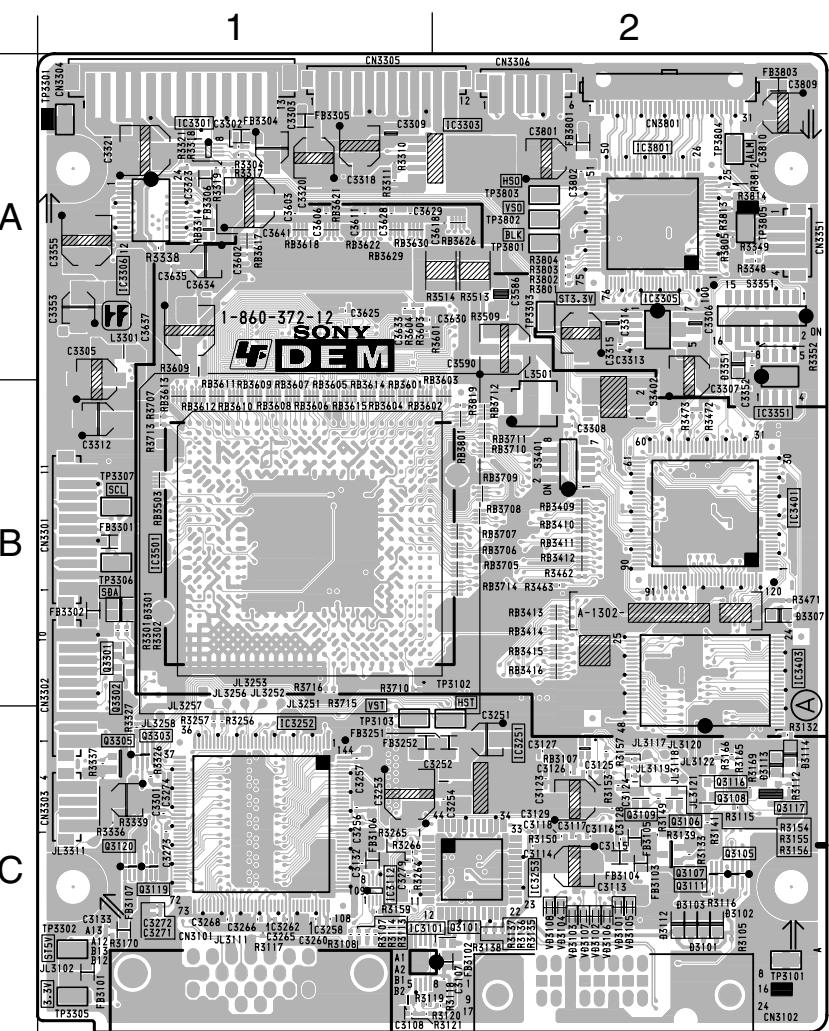

<COMPONENT SIDE>

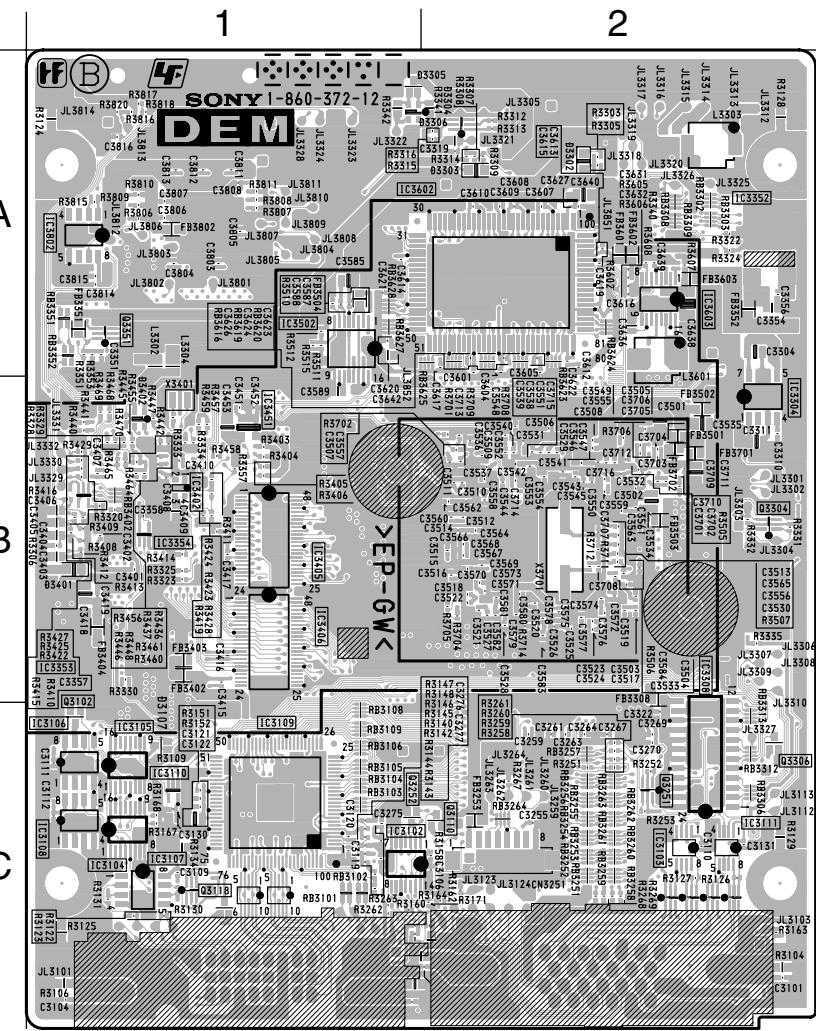

<CONDUCTOR SIDE>


### • DEM BOARD SEMICONDUCTOR LOCATION

IC	(Component Side)	(Conductor Side)		B-1	C-2	②
IC3101	C-1			IC3451		
IC3102				IC3501	B-1	
IC3103	C-2			IC3502	A-1	
IC3104	C-1			IC3602	A-2	
IC3105	C-1			IC3603	A-2	
IC3106	C-1			IC3801	A-2	
IC3107	C-1			IC3802	A-1	
IC3108	C-1					
IC3109	C-1					
IC3110	C-1					
IC3111	C-2					
IC3112	C-1					
IC3251	C-2					
IC3252	C-1					
IC3253	C-2					
IC3301	A-1					
IC3303	A-2					
IC3304						
IC3305	A-2					
IC3306	A-1					
IC3308	C-2					
IC3351	A-2					
IC3352						
IC3353	B-1					
IC3354	B-1					
IC3401	B-2					
IC3402	B-1					
IC3403	B-2					
IC3405	B-1					
IC3406	B-1					


DIODE	(Component Side)	(Conductor Side)	*			
D3101	C-2					
D3102	C-2					
D3103	C-2					
D3104						
D3105	C-1					
D3106	C-1					
D3107	C-1					
D3108	C-2					
D3109	C-2					
D3110	C-2					
D3111	C-2					
D3112	C-2					
D3113	C-2					
D3114	C-2					
D3301	B-1					
D3302						
D3303	A-2					
D3304	A-2					
D3305	A-1					
D3306	A-1					
D3307	B-2					
D3308	A-2					
D3309						
D3310						
D3311						
D3312						
D3313						
D3314						
D3315						
D3316						
D3317						
D3318						
D3319						
D3320						
D3321						
D3322						
D3323						
D3324						
D3325						
D3326						
D3327						
D3328						
D3329						
D3330						
D3331						
D3332						
D3333						
D3334						
D3335						
D3336						
D3337						
D3338						
D3339						
D3340						
D3341						
D3342						
D3343						
D3344						
D3345						
D3346						
D3347						
D3348						
D3349						
D3350						
D3351						
D3352						
D3353						
D3354						
D3355						
D3356						
D3357						
D3358						
D3359						
D3360						
D3361						
D3362						
D3363						
D3364						
D3365						
D3366						
D3367						
D3368						
D3369						
D3370						
D3371						
D3372						
D3373						
D3374						
D3375						
D3376						
D3377						
D3378						
D3379						
D3380						
D3381						
D3382						
D3383						
D3384						
D3385						
D3386						
D3387						
D3388						
D3389						
D3390						
D3391						
D3392						
D3393						
D3394						
D3395						
D3396						
D3397						
D3398						
D3399						
D3301						
D3302						
D3303						
D3304						
D3305						
D3306						
D3307						
D3308						
D3309						
D3310						
D3311						
D3312						
D3313						
D3314						
D3315						
D3316						
D3317						
D3318						
D3319						
D3320						
D3321						
D3322						
D3323						
D3324						
D3325						
D3326						
D3327						
D3328						
D3329						
D3330						
D3331						
D3332						
D3333						

(5) Schematic Diagram of R1 and R2 Boards

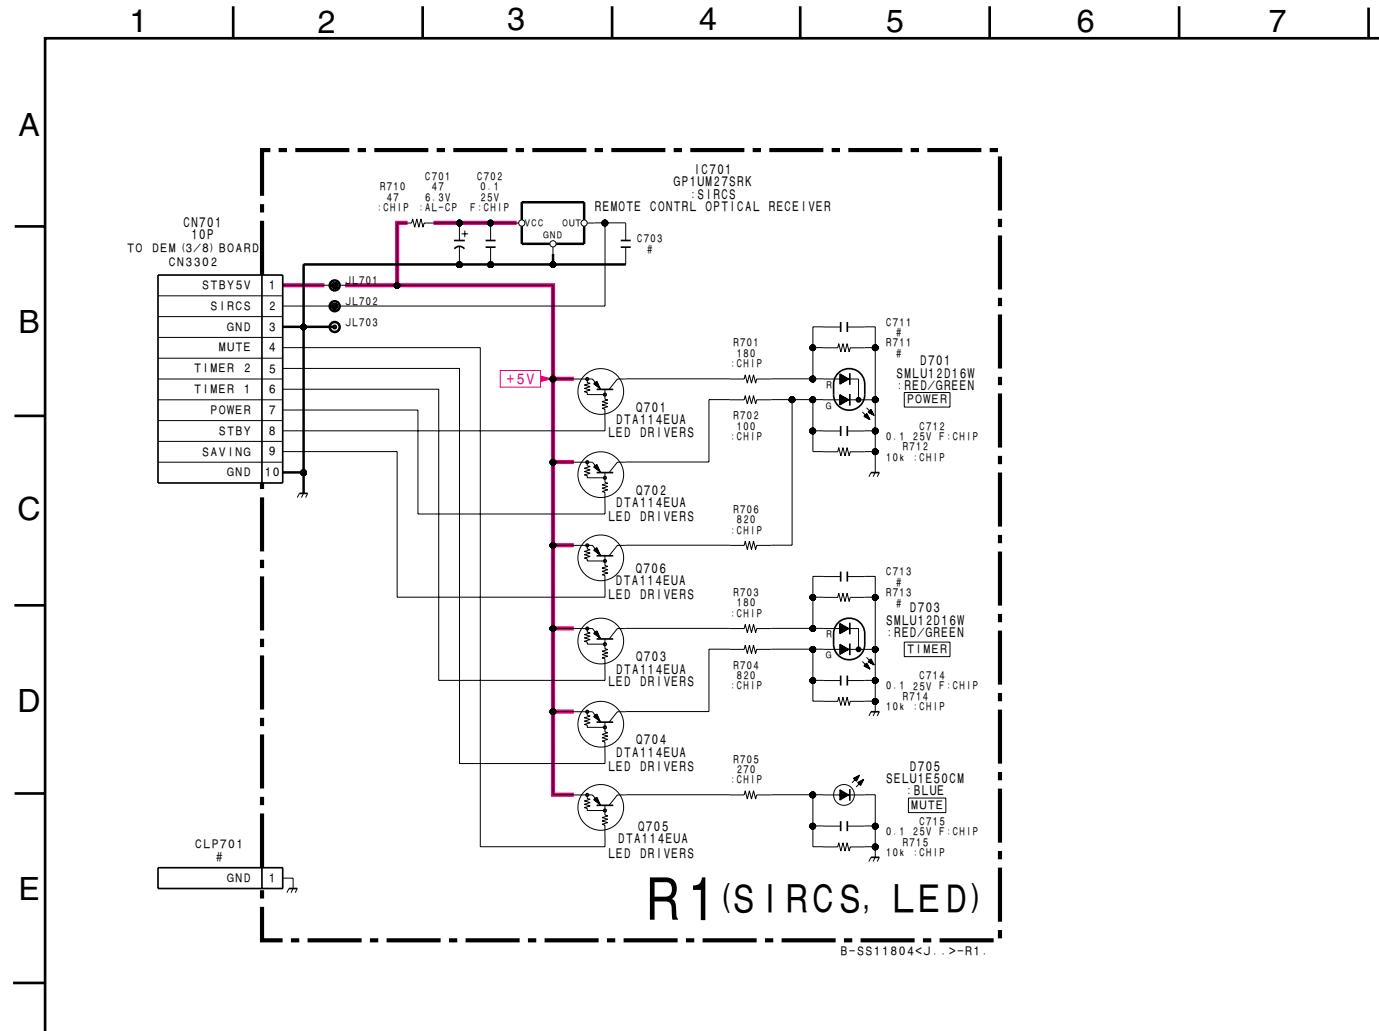


**R1** [SIRCS, LED]

— R1 BOARD —



<COMPONENT SIDE>




<CONDUCTOR SIDE>

• R1 BOARD SEMICONDUCTOR LOCATION


Ref.	*
Q701-Q704, Q706	①
Q705	②
D701, D703, D705	-

\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

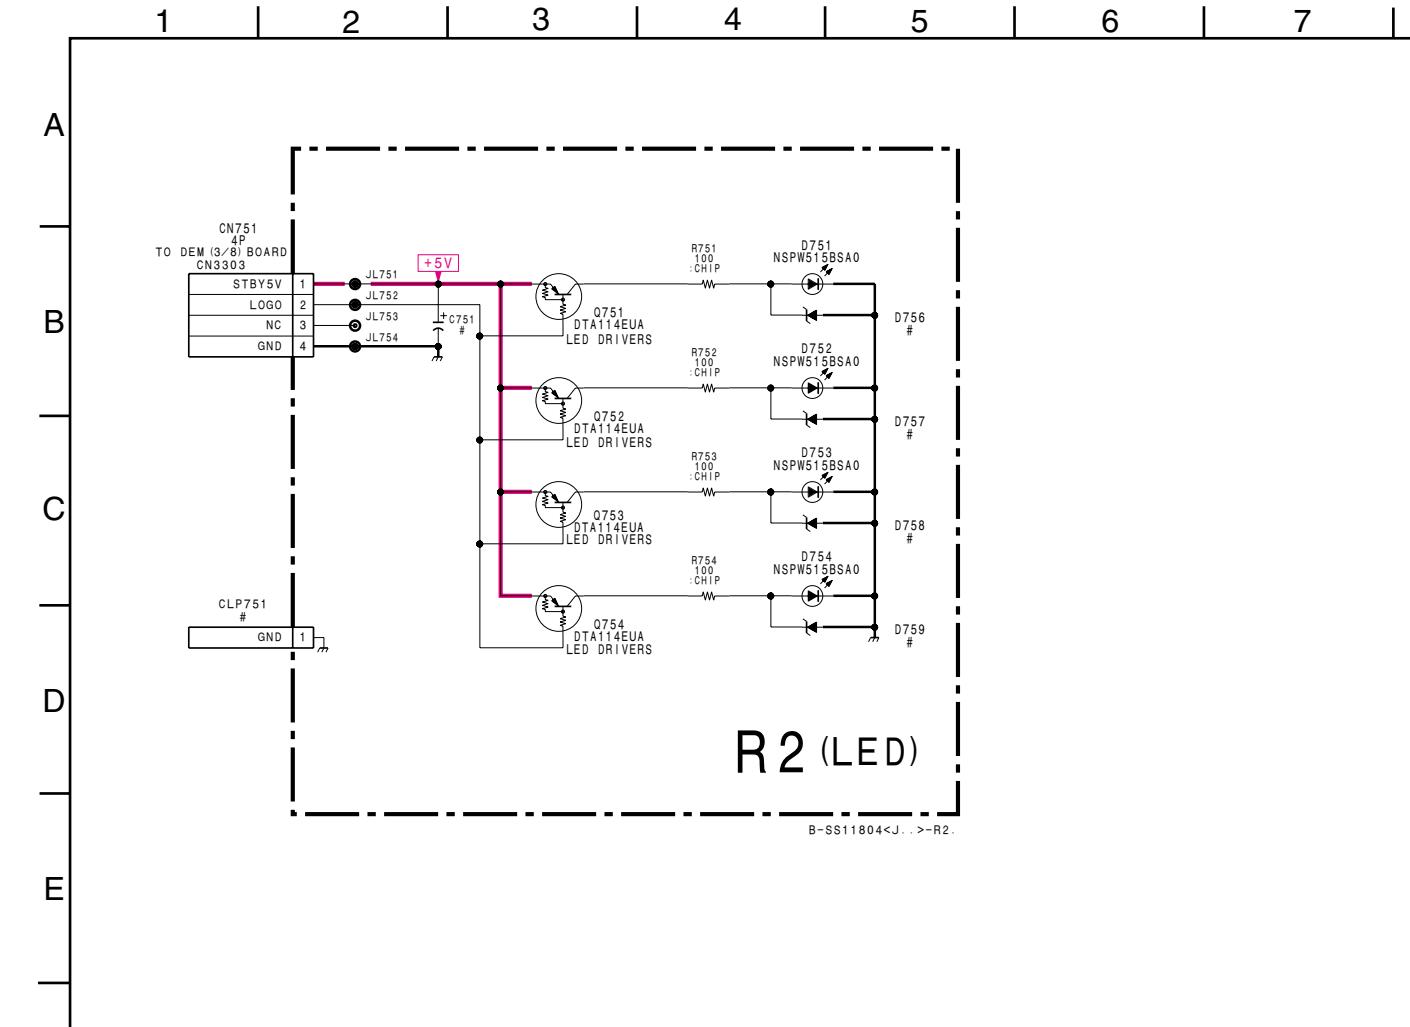


**R2** [LED]

— R2 BOARD —



<COMPONENT SIDE>



<CONDUCTOR SIDE>


• R2 BOARD SEMICONDUCTOR LOCATION


Ref.	*
Q751-Q754	①
D751-D754	-

\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)


### 3-4-2. MEDIA RECEIVER UNIT (MBD-XBR950)


#### (1) Schematic Diagrams of A Board

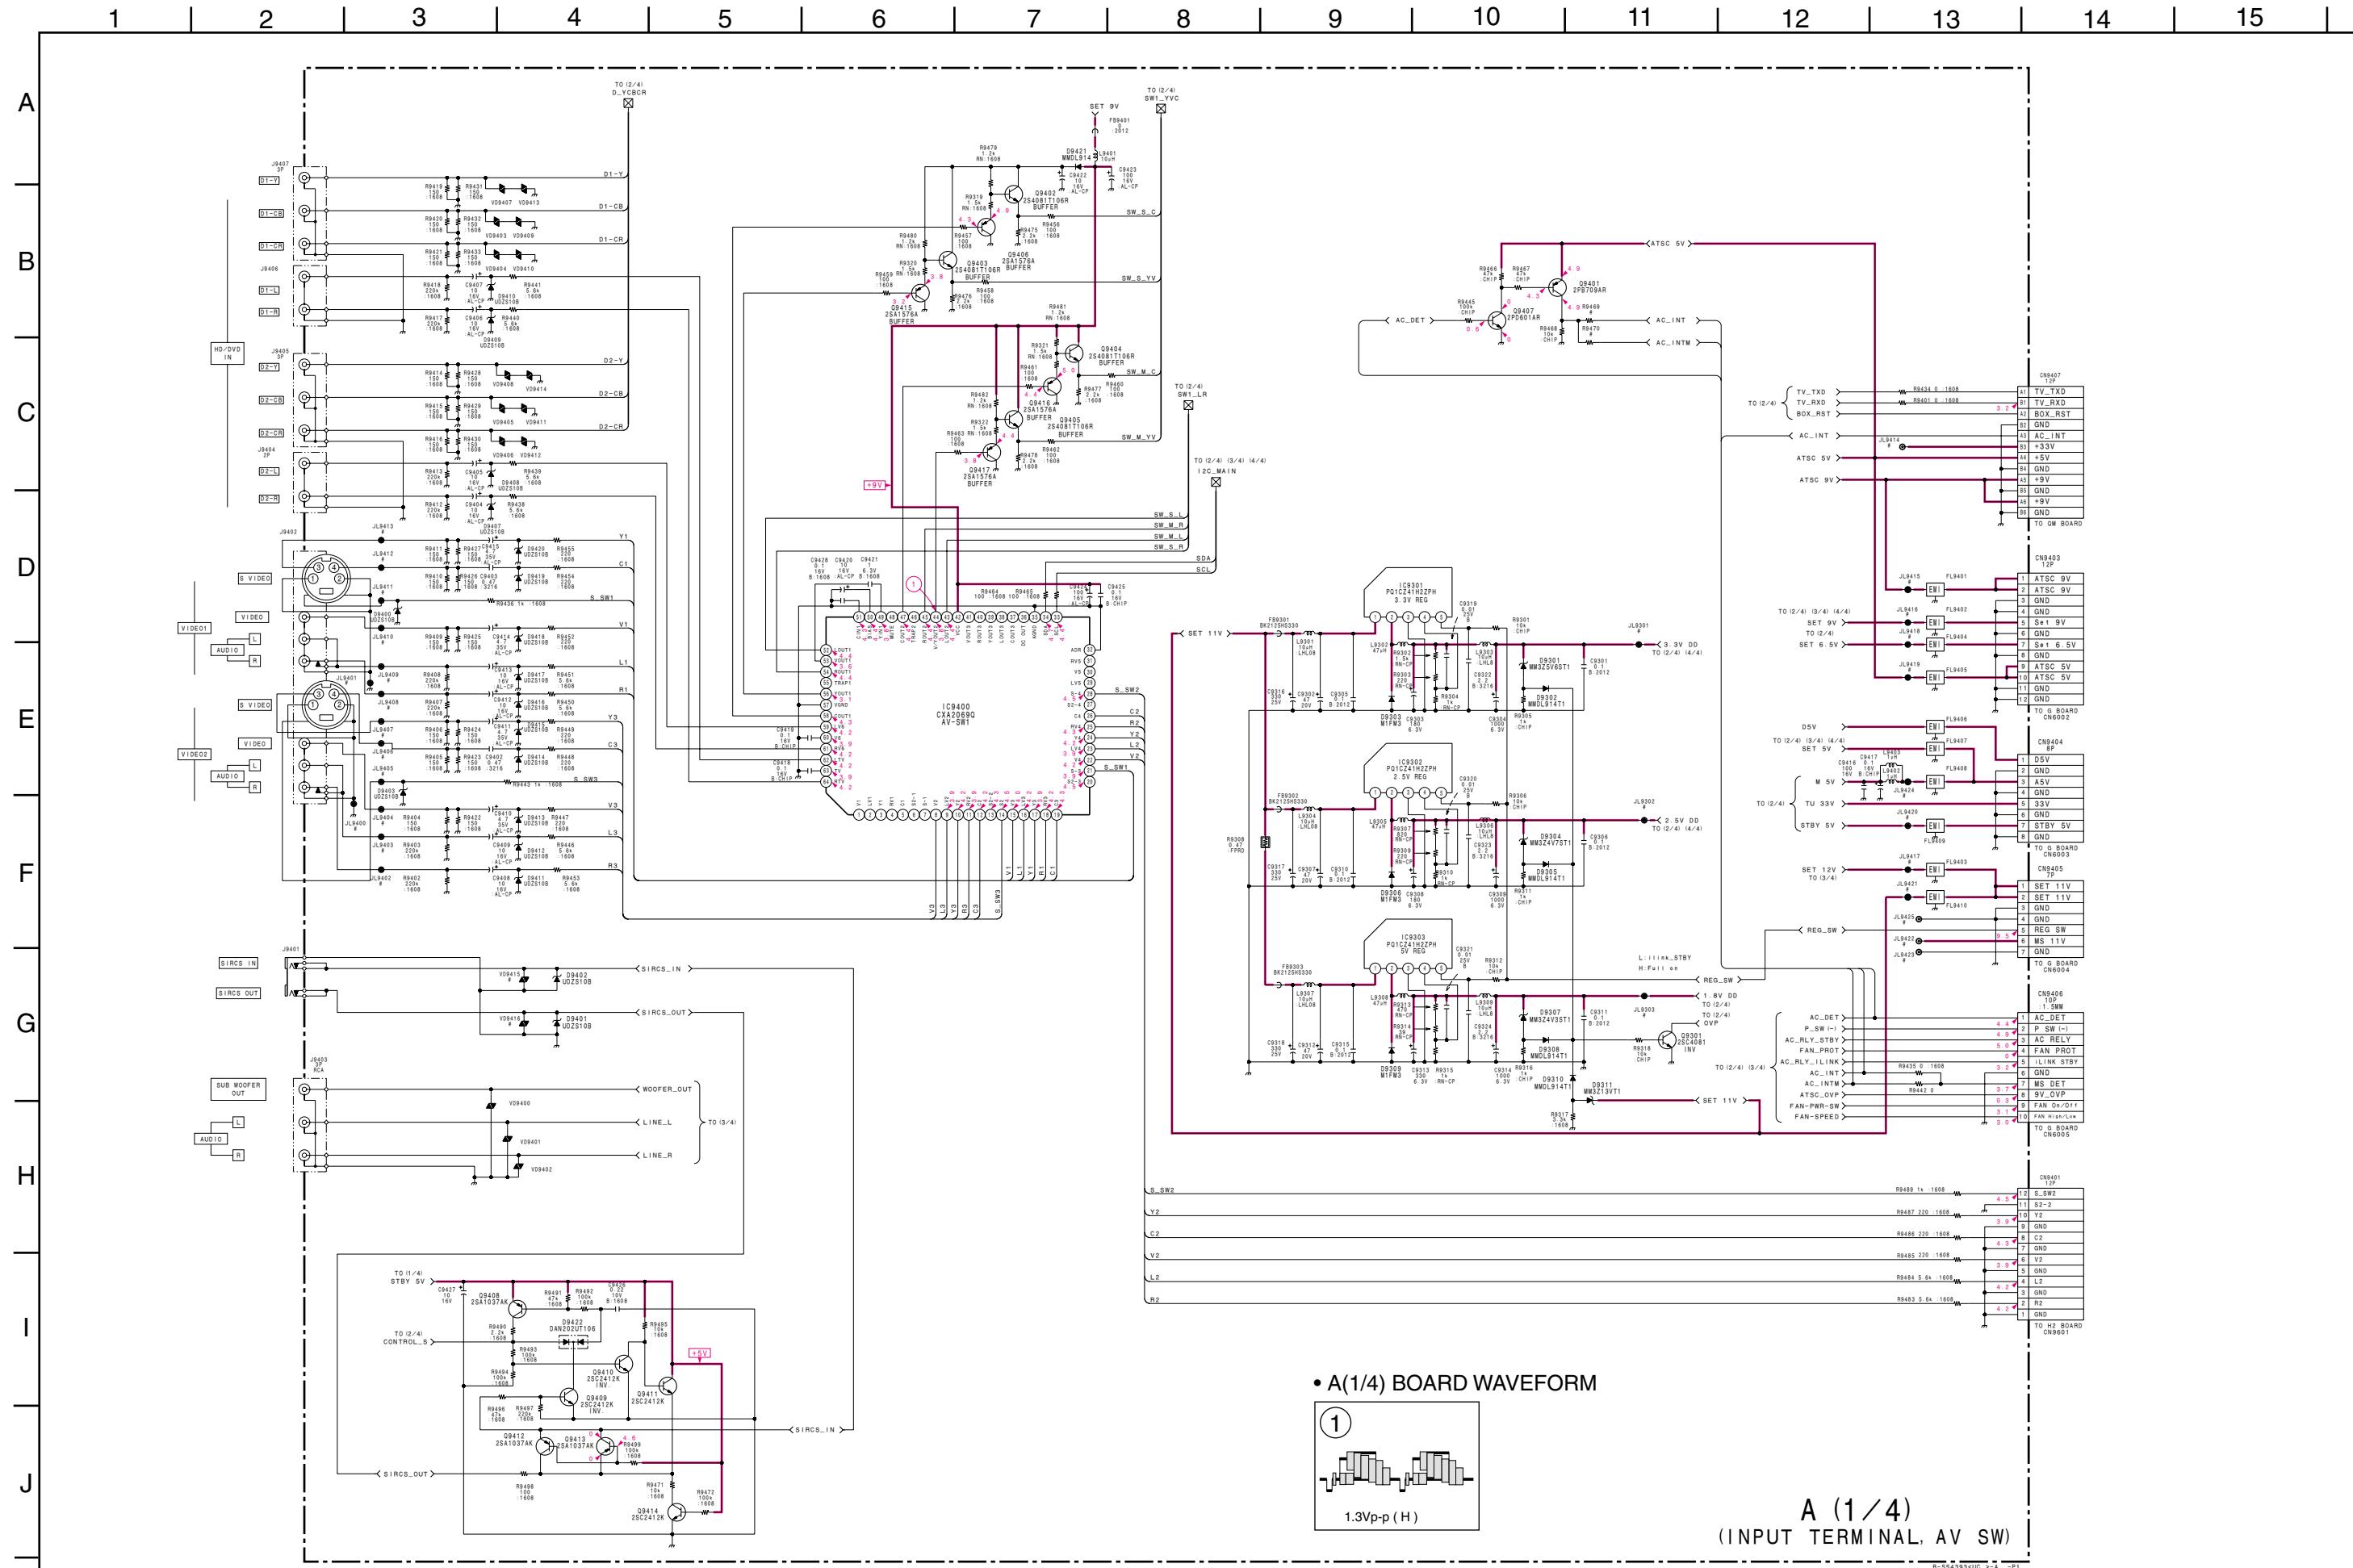

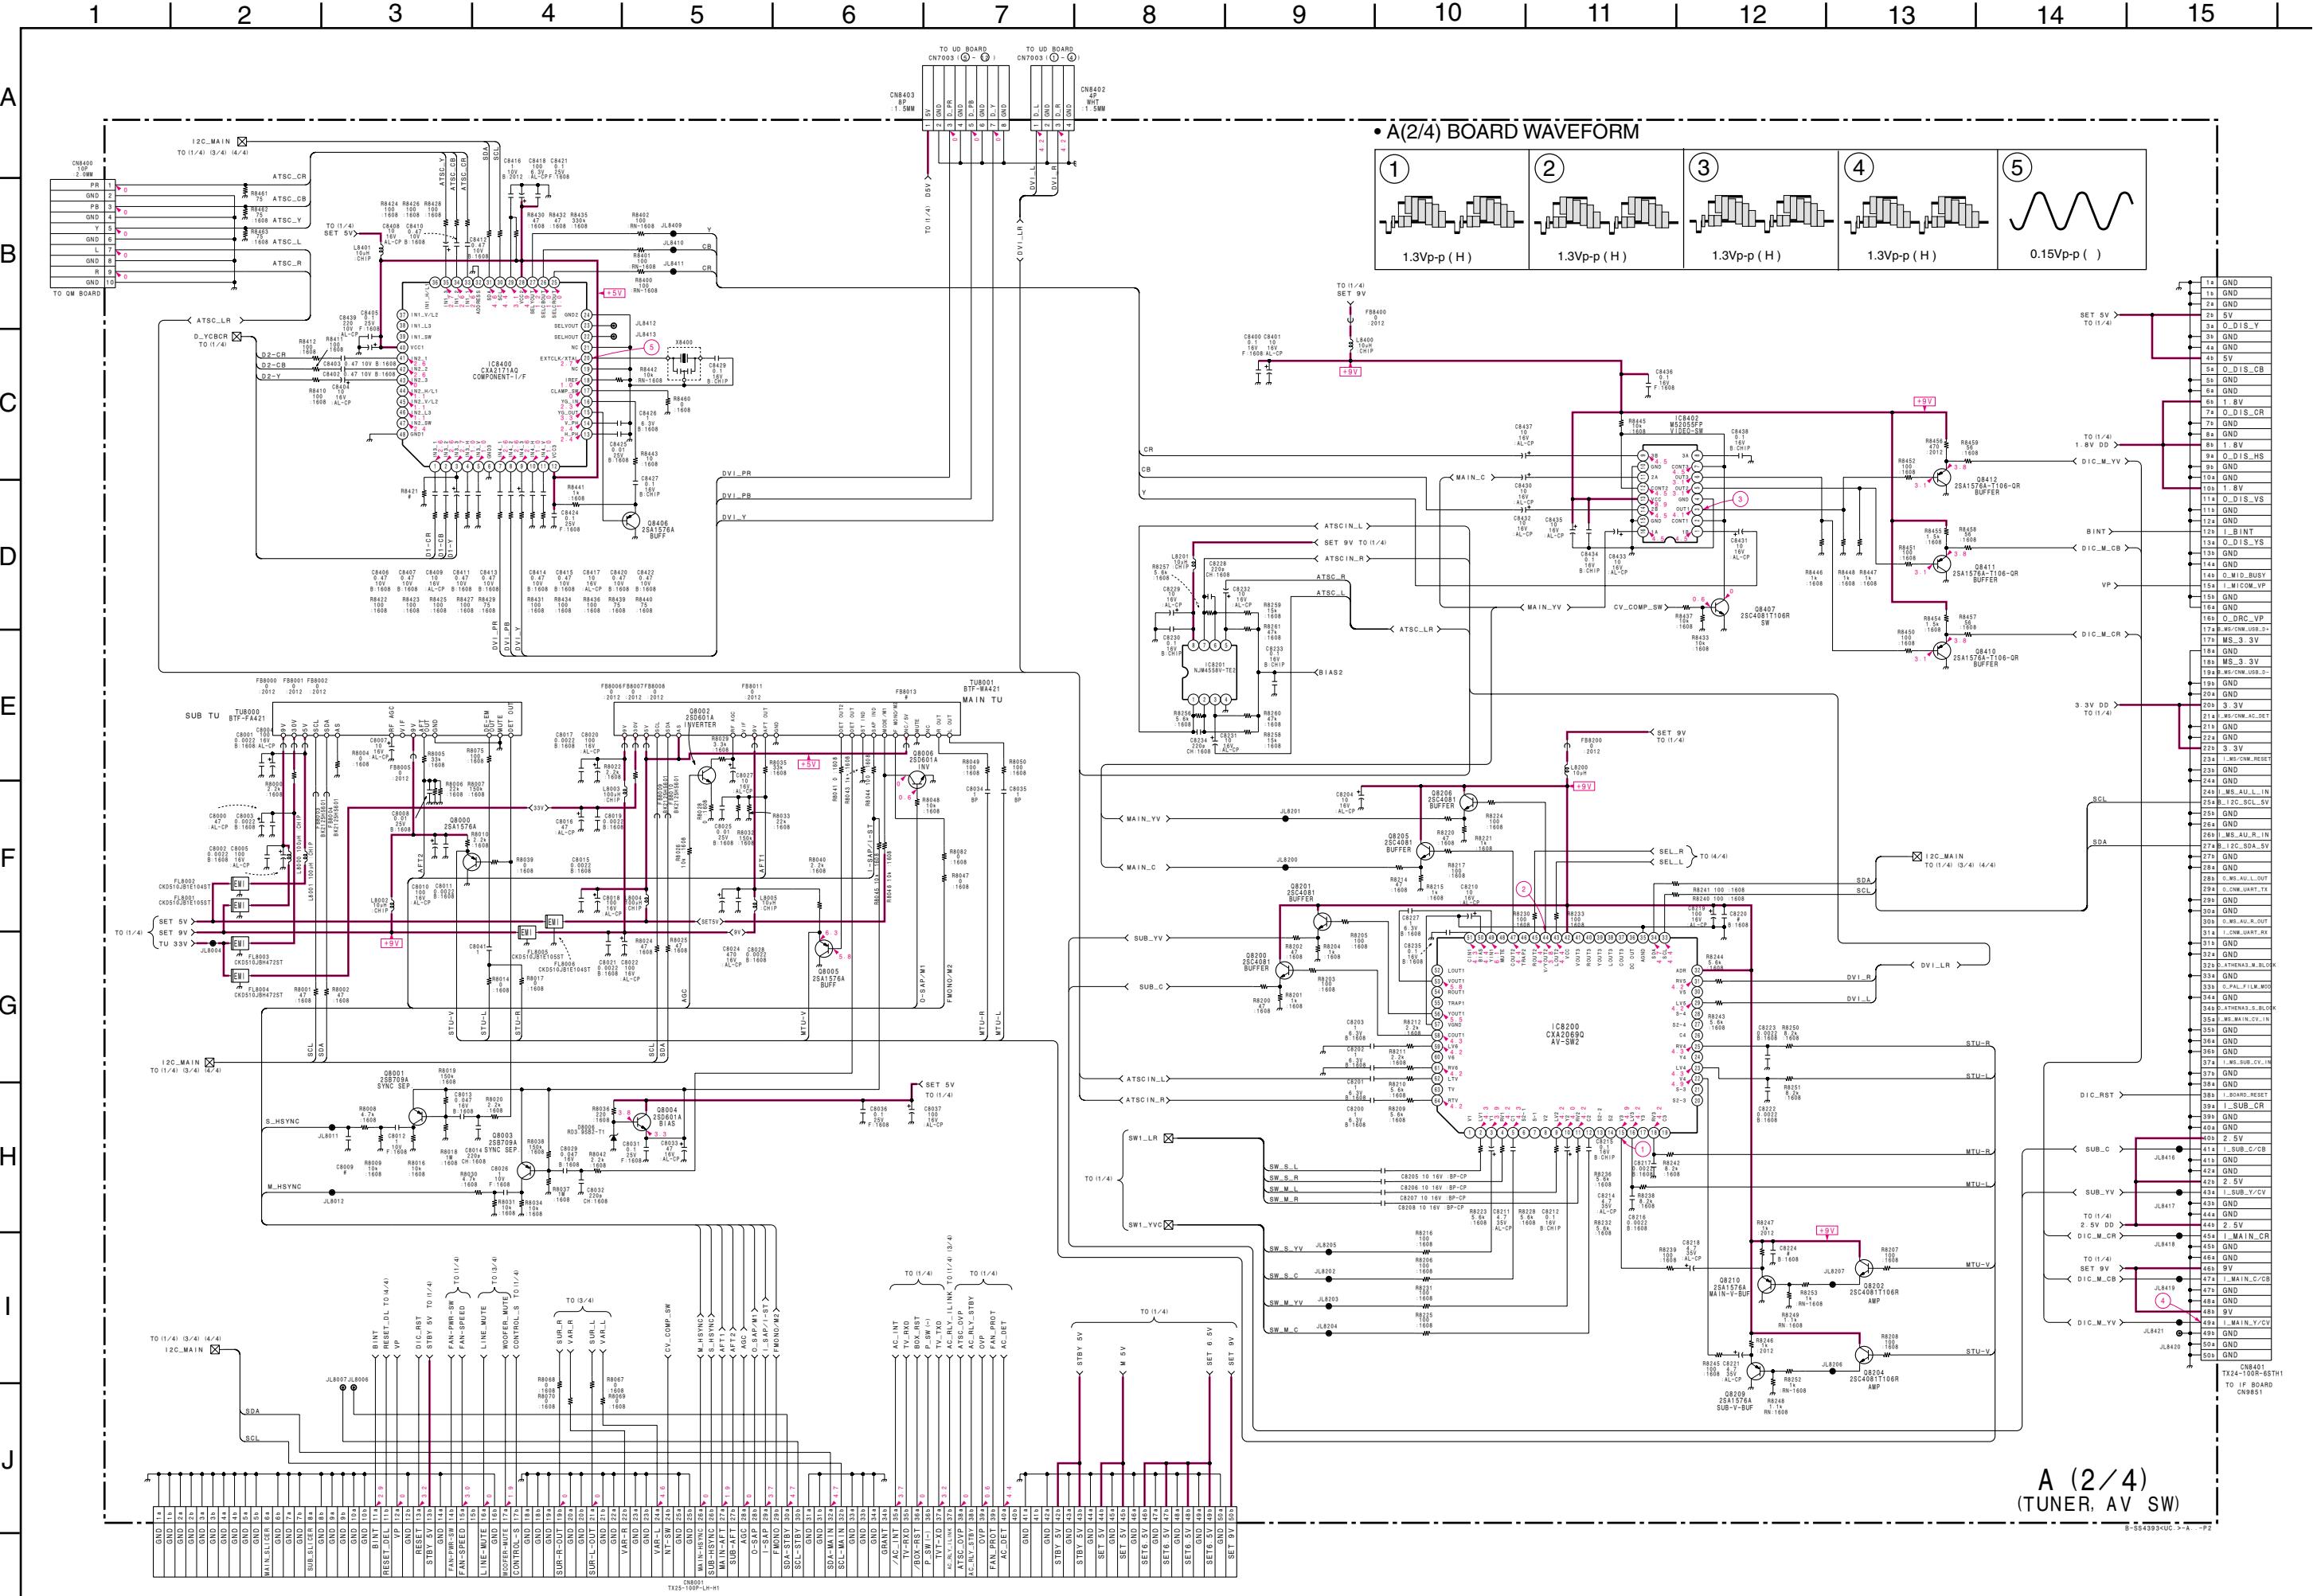

A (2/4)  
(TUNER, AV SW)

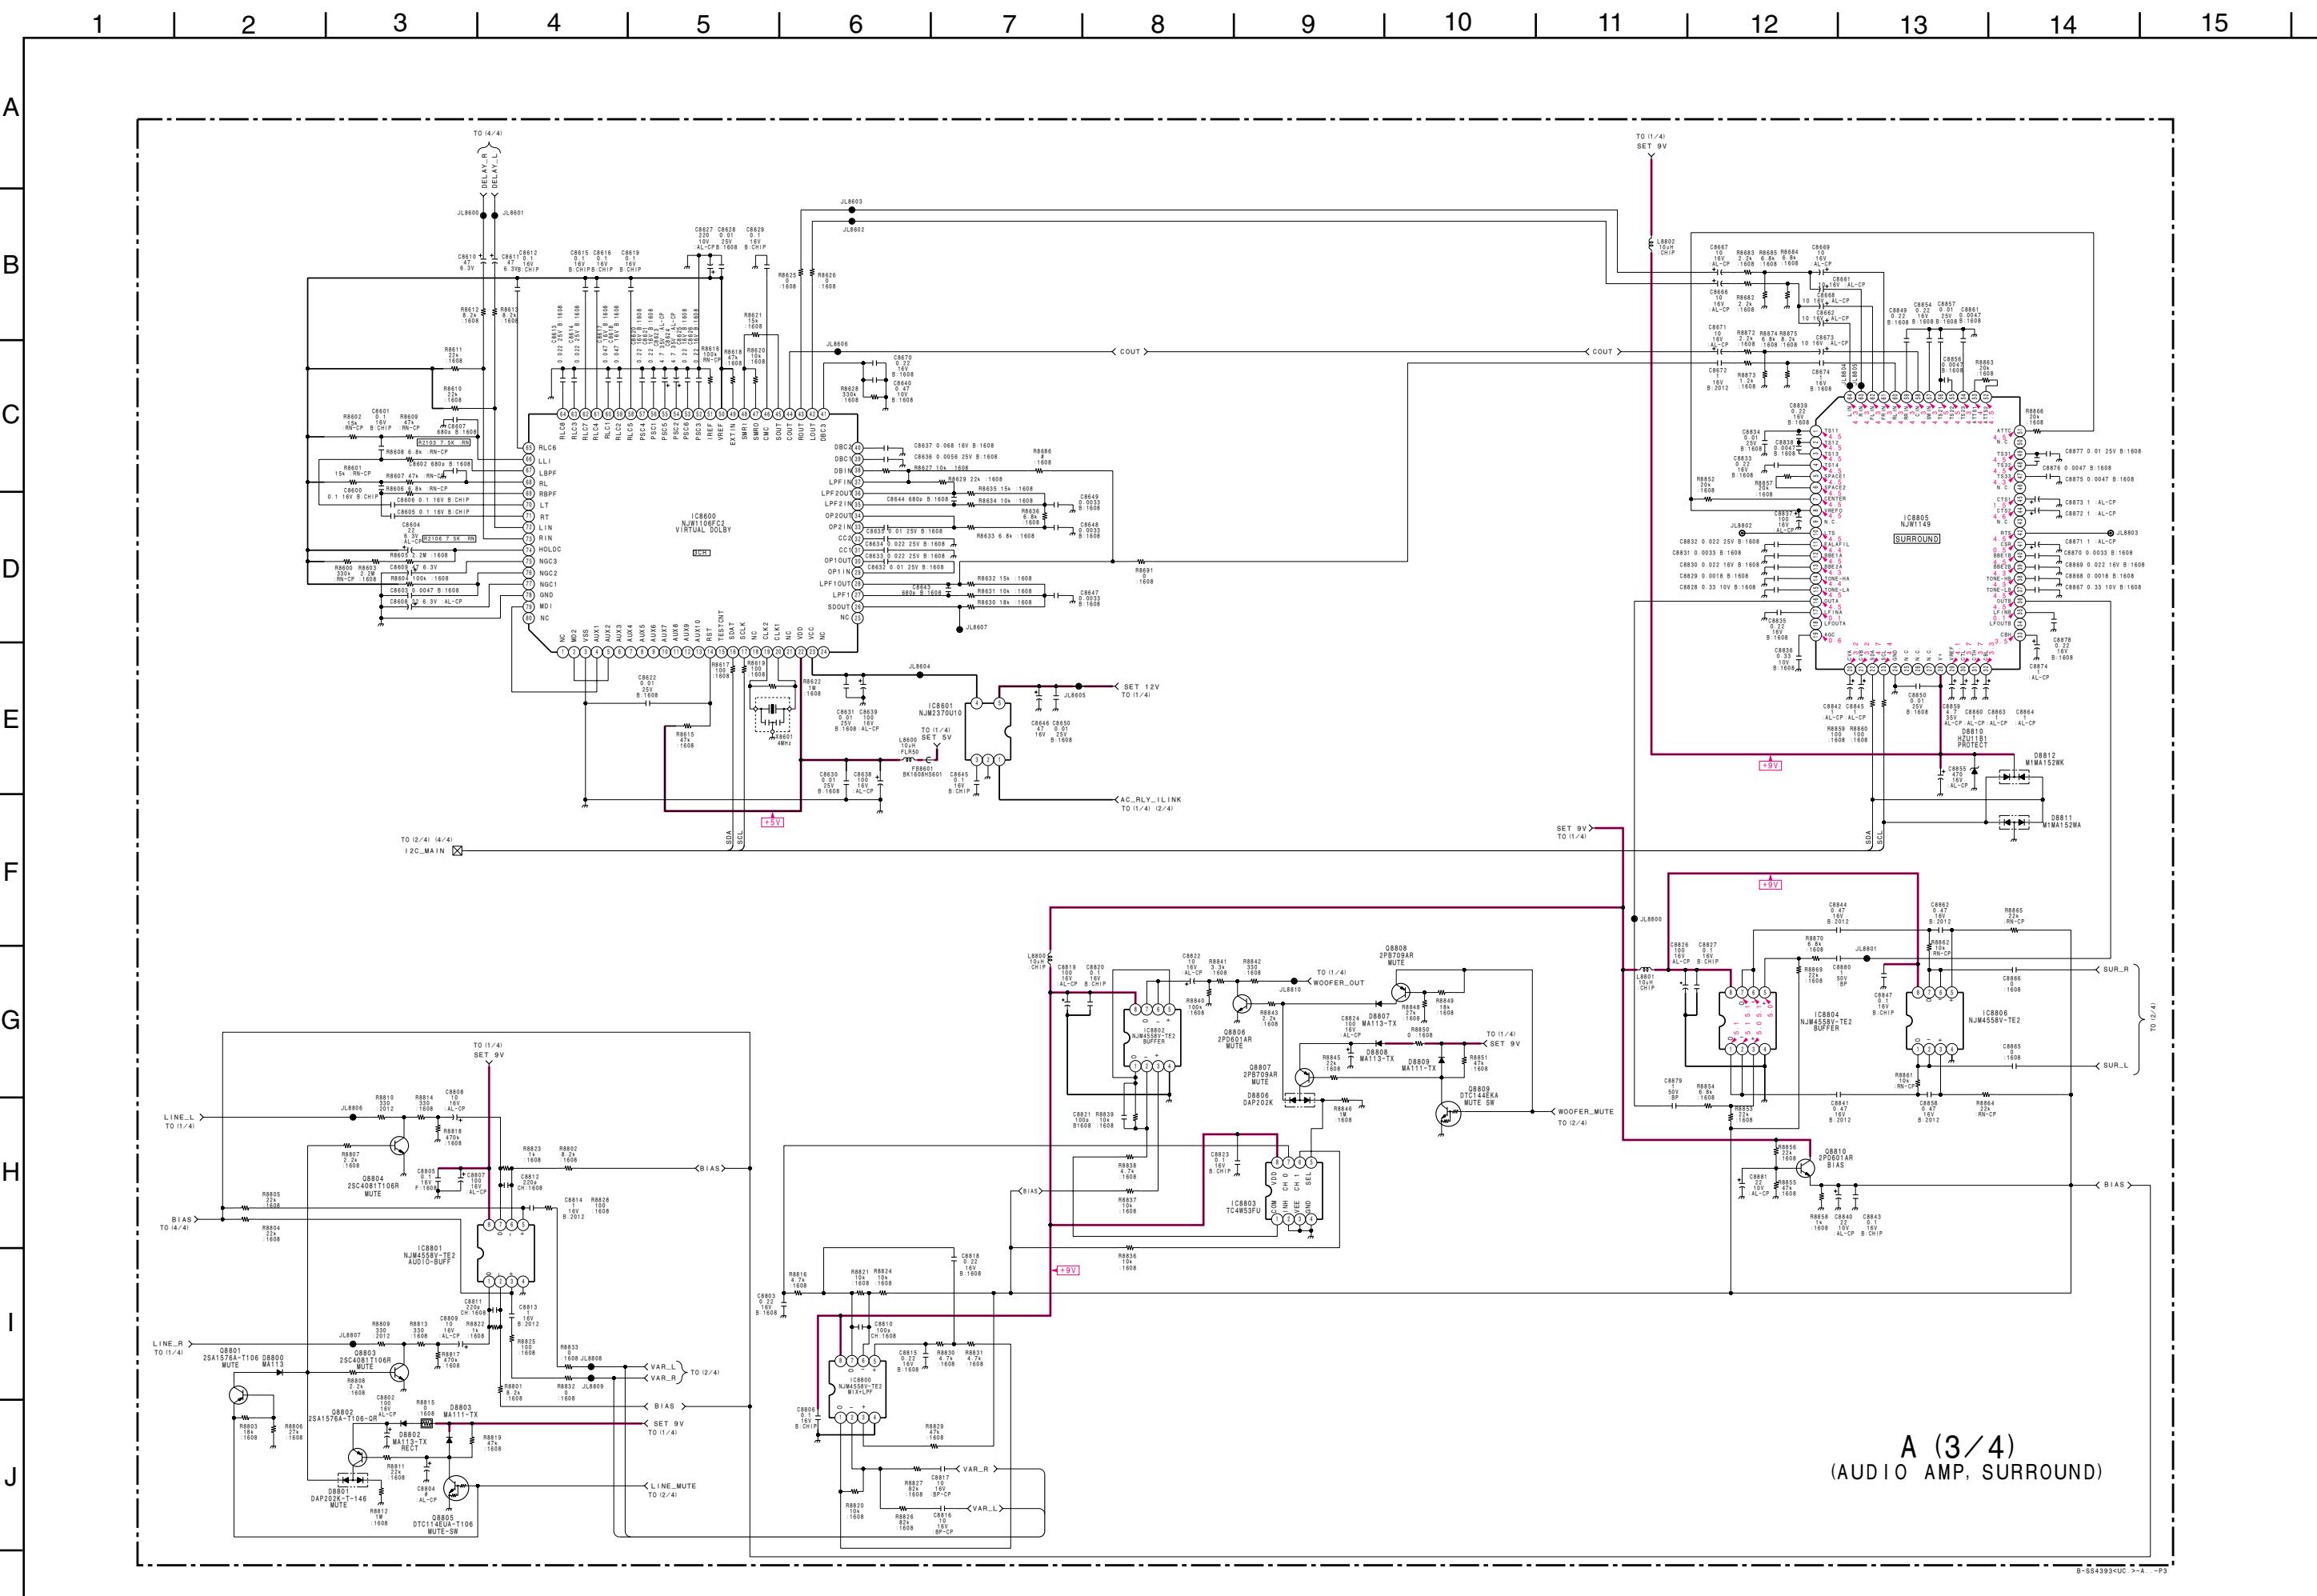

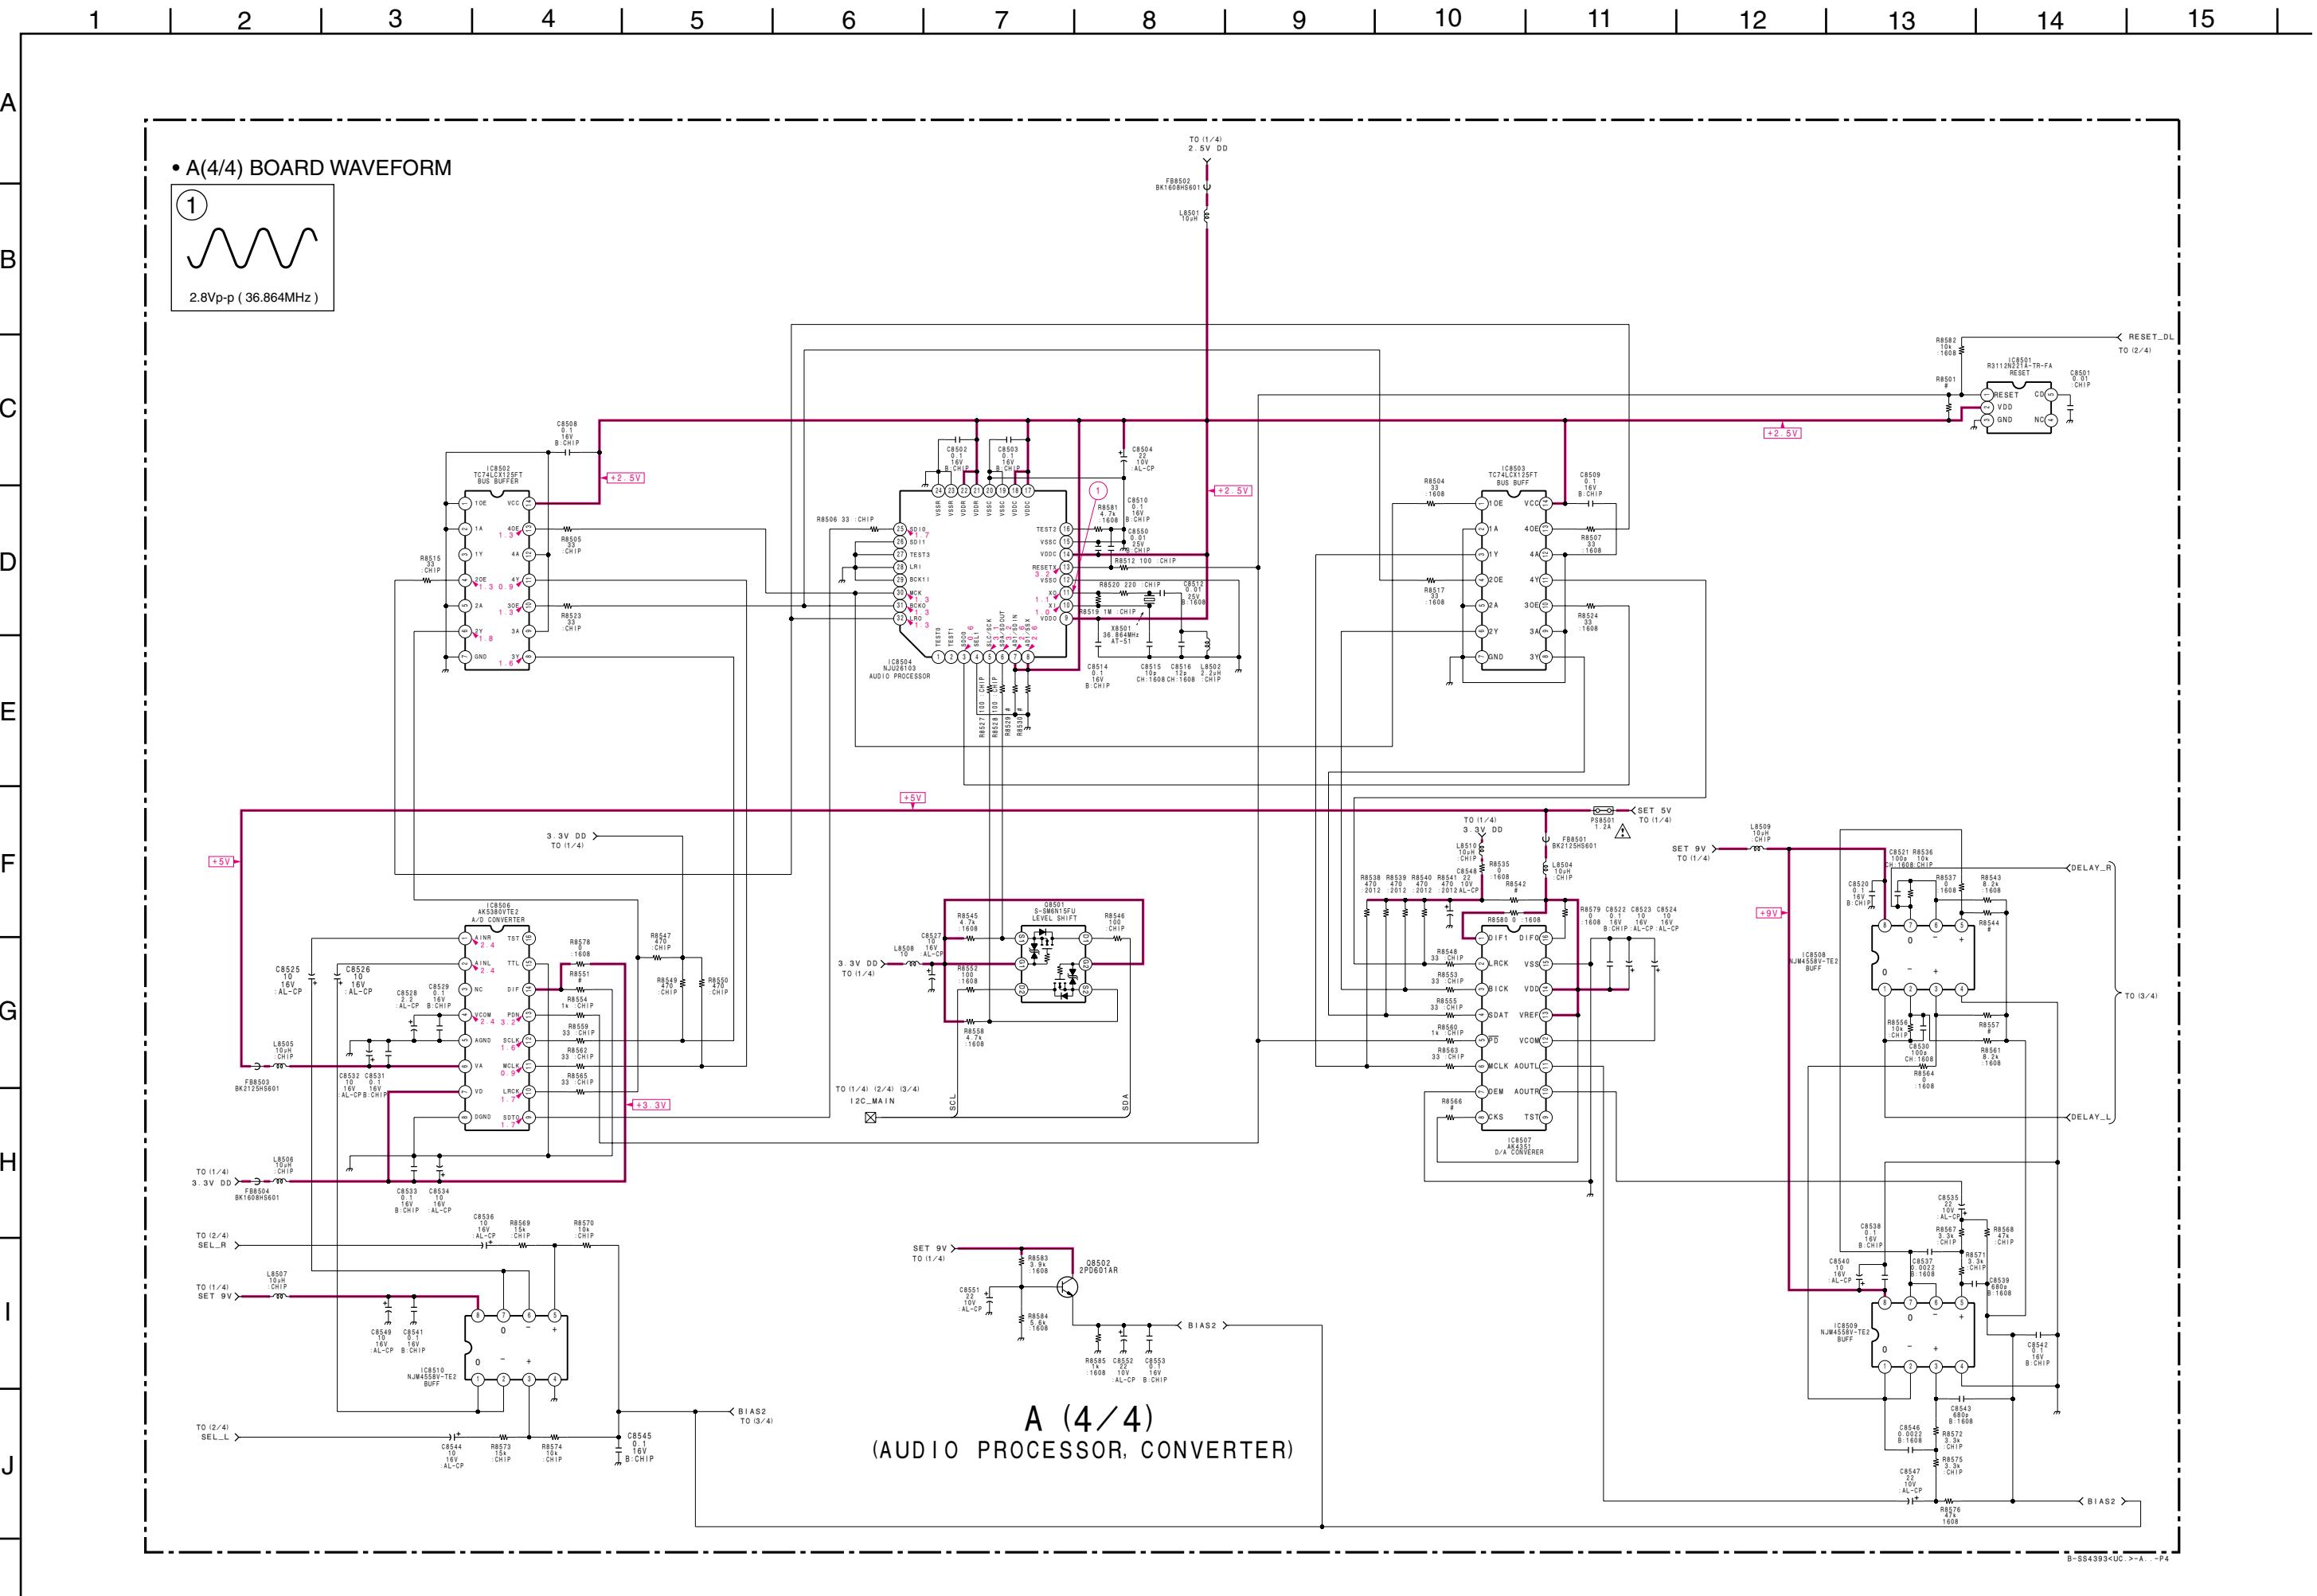


---


A

[INPUT TERMINAL, TUNER, AV SW, AUDIO SURROUND/AMP/PROCESSOR]

— A BOARD —

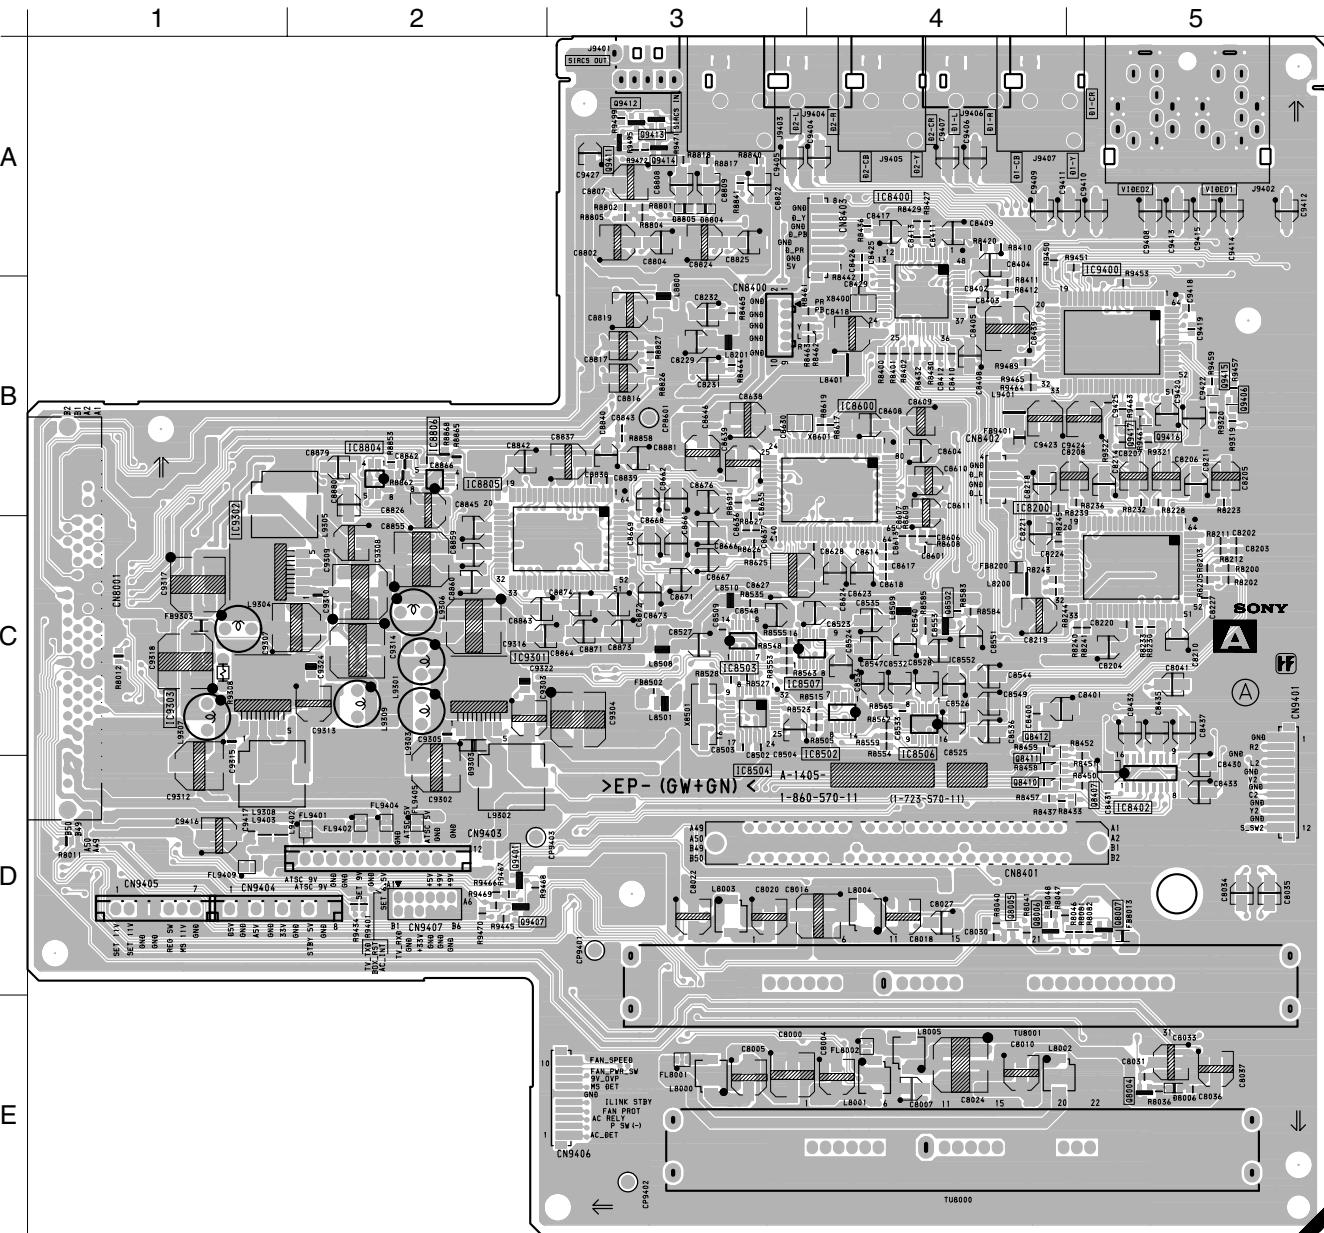

## <COMPONENT SIDE>

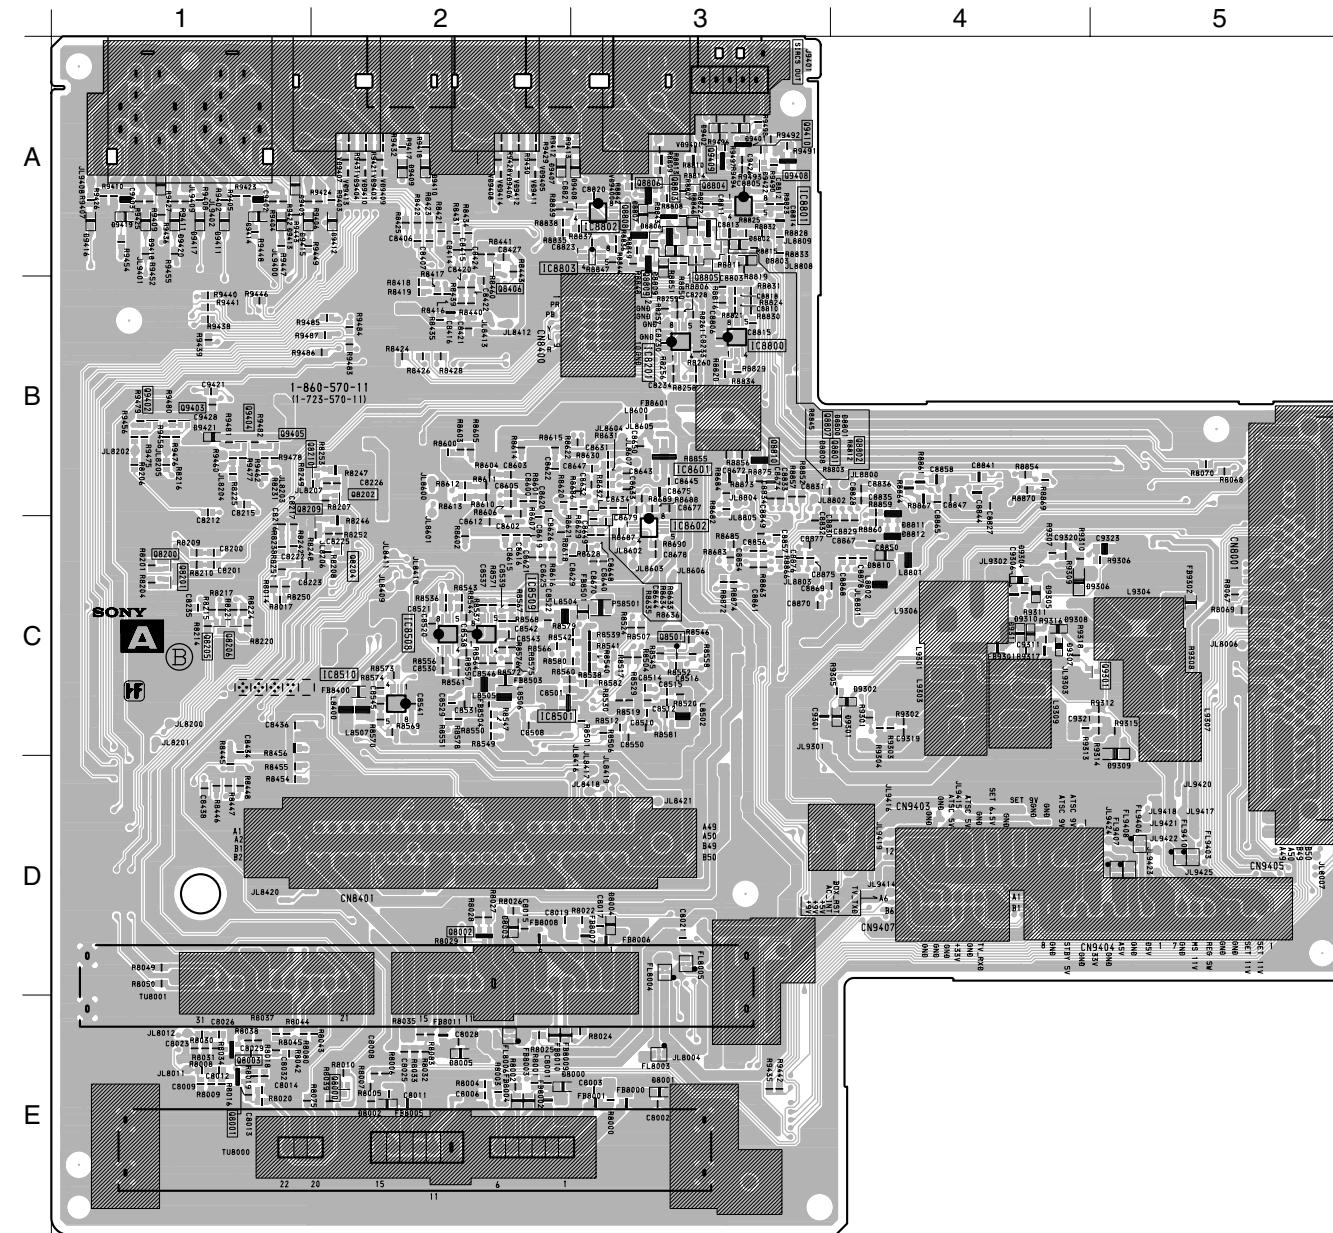


**<CONDUCTOR SIDE>**

- A BOARD SEMICONDUCTOR LOCATION

IC	IC8600	B-4	TRANSISTER	Q8206	C-1	②	Q8807	A-3	②	Q9412	A-3	②	D8005	E-2	③	D9302	C-4	③	D9409	A-2	③
	(Component Side)	(Conductor Side)		Q8209	C-2	②	Q8808	A-3	②	Q9413	A-3	②	D8006	E-5	③	D9303	C-2	③	D9410	A-2	③
IC8601	B-3		(Component Side) (Conductor Side)	Q8210	B-2	②	Q8809	A-3	②	Q9414	A-3	②	D8006	E-5	③	D9304	C-4	③	D9411	A-1	③
IC8602	C-3			Q8406	A-2	②	Q8810	B-3	②	Q9415	B-5	②	D8801	A-3	①	D9305	C-4	③	D9412	A-2	③
IC8200	C-5			Q8000	E-2	②	Q9301	C-5	②	Q9416	B-5	②	D8802	A-3	③	D9306	C-4	③	D9413	A-1	③
IC8201	B-3			Q8001	E-1	②	Q8407	D-5	②	Q9417	B-5	-	D8803	A-3	③	D9307	C-4	③	D9414	A-1	③
IC8400	B-4			Q8002	D-2	②	Q8410	D-4	②				D8804	A-3	③	D9308	C-4	③	D9415	A-1	③
IC8402	D-5			Q8003	E-1	②	Q8411	D-4	②				D8805	A-3	③	D9309	C-5	③	D9416	A-1	③
IC8501	C-2			Q8004	B-2		Q8412	C-4	②	Q9403	B-1	②				D9310	C-4	③	D9417	A-1	③
IC8502	C-4			Q8005	C-3		Q8501	C-3	-	Q9404	B-1	②				D9311	C-4	③	D9418	A-1	③
IC8503	C-3			Q8006	B-2		Q8502	C-4	②	Q9405	B-1	②				D9311	C-4	③	D9419	A-1	③
IC8504	C-3			Q9301	C-2		Q8801	A-3	②	Q9406	B-5	②	D8807	A-3	③	D9311	C-4	③	D9420	A-1	③
IC8505	C-4			Q8200	C-1		Q8802	A-3	②	Q9407	D-2	②	D8808	A-3	③	D9400	A-1	③	D9421	B-1	③
IC8507	C-4			Q8201	C-1		Q8803	A-3	②	Q9408	A-3	②	D8000	E-2	③	D8809	A-3	③	D9422	A-3	⑨
IC8508	C-2			Q8202	B-2	②	Q8804	A-3	②	Q9409	A-3	②	D8001	E-3	③	D8810	C-4	③	D9403	A-1	③
IC8509	C-2			Q8204	C-2	②	Q8805	A-3	②	Q9410	A-3	②	D8002	E-2	③	D8811	B-4	①	D9402	A-3	③
IC8510	C-2			Q8205	C-1	②	Q8806	A-3	②	Q9411	A-3	②	D8003	D-2	③	D8812	C-4	⑧	D9407	A-2	③
												D8004	D-3	③	D9301	C-4	③	D9408	A-3	③	


\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

## (2) Schematic Diagram of G Board

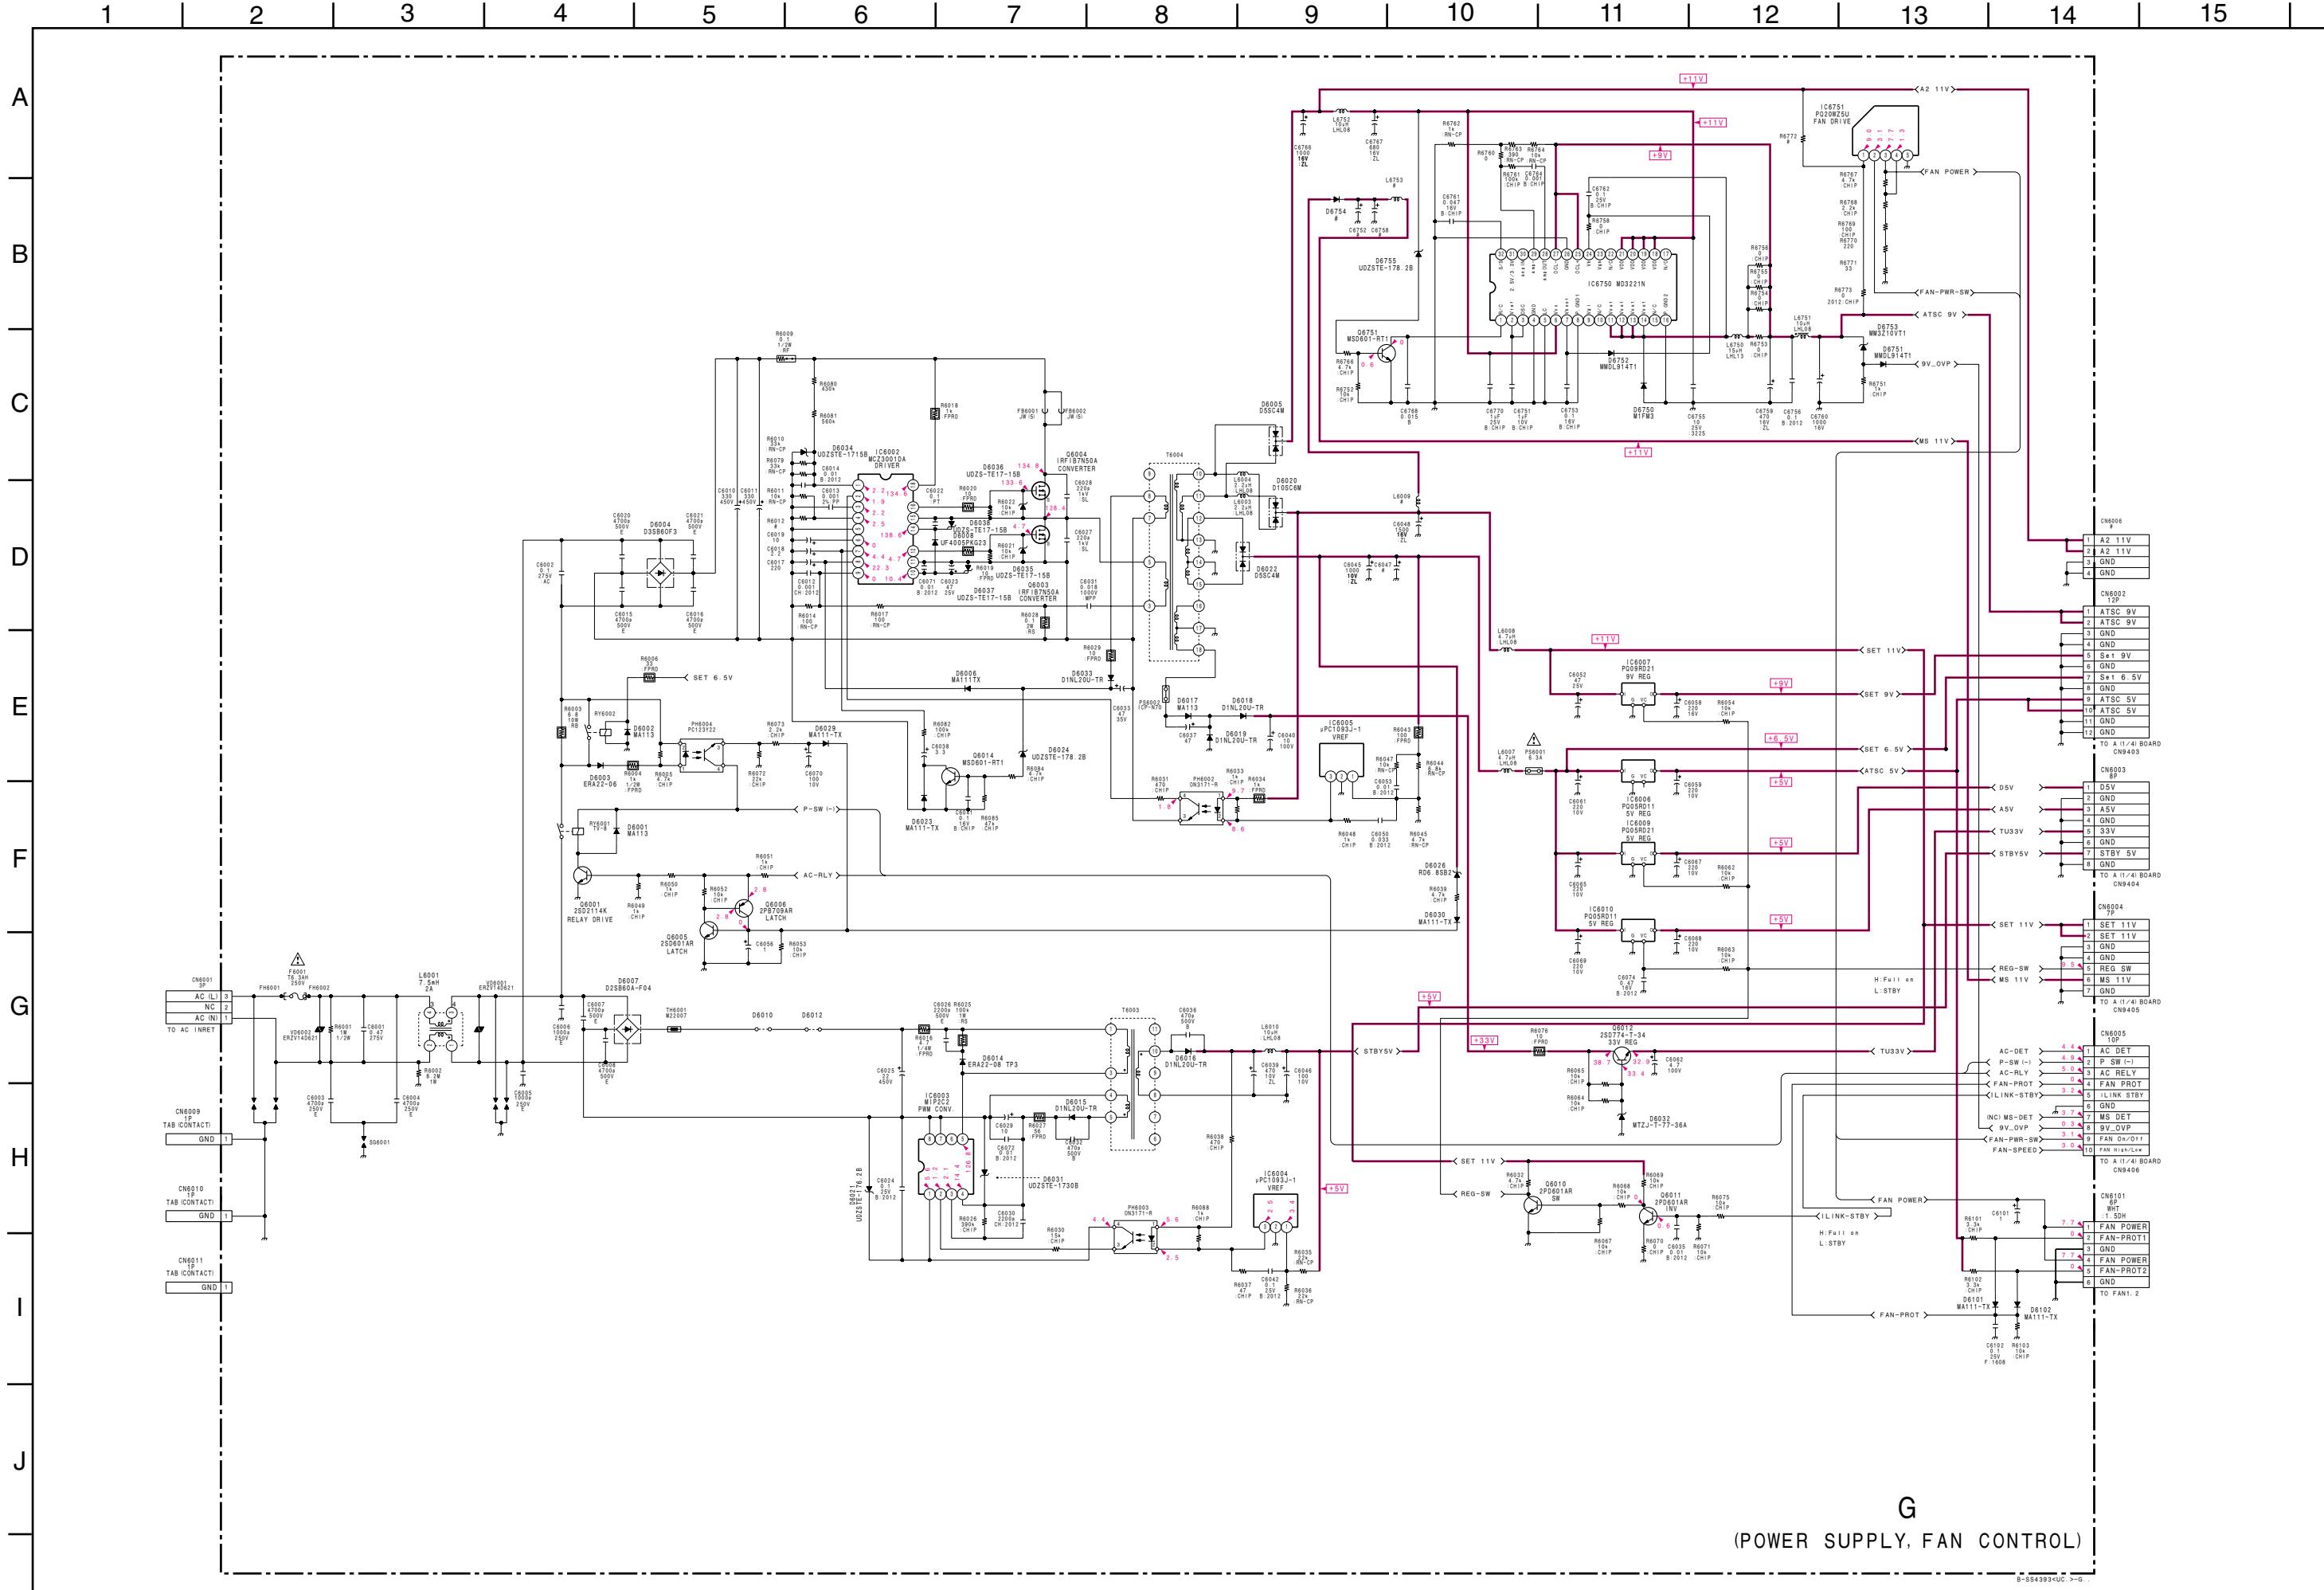

**G**

[POWER SUPPLY, FAN CONTROL]

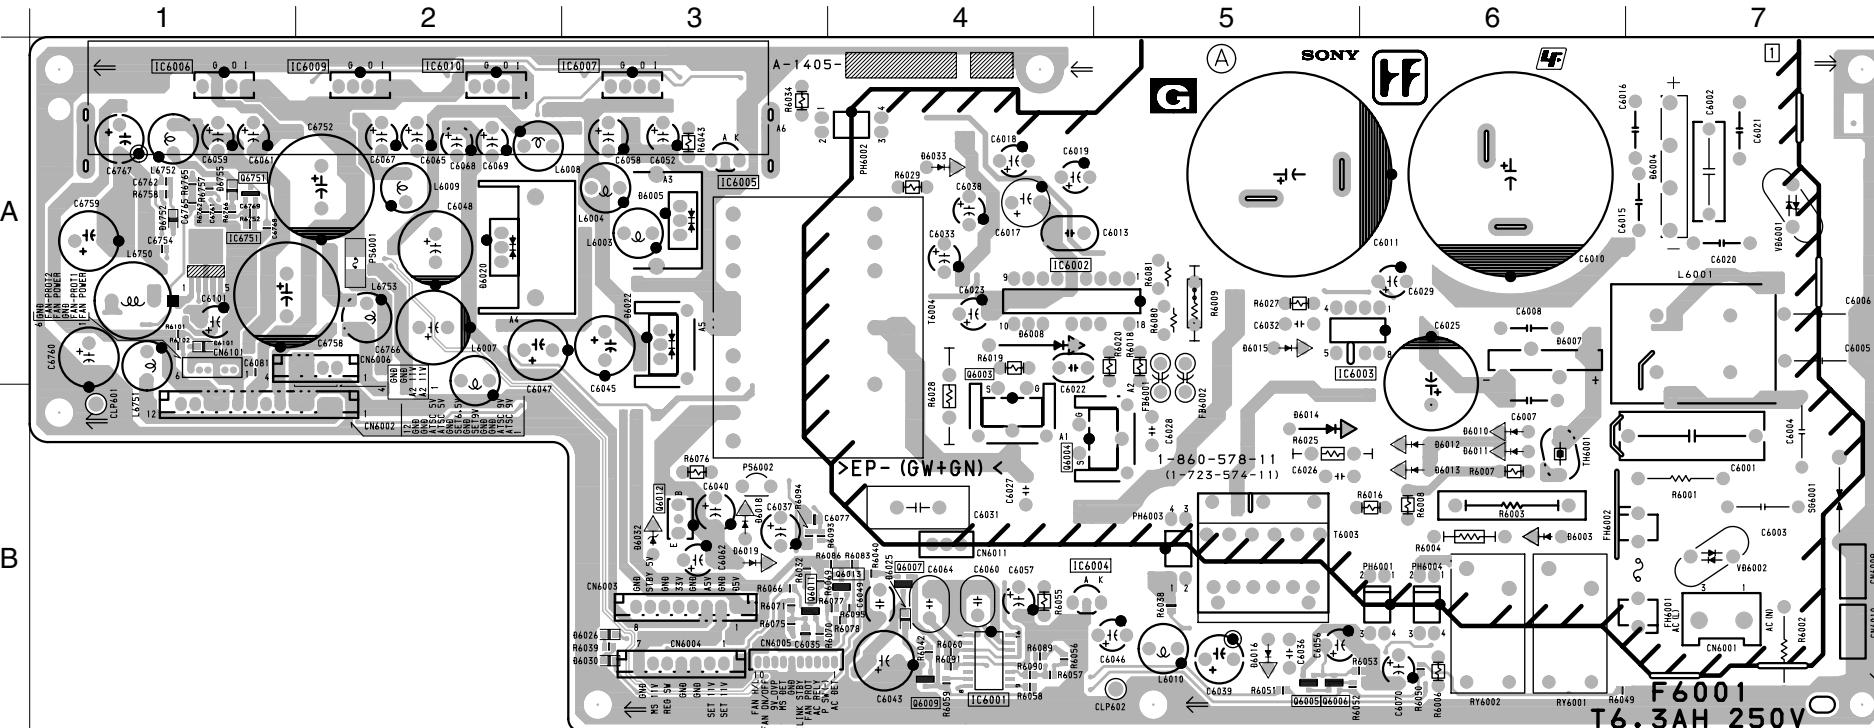**— G BOARD —****• G BOARD SEMICONDUCTOR LOCATION**

IC	(Component Side)	(Conductor Side)	*
Q6010	B-5	①	D6018 B-3
Q6011	B-3	②	D6019 B-3
Q6012	B-3	-	D6020 A-2
Q6013	B-4	③	D6021 A-2
Q6014	A-4	④	D6022 A-3
Q6751	A-1	⑤	D6023 A-4
Q6752	A-7	⑥	D6024 A-4
IC6001	B-4	⑦	D6025 B-4
IC6002	A-5	⑧	D6026 B-3
IC6003	A-6	⑨	D6027 B-4
IC6004	B-4	⑩	D6028 B-4
IC6005	A-3	⑪	D6029 B-3
IC6006	A-1	⑫	D6030 B-3
IC6007	A-3	⑬	D6031 B-3
IC6009	A-2	⑭	D6032 A-4
IC6010	A-2	⑮	D6033 A-4
IC6011	B-5	⑯	D6034 A-3
IC6750	A-7	⑰	D6035 A-4
IC6751	A-1	⑱	D6036 B-4


  

DIODE	(Component Side)	(Conductor Side)	*
D6001	B-2	⑳	D6037 A-4
D6002	B-2	㉑	D6038 A-4
D6003	B-6	-	D6039 A-4
D6004	A-7	-	D6040 A-4
D6005	A-3	-	D6041 A-4
D6006	A-6	㉒	D6042 A-4
D6007	A-6	㉓	D6043 A-4
D6008	A-4	㉔	D6044 A-4
D6009	B-2	㉕	D6045 A-4
D6010	B-6	㉖	D6046 A-4
D6011	B-6	㉗	D6047 A-4
D6012	B-6	㉘	D6048 A-4
D6013	B-6	㉙	D6049 A-4
D6014	B-5	㉚	D6050 A-4
D6015	A-5	㉛	D6051 A-4
D6016	B-5	㉜	D6052 A-4
D6017	B-5	㉝	D6053 A-4


  

TRANSISTER	(Component Side)	(Conductor Side)	*
Q6001	B-2	㉟	D6054 A-4
Q6002	B-4	㉟	D6055 A-4
Q6003	B-4	-	D6056 A-4
Q6004	B-4	-	D6057 A-4
Q6005	B-5	㉟	D6058 A-4
Q6006	B-5	㉟	D6059 A-4
Q6007	B-4	㉟	D6060 A-4
Q6008	B-4	㉟	D6061 A-4
Q6009	B-4	㉟	D6062 A-4

\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

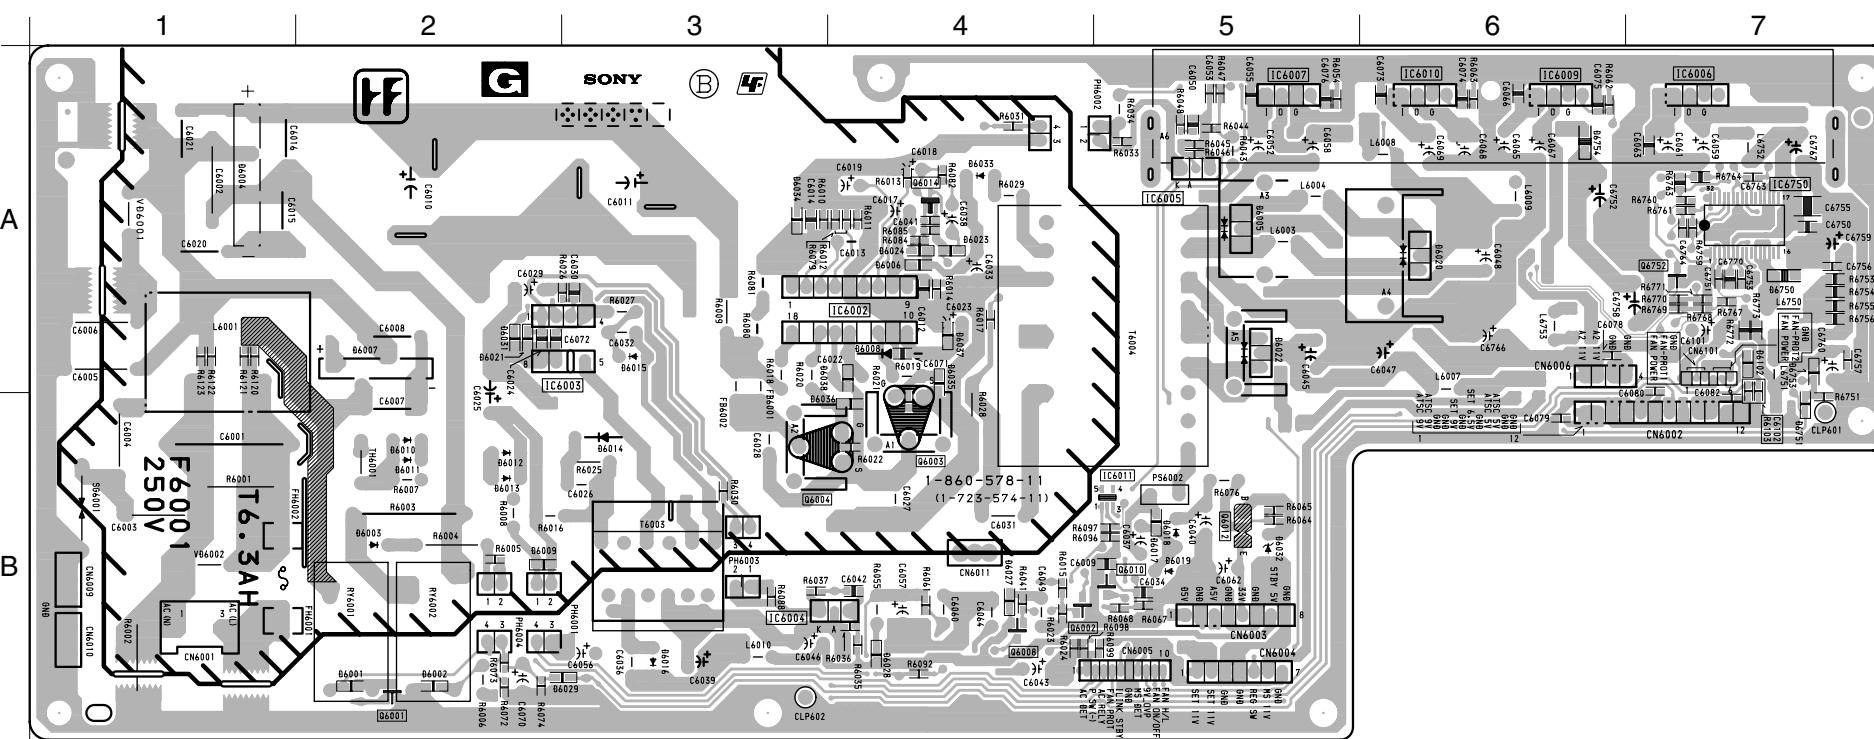


### (3) Schematic Diagram of H1 Board

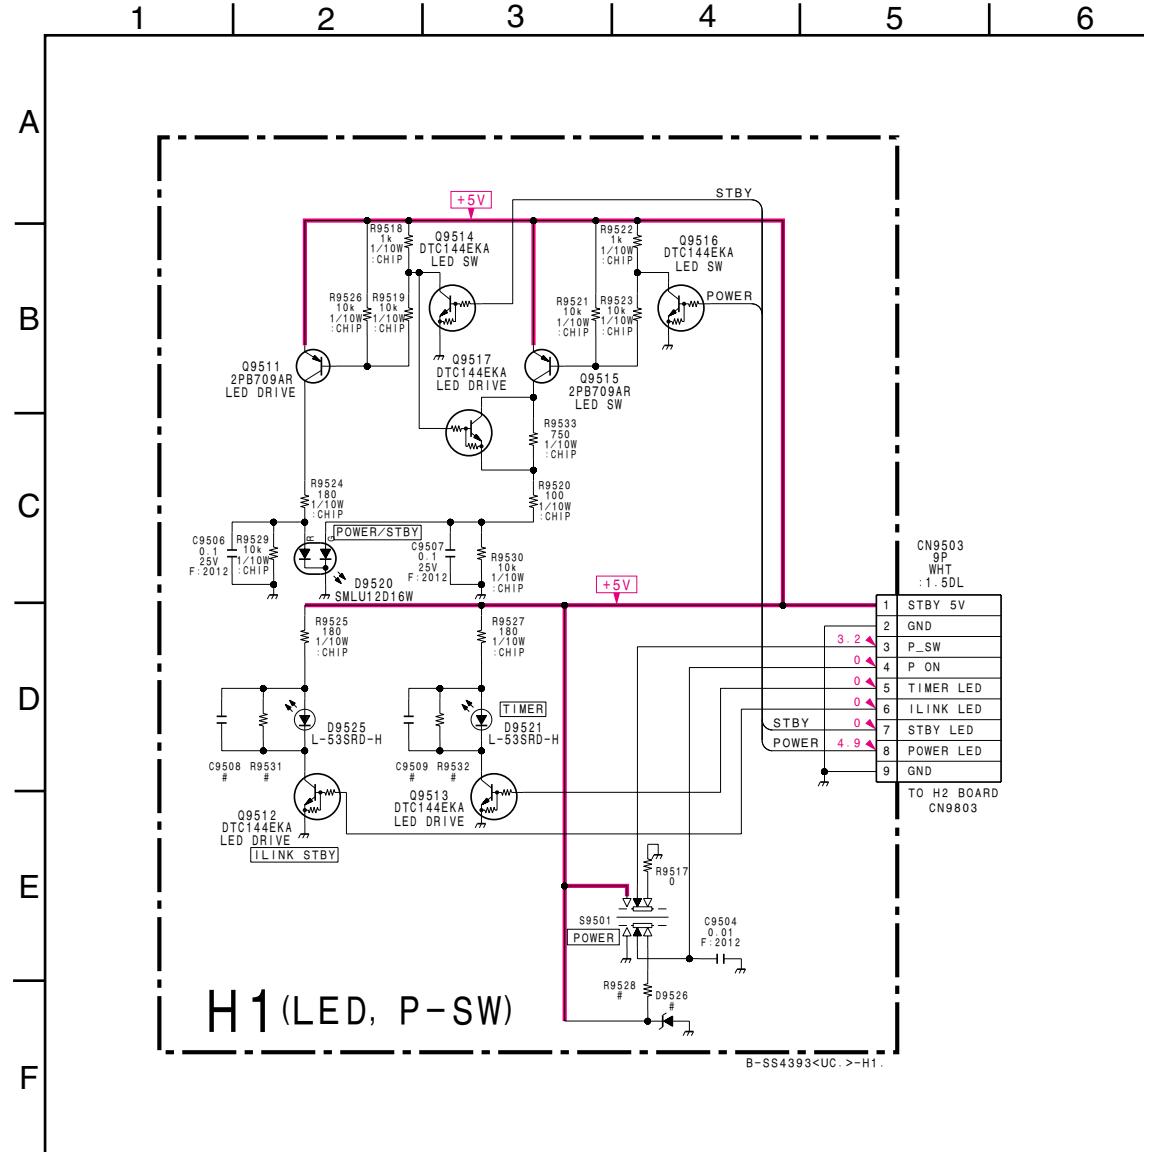


# H1 [LED, P-SW]

— H1 BOARD —

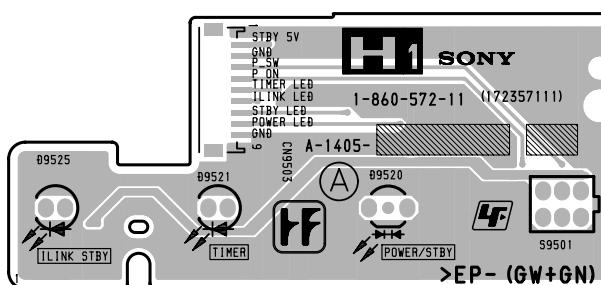

<COMPONENT SIDE

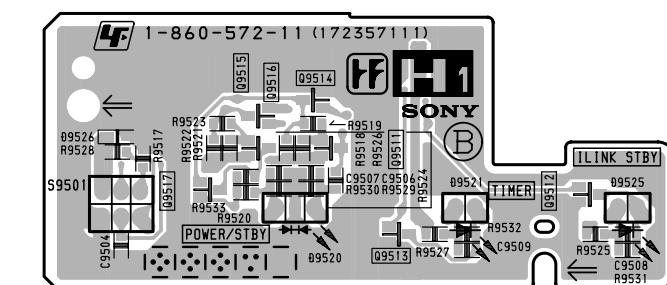


<CONDUCTOR SIDE>

- H1 BOARD SEMICONDUCTOR LOCATION

Ref.	*
Q9511-Q9517	①
D9520, D9521, D9525	-

\*: Refer to Terminal name of semiconductors in screen printed circuit (see page 3-12)


(4) Schematic Diagram of H2 Board

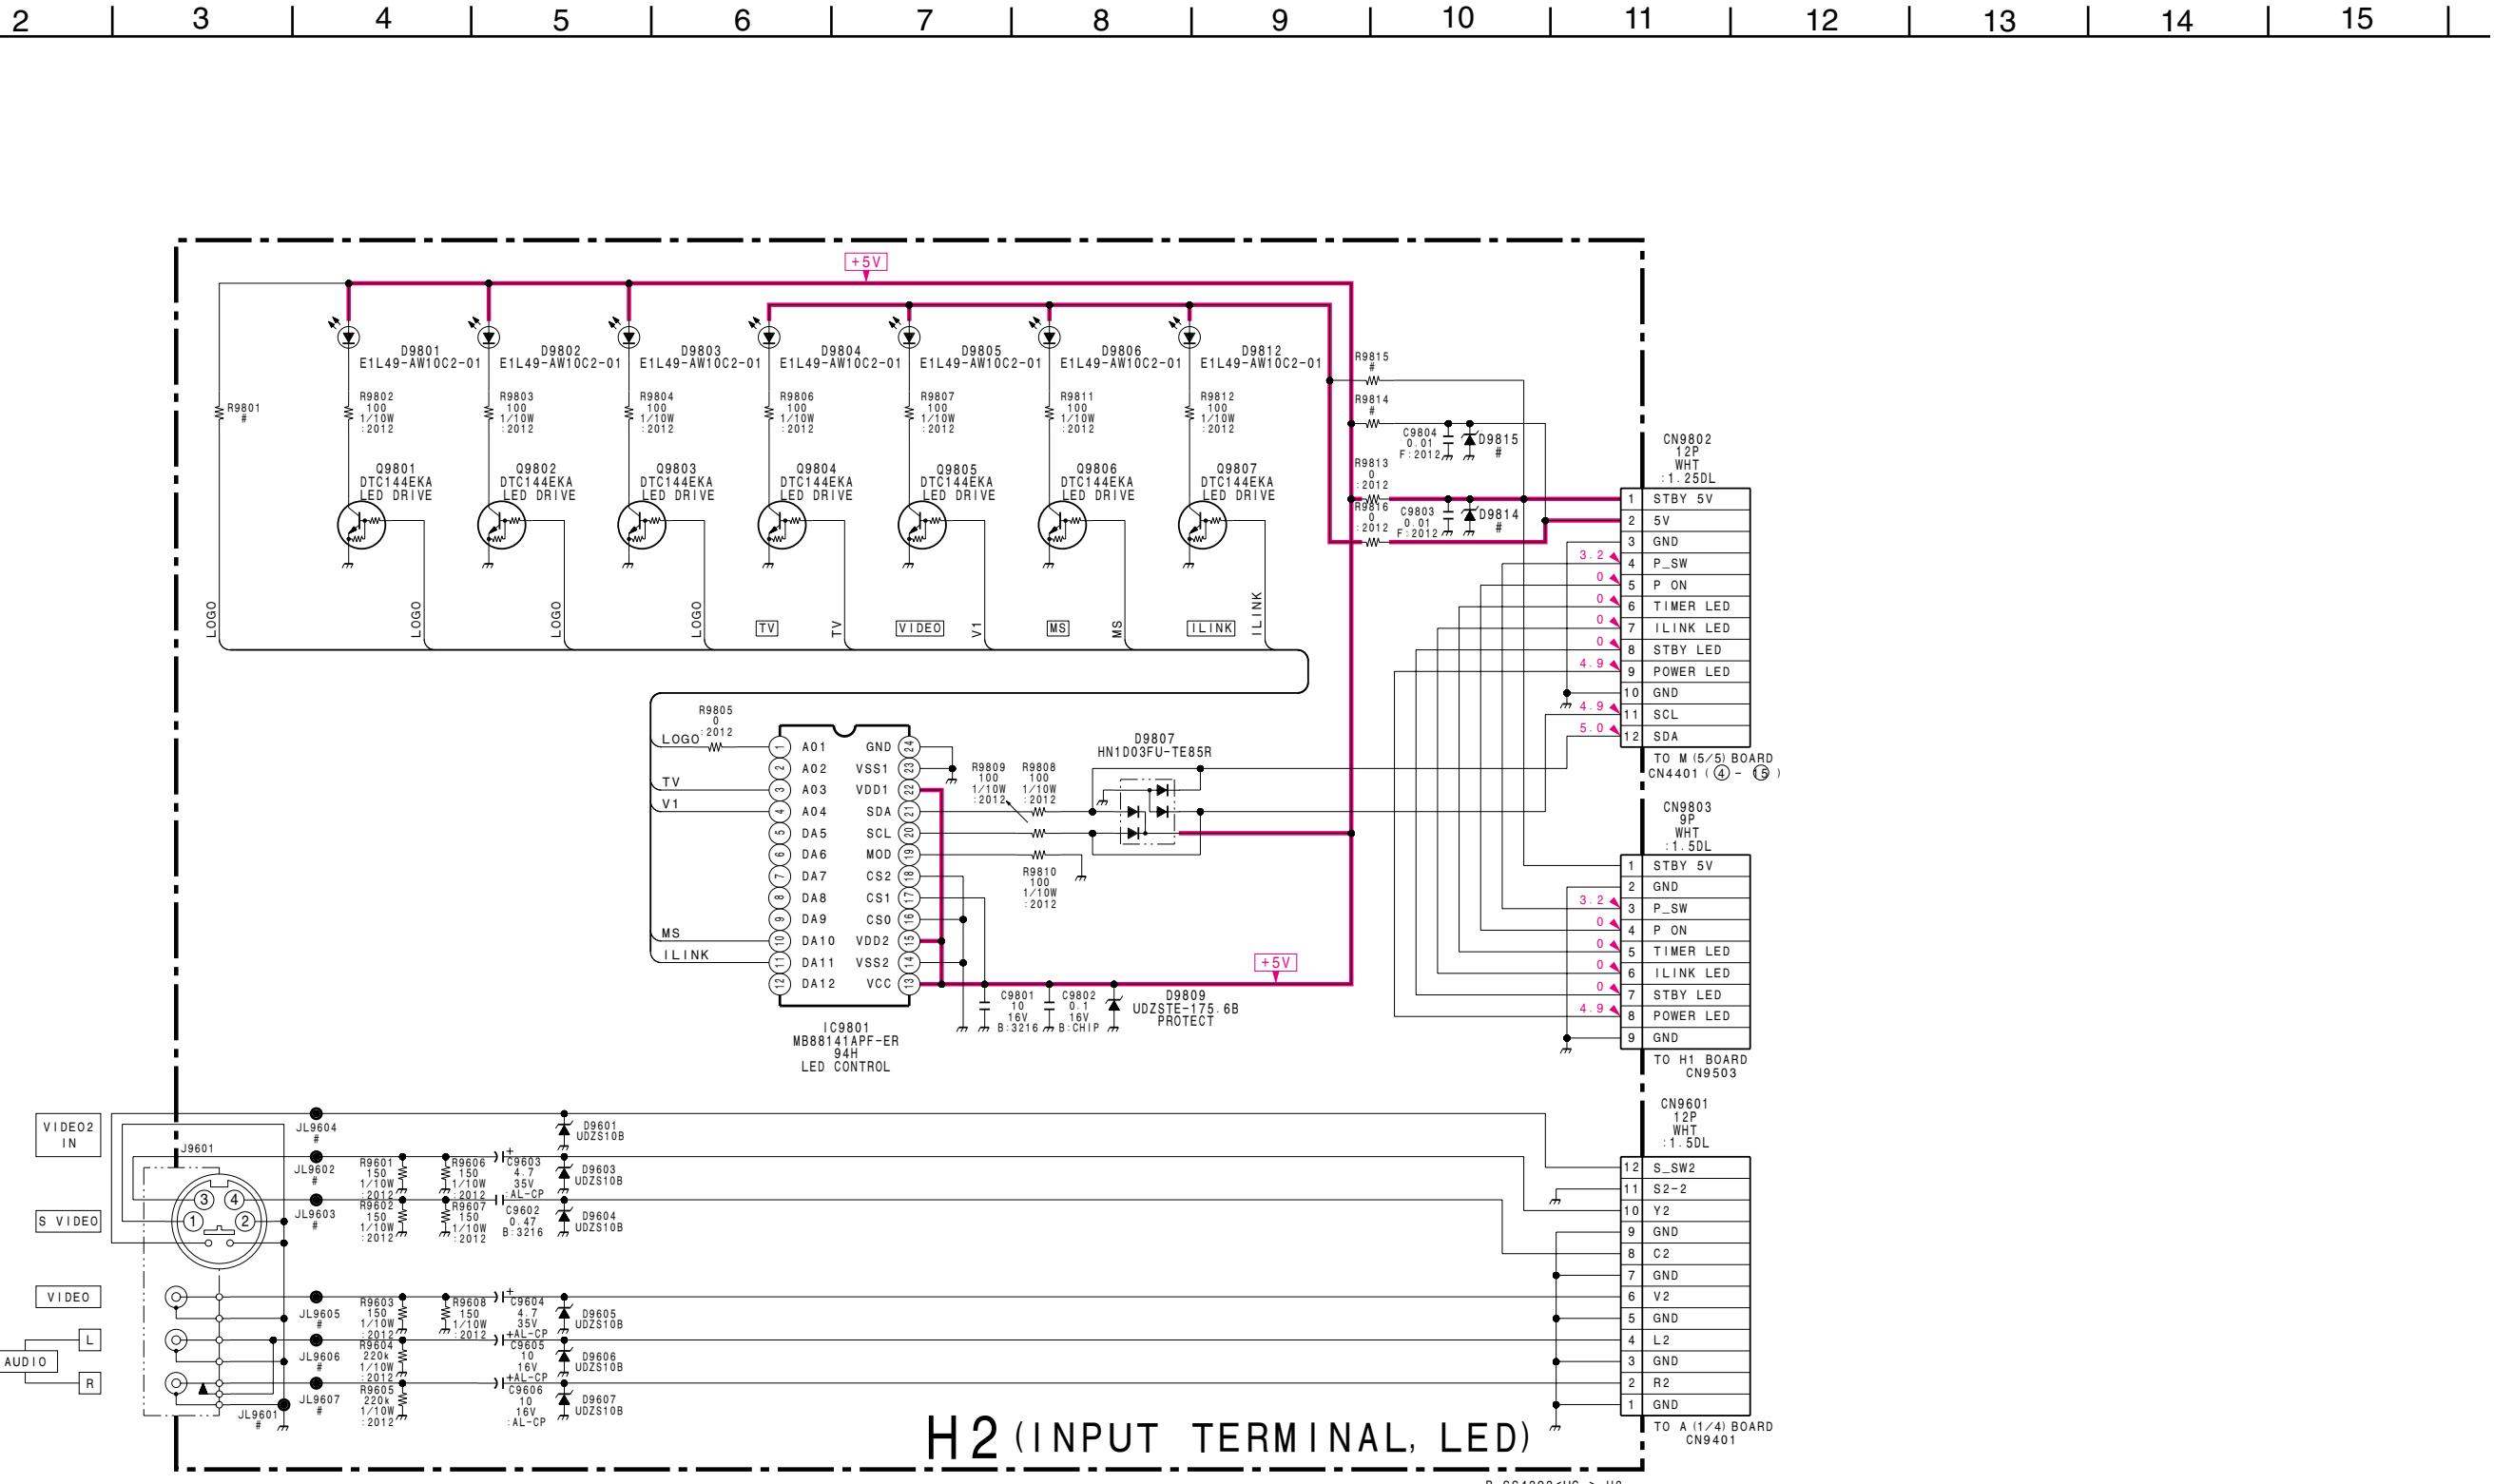


**H2**

[INPUT TERMINAL, LED]

## — H2 BOARD —

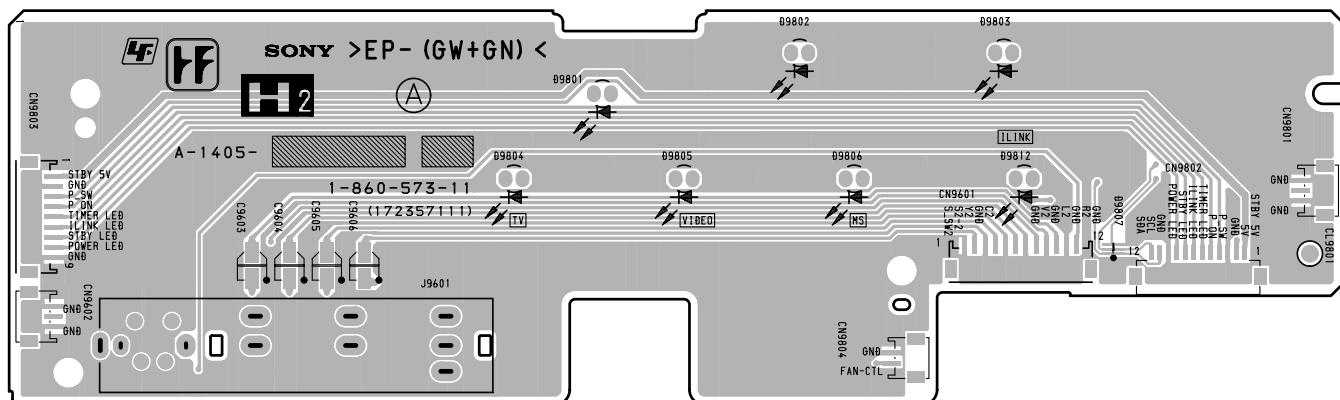

&lt;COMPONENT SIDE&gt;

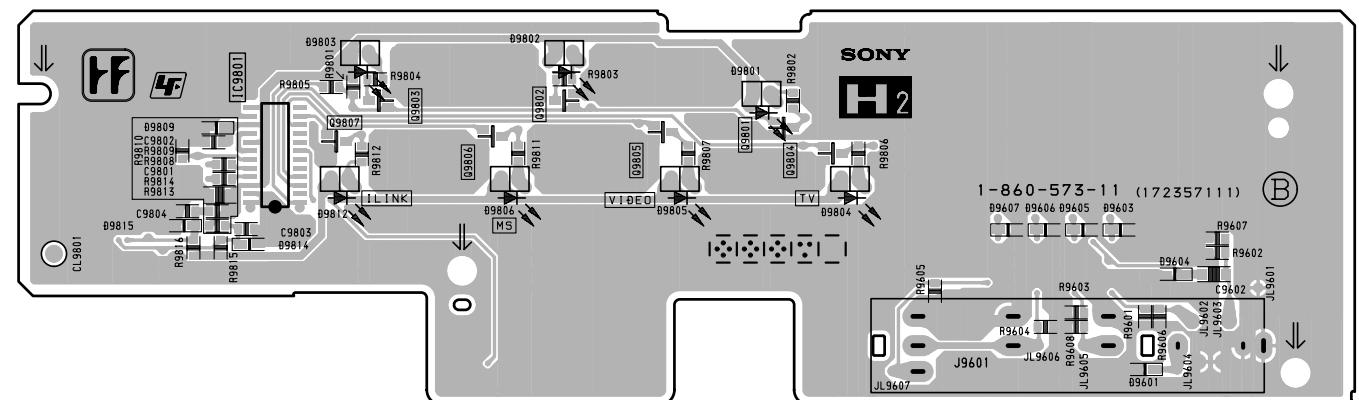




&lt;CONDUCTOR SIDE&gt;

## • H2 BOARD SEMICONDUCTOR LOCATION

Ref.	*
Q9801-Q9807	①
D9601, D9603-D9607, D9809	③
D9801-D9807, D9812	-

\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)



## (5) Schematic Diagram of H3 and H4 Boards

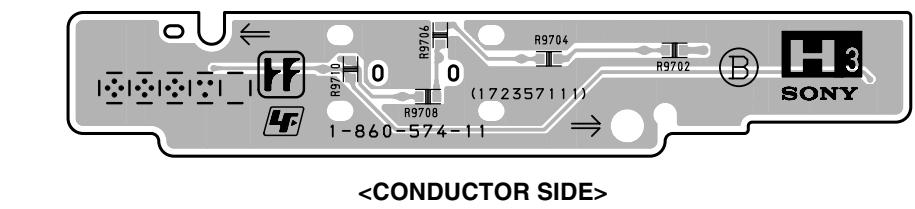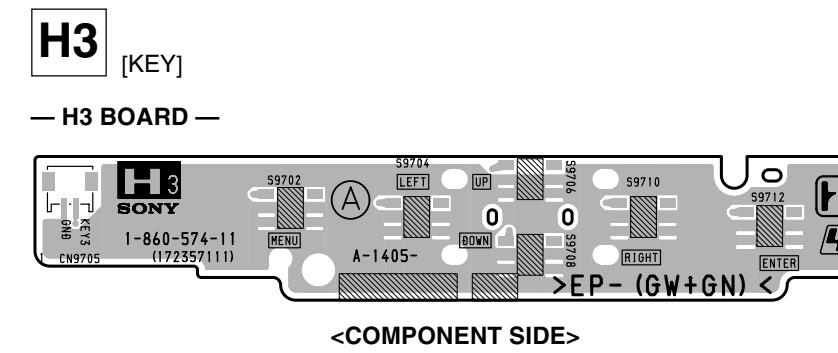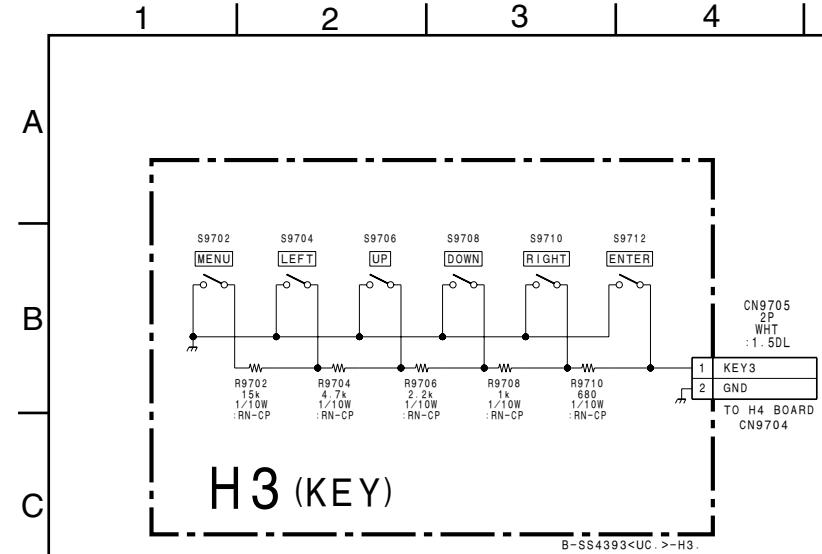


**H4(KEY)**

This diagram shows the internal circuitry of the H4(KEY) component. It includes the following components and connections:

- Switches:** S9701 (PIC OFF), S9703 (SELECT), S9705 (VOL UP), S9707 (CH DW), S9709 (CH UP), S9711 (VOL DW).
- Resistors:** R9701 (#), R9703 (4.7k 1/10W :RN-CP), R9705 (2.2k 1/10W :RN-CP), R9707 (1k 1/10W :RN-CP), R9709 (680 1/10W :RN-CP), R9711 (470 1/10W :RN-CP).
- Connectors:** CN9704 (SP WHT :1.5DL), CN9705 (TO H3 BOARD CN9705), CN9707 (SP WHT :1.5DL), CN9708 (TO M(5/5) BOARD CN4401 (① - ③)).
- Other:** C9701 (#), S9713 (LINK), and a GND connection.

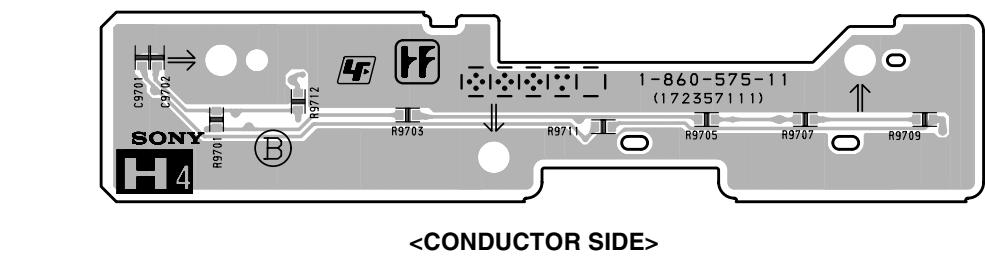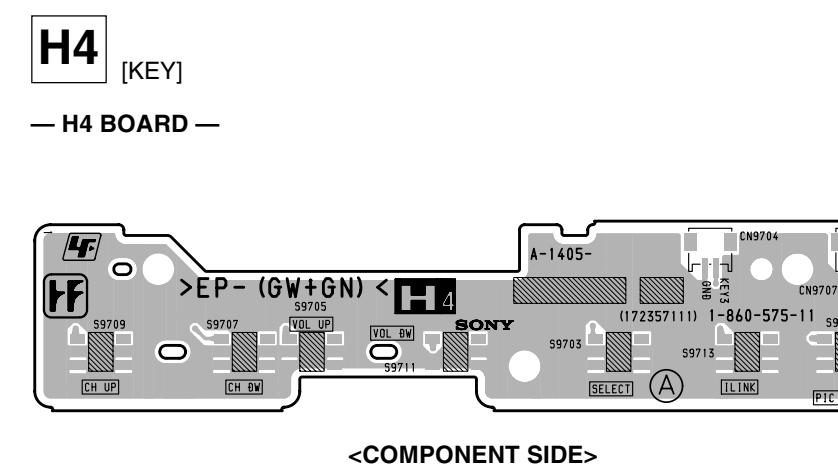


## (6) Schematic Diagram of IF Board

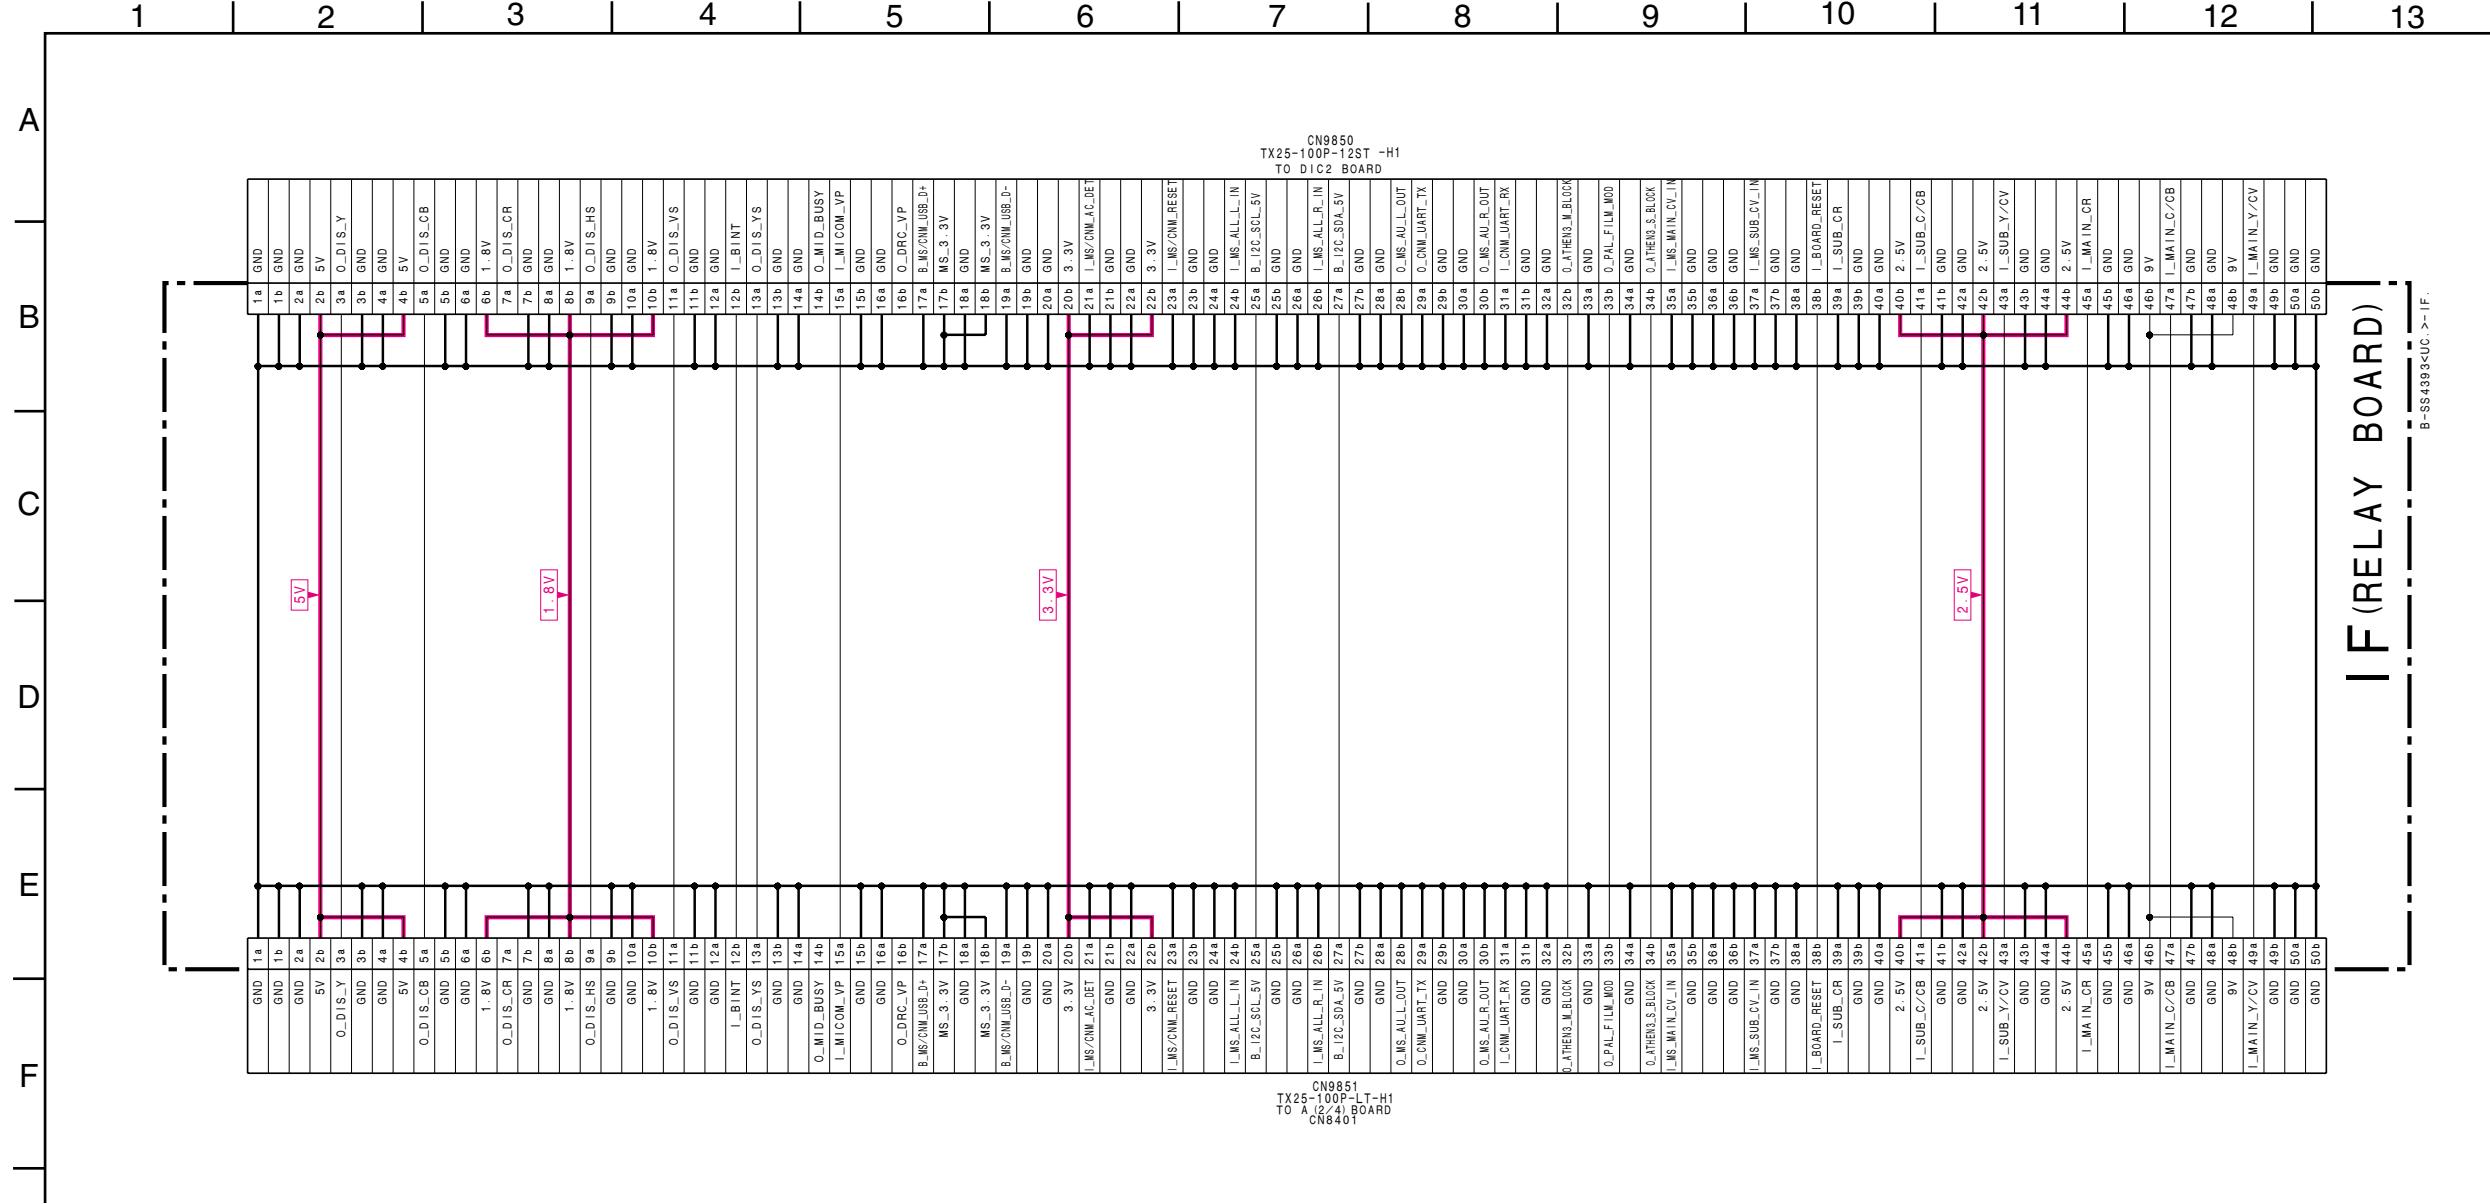


[RELAY BOARD]

— IF BOARD —

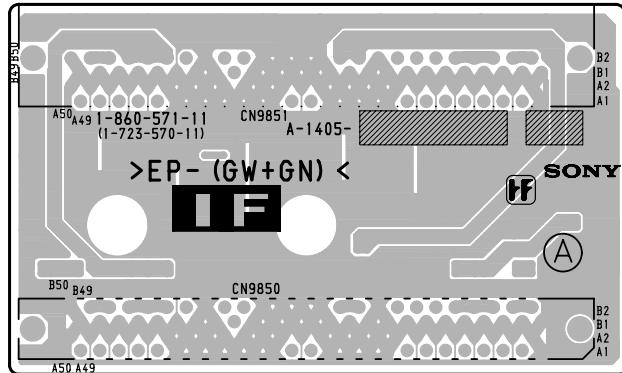


## **<COMPONENT SIDE>**

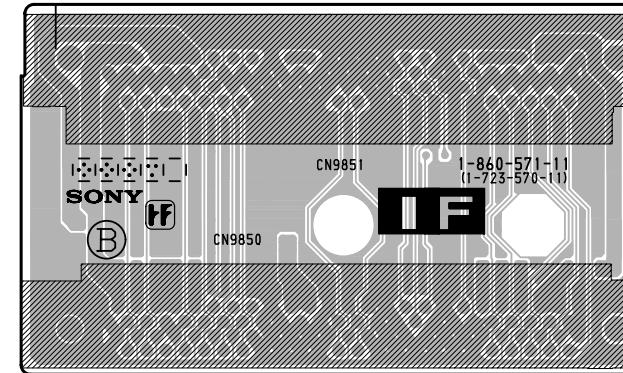



**<CONDUCTOR SIDE>**


(7) Schematic Diagrams of M Board

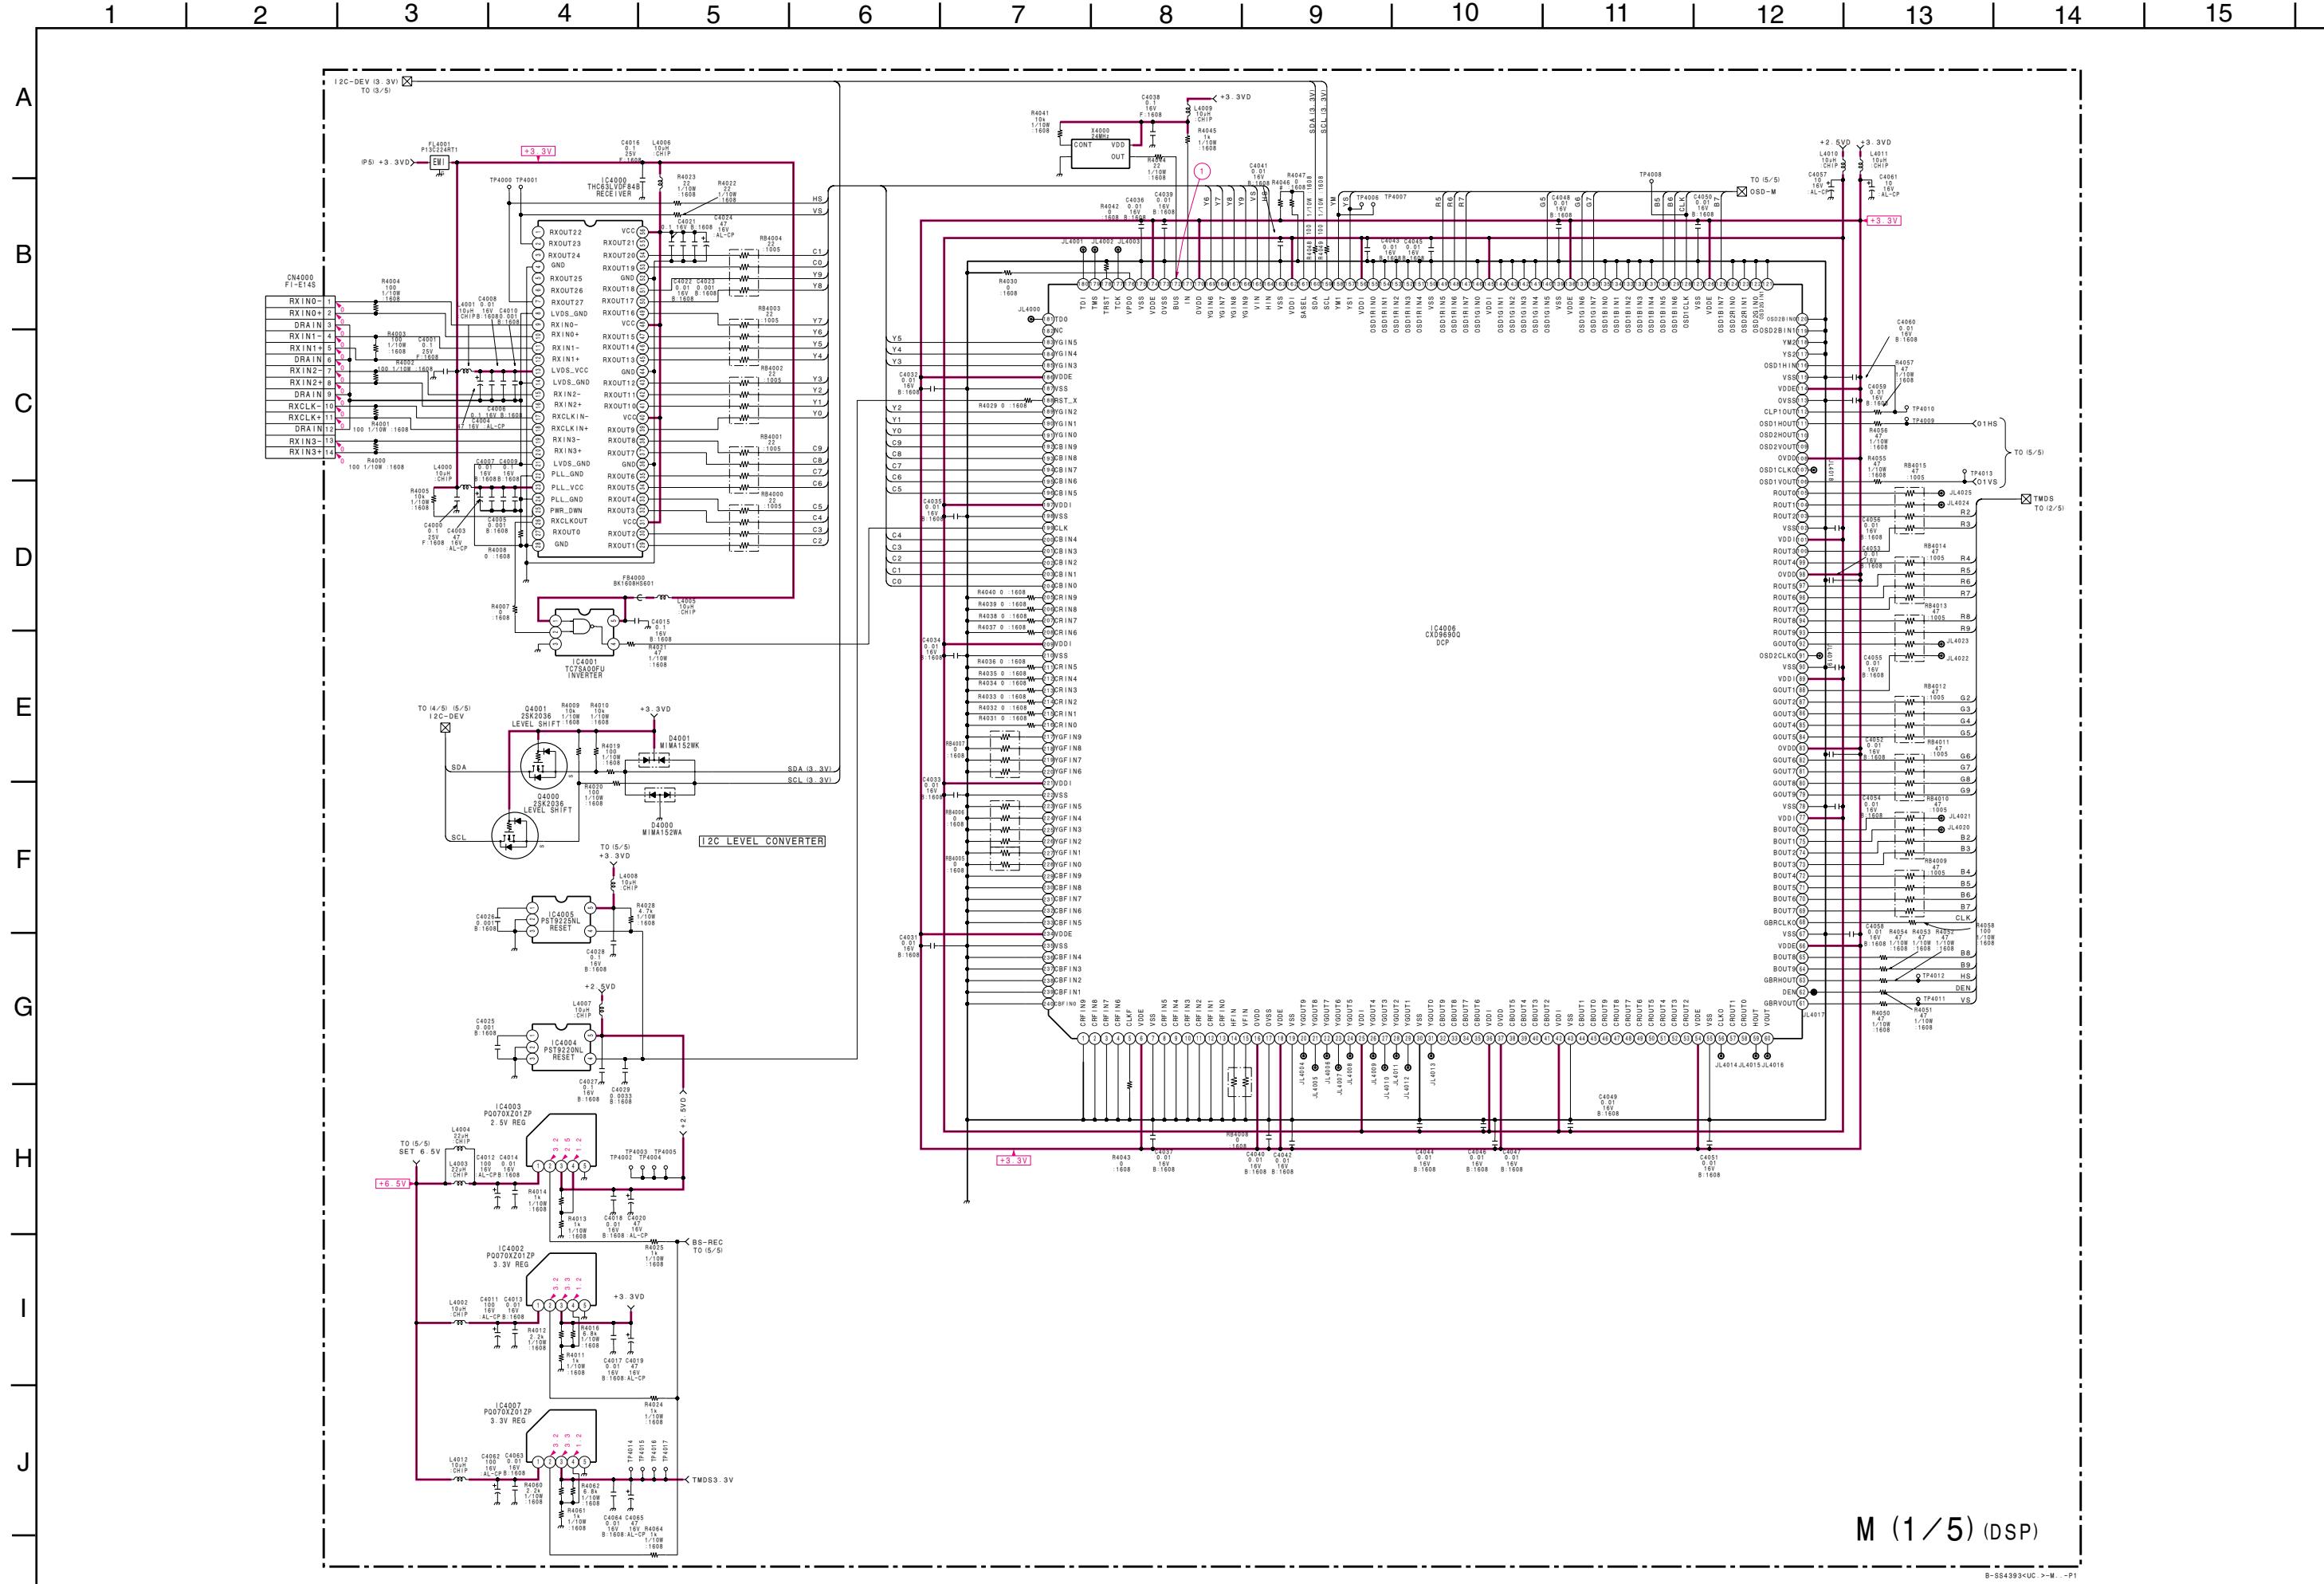

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15

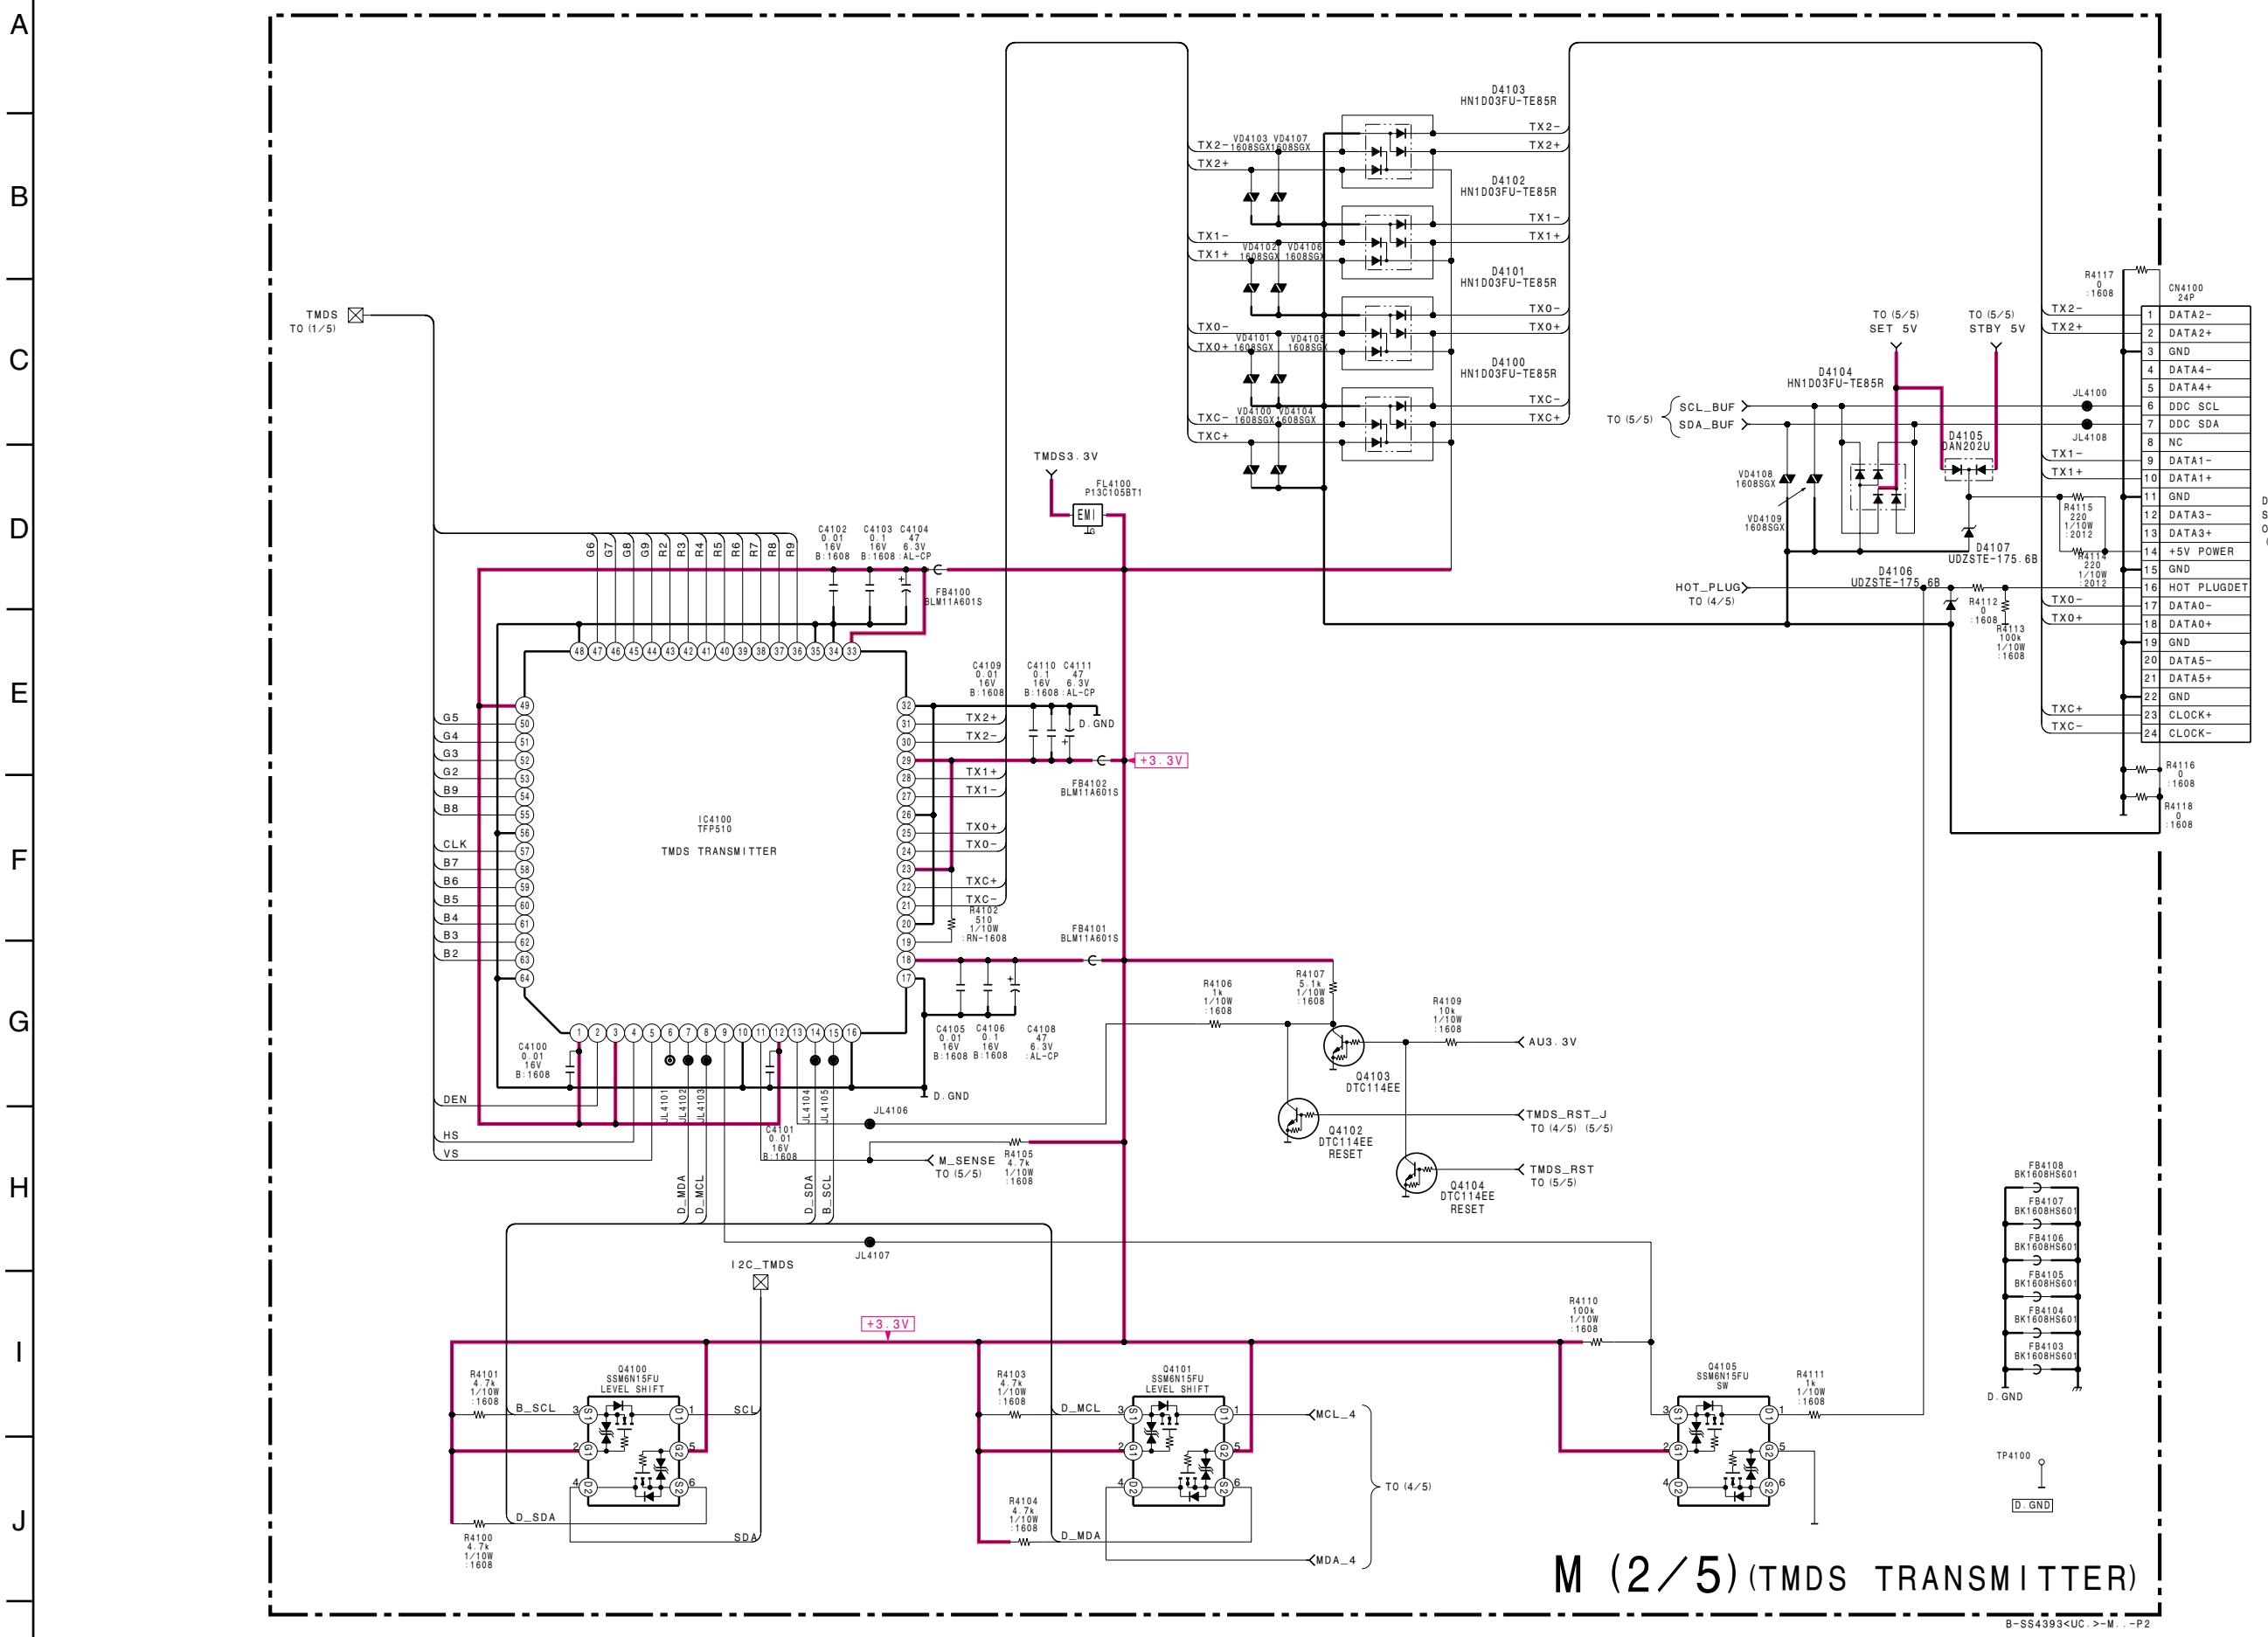

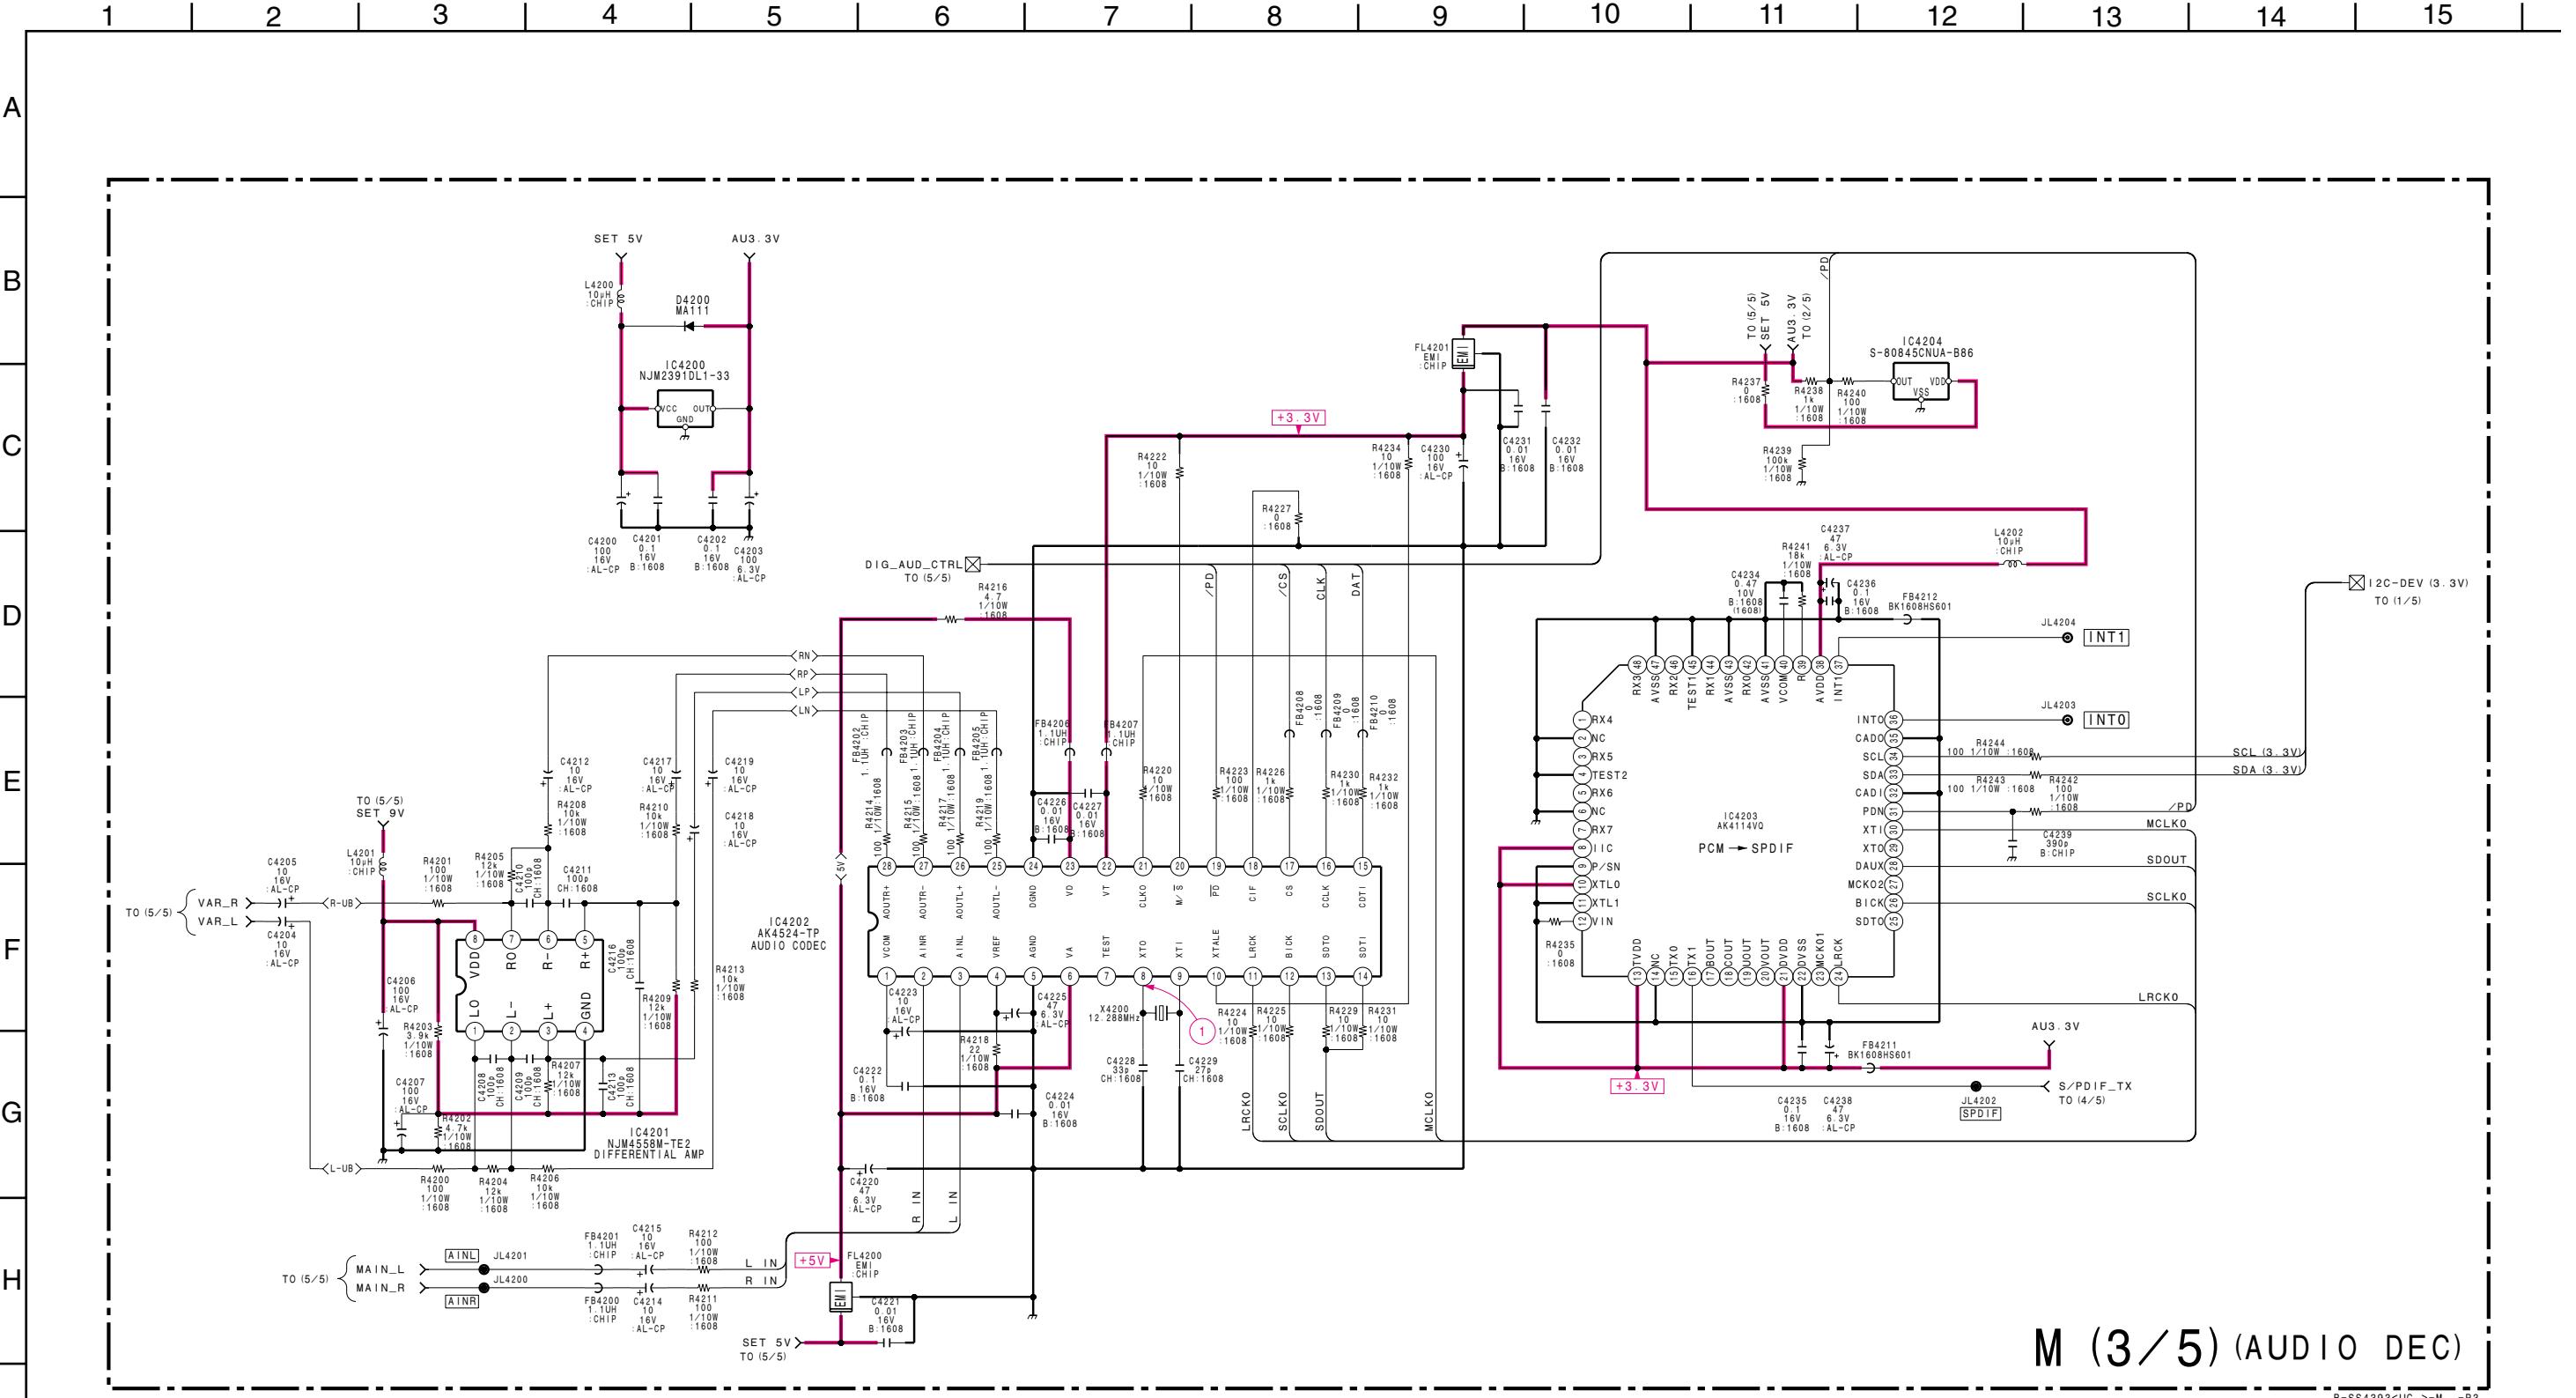

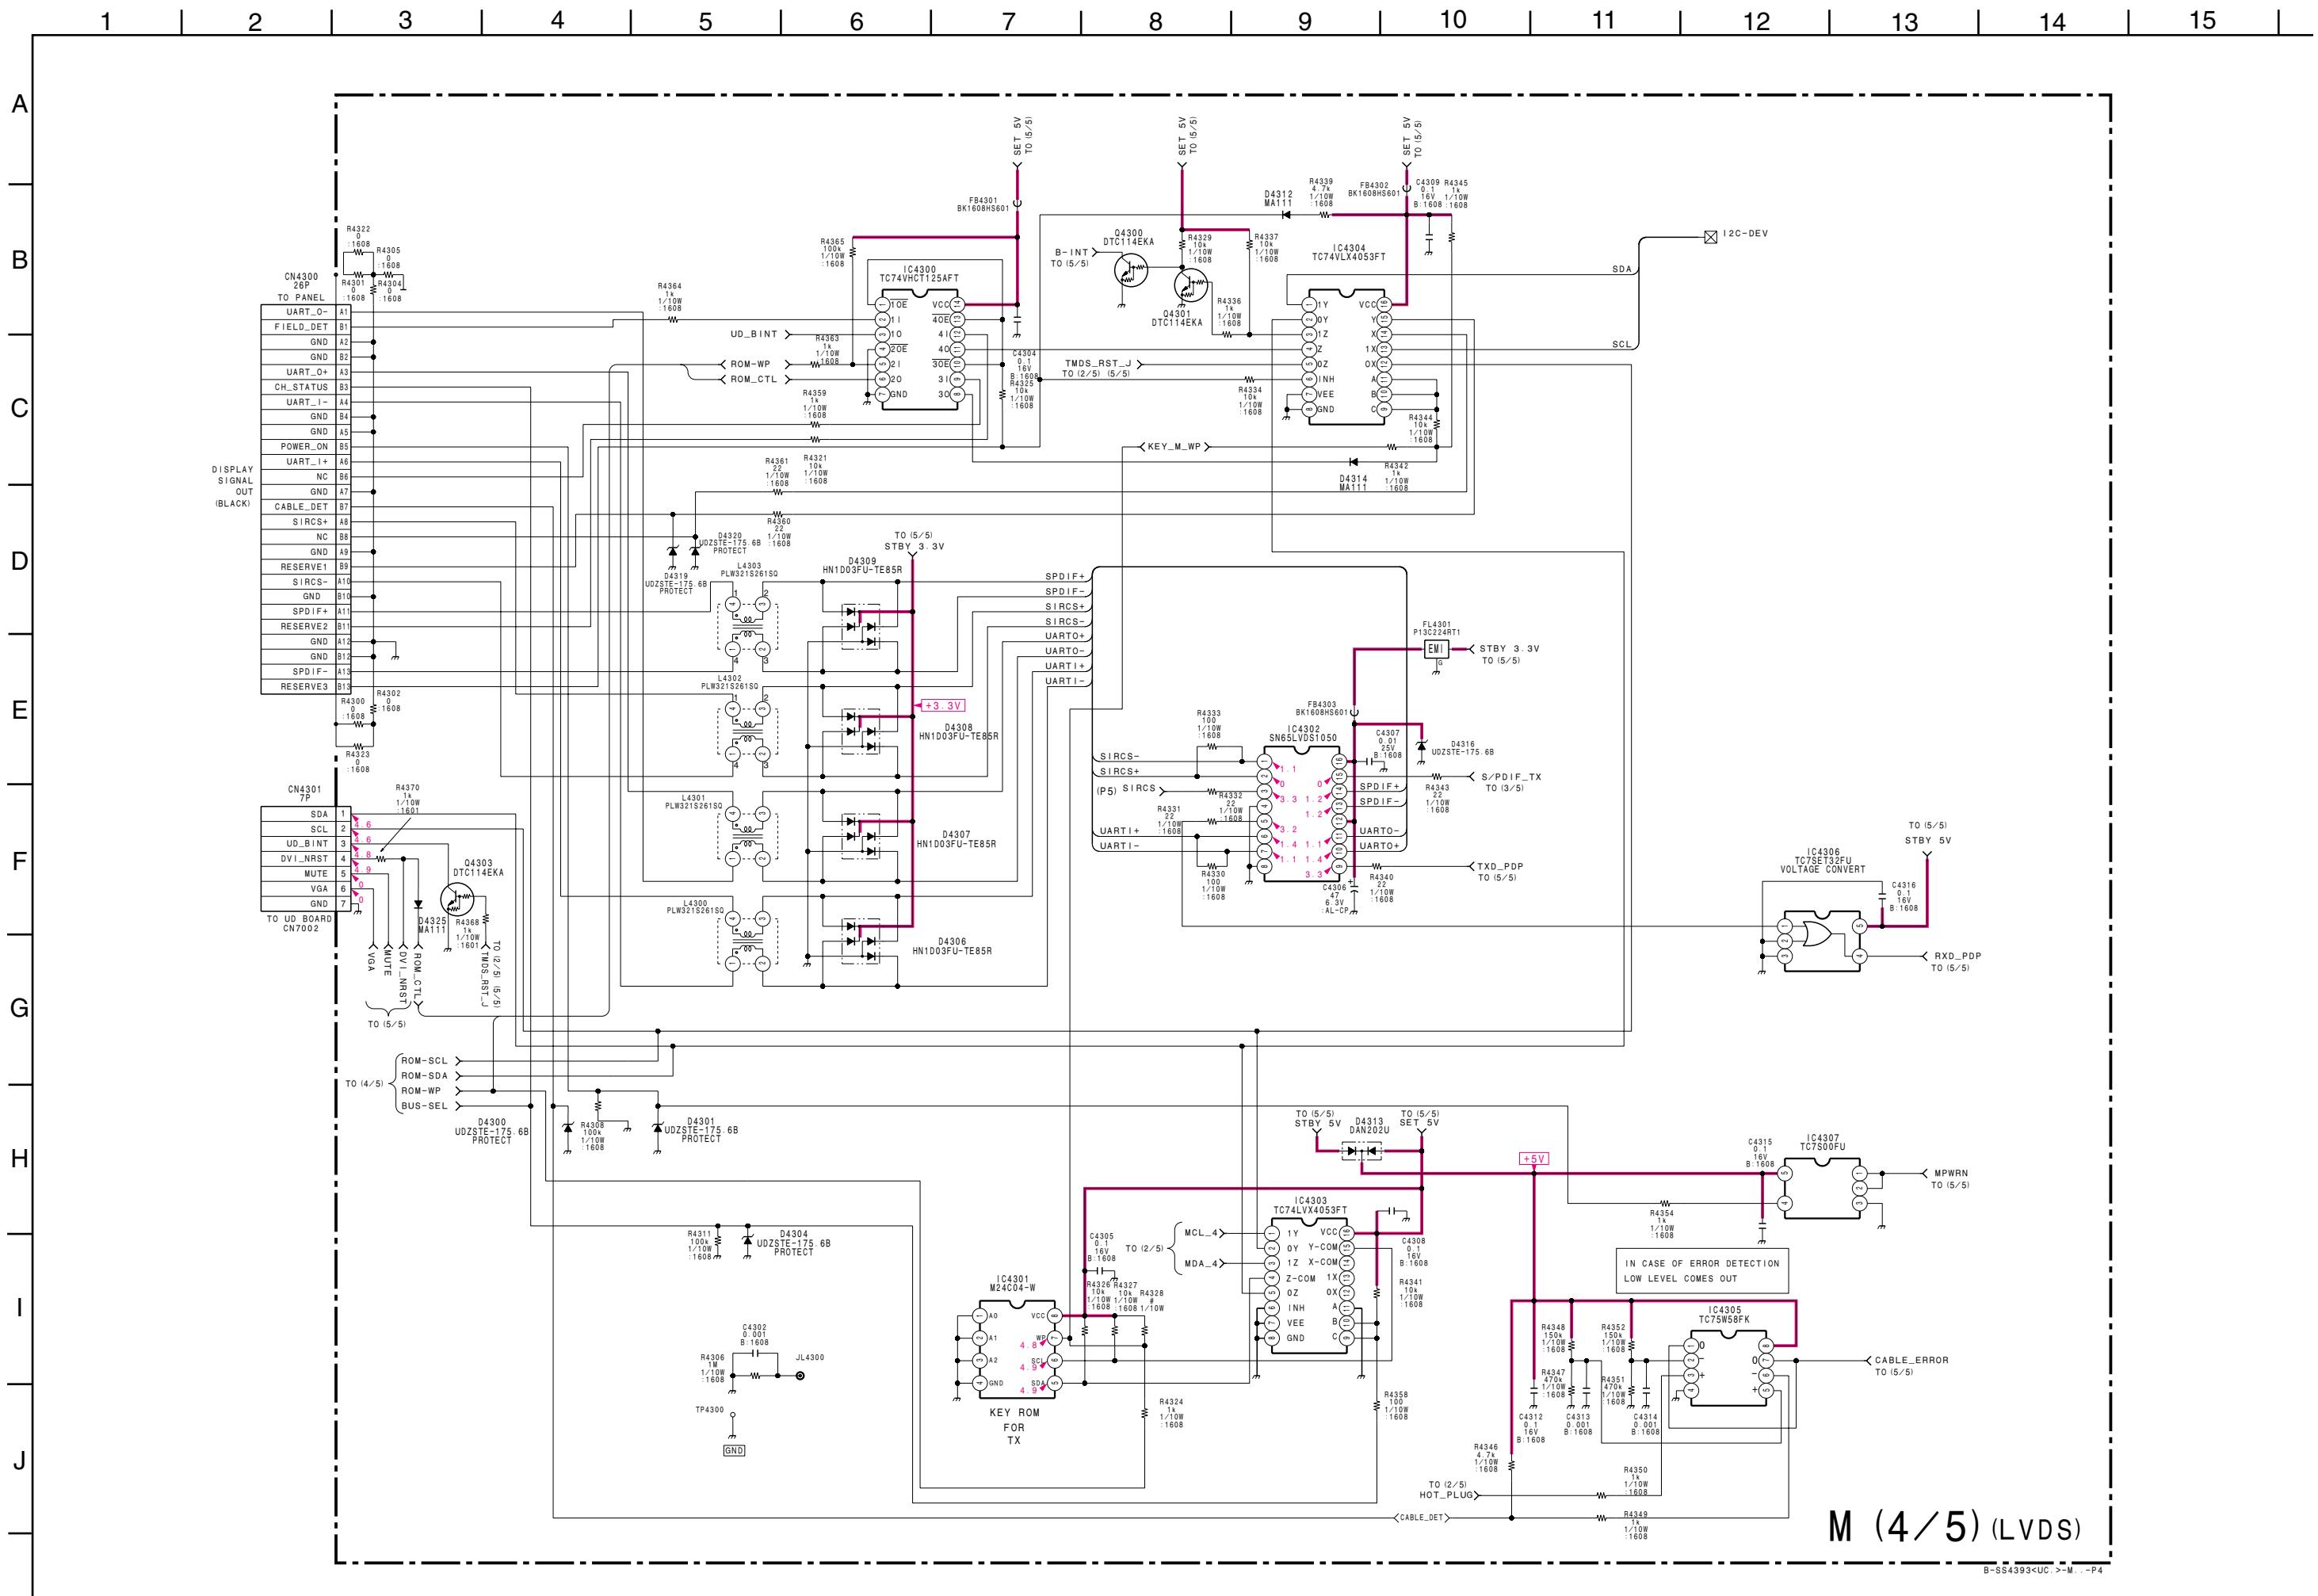

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15

A

B

C

D


E

F

G


H

I

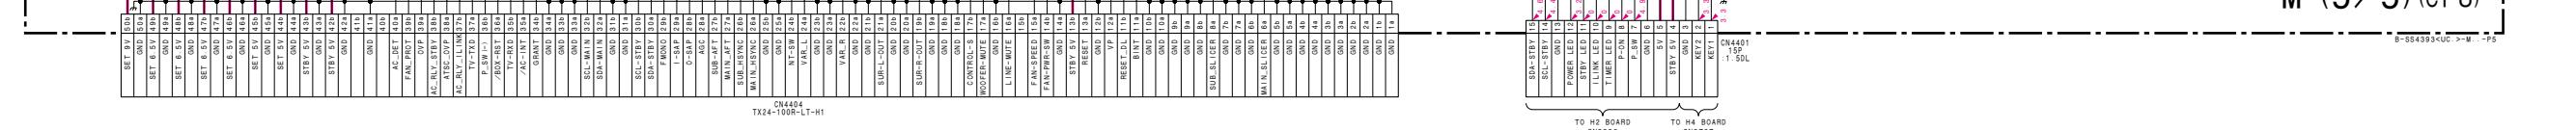


**M**

[DSP, TMDS TRANSMITTER, AUDIO DEC, LVDS, CPU]

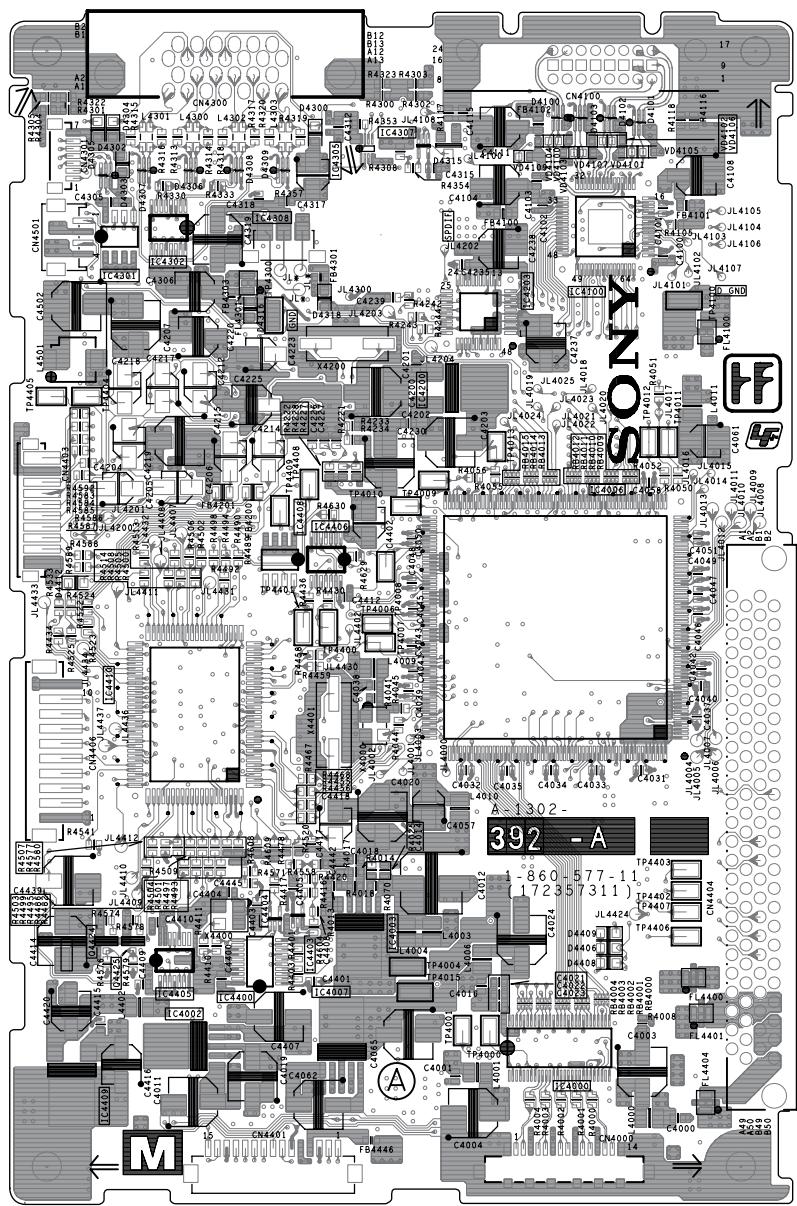
**— M BOARD —**

&lt;COMPONENT SIDE&gt;

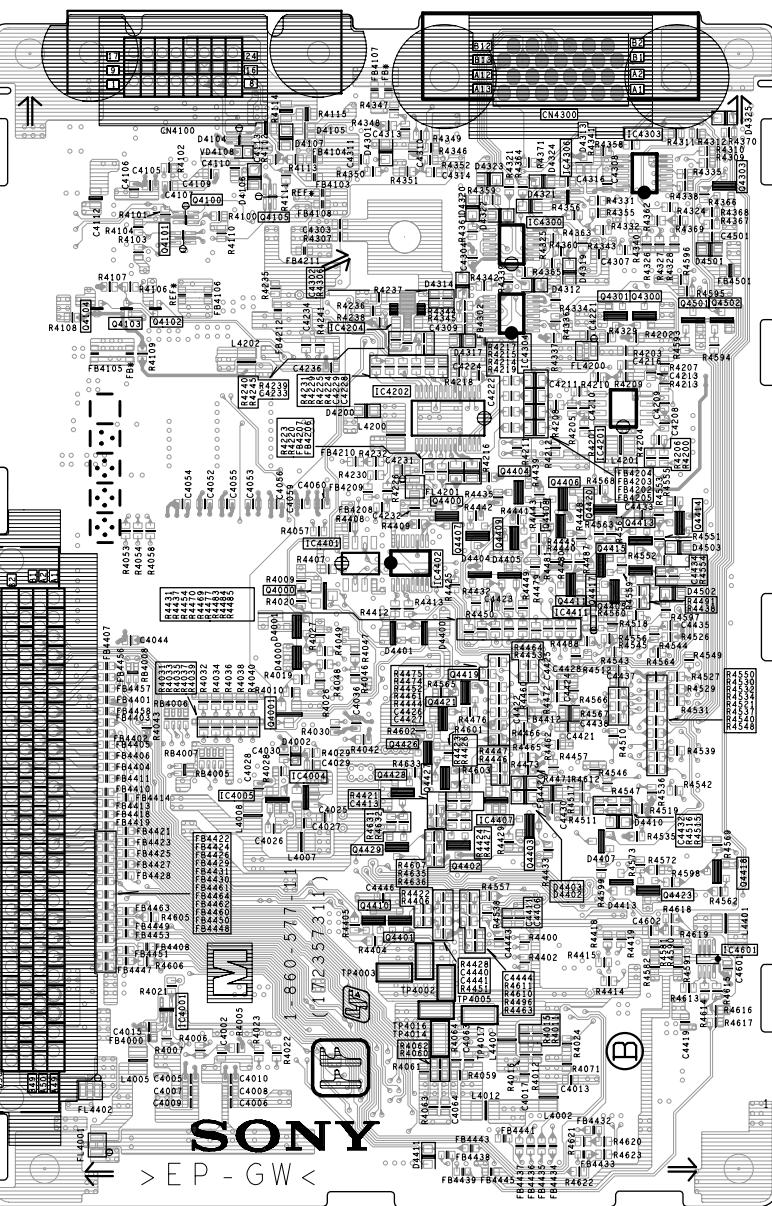


&lt;CONDUCTOR SIDE&gt;

## (8) Schematic Diagram of UD Board

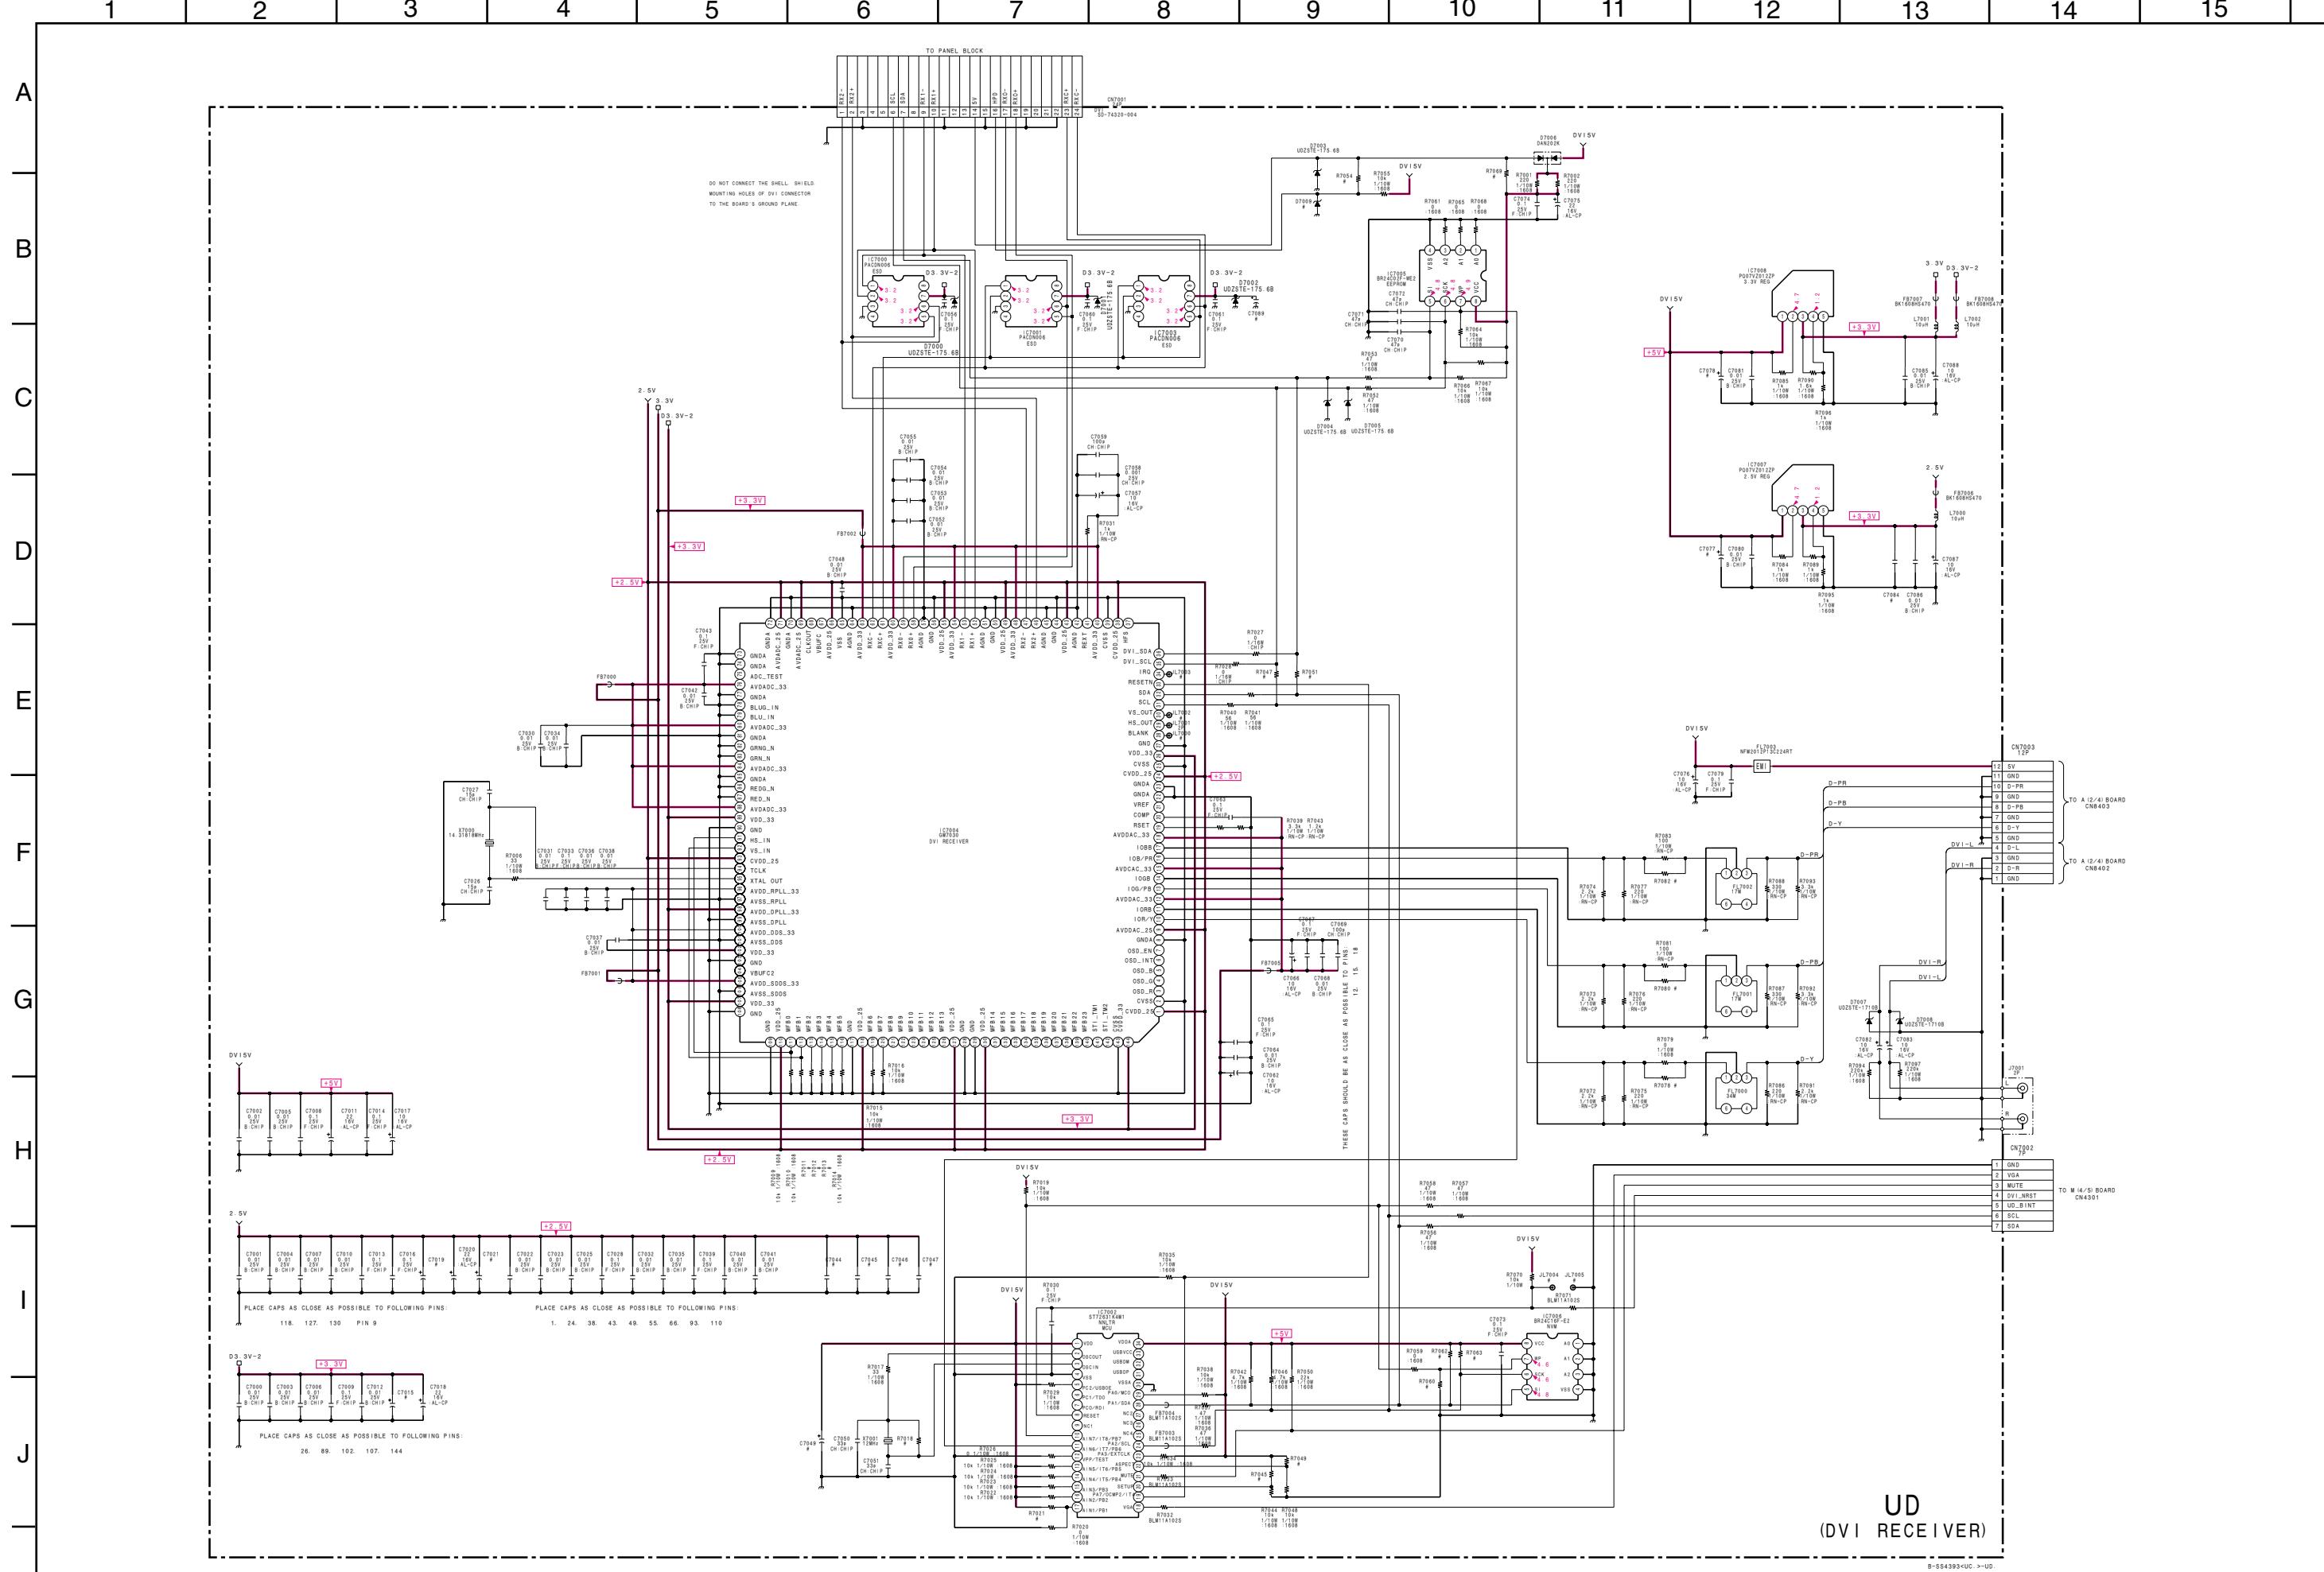


**UD**

[ DVI RECEIVER ]

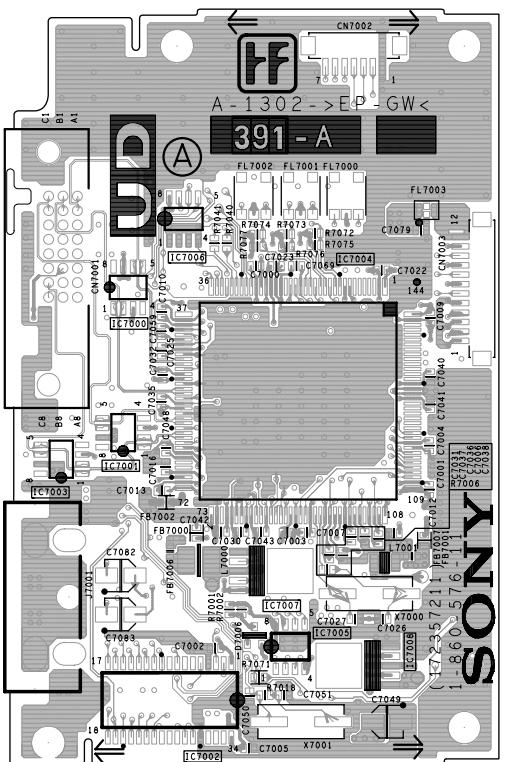**— UD BOARD —**

&lt;COMPONENT SIDE&gt;

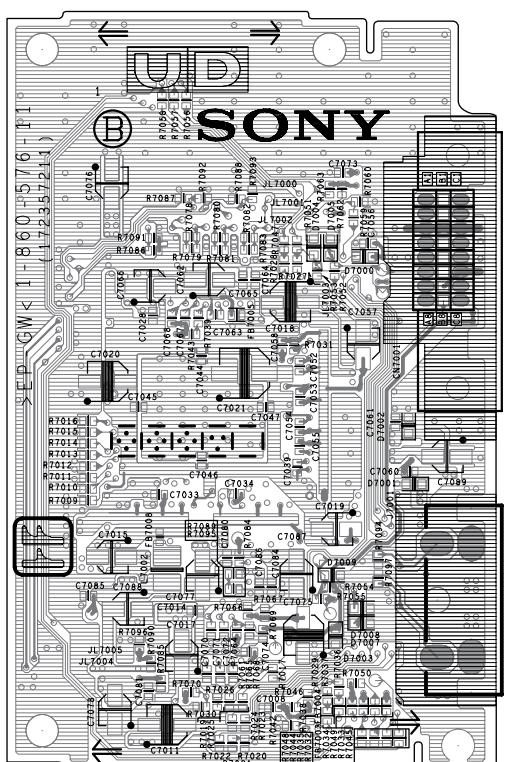


&lt;CONDUCTOR SIDE&gt;

### 3-5. SEMICONDUCTORS


#### IC

AK4114VQ-L  
CXA2171AQ-T6  
TAS5001PFBR

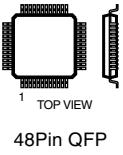


18Pin QFP

AK4351VT  
AK5380VT-E2  
M52055FP  
MAX1644EAE-TG074  
MAX1809EEE+TG068  
MC14538BF  
MC14538BFEL  
SN65LVDS1050PWR  
SN74CBTLV3257PWR  
SN74LV4052APWR  
TC74LVX4053FT(EL)  
UC3854BN

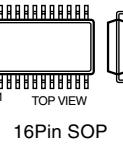


16Pin SOP

AK4524  
AK4524-TP




28Pin SOP

BA10324AF-E2  
HD74LV4066ATEL  
LM339NS  
SN74LV08APWR  
SN74LV125APWR  
SN74LV4066APWR  
TC74LCX08F(EL)  
TC74LCX125FT(EL)  
TC74LCX74FT(EL)  
TC74LVX08FT(EL)  
TC74LVX125FT(EL)  
TC74LVX74FT(EL)  
TC74VHCT125AFT(EL)  
TLC2933IPWR-12  
XRA10324AF

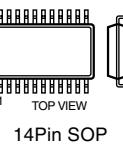


14Pin SOP

BA18BC0FP-E2  
BA25BC0FP-E2  
NJM2391DL1-33(TE1)




#### CXD2097BQ

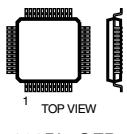


208Pin QFP

#### CXD3802BQ CXD9690Q

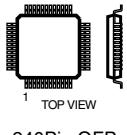


240Pin QFP

#### CXD9740GA

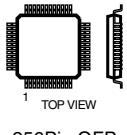


256Pin QFP

#### DS90C387VJDX MB94P918PF-G-166A TFP501PZP TFP510PAP

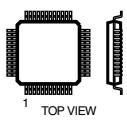


8Pin SOP

#### CXP964032-003R K4D26328F-UC50T M306V7FHFP-PDPXBR1 MB94918RPF-G-166-BND

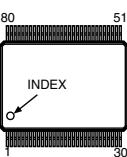


100Pin QFP

#### GM7030-H XC2S50-5TQG144C

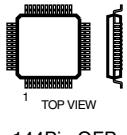


144Pin QFP

#### HY57V281620HCT-H-TR MT48LC8M16A2TG-75-Y95WT

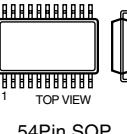

54Pin SOP

#### K4S643232F-TC60T K4S643232F-UC60T MT48LC2M32B2TG-6-Y94W

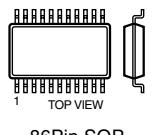


86Pin SOP

#### MM1431ATT




3Pin DIP

#### MM1563DFBE MM1565AFBE PQ20WZ5U




48Pin SOP

#### MB88141APF-ER PCA9555DB-118

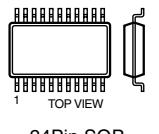


24Pin SOP

#### MSM56V16160F-10TS-K MSM56V16160F-8T3FM1




50Pin SOP

#### NJU26103FR1




32Pin QFP

#### PQ05RD11 PQ05RD21 PQ09RD21

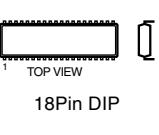


18Pin DIP

#### MD3221N TAS5101DAPR

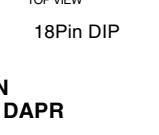

32Pin SOP

#### PQ070XZ01ZP PQ07VZ012ZP PQ20WZ1U




4Pin DIP

#### MIP2C20MP1SO




8Pin DIP

#### SI-8033S



5Pin CHIP

#### ST72631K4M1/NNLTR




34Pin SOP

#### S-80828CNNB-B8NT2G




4Pin DIP

#### TC74LCX273FT(EL)




20Pin SOP

#### THC63LVDF84B-T



56Pin SOP

#### TK11819MTL




6Pin CHIP

#### UPC1093J-1-T



12Pin DIP

#### XC18V02VQG44C



44Pin QFP

#### SI-8033S




5Pin CHIP


#### TRANSISTOR

DTA114EKA-T146  
DTA114EUAF106  
DTA114EUA-T106  
DTA143EK  
DTA143EKA-T146  
DTC114EE-TL  
DTC114EK  
DTC114EUA-T106  
DTC143XUA-T106  
DTC144EKA  
DTC144EKA-T146  
DTC144EUA-T106  
MSB1218A-RT1  
MSD1819A-RT1  
MSD601-RT1  
MUN2213T1  
PDT144EK-115  
UN2213  
2PA1576R-115  
2PB709AR-115  
2PC4081R-115  
2PD601AR-115  
2SA1037AK-T146-QR  
2SA1037AK-T146-R  
2SA1162-G  
2SA1226-E4  
2SA1226-T1E3E4  
2SA1576A-T106-QR  
2SA1576A-T106-QR  
2SB709A-QRS-TX  
2SB709A-R-TX  
2SC1623-L5L6  
2SC2412K-T-146-QR  
2SC2712-YG  
2SC2712-YG-TE85L  
2SC4081-R  
2SC4081T106R  
2SC4178-F13F14-T1  
2SC4178-F14  
2SD2114K  
2SD2114KT146  
2SD2216J-QR(TX).SO  
2SD601A-QRS-TX  
2SD601A-Q-TX  
2SD601A-R-TX

#### IRFB7N50A-LF31




IRFR5305TR




SI2301DS-T1  
2SK1590-T1B



SPA20N60C3E8152



SSM6N15FU(TE85R)




RN4902(TE85R)




2SB1121-ST  
2SB1121-S-TD  
2SD1615A-GP  
2SD1621S-TD-E  
2SD874A-R-TX  
2SK2036(TE85L)




2SD774-34  
2SD774-T-34



2SK1399-T1B




2SK2662(LBS2SONY)  
2SK2842(LBS2SONY)




### DIODE


BAS316-115  
MM3Z10VT1  
MM3Z13VT1  
MM3Z4V3ST1  
MM3Z4V7ST1  
MM3Z5V6ST1  
MTZJ-T-77-36A  
02DZ22-TPH3  
02DZ3.9-Z(TPH3)

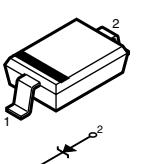


DAN202K-T-146  
M1MA152WK-T1

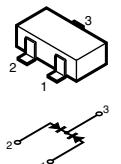


DAN202UT106  
DAP202UT106  
1PS184-115

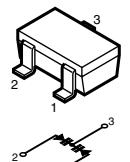

DAP202K  
DAP202K-T-146  
M1MA152WA-T1  
MA132WA-TX

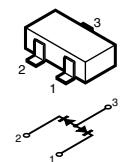


DF06M-6031

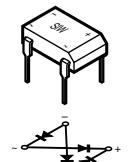


DTZ10B  
HRU0103ATRF  
HZU11B1TRF  
MA111-TX  
MA113-(TX)  
MMDL914T1  
RD3.9SB2  
RD3.9SB2-T1  
RD5.6SB-T1  
RD6.8SB2-T1  
UDZSTE-1710B  
UDZSTE-1712B  
UDZSTE-1715B  
UDZSTE-173.6B  
UDZSTE-173.9B  
UDZSTE-1730B  
UDZSTE-175.6B  
UDZSTE-176.2B  
UDZSTE-177.5B  
UDZSTE-178.2B  
UDZ-TE-17-3.9B  
UDZ-TE-17-7.5B  
UDZ-TE-17-8.2B  
1SS355TE-17

D10SC6M

D5SC4M




D8LC20U-4012

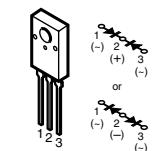


D8LD40-F1




D1NL20U-TR  
D1NL20U-TR2

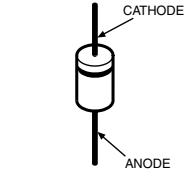


EC31QS03L-TE12L  
M1FM3  
MA2S111  
MA2S111-TX



D1NL40-TA2  
D1NL40-TR2  
ERA22-08  
ERA22-08TP3  
RM11A




D10SBS4  
D25XB60  
D2SB60A-F04  
D3SB60F3

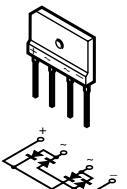


ERA22-06AVRBT  
RD4.7FB2  
RD4.7F-T7B2  
RD6.2FB2  
RD6.2F-T7B2  
UF4005PKG23  
UZ-2.0BS-TP




FCQ20A04



HN1D03FU-TE85R




MA153-TX  
1PS181-115  
1SS226




MA3J142D0LSO



MBR5140T3




RM11C




02CZ6.8-TE85L




1SS383(T5RSony1)

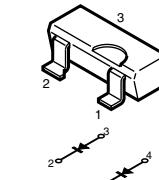


L1503CB/ID

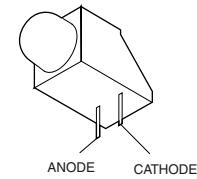


L-53SRD-H

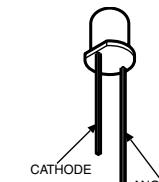


NSPW515BSA0

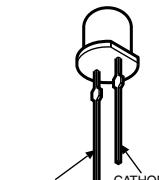


SELU1E50CM  
E1L49-AW0C2-01

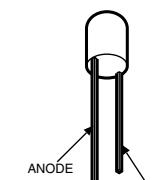

SMLU12D16W

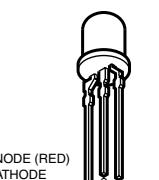

SML-210MT-T86  
SML-210MT-T86  
SML-210VTT86

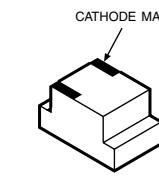

## **SECTION 4**

### **EXPLODED VIEWS**


#### **NOTE:**

The components identified  $\triangle$  marked are critical for safety.  
Replace only with the part number specified.

Les composants identifiés par la marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

## 4-1. DISPLAY UNIT-1 (PDM-4210/5010)

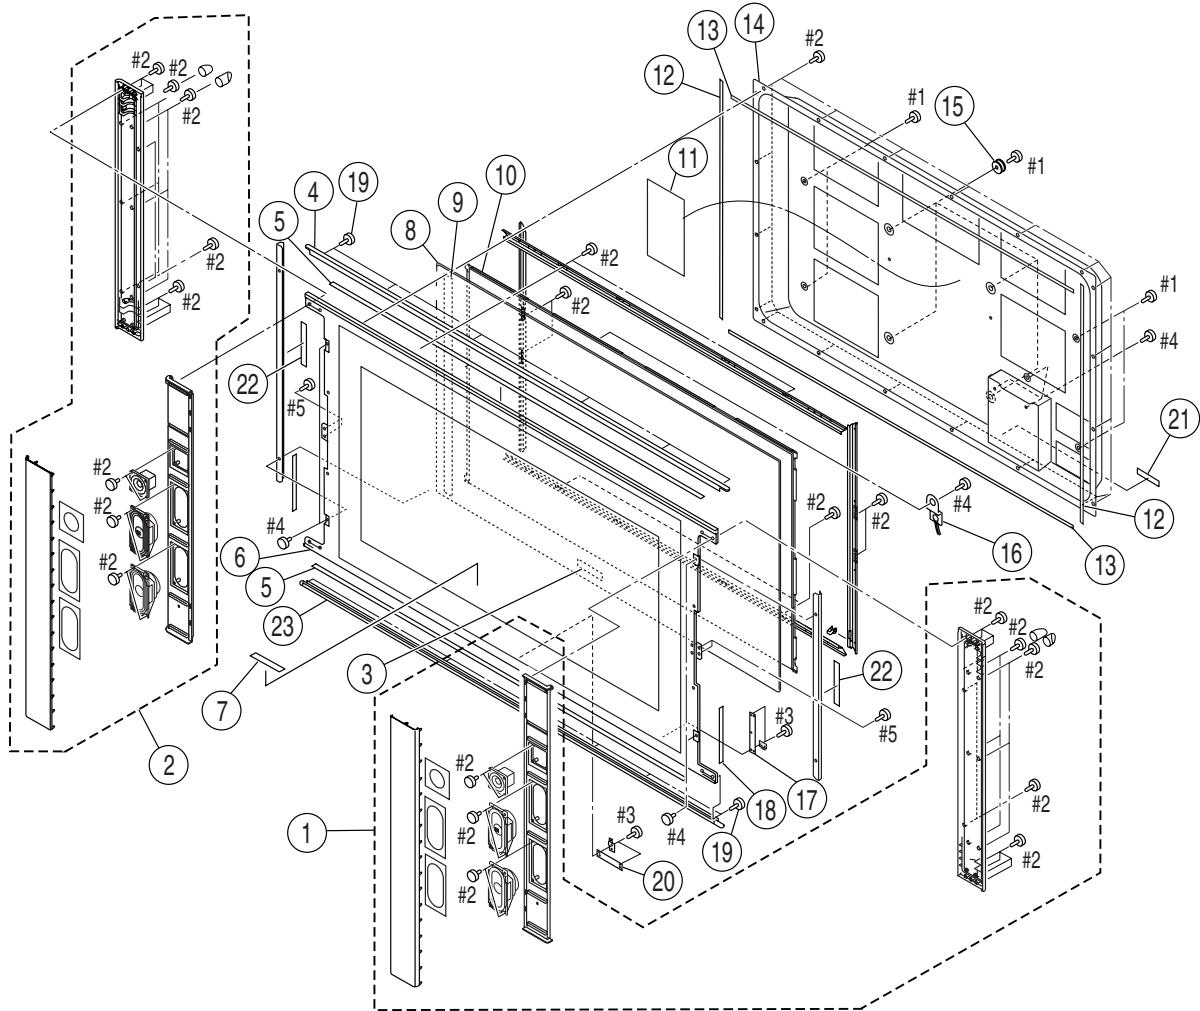

REF. No.	PART No.	DESCRIPTIONRE	MARK	REF. No.	PART No.	DESCRIPTIONRE	MARK
1	A-1605-925-B	SP (R) ASSY (42) (KDE42XBR950)		11	* 4-092-184-01	SHEET, INSULATING (REAR)	
	A-1605-927-C	SP (R) ASSY (50) (KDE50XBR950)		12	* 4-091-684-31	GASKET (ER) (KDE42XBR950)	
2	A-1605-924-B	SP (L) ASSY (KDE42XBR950)			* 4-091-684-11	GASKET (ER) (KDE50XBR950)	
	A-1605-926-C	SP (L) ASSY (KDE50XBR950)		13	* 4-091-684-21	GASKET (ER) (KDE42XBR950)	
3	* 4-092-730-02	SHEET, LIGHT INTERCEPTION (KDE42XBR950)			* 4-091-684-01	GASKET (ER) (KDE50XBR950)	
4	4-091-991-11	BAR(KDE42XBR950)		14	4-091-988-11	COVER, REAR (KDE42XBR950)	
	4-091-991-01	BAR(KDE50XBR950)			* 4-091-707-01	COVER, REAR (KDE50XBR950)	
5	4-096-637-32	TAPE (FGB), DUST PROTECTION (KDE42XBR950)		15	4-091-681-01	HOOK	
	4-096-637-12	TAPE (FGB), DUST PROTECTION (KDE50XBR950)		16	* 1-477-718-11	SENSOR, TEMPERATURE	
6	X-4042-479-2	BRACKET ASSY, FILTER GLASS(42) (KDE42XBR950)		17	* A-1410-143-A	R1 BOARD, MOUNT	
	X-4042-480-1	BRACKET ASSY, FILTER GLASS(50) (KDE50XBR950)		18	4-099-742-01	SHEET, VIBRATION PROOF	
7	4-099-742-11	SHEET, VIBRATION PROOF		19	4-091-675-01	SCREW, FIXED	
8	A-1604-359-A	FILTER GLASS ASSY KIT (KDE42XBR950)		20	* A-1410-144-A	R2 BOARD, MOUNT	
	A-1604-358-A	FILTER GLASS ASSY KIT (KDE50XBR950)		21	* 4-098-479-01	PLATE, MODEL NAME (KDE42XBR950)	
9	4-096-636-32	CLOTH, LIGHT INTERCEPTION (KDE42XBR950)			* 4-098-479-11	PLATE, MODEL NAME (KDE50XBR950)	
	4-096-635-31	CLOTH, LIGHT INTERCEPTION (KDE50XBR950)		22	4-089-225-01	SHIELD, TAPE (120X30)(KDE42XBR950)	
10	1-805-348-11	42 INCH PLASMA DISPLAY PANEL (KDE42XBR950)		23	4-091-991-31	BAR (KDE42XBR950)	
	1-805-329-11	50 INCH PLASMA DISPLAY PANEL (KDE50XBR950)			4-091-991-21	BAR (KDE50XBR950)	
				#1	7-682-973-49	SCREW +PSW 5X16	
				#2	7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
				#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
				#4	7-682-948-09	SCREW +PSW 3X8	
				#5	7-685-533-19	SCREW +BTP 2.6X6 TYPE2 N-S	


## 4-2. DISPLAY UNIT-2 (PDM-4210/5010)

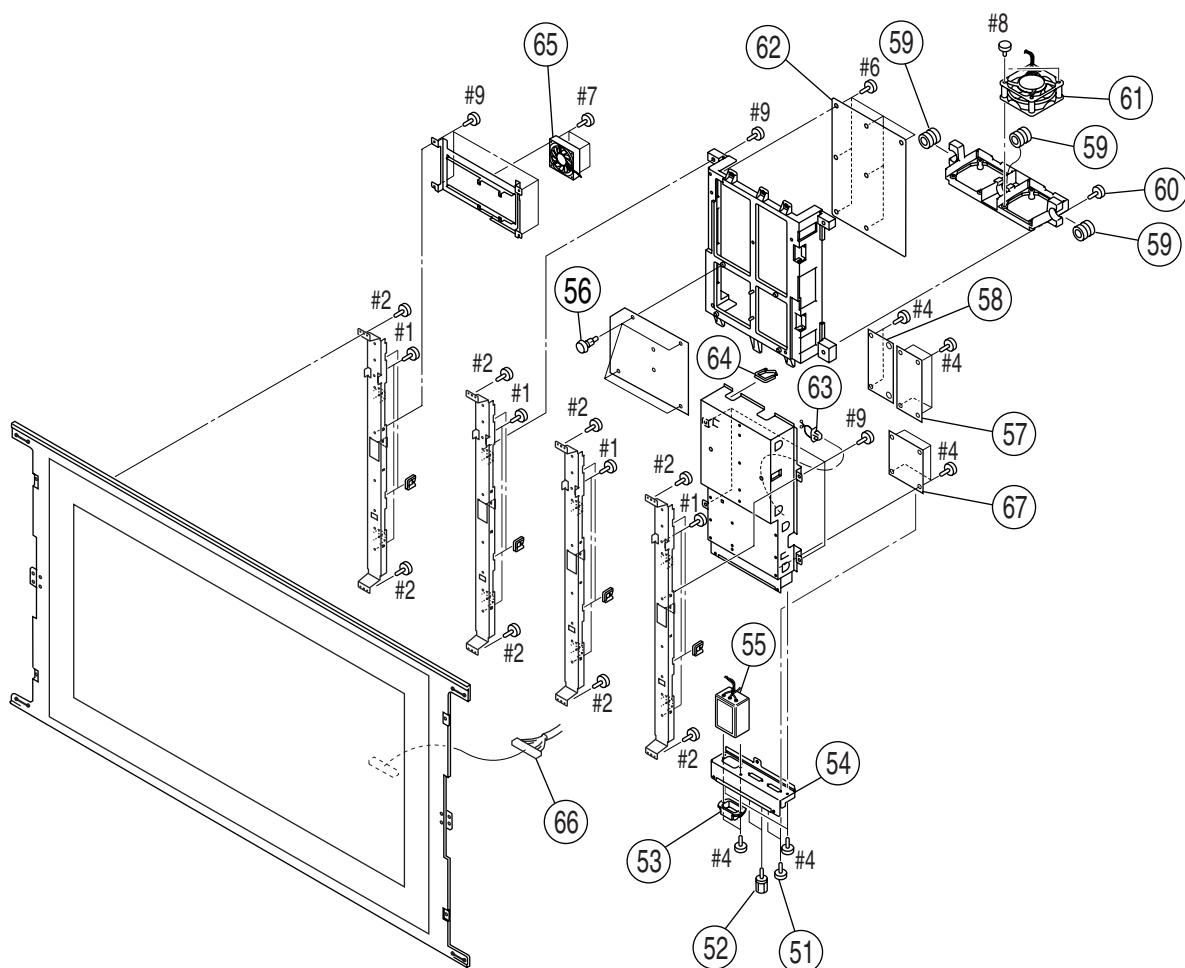

REF. No.	PART No.	DESCRIPTION	MARK
51	4-662-693-03	GRIP, M2.6 S HEAD (EG)	
52	4-635-966-01	SCREW (HEX)	
53	2-990-241-02	HOLDER (A), PLUG	
54	X-4040-983-2	BRACKET (50) ASSY, U	
55	1-417-336-22	AC INLET (WITH NOISEFILTER)	
56	3-910-042-01	SPACER (A) (KDE50XBR950)	
57	* A-1410-145-A	K BOARD, MOUNT	
58	* A-1405-490-A	F BOARD, MOUNT	
59	4-374-745-11	CUSHION (A)	
60	4-314-843-02	SCREW, TAPPING, +4X12	
61	1-787-088-11	D.C. FAN	
62	* A-1302-290-B	G BOARD, COMPLETE	
63	4-035-160-01	PURSE LOCK (S) (DIA. 12)	
64	2-433-598-01	HOLDER (LT-11U), WIRE	
65	1-763-963-21	FAN, DC	


REF. No.	PART No.	DESCRIPTION	MARK
66	1-900-276-40	FI CONNECTOR ASSY 31P	
67	A-1302-291-C	DEM BOARD, COMPLETE	
#1	7-682-973-49	SCREW +PSW 5X16	
#2	7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
#4	7-682-948-09	SCREW +PSW 3X8	
#6	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#7	7-682-667-09	SCREW +PS 4X25	
#8	7-685-665-79	SCREW +BVTP 4X25 TYPE2 IT-3	
#9	7-682-663-09	SCREW +PS 4X12	

### 4-3. MEDIA RECEIVER UNIT-1 (MBD-XBR950)

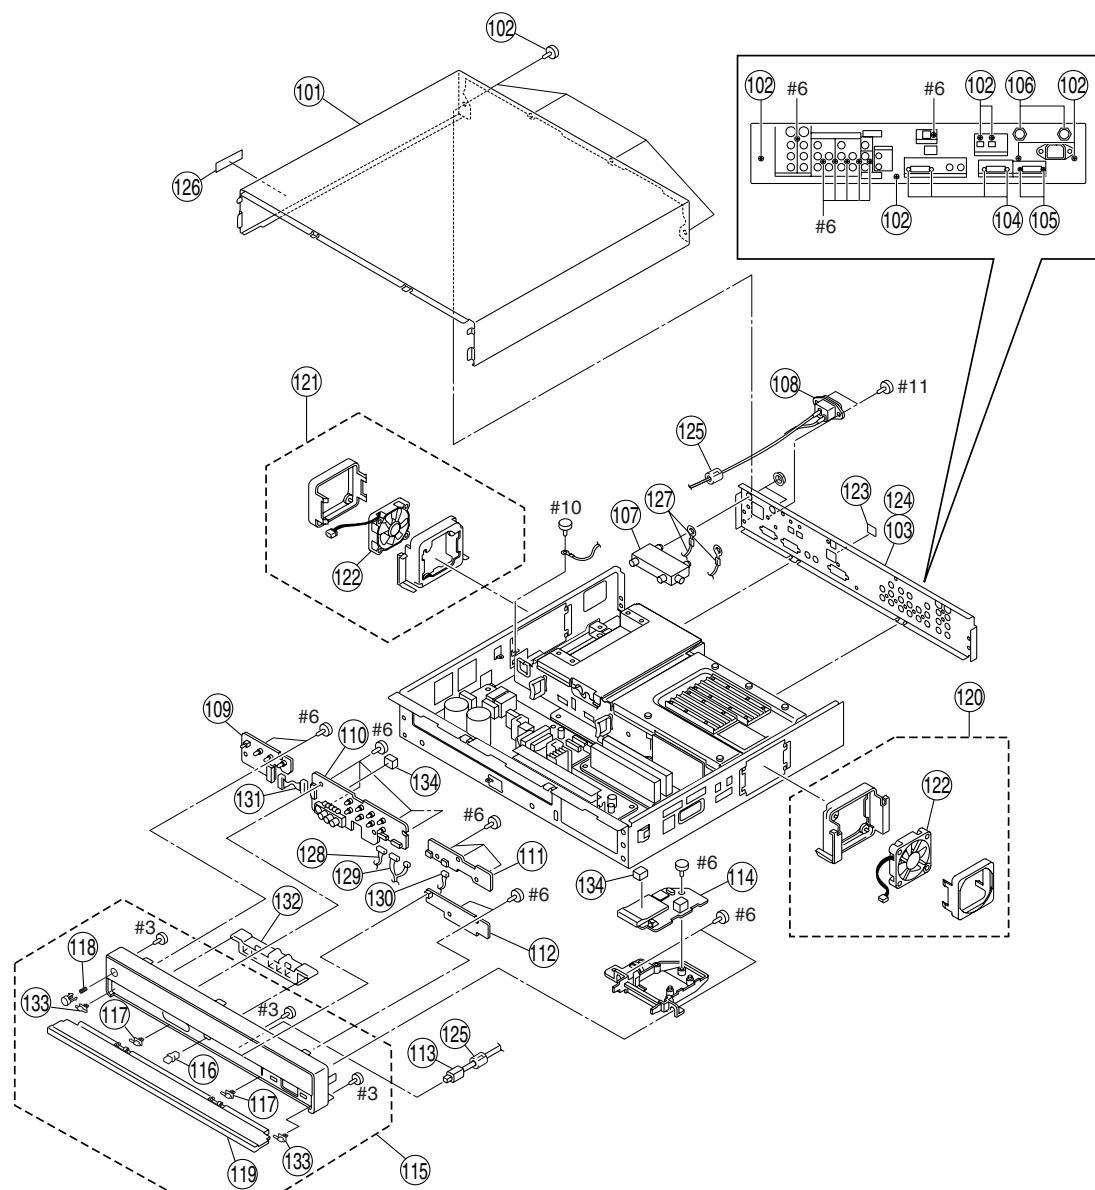


REF. No.	PART No.	DESCRIPTIONRE	MARK	REF. No.	PART No.	DESCRIPTIONRE	MARK
101	4-097-980-01	COVER, TOP		121	A-1604-707-A	FAN BLOCK (L) ASSY	122
102	4-080-960-02	SCREW M3, SW		122	1-787-088-11	D.C. FAN	
103	4-098-721-03	PANEL (U), REAR		123	* 4-097-978-01	COVER, CONNECTOR	
104	4-635-966-01	SCREW (HEX)		124	* X-4042-481-2	REAR PANEL ASSY	
105	4-662-693-03	GRIP, M2.6 S HEAD (EG)		125	1-469-241-11	CORE, FERRITE (RFC-8 BK)	
106	3-682-691-00	NUT, WASHER HEXAGON		126	* 4-098-724-01	LABEL, MODEL NAME	
107	1-786-183-13	SWITCH, ANTENNA		127	* 1-900-277-73	LUG CONNECTOR ASSY	
108	△ 1-817-957-11	AC INLET		128	* 1-900-277-63	ZH CONNECTOR ASSY 12P	
109	* A-1405-754-A	H1 BOARD, MOUNT		129	* 1-900-282-66	XA CONNECTOR ASSY 20P	
110	* A-1405-755-A	H2 BOARD, MOUNT		130	* 1-900-277-69	ZH CONNECTOR ASSY 2P	
111	* A-1405-757-A	H4 BOARD, MOUNT		131	* 1-900-277-70	ZH CONNECTOR ASSY 9P	
112	* A-1405-756-A	H3 BOARD, MOUNT		132	* 4-099-174-01	SHADE (B) LED	
113	1-823-515-31	CORD WITH CONNECTOR (I-LINK)		133	4-098-015-01	HOLDER, DOOR	
114	* A-1302-555-A	QH BOARD, COMPLETE		134	4-098-397-01	GASKET	
115	X-4042-287-3	FRONT ASSY, PANEL	116-119, 133	#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
116	4-042-192-01	CATCHER, PUSH		#6	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
117	4-045-250-51	DAMPER		#10	7-682-961-01	SCREW +PSW 4X8	
118	4-066-103-01	SPRING, COMPRESSION		#11	7-682-348-09	SCREW +RK 3X8	
119	X-4042-288-1	DOOR ASSY (U)					
120	A-1605-928-A	BLOCK (R) ASSY, FAN	122				

#### 4-4. MEDIA RECEIVER UNIT-2 (MBD-XBR950)

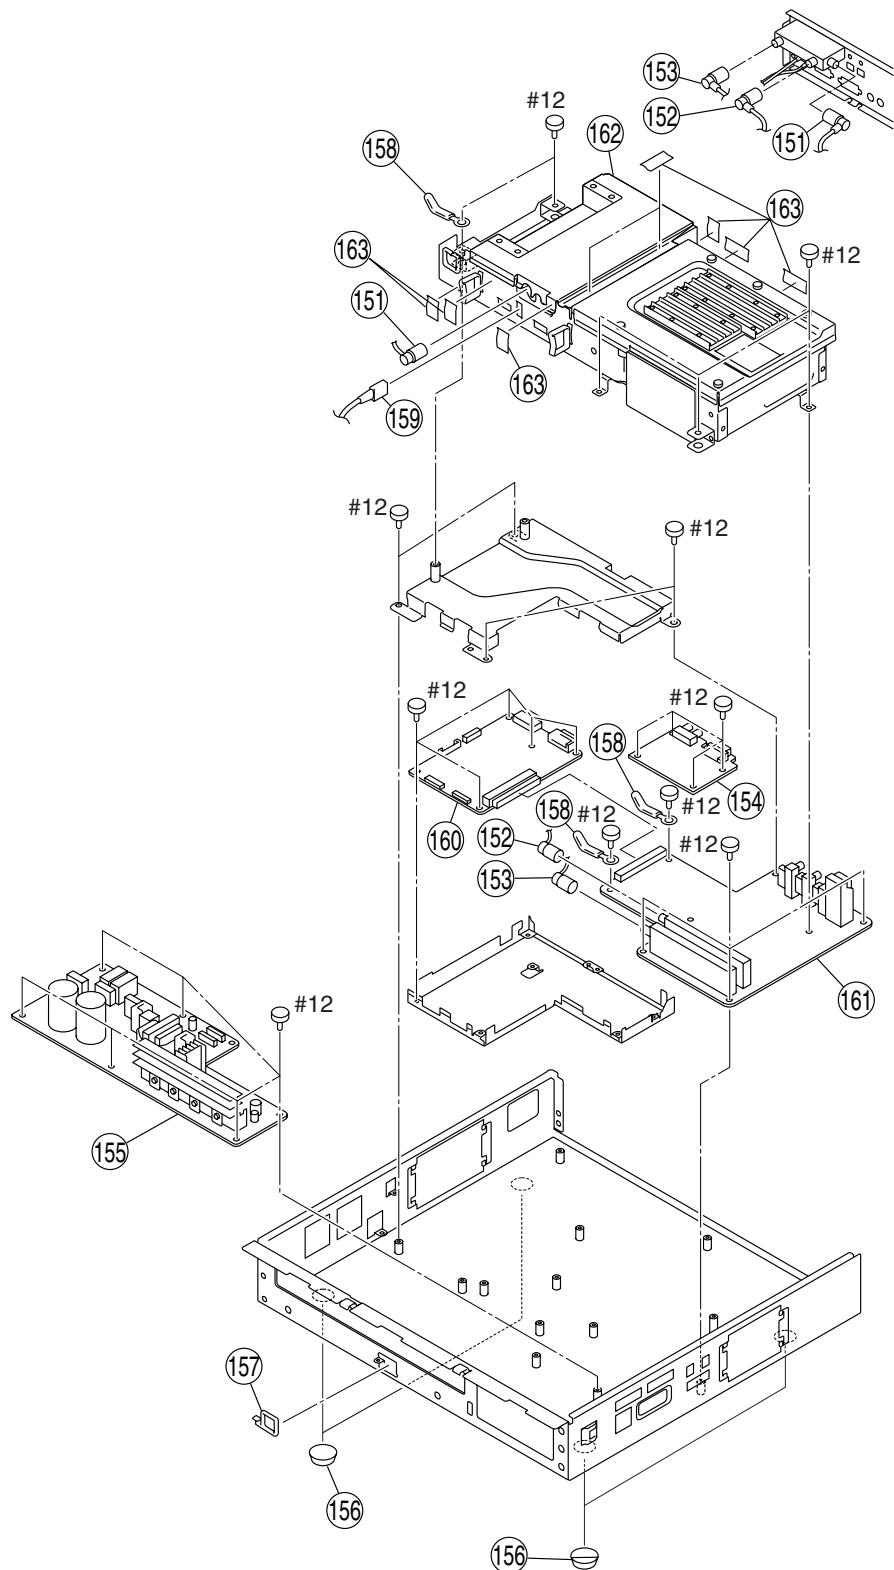

REF. No.	PART No.	DESCRIPTION	MARK	REF. No.	PART No.	DESCRIPTION	MARK
151	* 1-555-400-00	CABLE, PIN		158	* 4-662-796-01	CLIP, COACHING	
152	* 1-555-716-61	CABLE, PIN		159	* 1-827-984-11	CABLE, USB	
153	* 1-558-745-11	CABLE, P-P		160	A-1302-392-B	M BOARD, COMPLETE	
154	* A-1302-391-A	UD BOARD, COMPLETE		161	* A-1405-752-C	A BOARD, MOUNT	
155	* A-1302-393-A	G BOARD, COMPLETE		162	8-330-130-29	ATSC BLOCK ASSY	
156	* 4-097-982-01	FOOT (MR)		163	4-101-007-02	TAPE ELECTRIC CONDUCTION (LVDS)	
157	* 4-097-984-01	COVER, I-LINK		#12	7-682-948-01	SCREW +PSW 3X8	


## 4-5. MEDIA RECEIVER UNIT-3 (MBD-XBR950)

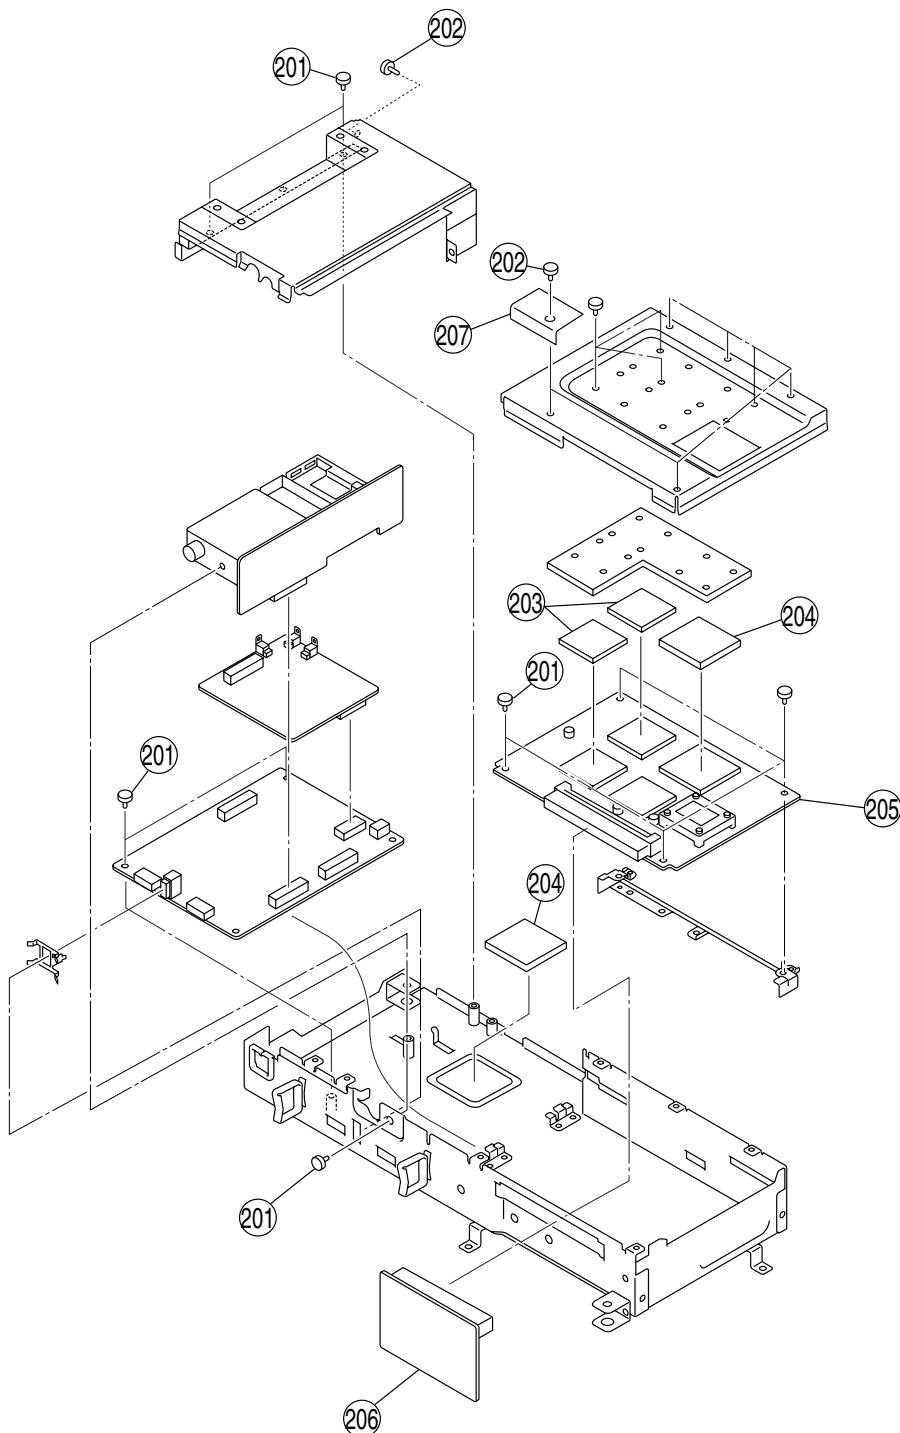

REF. No.	PART No.	DESCRIPTION	REMARK
201	4-382-854-51	SCREW (M3X6), P, SW (+)	
202	4-100-497-01	SCREW	
203	* 4-097-803-01	SHEET, RADIATION	
204	* 4-097-803-11	SHEET, RADIATION	
205	* A-1302-793-A	DIC2 BOARD, COMPLETE	

REF. No.	PART No.	DESCRIPTION	REMARK
206	* A-1405-753-B	IF BOARD, MOUNT	
207	4-100-960-03	COVER, SHIELD	


#### 4-6. PACKING MATERIALS FOR DISPLAY UNIT (PDM-4210)

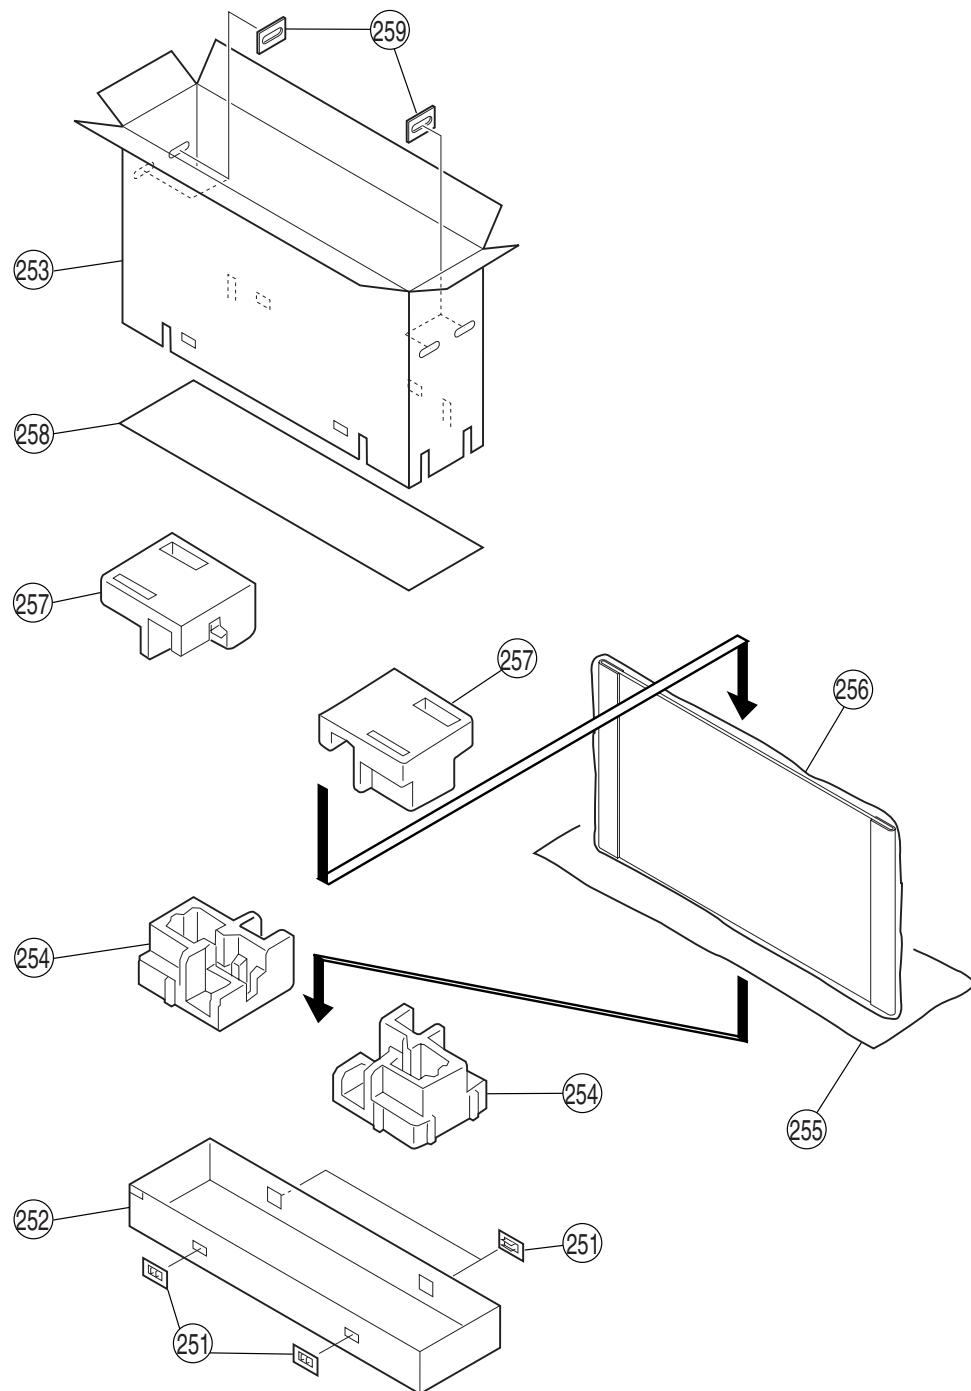

REF. No.	PART No.	DESCRIPTION	RE	MARK
251	* 4-030-895-01	JOINT		
252	* 4-099-603-01	TRAY		
253	* 4-097-816-02	INDIVIDUAL CARTON		
254	* 4-099-601-01	CUSHION (LOWER)		
255	* 4-092-670-01	SHEET, PROTECTION		
256	* 4-091-475-01	BAG, PROTECTION		
257	* 4-099-600-01	CUSHION (UPPER)		
258	* 4-099-602-01	BOARD, TOP		
259	* 3-704-066-01	HANDLE (B)		

REF. No.	PART No.	DESCRIPTION	RE	MARK


#### 4-7. PACKING MATERIALS FOR DISPLAY UNIT (PDM-5010)

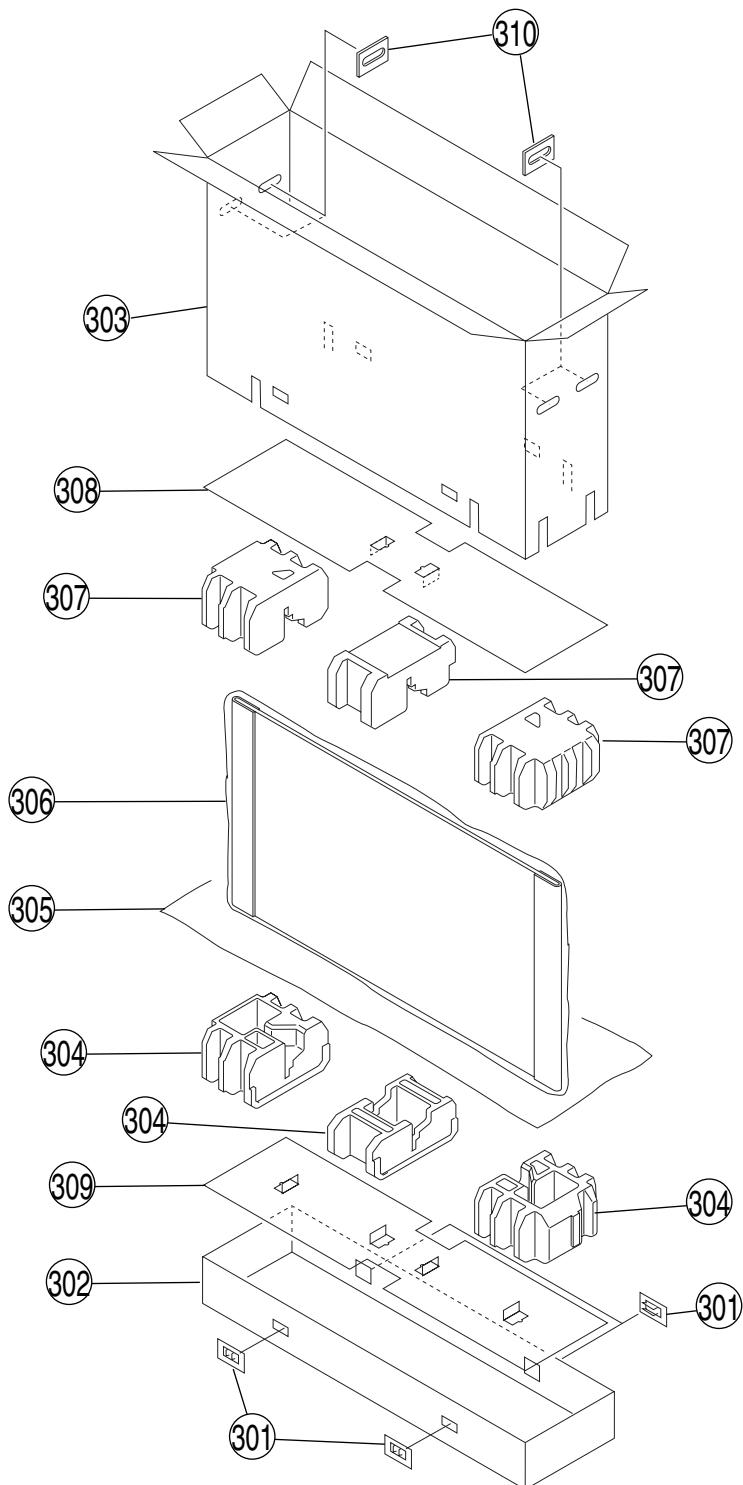

REF. No.	PART No.	DESCRIPTION	RE	MARK
301	* 4-030-895-01	JOINT		
302	* 4-092-772-01	TRAY		
303	* 4-097-817-03	INDIVIDUAL CARTON		
304	* 4-092-776-01	CUSHION (LOWER)		
305	* 4-092-670-01	SHEET, PROTECTION		

REF. No.	PART No.	DESCRIPTION	RE	MARK
306	* 4-050-004-01	BAG, PROTECTION		
307	* 4-092-775-01	CUSHION (UPPER)		
308	* 4-092-773-01	BOARD, TOP		
309	* 4-092-774-01	BOARD, BOTTOM		
310	* 3-704-066-01	HANDLE (B)		

#### 4-8. PACKING MATERIALS FOR DISPLAY UNIT (MBD-XBR950)

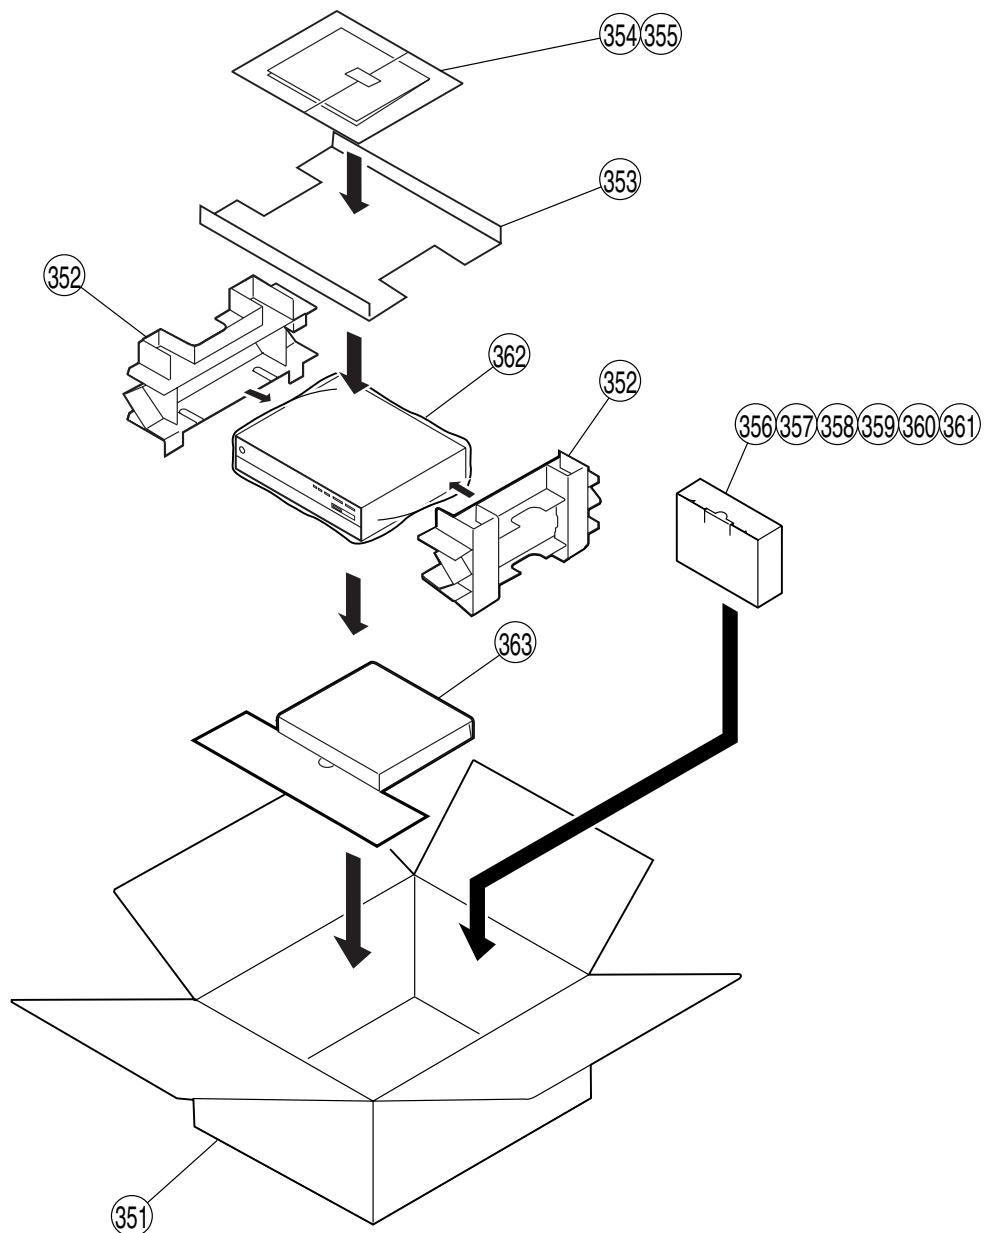

REF. No.	PART No.	DESCRIPTION	REMARK	REF. No.	PART No.	DESCRIPTION	REMARK
351	* 4-098-727-02	INDIVIDUAL CARTON		356	* 4-098-007-01	BOX, ACCESSORY	
352	* 4-098-004-01	CUSHION		357	1-478-305-11	REMOTE COMMANDER (RM-Y1000)	
353	* 4-098-005-01	SPACER, (A)		358	1-765-167-71	CABLE, COAXIAL (WITH (F) PLUG)	
354	4-098-430-12	MANUAL, INSTRUCTION (ENGLISH)		359	▲ 1-823-863-22	CORD, POWER	
	4-098-430-22	MANUAL, INSTRUCTION (FRENCH)		360	1-824-831-13	CORD WITH CONNECTOR	
	4-098-430-32	MANUAL, INSTRUCTION (SPANISH)					
355	X-4040-886-1	ASSY, CLEANING CLOTH		361	2-990-242-01	HOLDER (B), PLUG	
				362	* 3-704-297-01	BAG (STANDARD), PROTECTION	
				363	* 4-098-006-01	SPACER, (B)	

## SECTION 5

### ELECTRICAL PARTS LIST

#### NOTE:

The components identified  $\triangle$  marked are critical for safety.  
Replace only with the part number specified.

Les composants identifiés par la marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number,  
please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

#### RESISTORS

- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1		G	CAPACITOR		C1001	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2		G	CAPACITOR		C1002	1-164-344-11	CERAMIC CHIP 0.068UF 10.00% 25V		
3		G	CAPACITOR		C1003	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
4		G	CAPACITOR		C1004	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
5		G	CAPACITOR		C1005	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
6		G	CAPACITOR		C1006	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
7		G	CAPACITOR		C1007	1-165-530-11	MYLAR 0.47UF 10 275V		
8		G	CAPACITOR		C1008	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
9		G	CAPACITOR		C1009	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
10		G	CAPACITOR		C1010	1-163-005-91	CERAMIC CHIP 470PF 10.00% 50V		
11		G	CAPACITOR		C1011	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
12		G	CAPACITOR		C1012	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V		
13		G	CAPACITOR		C1013	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
14		G	CAPACITOR		C1014	1-117-227-11	MYLAR 1UF 10% 450V		
15		G	CAPACITOR		C1015	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
16		G	CAPACITOR		C1017	1-126-947-11	ELECT 47UF 20.00% 35V		
17		G	CAPACITOR		C1018	1-117-227-11	MYLAR 1UF 10% 450V		
18		G	CAPACITOR		C1019	1-117-227-11	MYLAR 1UF 10% 450V		
19		G	CAPACITOR		C1020	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
20		G	CAPACITOR		C1021	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
21		G	CAPACITOR		C1022	1-104-666-11	ELECT 220UF 20.00% 25V		
22		G	CAPACITOR		C1023	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
23		G	CAPACITOR		C1024	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
24		G	CAPACITOR		C1026	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
25		G	CAPACITOR		C1028	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
26		G	CAPACITOR		C1029	1-104-760-11	CERAMIC CHIP 0.047UF 10.00% 50V		
27		G	CAPACITOR		C1030	1-100-613-81	CERAMIC 470PF 5% 1KV		
28		G	CAPACITOR		C1032	1-163-145-00	CERAMIC CHIP 0.0015UF 5.00% 50V		
29		G	CAPACITOR		C1033	1-100-613-81	CERAMIC 470PF 5% 1KV		
30		G	CAPACITOR		C1034	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
31		G	CAPACITOR		C1035	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
32		G	CAPACITOR		C1036	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
33		G	CAPACITOR		C1037	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
34		G	CAPACITOR		C1038	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
35		G	CAPACITOR		C1039	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
36		G	CAPACITOR		C1040	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
37		G	CAPACITOR		C1041	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
38		G	CAPACITOR		C1042	1-126-947-11	ELECT 47UF 20.00% 35V		
39		G	CAPACITOR		C1043	1-126-964-11	ELECT 10UF 20.00% 50V		
40		G	CAPACITOR		C1044	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
41		G	CAPACITOR		C1045	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
42		G	CAPACITOR		C1046	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
43		G	CAPACITOR		C1047	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
44		G	CAPACITOR		C1048	1-126-960-11	ELECT 1UF 20.00% 50V		
45		G	CAPACITOR		C1049	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
46		G	CAPACITOR		C1050	1-126-948-11	ELECT 100UF 20.00% 35V		
47		G	CAPACITOR		C1052	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
48		G	CAPACITOR		C1053	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
49		G	CAPACITOR		C1054	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
50		G	CAPACITOR		C1055	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
51		G	CAPACITOR		C1201	1-137-639-21	MYLAR 0.47UF 10% 450V		
52		G	CAPACITOR		C1202	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
53		G	CAPACITOR		C1203	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
54		G	CAPACITOR		C1204	1-126-962-11	ELECT 3.3UF 20.00% 50V		
55		G	CAPACITOR		C1205	1-126-951-11	ELECT 470UF 20.00% 35V		
56		G	CAPACITOR		C1206	1-126-962-11	ELECT 3.3UF 20.00% 50V		
57		G	CAPACITOR		C1207	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
58		G	CAPACITOR		C1208	1-126-964-11	ELECT 10UF 20.00% 50V		
59		G	CAPACITOR		C1209	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
60		G	CAPACITOR		C1210	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
61		G	CAPACITOR		C1211	1-136-165-00	FILM 0.1UF 5.00% 50V		
62		G	CAPACITOR		C1212	1-126-947-11	ELECT 47UF 20.00% 35V		
63		G	CAPACITOR		C1213	1-137-807-31	ELECT 100UF 20% 50V		
64		G	CAPACITOR		C1214	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
65		G	CAPACITOR		C1215	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
66		G	CAPACITOR		C1216	1-165-608-11	FILM 15000PF 3% 800V		
67		G	CAPACITOR		C1301	1-128-951-31	ELECT 2200UF 20% 16V		
68		G	CAPACITOR		C1302	1-128-951-31	ELECT 2200UF 20% 16V		
69		G	CAPACITOR		C1303	1-128-549-11	ELECT 3300UF 20.00% 35V		
70		G	CAPACITOR		C1304	1-137-906-31	ELECT 680UF 20% 16V		
71		G	CAPACITOR		C1305	1-137-906-31	ELECT 680UF 20% 16V		
72		G	CAPACITOR		C1306	1-137-906-31	ELECT 680UF 20% 16V		
73		G	CAPACITOR		C1307	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description			Remarks-1	Remarks-2
74		G	CAPACITOR		C1308	1-128-945-31	ELECT	1000UF	20% 10V		
75		G	CAPACITOR		C1309	1-107-888-11	ELECT	47UF	20.00% 25V		
76		G	CAPACITOR		C1311	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
77		G	CAPACITOR		C1312	1-163-037-11	CERAMIC CHIP	0.022UF	10.00% 50V		
78		G	CAPACITOR		C1313	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
79		G	CAPACITOR		C1314	1-164-346-11	CERAMIC CHIP	1UF	16V		
80		G	CAPACITOR		C1315	1-127-573-11	CERAMIC CHIP	1UF	10% 16V		
81		G	CAPACITOR		C1316	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
82		G	CAPACITOR		C1317	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
83		G	CAPACITOR		C1318	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
84		G	CAPACITOR		C1319	1-100-398-21	ELECT	270UF	20% 10V		
85		G	CAPACITOR		C1320	1-128-945-31	ELECT	1000UF	20% 10V		
86		G	CAPACITOR		C1322	1-126-947-11	ELECT	47UF	20.00% 35V		
87		G	CAPACITOR		C1325	1-161-830-00	CERAMIC	0.0047UF	99% 500V		
88		G	CAPACITOR		C1326	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
89		G	CAPACITOR		C1327	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
90		G	CAPACITOR		C1328	1-163-009-91	CERAMIC CHIP	0.001UF	10.00% 50V		
91		G	CAPACITOR		C1329	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
92		G	CAPACITOR		C1330	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
93		G	CAPACITOR		C1331	1-107-888-11	ELECT	47UF	20.00% 25V		
94		G	CAPACITOR		C1332	1-107-888-11	ELECT	47UF	20.00% 25V		
95		G	CAPACITOR		C1333	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
96		G	CAPACITOR		C1335	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
97		G	CAPACITOR		C1336	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
98		G	CAPACITOR		C1337	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
99		G	CAPACITOR		C1401	1-117-227-11	MYLAR	1UF	10% 450V		
100		G	CAPACITOR		C1402	1-163-009-91	CERAMIC CHIP	0.001UF	10.00% 50V		
101		G	CAPACITOR		C1403	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
102		G	CAPACITOR		C1404	1-126-965-91	ELECT	22UF	20.00% 50V		
103		G	CAPACITOR		C1405	1-126-967-11	ELECT	47UF	20.00% 50V		
104		G	CAPACITOR		C1406	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
105		G	CAPACITOR		C1407	1-163-275-11	CERAMIC CHIP	0.001UF	5.00% 50V		
106		G	CAPACITOR		C1408	1-126-964-11	ELECT	10UF	20.00% 50V		
107		G	CAPACITOR		C1409	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
108		G	CAPACITOR		C1410	1-137-194-81	FILM	0.47UF	5.00% 50V		
109		G	CAPACITOR		C1411	1-136-165-00	FILM	0.1UF	5.00% 50V		
110		G	CAPACITOR		C1412	1-126-947-11	ELECT	47UF	20.00% 35V		
111		G	CAPACITOR		C1413	1-107-824-11	CERAMIC	220PF	5.00% 1KV		
112		G	CAPACITOR		C1414	1-107-824-11	CERAMIC	220PF	5.00% 1KV		
113		G	CAPACITOR		C1415	1-100-400-11	FILM	39000PF	3% 1KV		
114		G	CAPACITOR		C1416	1-163-009-91	CERAMIC CHIP	0.001UF	10.00% 50V		
115		G	CAPACITOR		C1417	1-119-886-51	CERAMIC	470PF	10.00% 250V		
116		G	CAPACITOR		C1501	1-165-776-31	ELECT	680UF	20% 100V		
117		G	CAPACITOR		C1502	1-102-244-00	CERAMIC	220PF	10.00% 500V		
118		G	CAPACITOR		C1503	1-165-776-31	ELECT	680UF	20% 100V		
119		G	CAPACITOR		C1504	1-100-727-21	ELECT(BLOCK)	3900UF	20% 100V		
120		G	CAPACITOR		C1505	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00% 50V		
121		G	CAPACITOR		C1506	1-163-009-91	CERAMIC CHIP	0.001UF	10.00% 50V		
122		G	CAPACITOR		C1507	1-163-009-91	CERAMIC CHIP	0.001UF	10.00% 50V		
123		G	CAPACITOR		C1508	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
124		G	CAPACITOR		C1601	1-163-009-91	CERAMIC CHIP	0.001UF	10.00% 50V		
125		G	CAPACITOR		C1602	1-117-228-71	MYLAR	2.2UF	10.00% 450V		
126		G	CAPACITOR		C1603	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
127		G	CAPACITOR		C1604	1-126-965-91	ELECT	22UF	20.00% 50V		
128		G	CAPACITOR		C1606	1-126-967-11	ELECT	47UF	20.00% 50V		
129		G	CAPACITOR		C1607	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
130		G	CAPACITOR		C1608	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
131		G	CAPACITOR		C1609	1-163-275-11	CERAMIC CHIP	0.001UF	5.00% 50V		
132		G	CAPACITOR		C1610	1-126-964-11	ELECT	10UF	20.00% 50V		
133		G	CAPACITOR		C1611	1-137-194-81	FILM	0.47UF	5.00% 50V		
134		G	CAPACITOR		C1612	1-136-165-00	FILM	0.1UF	5.00% 50V		
135		G	CAPACITOR		C1613	1-126-947-11	ELECT	47UF	20.00% 35V		
136		G	CAPACITOR		C1614	1-100-613-81	CERAMIC	470PF	5% 1KV		
137		G	CAPACITOR		C1615	1-100-613-81	CERAMIC	470PF	5% 1KV		
138		G	CAPACITOR		C1616	1-100-400-11	FILM	39000PF	3% 1KV		
139		G	CAPACITOR		C1617	1-100-400-11	FILM	39000PF	3% 1KV		
140		G	CAPACITOR		C1619	1-119-886-51	CERAMIC	470PF	10.00% 250V		
141		G	CAPACITOR		C1701	1-100-729-11	ELECT	1200UF	20% 250V		
142		G	CAPACITOR		C1702	1-102-244-00	CERAMIC	220PF	10.00% 500V		
143		G	CAPACITOR		C1703	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00% 50V		
144		G	CAPACITOR		C1704	1-163-009-91	CERAMIC CHIP	0.001UF	10.00% 50V		
145		G	CAPACITOR		C1705	1-100-215-11	ELECT	1800UF	20% 250V		
146		G	CAPACITOR		C1706	1-100-215-11	ELECT	1800UF	20% 250V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
147		G	CAPACITOR		C1707	1-100-215-11	ELECT 1800UF 20% 250V		
148		G	CAPACITOR		C1708	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
149		G	CAPACITOR		C1709	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
150		G	CAPACITOR		C1801	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
151		G	CAPACITOR		C1802	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
152		G	CAPACITOR		C1803	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
153		G	CAPACITOR		C1804	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
154		G	CAPACITOR		C1805	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
155		G	CAPACITOR		C1806	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
156		G	CAPACITOR		C1812	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
157		G	CAPACITOR		C1813	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
158		G	CONNECTOR	*	CN1003	1-580-843-11	PIN, CONNECTOR (POWER)		
159		G	CONNECTOR	*	CN1005	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		
160		G	CONNECTOR	*	CN1006	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P		
161		G	CONNECTOR	*	CN1007	1-564-715-11	PIN, CONNECTOR (SMALL TYPE)13P		
162		G	CONNECTOR	*	CN1009	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		
163		G	CONNECTOR		CN1010	1-779-092-11	PIN, CONNECTOR (PC BOARD) 10P		
164		G	DIODE		D1001	8-719-083-83	DIODE UDZS-TE17-15B		
165		G	DIODE		D1002	8-719-304-63	DIODE RM11C		
166		G	DIODE		D1003	8-719-404-50	DIODE MA111-TX		
167		G	DIODE		D1004	8-719-073-32	DIODE D25XB60		
168		G	DIODE		D1005	8-719-071-94	DIODE HRU0103ATRF		
169		G	DIODE		D1006	8-719-071-94	DIODE HRU0103ATRF		
170		G	DIODE		D1008	8-719-404-50	DIODE MA111-TX		
171		G	DIODE		D1009	8-719-304-63	DIODE RM11C		
172		G	DIODE		D1010	8-719-056-84	DIODE UDZ-TE-17-7.5B		
173		G	DIODE		D1011	8-719-071-94	DIODE HRU0103ATRF		
174		G	DIODE		D1012	8-719-041-97	DIODE MA113-(TX)		
175		G	DIODE		D1014	8-719-304-63	DIODE RM11C		
176		G	DIODE		D1015	8-719-041-97	DIODE MA113-(TX)		
177		G	DIODE		D1016	6-500-407-01	DIODE SF20L60U-4015		
178		G	DIODE		D1019	8-719-404-50	DIODE MA111-TX		
179		G	DIODE		D1020	8-719-404-50	DIODE MA111-TX		
180		G	DIODE		D1022	8-719-083-83	DIODE UDZS-TE17-15B		
181		G	DIODE		D1023	8-719-083-83	DIODE UDZS-TE17-15B		
182		G	DIODE		D1024	8-719-056-84	DIODE UDZ-TE-17-7.5B		
183		G	DIODE		D1201	8-719-056-85	DIODE UDZ-TE-17-8.2B		
184		G	DIODE		D1204	8-719-404-50	DIODE MA111-TX		
185		G	DIODE		D1205	8-719-979-64	DIODE UF4005PKG23		
186		G	DIODE		D1206	8-719-083-83	DIODE UDZS-TE17-15B		
187		G	DIODE		D1207	8-719-083-83	DIODE UDZS-TE17-15B		
188		G	DIODE		D1208	8-719-063-73	DIODE D1NL20U-TR		
189		G	DIODE		D1209	8-719-404-50	DIODE MA111-TX		
190		G	DIODE		D1301	8-719-050-21	DIODE FCQ20A04		
191		G	DIODE		D1302	8-719-052-92	DIODE D10SBS4F		
192		G	DIODE		D1303	8-719-078-04	DIODE EC31QS03L-TE12L		
193		G	DIODE		D1306	8-719-404-50	DIODE MA111-TX		
194		G	DIODE		D1307	8-719-041-97	DIODE MA113-(TX)		
195		G	DIODE		D1308	8-719-041-97	DIODE MA113-(TX)		
196		G	DIODE		D1309	8-719-041-97	DIODE MA113-(TX)		
197		G	DIODE		D1310	8-719-404-50	DIODE MA111-TX		
198		G	DIODE		D1311	8-719-078-04	DIODE EC31QS03L-TE12L		
199		G	DIODE		D1313	8-719-404-50	DIODE MA111-TX		
200		G	DIODE		D1314	8-719-404-50	DIODE MA111-TX		
201		G	DIODE		D1315	8-719-160-29	DIODE RD6.2FB2		
202		G	DIODE		D1316	8-719-404-50	DIODE MA111-TX		
203		G	DIODE		D1318	8-719-083-83	DIODE UDZS-TE17-15B		
204		G	DIODE		D1319	8-719-083-83	DIODE UDZS-TE17-15B		
205		G	DIODE		D1320	8-719-160-20	DIODE RD4.7FB2		
206		G	DIODE		D1321	8-719-056-85	DIODE UDZ-TE-17-8.2B		
207		G	DIODE		D1401	8-719-404-50	DIODE MA111-TX		
208		G	DIODE		D1404	8-719-979-64	DIODE UF4005PKG23		
209		G	DIODE		D1405	8-719-056-84	DIODE UDZ-TE-17-7.5B		
210		G	DIODE		D1407	8-719-083-83	DIODE UDZS-TE17-15B		
211		G	DIODE		D1408	8-719-083-83	DIODE UDZS-TE17-15B		
212		G	DIODE		D1501	8-719-054-51	DIODE D8LC20U-4012		
213		G	DIODE		D1502	8-719-056-84	DIODE UDZ-TE-17-7.5B		
214		G	DIODE		D1503	8-719-059-50	DIODE MA3J142D0LSO		
215		G	DIODE		D1505	8-719-404-50	DIODE MA111-TX		
216		G	DIODE		D1601	8-719-404-50	DIODE MA111-TX		
217		G	DIODE		D1602	8-719-083-82	DIODE UDZS-TE17-12B		
218		G	DIODE		D1605	8-719-979-64	DIODE UF4005PKG23		
219		G	DIODE		D1606	8-719-041-97	DIODE MA113-(TX)		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
220		G	DIODE		D1607	8-719-041-97	DIODE MA113-(TX)		
221		G	DIODE		D1608	8-719-083-83	DIODE UDZS-TE17-15B		
222		G	DIODE		D1609	8-719-083-83	DIODE UDZS-TE17-15B		
223		G	DIODE		D1701	6-500-439-01	DIODE D8LD40-F1		
224		G	DIODE		D1702	6-500-439-01	DIODE D8LD40-F1		
225		G	DIODE		D1703	8-719-059-50	DIODE MA3J142D0LSO		
226		G	DIODE		D1704	8-719-083-83	DIODE UDZS-TE17-15B		
227		G	DIODE		D1705	8-719-404-50	DIODE MA111-TX		
228		G	DIODE		D1801	8-719-404-50	DIODE MA111-TX		
229		G	DIODE		D1803	8-719-059-50	DIODE MA3J142D0LSO		
230		G	IC		IC1001	6-703-132-01	IC UC3854BN		
231		G	IC		IC1002	8-759-058-50	IC XRA10324AF		
232		G	IC		IC1003	6-704-924-01	IC PQ12DZ5UJ00H		
233		G	IC		IC1004	8-759-682-42	IC MM1431ATT		
234		G	IC		IC1201	6-703-355-01	IC MCZ3001DA		
235		G	IC		IC1301	8-759-682-42	IC MM1431ATT		
236		G	IC		IC1302	8-759-659-28	IC SI-8033S		
237		G	IC		IC1303	8-759-521-90	IC PQ05DZ5U		
238		G	IC		IC1304	8-759-682-42	IC MM1431ATT		
239		G	IC		IC1305	8-759-085-67	IC LM339NS		
240		G	IC		IC1306	6-703-182-01	IC IRU3037CS		
241		G	IC		IC1307	8-759-058-50	IC XRA10324AF		
242		G	IC		IC1401	6-703-355-01	IC MCZ3001DA		
243		G	IC		IC1402	8-759-682-42	IC MM1431ATT		
244		G	IC		IC1501	8-759-682-42	IC MM1431ATT		
245		G	IC		IC1601	6-703-355-01	IC MCZ3001DA		
246		G	IC		IC1701	8-759-682-42	IC MM1431ATT		
247		G	IC		IC1801	8-759-682-42	IC MM1431ATT		
248		G	IC		IC1802	8-759-085-67	IC LM339NS		
249		G	COIL		L1001	1-416-489-11	INDUCTOR 143UH		
250		G	COIL		L1002	1-456-531-11	INDUCTOR 58UH		
251		G	COIL		L1003	1-456-531-11	INDUCTOR 58UH		
252		G	COIL		L1201	1-406-667-11	INDUCTOR 220UH		
253		G	COIL		L1303	1-406-659-11	INDUCTOR 10UH		
254		G	COIL		L1304	1-412-525-31	INDUCTOR 10UH		
255		G	COIL		L1305	1-406-978-11	INDUCTOR 150UH		
256		G	COIL		L1306	1-456-561-11	INDUCTOR 22UH		
257		G	COIL		L1401	1-406-665-11	INDUCTOR 100UH		
258		G	COIL		L1601	1-406-977-61	INDUCTOR 100UH		
259		G	COIL		L1701	1-406-656-21	INDUCTOR 3.3UH		
260		G	PHOTO COUPLER		PH1201	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
261		G	PHOTO COUPLER		PH1202	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
262		G	PHOTO COUPLER		PH1401	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
263		G	PHOTO COUPLER		PH1402	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
264		G	PHOTO COUPLER		PH1403	8-749-016-81	PHOTO COUPLER PC123Y22		
265		G	PHOTO COUPLER		PH1601	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
266		G	PHOTO COUPLER		PH1602	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
267		G	TRANSISTOR		Q1001	8-729-040-89	TRANSISTOR 2SK1590-T1B		
268		G	TRANSISTOR		Q1003	8-729-820-86	TRANSISTOR 2SB1121-ST		
269		G	TRANSISTOR		Q1004	6-550-549-01	TRANSISTOR DTC114EUAF106		
270		G	TRANSISTOR		Q1005	8-729-807-17	TRANSISTOR 2SD1621-S		
271		G	TRANSISTOR		Q1006	8-729-905-35	TRANSISTOR 2SC4081-R		
272		G	TRANSISTOR		Q1008	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
273		G	TRANSISTOR		Q1009	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
274		G	TRANSISTOR		Q1011	6-550-549-01	TRANSISTOR DTC114EUAF106		
275		G	TRANSISTOR		Q1012	6-550-549-01	TRANSISTOR DTC114EUAF106		
276		G	TRANSISTOR		Q1013	8-729-905-35	TRANSISTOR 2SC4081-R		
277		G	TRANSISTOR		Q1014	8-729-905-35	TRANSISTOR 2SC4081-R		
278		G	TRANSISTOR		Q1015	8-729-023-22	TRANSISTOR 2SD2114K		
279		G	TRANSISTOR		Q1016	6-550-548-01	TRANSISTOR DTA114EUAF106		
280		G	TRANSISTOR		Q1017	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
281		G	TRANSISTOR		Q1018	6-550-549-01	TRANSISTOR DTC114EUAF106		
282		G	TRANSISTOR		Q1019	8-729-905-35	TRANSISTOR 2SC4081-R		
283		G	TRANSISTOR		Q1020	6-550-548-01	TRANSISTOR DTA114EUAF106		
284		G	TRANSISTOR		Q1024	8-729-905-35	TRANSISTOR 2SC4081-R		
285		G	TRANSISTOR		Q1201	8-729-905-35	TRANSISTOR 2SC4081-R		
286		G	TRANSISTOR		Q1202	8-729-905-35	TRANSISTOR 2SC4081-R		
287		G	TRANSISTOR		Q1203	8-729-053-10	TRANSISTOR 2SK2662(LBS2SONY)		
288		G	TRANSISTOR		Q1204	8-729-053-10	TRANSISTOR 2SK2662(LBS2SONY)		
289		G	TRANSISTOR		Q1303	6-550-548-01	TRANSISTOR DTA114EUAF106		
290		G	TRANSISTOR		Q1304	6-550-709-01	TRANSISTOR IRFR3707TR		
291		G	TRANSISTOR		Q1305	8-729-054-35	TRANSISTOR HAT2070R-EL		
292		G	TRANSISTOR		Q1306	6-550-548-01	TRANSISTOR DTA114EUAF106		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
293		G	TRANSISTOR		Q1307	6-550-548-01	TRANSISTOR DTA114EUAFT106		
294		G	TRANSISTOR		Q1308	6-550-380-01	TRANSISTOR IRFR5305TR		
295		G	TRANSISTOR		Q1309	8-729-905-35	TRANSISTOR 2SC4081-R		
296		G	TRANSISTOR		Q1401	6-550-549-01	TRANSISTOR DTC114EUAFT106		
297		G	TRANSISTOR		Q1402	8-729-040-89	TRANSISTOR 2SK1590-T1B		
298		G	TRANSISTOR		Q1405	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
299		G	TRANSISTOR		Q1406	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
300		G	TRANSISTOR		Q1501	6-550-118-01	TRANSISTOR IRL3215-LF33		
301		G	TRANSISTOR		Q1502	6-550-548-01	TRANSISTOR DTA114EUAFT106		
302		G	TRANSISTOR		Q1503	8-729-905-35	TRANSISTOR 2SC4081-R		
303		G	TRANSISTOR		Q1504	6-550-549-01	TRANSISTOR DTC114EUAFT106		
304		G	TRANSISTOR		Q1601	6-550-549-01	TRANSISTOR DTC114EUAFT106		
305		G	TRANSISTOR		Q1602	8-729-040-89	TRANSISTOR 2SK1590-T1B		
306		G	TRANSISTOR		Q1603	8-729-905-35	TRANSISTOR 2SC4081-R		
307		G	TRANSISTOR		Q1604	8-729-820-86	TRANSISTOR 2SB1121-ST		
308		G	TRANSISTOR		Q1605	8-729-820-86	TRANSISTOR 2SB1121-ST		
309		G	TRANSISTOR		Q1606	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
310		G	TRANSISTOR		Q1607	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
311		G	TRANSISTOR		Q1701	6-550-548-01	TRANSISTOR DTA114EUAFT106		
312		G	TRANSISTOR		Q1702	8-729-905-35	TRANSISTOR 2SC4081-R		
313		G	TRANSISTOR		Q1704	6-550-715-01	TRANSISTOR IRFS644BYDTU		
314		G	TRANSISTOR		Q1705	6-550-549-01	TRANSISTOR DTC114EUAFT106		
315		G	TRANSISTOR		Q1801	6-550-548-01	TRANSISTOR DTA114EUAFT106		
316		G	TRANSISTOR		Q1802	6-550-549-01	TRANSISTOR DTC114EUAFT106		
317		G	TRANSISTOR		Q1804	6-550-548-01	TRANSISTOR DTA114EUAFT106		
318		G	TRANSISTOR		Q1809	6-550-549-01	TRANSISTOR DTC114EUAFT106		
319		G	TRANSISTOR		Q1811	6-550-548-01	TRANSISTOR DTA114EUAFT106		
320		G	RESISTOR		R1001	1-216-105-91	RES-CHIP 220K 5% 1/10W		
321		G	RESISTOR		R1002	1-245-473-21	METAL 300K 1% 1/4W		
322		G	RESISTOR		R1003	1-245-473-21	METAL 300K 1% 1/4W		
323		G	RESISTOR		R1004	1-245-472-21	METAL 270K 1% 1/4W		
324		G	RESISTOR		R1006	1-245-473-21	METAL 300K 1% 1/4W		
325		G	RESISTOR		R1007	1-245-473-21	METAL 300K 1% 1/4W		
326		G	RESISTOR		R1008	1-245-472-21	METAL 270K 1% 1/4W		
327		G	RESISTOR		R1010	1-216-699-91	METAL CHIP 100K 0.5% 1/10W		
328		G	RESISTOR		R1011	1-216-079-00	RES-CHIP 18K 5% 1/10W		
329		G	RESISTOR		R1012	1-245-473-21	METAL 300K 1% 1/4W		
330		G	RESISTOR		R1013	1-245-473-21	METAL 300K 1% 1/4W		
331		G	RESISTOR		R1014	1-245-472-21	METAL 270K 1% 1/4W		
332		G	RESISTOR		R1016	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
333		G	RESISTOR		R1017	1-216-650-11	METAL CHIP 910 0.5% 1/10W		
334		G	RESISTOR		R1018	1-216-121-11	RES-CHIP 1M 5% 1/10W		
335		G	RESISTOR		R1019	1-216-075-00	RES-CHIP 12K 5% 1/10W		
336		G	RESISTOR		R1020	1-216-067-00	RES-CHIP 5.6K 5% 1/10W		
337		G	RESISTOR		R1021	1-216-121-11	RES-CHIP 1M 5% 1/10W		
338		G	RESISTOR		R1023	1-216-081-00	RES-CHIP 22K 5% 1/10W		
339		G	RESISTOR		R1024	1-202-972-61	FUSIBLE 1 5% 1/4W		
340		G	RESISTOR		R1025	1-243-669-31	CEMENTED 0.05 5% 5W		
341		G	RESISTOR		R1026	1-243-669-31	CEMENTED 0.05 5% 5W		
342		G	RESISTOR		R1027	1-216-073-91	RES-CHIP 10K 5% 1/10W		
343		G	RESISTOR		R1028	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
344		G	RESISTOR		R1029	1-249-393-11	CARBON 10 5% 1/4W		
345		G	RESISTOR		R1031	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
346		G	RESISTOR		R1033	1-249-393-11	CARBON 10 5% 1/4W		
347		G	RESISTOR		R1035	1-249-405-11	CARBON 100 5% 1/4W		
348		G	RESISTOR		R1036	1-249-393-11	CARBON 10 5% 1/4W		
349		G	RESISTOR		R1037	1-216-081-00	RES-CHIP 22K 5% 1/10W		
350		G	RESISTOR		R1038	1-216-073-91	RES-CHIP 10K 5% 1/10W		
351		G	RESISTOR		R1039	1-216-105-91	RES-CHIP 220K 5% 1/10W		
352		G	RESISTOR		R1041	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
353		G	RESISTOR		R1042	1-216-081-00	RES-CHIP 22K 5% 1/10W		
354		G	RESISTOR		R1043	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
355		G	RESISTOR		R1044	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
356		G	RESISTOR		R1045	1-216-081-00	RES-CHIP 22K 5% 1/10W		
357		G	RESISTOR		R1046	1-249-393-11	CARBON 10 5% 1/4W		
358		G	RESISTOR		R1047	1-216-073-91	RES-CHIP 10K 5% 1/10W		
359		G	RESISTOR		R1048	1-245-473-21	METAL 300K 1% 1/4W		
360		G	RESISTOR		R1049	1-245-473-21	METAL 300K 1% 1/4W		
361		G	RESISTOR		R1050	1-245-473-21	METAL 300K 1% 1/4W		
362		G	RESISTOR		R1054	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W		
363		G	RESISTOR		R1055	1-208-801-11	METAL CHIP 6.2K 0.5% 1/10W		
364		G	RESISTOR		R1056	1-215-882-00	METAL OXIDE 22 5% 2W		
365		G	RESISTOR		R1058	1-216-077-91	RES-CHIP 15K 5% 1/10W		

No.	#	Board	Type	A/*	Ref. No.	Part No.	Description				Remarks-1	Remarks-2
366		G	RESISTOR		R1061	1-216-049-11	RES-CHIP	1K	5%	1/10W		
367		G	RESISTOR		R1065	1-245-473-21	METAL	300K	1%	1/4W		
368		G	RESISTOR		R1066	1-245-473-21	METAL	300K	1%	1/4W		
369		G	RESISTOR		R1067	1-245-473-21	METAL	300K	1%	1/4W		
370		G	RESISTOR		R1070	1-216-685-11	METAL CHIP	27K	0.5%	1/10W		
371		G	RESISTOR		R1071	1-216-675-91	METAL CHIP	10K	0.5%	1/10W		
372		G	RESISTOR		R1074	1-216-089-91	RES-CHIP	47K	5%	1/10W		
373		G	RESISTOR		R1076	1-216-049-11	RES-CHIP	1K	5%	1/10W		
374		G	RESISTOR		R1077	1-216-049-11	RES-CHIP	1K	5%	1/10W		
375		G	RESISTOR		R1078	1-216-049-11	RES-CHIP	1K	5%	1/10W		
376		G	RESISTOR		R1079	1-216-073-91	RES-CHIP	10K	5%	1/10W		
377		G	RESISTOR		R1082	1-216-065-91	RES-CHIP	4.7K	5%	1/10W		
378		G	RESISTOR		R1083	1-216-065-91	RES-CHIP	4.7K	5%	1/10W		
379		G	RESISTOR		R1084	1-216-049-11	RES-CHIP	1K	5%	1/10W		
380		G	RESISTOR		R1085	1-249-405-11	CARBON	100	5%	1/4W		
381		G	RESISTOR		R1086	1-217-781-11	FUSIBLE	2.2	5%	5W		
382		G	RESISTOR		R1087	1-216-089-91	RES-CHIP	47K	5%	1/10W		
383		G	RESISTOR		R1088	1-216-105-91	RES-CHIP	220K	5%	1/10W		
384		G	RESISTOR		R1089	1-216-001-00	RES-CHIP	10	5%	1/10W		
385		G	RESISTOR		R1090	1-216-073-91	RES-CHIP	10K	5%	1/10W		
386		G	RESISTOR		R1091	1-216-073-91	RES-CHIP	10K	5%	1/10W		
387		G	RESISTOR		R1092	1-216-073-91	RES-CHIP	10K	5%	1/10W		
388		G	RESISTOR		R1093	1-216-065-91	RES-CHIP	4.7K	5%	1/10W		
389		G	RESISTOR		R1094	1-216-065-91	RES-CHIP	4.7K	5%	1/10W		
390		G	RESISTOR		R1095	1-202-962-11	CEMENTED	3.3	5%	10W		
391		G	RESISTOR		R1096	1-202-962-11	CEMENTED	3.3	5%	10W		
392		G	RESISTOR		R1097	1-216-635-11	METAL CHIP	220	0.5%	1/10W		
393		G	RESISTOR		R1098	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W		
394		G	RESISTOR		R1099	1-216-073-91	RES-CHIP	10K	5%	1/10W		
395		G	RESISTOR		R1100	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W		
396		G	RESISTOR		R1101	1-216-049-11	RES-CHIP	1K	5%	1/10W		
397		G	RESISTOR		R1104	1-216-073-91	RES-CHIP	10K	5%	1/10W		
398		G	RESISTOR		R1106	1-208-804-11	METAL CHIP	8.2K	0.5%	1/10W		
399		G	RESISTOR		R1107	1-216-081-00	RES-CHIP	22K	5%	1/10W		
400		G	RESISTOR		R1108	1-216-073-91	RES-CHIP	10K	5%	1/10W		
401		G	RESISTOR		R1109	1-216-121-11	RES-CHIP	1M	5%	1/10W		
402		G	RESISTOR		R1110	1-216-121-11	RES-CHIP	1M	5%	1/10W		
403		G	RESISTOR		R1111	1-216-121-11	RES-CHIP	1M	5%	1/10W		
404		G	RESISTOR		R1112	1-216-121-11	RES-CHIP	1M	5%	1/10W		
405		G	RESISTOR		R1201	1-202-933-61	FUSIBLE	0.1	10%	1/2W		
406		G	RESISTOR		R1202	1-208-812-11	METAL CHIP	18K	0.5%	1/10W		
407		G	RESISTOR		R1203	1-216-089-91	RES-CHIP	47K	5%	1/10W		
408		G	RESISTOR		R1204	1-216-089-91	RES-CHIP	47K	5%	1/10W		
409		G	RESISTOR		R1205	1-245-478-21	METAL	470K	1%	1/4W		
410		G	RESISTOR		R1206	1-245-479-21	METAL	510K	1%	1/4W		
411		G	RESISTOR		R1208	1-216-065-91	RES-CHIP	4.7K	5%	1/10W		
412		G	RESISTOR		R1209	1-216-041-00	RES-CHIP	470	5%	1/10W		
413		G	RESISTOR		R1210	1-216-676-11	METAL CHIP	11K	0.5%	1/10W		
414		G	RESISTOR		R1212	1-216-089-91	RES-CHIP	47K	5%	1/10W		
415		G	RESISTOR		R1214	1-216-097-11	RES-CHIP	100K	5%	1/10W		
416		G	RESISTOR		R1216	1-216-073-91	RES-CHIP	10K	5%	1/10W		
417		G	RESISTOR		R1217	1-216-049-11	RES-CHIP	1K	5%	1/10W		
418		G	RESISTOR		R1218	1-216-025-11	RES-CHIP	100	5%	1/10W		
419		G	RESISTOR		R1219	1-216-017-91	RES-CHIP	47	5%	1/10W		
420		G	RESISTOR		R1220	1-249-417-11	CARBON	1K	5%	1/4W		
421		G	RESISTOR		R1221	1-216-061-91	RES-CHIP	3.3K	5%	1/10W		
422		G	RESISTOR		R1222	1-216-061-91	RES-CHIP	3.3K	5%	1/10W		
423		G	RESISTOR		R1223	1-216-073-91	RES-CHIP	10K	5%	1/10W		
424		G	RESISTOR		R1224	1-249-393-11	CARBON	10	5%	1/4W		
425		G	RESISTOR		R1225	1-249-393-11	CARBON	10	5%	1/4W		
426		G	RESISTOR		R1226	1-216-073-91	RES-CHIP	10K	5%	1/10W		
427		G	RESISTOR		R1227	1-216-073-91	RES-CHIP	10K	5%	1/10W		
428		G	RESISTOR		R1228	1-215-857-71	METAL OXIDE	10	5%	1W		
429		G	RESISTOR		R1229	1-243-668-31	CEMENTED	0.1	5%	2W		
430		G	RESISTOR		R1301	1-216-308-00	RES-CHIP	4.7	5%	1/10W		
431		G	RESISTOR		R1302	1-216-049-11	RES-CHIP	1K	5%	1/10W		
432		G	RESISTOR		R1303	1-216-073-91	RES-CHIP	10K	5%	1/10W		
433		G	RESISTOR		R1304	1-216-611-11	METAL CHIP	22	0.5%	1/10W		
434		G	RESISTOR		R1306	1-216-687-11	METAL CHIP	33K	0.5%	1/10W		
435		G	RESISTOR		R1307	1-216-673-11	METAL CHIP	8.2K	0.5%	1/10W		
436		G	RESISTOR		R1311	1-216-682-11	METAL CHIP	20K	0.5%	1/10W		
437		G	RESISTOR		R1312	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W		
438		G	RESISTOR		R1314	1-216-073-91	RES-CHIP	10K	5%	1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
439		G	RESISTOR		R1320	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
440		G	RESISTOR		R1321	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
441		G	RESISTOR		R1326	1-216-073-91	RES-CHIP 10K 5% 1/10W		
442		G	RESISTOR		R1327	1-216-073-91	RES-CHIP 10K 5% 1/10W		
443		G	RESISTOR		R1328	1-216-049-11	RES-CHIP 1K 5% 1/10W		
444		G	RESISTOR		R1329	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		
445		G	RESISTOR		R1330	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
446		G	RESISTOR		R1331	1-216-085-91	RES-CHIP 33K 5% 1/10W		
447		G	RESISTOR		R1332	1-216-295-91	SHORT CHIP 0		
448		G	RESISTOR		R1333	1-216-295-91	SHORT CHIP 0		
449		G	RESISTOR		R1335	1-216-073-91	RES-CHIP 10K 5% 1/10W		
450		G	RESISTOR		R1336	1-216-073-91	RES-CHIP 10K 5% 1/10W		
451		G	RESISTOR		R1338	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
452		G	RESISTOR		R1339	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		
453		G	RESISTOR		R1340	1-216-665-11	METAL CHIP 3.9K 0.5% 1/10W		
454		G	RESISTOR		R1341	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
455		G	RESISTOR		R1342	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W		
456		G	RESISTOR		R1343	1-216-677-11	METAL CHIP 12K 0.5% 1/10W		
457		G	RESISTOR		R1345	1-249-393-11	CARBON 10 5% 1/4W		
458		G	RESISTOR		R1346	1-216-073-91	RES-CHIP 10K 5% 1/10W		
459		G	RESISTOR		R1347	1-207-923-00	WIREWOUND 27 10% 3W		
460		G	RESISTOR		R1348	1-216-097-11	RES-CHIP 100K 5% 1/10W		
461		G	RESISTOR		R1349	1-216-103-00	RES-CHIP 180K 5% 1/10W		
462		G	RESISTOR		R1350	1-216-089-91	RES-CHIP 47K 5% 1/10W		
463		G	RESISTOR		R1351	1-216-089-91	RES-CHIP 47K 5% 1/10W		
464		G	RESISTOR		R1353	1-216-089-91	RES-CHIP 47K 5% 1/10W		
465		G	RESISTOR		R1354	1-216-687-11	METAL CHIP 33K 0.5% 1/10W		
466		G	RESISTOR		R1355	1-216-073-91	RES-CHIP 10K 5% 1/10W		
467		G	RESISTOR		R1356	1-216-025-11	RES-CHIP 100 5% 1/10W		
468		G	RESISTOR		R1357	1-216-073-91	RES-CHIP 10K 5% 1/10W		
469		G	RESISTOR		R1358	1-216-025-11	RES-CHIP 100 5% 1/10W		
470		G	RESISTOR		R1359	1-216-073-91	RES-CHIP 10K 5% 1/10W		
471		G	RESISTOR		R1401	1-216-081-00	RES-CHIP 22K 5% 1/10W		
472		G	RESISTOR		R1402	1-249-405-11	CARBON 100 5% 1/4W		
473		G	RESISTOR		R1403	1-202-933-61	FUSIBLE 0.1 10% 1/2W		
474		G	RESISTOR		R1404	1-208-798-11	METAL CHIP 4.7K 0.5% 1/10W		
475		G	RESISTOR		R1405	1-245-478-21	METAL 470K 1% 1/4W		
476		G	RESISTOR		R1406	1-245-479-21	METAL 510K 1% 1/4W		
477		G	RESISTOR		R1407	1-216-073-91	RES-CHIP 10K 5% 1/10W		
478		G	RESISTOR		R1408	1-216-017-91	RES-CHIP 47 5% 1/10W		
479		G	RESISTOR		R1410	1-216-678-11	METAL CHIP 13K 0.5% 1/10W		
480		G	RESISTOR		R1411	1-216-623-11	METAL CHIP 68 0.5% 1/10W		
481		G	RESISTOR		R1412	1-216-621-11	METAL CHIP 56 0.5% 1/10W		
482		G	RESISTOR		R1413	1-249-393-11	CARBON 10 5% 1/4W		
483		G	RESISTOR		R1414	1-249-393-11	CARBON 10 5% 1/4W		
484		G	RESISTOR		R1415	1-216-073-91	RES-CHIP 10K 5% 1/10W		
485		G	RESISTOR		R1416	1-216-073-91	RES-CHIP 10K 5% 1/10W		
486		G	RESISTOR		R1417	1-243-667-31	CEMENTED 0.05 5% 2W		
487		G	RESISTOR		R1418	1-216-041-00	RES-CHIP 470 5% 1/10W		
488		G	RESISTOR		R1419	1-245-478-21	METAL 470K 1% 1/4W		
489		G	RESISTOR		R1420	1-245-478-21	METAL 470K 1% 1/4W		
490		G	RESISTOR		R1423	1-245-478-21	METAL 470K 1% 1/4W		
491		G	RESISTOR		R1424	1-245-478-21	METAL 470K 1% 1/4W		
492		G	RESISTOR		R1425	1-245-478-21	METAL 470K 1% 1/4W		
493		G	RESISTOR		R1426	1-245-479-21	METAL 510K 1% 1/4W		
494		G	RESISTOR		R1427	1-216-672-11	METAL CHIP 7.5K 0.5% 1/10W		
495		G	RESISTOR		R1428	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
496		G	RESISTOR		R1429	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
497		G	RESISTOR		R1430	1-216-049-11	RES-CHIP 1K 5% 1/10W		
498		G	RESISTOR		R1501	1-216-049-11	RES-CHIP 1K 5% 1/10W		
499		G	RESISTOR		R1502	1-216-049-11	RES-CHIP 1K 5% 1/10W		
500		G	RESISTOR		R1503	1-216-045-00	RES-CHIP 680 5% 1/10W		
501		G	RESISTOR		R1504	1-216-049-11	RES-CHIP 1K 5% 1/10W		
502		G	RESISTOR		R1505	1-216-073-91	RES-CHIP 10K 5% 1/10W		
503		G	RESISTOR		R1506	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		
504		G	RESISTOR		R1507	1-208-833-11	METAL CHIP 130K 0.5% 1/10W		
505		G	RESISTOR		R1508	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
506		G	RESISTOR		R1509	1-202-962-11	CEMENTED 3.3 5% 10W		
507		G	RESISTOR		R1510	1-216-089-91	RES-CHIP 47K 5% 1/10W		
508		G	RESISTOR		R1513	1-216-073-91	RES-CHIP 10K 5% 1/10W		
509		G	RESISTOR		R1514	1-215-900-11	METAL OXIDE 22K 5% 2W		
510		G	RESISTOR		R1515	1-216-073-91	RES-CHIP 10K 5% 1/10W		
511		G	RESISTOR		R1516	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
512		G	RESISTOR		R1517	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
513		G	RESISTOR		R1518	1-208-832-11	METAL CHIP 120K 0.5% 1/10W		
514		G	RESISTOR		R1519	1-216-001-00	RES-CHIP 10 5% 1/10W		
515		G	RESISTOR		R1530	1-220-893-11	METAL 0.22 10% 5W		
516		G	RESISTOR		R1601	1-216-081-00	RES-CHIP 22K 5% 1/10W		
517		G	RESISTOR		R1602	1-249-405-11	CARBON 100 5% 1/4W		
518		G	RESISTOR		R1603	1-242-949-11	FUSIBLE 0.1 10% 1W		
519		G	RESISTOR		R1604	1-208-800-11	METAL CHIP 5.6K 0.5% 1/10W		
520		G	RESISTOR		R1605	1-216-623-11	METAL CHIP 68 0.5% 1/10W		
521		G	RESISTOR		R1606	1-245-478-21	METAL 470K 1% 1/4W		
522		G	RESISTOR		R1607	1-245-479-21	METAL 510K 1% 1/4W		
523		G	RESISTOR		R1608	1-216-073-91	RES-CHIP 10K 5% 1/10W		
524		G	RESISTOR		R1609	1-216-017-91	RES-CHIP 47 5% 1/10W		
525		G	RESISTOR		R1611	1-216-678-11	METAL CHIP 13K 0.5% 1/10W		
526		G	RESISTOR		R1612	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
527		G	RESISTOR		R1613	1-216-621-11	METAL CHIP 56 0.5% 1/10W		
528		G	RESISTOR		R1614	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
529		G	RESISTOR		R1615	1-249-393-11	CARBON 10 5% 1/4W		
530		G	RESISTOR		R1616	1-249-393-11	CARBON 10 5% 1/4W		
531		G	RESISTOR		R1617	1-216-073-91	RES-CHIP 10K 5% 1/10W		
532		G	RESISTOR		R1618	1-216-073-91	RES-CHIP 10K 5% 1/10W		
533		G	RESISTOR		R1619	1-243-667-31	CEMENTED 0.05 5% 2W		
534		G	RESISTOR		R1620	1-216-041-00	RES-CHIP 470 5% 1/10W		
535		G	RESISTOR		R1701	1-216-049-11	RES-CHIP 1K 5% 1/10W		
536		G	RESISTOR		R1702	1-216-049-11	RES-CHIP 1K 5% 1/10W		
537		G	RESISTOR		R1703	1-216-045-00	RES-CHIP 680 5% 1/10W		
538		G	RESISTOR		R1704	1-216-049-11	RES-CHIP 1K 5% 1/10W		
539		G	RESISTOR		R1705	1-216-105-91	RES-CHIP 220K 5% 1/10W		
540		G	RESISTOR		R1707	1-205-998-11	CEMENTED 1 5% 10W		
541		G	RESISTOR		R1708	1-205-998-11	CEMENTED 1 5% 10W		
542		G	RESISTOR		R1709	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
543		G	RESISTOR		R1710	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
544		G	RESISTOR		R1711	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
545		G	RESISTOR		R1712	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
546		G	RESISTOR		R1714	1-216-089-91	RES-CHIP 47K 5% 1/10W		
547		G	RESISTOR		R1716	1-216-073-91	RES-CHIP 10K 5% 1/10W		
548		G	RESISTOR		R1719	1-216-073-91	RES-CHIP 10K 5% 1/10W		
549		G	RESISTOR		R1720	1-245-447-11	CEMENTED 22 5% 20W		
550		G	RESISTOR		R1721	1-216-001-00	RES-CHIP 10 5% 1/10W		
551		G	RESISTOR		R1722	1-218-642-11	METAL OXIDE 100K 5% 1W		
552		G	RESISTOR		R1723	1-218-642-11	METAL OXIDE 100K 5% 1W		
553		G	RESISTOR		R1803	1-208-829-11	METAL CHIP 91K 0.5% 1/10W		
554		G	RESISTOR		R1804	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
555		G	RESISTOR		R1805	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
556		G	RESISTOR		R1806	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
557		G	RESISTOR		R1807	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
558		G	RESISTOR		R1808	1-216-073-91	RES-CHIP 10K 5% 1/10W		
559		G	RESISTOR		R1809	1-216-073-91	RES-CHIP 10K 5% 1/10W		
560		G	RESISTOR		R1810	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
561		G	RESISTOR		R1811	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
562		G	RESISTOR		R1818	1-208-832-11	METAL CHIP 120K 0.5% 1/10W		
563		G	RESISTOR		R1819	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
564		G	RESISTOR		R1820	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
565		G	RESISTOR		R1821	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
566		G	RESISTOR		R1823	1-216-073-91	RES-CHIP 10K 5% 1/10W		
567		G	RESISTOR		R1824	1-216-073-91	RES-CHIP 10K 5% 1/10W		
568		G	RESISTOR		R1827	1-208-827-11	METAL CHIP 75K 0.5% 1/10W		
569		G	RESISTOR		R1828	1-208-827-11	METAL CHIP 75K 0.5% 1/10W		
570		G	RESISTOR		R1829	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
571		G	RESISTOR		R1836	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
572		G	RESISTOR		R1856	1-216-097-11	RES-CHIP 100K 5% 1/10W		
573		G	RESISTOR		R1857	1-216-097-11	RES-CHIP 100K 5% 1/10W		
574		G	RESISTOR		R1858	1-216-676-11	METAL CHIP 11K 0.5% 1/10W		
575		G	VARIABLE RESISTOR		RV1001	1-241-762-11	RES, ADJ, CARBON 2.2K		
576		G	VARIABLE RESISTOR		RV1501	1-241-768-11	RES, ADJ, CARBON 220K		
577		G	VARIABLE RESISTOR		RV1701	1-223-387-21	RES, ADJ, CARBON 330K		
578		G	RELAY		RY1001	1-755-357-11	RELAY, AC POWER		
579		G	TRANSFORMER		T1201	1-437-972-11	DC-DC CONVERTER TRANSFORMER		
580		G	TRANSFORMER		T1401	1-437-973-21	TRANSFORMER, DC-DC CONVERTER		
581		G	TRANSFORMER		T1601	1-437-974-21	TRANSFORMER, DC-DC CONVERTER		
582		G	TRANSFORMER		T1602	1-437-974-21	TRANSFORMER, DC-DC CONVERTER		
583		G	THERMISTOR		TH1701	1-809-789-71	THERMISTOR, POSITIVE		
584		G	CHIP CHCKER		TP1001	1-695-915-11	TAB (CONTACT)		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
585		G	CHIP CHCKER		TP1002	1-695-915-11	TAB (CONTACT)		
586		G	CHIP CHCKER		TP1201	1-695-915-11	TAB (CONTACT)		
587		G	CHIP CHCKER		TP1401	1-695-915-11	TAB (CONTACT)		
588		G	CHIP CHCKER		TP1501	1-695-915-11	TAB (CONTACT)		
589		G	CHIP CHCKER		TP1502	1-695-915-11	TAB (CONTACT)		
590		G	CHIP CHCKER		TP1701	1-695-915-11	TAB (CONTACT)		
591		DEM	CAPACITOR		C3105	1-117-863-11	CERAMIC CHIP 0.47UF	10.00% 6.3V	
592		DEM	CAPACITOR		C3106	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
593		DEM	CAPACITOR		C3107	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
594		DEM	CAPACITOR		C3108	1-117-863-11	CERAMIC CHIP 0.47UF	10.00% 6.3V	
595		DEM	CAPACITOR		C3109	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
596		DEM	CAPACITOR		C3110	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
597		DEM	CAPACITOR		C3111	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
598		DEM	CAPACITOR		C3112	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
599		DEM	CAPACITOR		C3113	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	
600		DEM	CAPACITOR		C3114	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
601		DEM	CAPACITOR		C3115	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
602		DEM	CAPACITOR		C3116	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
603		DEM	CAPACITOR		C3117	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
604		DEM	CAPACITOR		C3118	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
605		DEM	CAPACITOR		C3120	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
606		DEM	CAPACITOR		C3121	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
607		DEM	CAPACITOR		C3122	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V	
608		DEM	CAPACITOR		C3123	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
609		DEM	CAPACITOR		C3124	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
610		DEM	CAPACITOR		C3125	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
611		DEM	CAPACITOR		C3126	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
612		DEM	CAPACITOR		C3127	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
613		DEM	CAPACITOR		C3128	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
614		DEM	CAPACITOR		C3129	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	
615		DEM	CAPACITOR		C3130	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
616		DEM	CAPACITOR		C3131	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
617		DEM	CAPACITOR		C3132	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
618		DEM	CAPACITOR		C3133	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
619		DEM	CAPACITOR		C3251	1-124-778-00	ELECT CHIP 22UF	20.00% 6.3V	
620		DEM	CAPACITOR		C3252	1-117-863-11	CERAMIC CHIP 0.47UF	10.00% 6.3V	
621		DEM	CAPACITOR		C3253	1-126-246-11	ELECT CHIP 220UF	20.00% 4V	
622		DEM	CAPACITOR		C3254	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
623		DEM	CAPACITOR		C3255	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
624		DEM	CAPACITOR		C3256	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
625		DEM	CAPACITOR		C3257	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
626		DEM	CAPACITOR		C3258	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
627		DEM	CAPACITOR		C3259	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
628		DEM	CAPACITOR		C3260	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
629		DEM	CAPACITOR		C3261	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
630		DEM	CAPACITOR		C3262	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
631		DEM	CAPACITOR		C3263	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
632		DEM	CAPACITOR		C3264	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
633		DEM	CAPACITOR		C3265	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
634		DEM	CAPACITOR		C3266	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
635		DEM	CAPACITOR		C3267	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
636		DEM	CAPACITOR		C3268	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
637		DEM	CAPACITOR		C3269	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
638		DEM	CAPACITOR		C3270	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
639		DEM	CAPACITOR		C3271	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
640		DEM	CAPACITOR		C3272	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
641		DEM	CAPACITOR		C3273	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
642		DEM	CAPACITOR		C3274	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
643		DEM	CAPACITOR		C3275	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
644		DEM	CAPACITOR		C3276	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
645		DEM	CAPACITOR		C3277	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
646		DEM	CAPACITOR		C3278	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
647		DEM	CAPACITOR		C3279	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
648		DEM	CAPACITOR		C3301	1-124-778-00	ELECT CHIP 22UF	20.00% 6.3V	
649		DEM	CAPACITOR		C3302	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
650		DEM	CAPACITOR		C3303	1-124-778-00	ELECT CHIP 22UF	20.00% 6.3V	
651		DEM	CAPACITOR		C3304	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	
652		DEM	CAPACITOR		C3305	1-126-395-11	ELECT CHIP 22UF	20.00% 16V	
653		DEM	CAPACITOR		C3306	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	
654		DEM	CAPACITOR		C3307	1-126-395-11	ELECT CHIP 22UF	20.00% 16V	
655		DEM	CAPACITOR		C3309	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	
656		DEM	CAPACITOR		C3310	1-164-935-11	CERAMIC CHIP 470PF	10.00% 50V	
657		DEM	CAPACITOR		C3311	1-125-838-11	CERAMIC CHIP 2.2UF	10% 6.3V	

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
658		DEM	CAPACITOR		C3312	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
659		DEM	CAPACITOR		C3313	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
660		DEM	CAPACITOR		C3314	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
661		DEM	CAPACITOR		C3315	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
662		DEM	CAPACITOR		C3318	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
663		DEM	CAPACITOR		C3320	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
664		DEM	CAPACITOR		C3321	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
665		DEM	CAPACITOR		C3322	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
666		DEM	CAPACITOR		C3323	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
667		DEM	CAPACITOR		C3351	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
668		DEM	CAPACITOR		C3353	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
669		DEM	CAPACITOR		C3354	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V		
670		DEM	CAPACITOR		C3355	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
671		DEM	CAPACITOR		C3356	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
672		DEM	CAPACITOR		C3357	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
673		DEM	CAPACITOR		C3358	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
674		DEM	CAPACITOR		C3401	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
675		DEM	CAPACITOR		C3402	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
676		DEM	CAPACITOR		C3404	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
677		DEM	CAPACITOR		C3405	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
678		DEM	CAPACITOR		C3406	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
679		DEM	CAPACITOR		C3407	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
680		DEM	CAPACITOR		C3408	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
681		DEM	CAPACITOR		C3409	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V		
682		DEM	CAPACITOR		C3410	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
683		DEM	CAPACITOR		C3415	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
684		DEM	CAPACITOR		C3416	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
685		DEM	CAPACITOR		C3417	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
686		DEM	CAPACITOR		C3451	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
687		DEM	CAPACITOR		C3452	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
688		DEM	CAPACITOR		C3453	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
689		DEM	CAPACITOR		C3501	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
690		DEM	CAPACITOR		C3502	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
691		DEM	CAPACITOR		C3503	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
692		DEM	CAPACITOR		C3504	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
693		DEM	CAPACITOR		C3505	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
694		DEM	CAPACITOR		C3506	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
695		DEM	CAPACITOR		C3507	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
696		DEM	CAPACITOR		C3508	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
697		DEM	CAPACITOR		C3509	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
698		DEM	CAPACITOR		C3510	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
699		DEM	CAPACITOR		C3511	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
700		DEM	CAPACITOR		C3512	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
701		DEM	CAPACITOR		C3513	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
702		DEM	CAPACITOR		C3514	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
703		DEM	CAPACITOR		C3515	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
704		DEM	CAPACITOR		C3516	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
705		DEM	CAPACITOR		C3517	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
706		DEM	CAPACITOR		C3518	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
707		DEM	CAPACITOR		C3519	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
708		DEM	CAPACITOR		C3520	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
709		DEM	CAPACITOR		C3521	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
710		DEM	CAPACITOR		C3522	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
711		DEM	CAPACITOR		C3523	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
712		DEM	CAPACITOR		C3524	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
713		DEM	CAPACITOR		C3525	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
714		DEM	CAPACITOR		C3526	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
715		DEM	CAPACITOR		C3527	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
716		DEM	CAPACITOR		C3528	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
717		DEM	CAPACITOR		C3529	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
718		DEM	CAPACITOR		C3530	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
719		DEM	CAPACITOR		C3531	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
720		DEM	CAPACITOR		C3532	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
721		DEM	CAPACITOR		C3533	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
722		DEM	CAPACITOR		C3534	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
723		DEM	CAPACITOR		C3535	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
724		DEM	CAPACITOR		C3536	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
725		DEM	CAPACITOR		C3537	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
726		DEM	CAPACITOR		C3538	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
727		DEM	CAPACITOR		C3539	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
728		DEM	CAPACITOR		C3540	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
729		DEM	CAPACITOR		C3541	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
730		DEM	CAPACITOR		C3542	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		



No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
804		DEM	CAPACITOR		C3626	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
805		DEM	CAPACITOR		C3627	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
806		DEM	CAPACITOR		C3628	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
807		DEM	CAPACITOR		C3629	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
808		DEM	CAPACITOR		C3630	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
809		DEM	CAPACITOR		C3631	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
810		DEM	CAPACITOR		C3632	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
811		DEM	CAPACITOR		C3633	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
812		DEM	CAPACITOR		C3634	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
813		DEM	CAPACITOR		C3635	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
814		DEM	CAPACITOR		C3636	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
815		DEM	CAPACITOR		C3637	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
816		DEM	CAPACITOR		C3638	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
817		DEM	CAPACITOR		C3639	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
818		DEM	CAPACITOR		C3642	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
819		DEM	CAPACITOR		C3701	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
820		DEM	CAPACITOR		C3703	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
821		DEM	CAPACITOR		C3705	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
822		DEM	CAPACITOR		C3707	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
823		DEM	CAPACITOR		C3708	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
824		DEM	CAPACITOR		C3709	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
825		DEM	CAPACITOR		C3710	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
826		DEM	CAPACITOR		C3711	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
827		DEM	CAPACITOR		C3712	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
828		DEM	CAPACITOR		C3713	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
829		DEM	CAPACITOR		C3714	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
830		DEM	CAPACITOR		C3715	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
831		DEM	CAPACITOR		C3716	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
832		DEM	CAPACITOR		C3801	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
833		DEM	CAPACITOR		C3802	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
834		DEM	CAPACITOR		C3803	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
835		DEM	CAPACITOR		C3804	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
836		DEM	CAPACITOR		C3805	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
837		DEM	CAPACITOR		C3806	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
838		DEM	CAPACITOR		C3807	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
839		DEM	CAPACITOR		C3808	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
840		DEM	CAPACITOR		C3809	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
841		DEM	CAPACITOR		C3810	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
842		DEM	CAPACITOR		C3811	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
843		DEM	CAPACITOR		C3812	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
844		DEM	CAPACITOR		C3813	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
845		DEM	CAPACITOR		C3814	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
846		DEM	CAPACITOR		C3815	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
847		DEM	CAPACITOR		C3816	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
848		DEM	CONNECTOR		CN3101	1-817-112-11	HALF PITCH CONNECTOR (26PIN)		
849		DEM	CONNECTOR		CN3102	1-817-120-11	CONNECTOR, DVI-D		
850		DEM	CONNECTOR		CN3251	1-764-080-21	PIN, CONNECTOR (PC BOARD) 8P		
851		DEM	CONNECTOR	*	CN3301	1-779-268-21	PIN, CONNECTOR (1.5MM)(SMD)11P		
852		DEM	CONNECTOR		CN3302	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
853		DEM	CONNECTOR		CN3303	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
854		DEM	CONNECTOR		CN3304	1-815-954-21	PIN, CONNECTOR (PC BOARD) 13P		
855		DEM	CONNECTOR		CN3306	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD)6P		
856		DEM	DIODE		D3101	8-719-069-55	DIODE UDVZSTE-175.6B		
857		DEM	DIODE		D3103	8-719-069-55	DIODE UDVZSTE-175.6B		
858		DEM	DIODE		D3104	6-500-758-01	DIODE RCLAMP0504M.TBT		
859		DEM	DIODE		D3105	8-719-941-86	DIODE DAN202U		
860		DEM	DIODE		D3106	6-500-758-01	DIODE RCLAMP0504M.TBT		
861		DEM	DIODE		D3107	8-719-941-86	DIODE DAN202U		
862		DEM	DIODE		D3108	8-719-024-77	DIODE HN1D03FU-TE85L		
863		DEM	DIODE		D3109	8-719-024-77	DIODE HN1D03FU-TE85L		
864		DEM	DIODE		D3110	8-719-024-77	DIODE HN1D03FU-TE85L		
865		DEM	DIODE		D3111	8-719-024-77	DIODE HN1D03FU-TE85L		
866		DEM	DIODE		D3112	8-719-069-55	DIODE UDVZSTE-175.6B		
867		DEM	DIODE		D3113	8-719-404-50	DIODE MA111-TX		
868		DEM	DIODE		D3114	8-719-404-50	DIODE MA111-TX		
869		DEM	DIODE		D3302	8-719-404-50	DIODE MA111-TX		
870		DEM	DIODE		D3303	8-719-404-50	DIODE MA111-TX		
871		DEM	DIODE		D3305	8-719-941-09	DIODE DAP202U		
872		DEM	DIODE		D3307	8-719-404-50	DIODE MA111-TX		
873		DEM	DIODE		D3401	8-719-083-58	DIODE UDVZSTE-173.9B		
874		DEM	DIODE		D3402	8-719-081-19	DIODE 1SS383(T5RSONY1)		
875		DEM	FERRITE BEAD		FB3102	1-414-445-11	FERRITE 0UH		
876		DEM	FERRITE BEAD		FB3103	1-414-445-11	FERRITE 0UH		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
877		DEM	FERRITE BEAD		FB3104	1-414-445-11	FERRITE 0UH		
878		DEM	FERRITE BEAD		FB3105	1-414-445-11	FERRITE 0UH		
879		DEM	FERRITE BEAD		FB3106	1-414-445-11	FERRITE 0UH		
880		DEM	FERRITE BEAD		FB3107	1-414-445-11	FERRITE 0UH		
881		DEM	FERRITE BEAD		FB3251	1-414-864-11	FERRITE 0UH		
882		DEM	FERRITE BEAD		FB3252	1-414-864-11	FERRITE 0UH		
883		DEM	FERRITE BEAD		FB3253	1-414-864-11	FERRITE 0UH		
884		DEM	FERRITE BEAD		FB3301	1-414-864-11	FERRITE 0UH		
885		DEM	FERRITE BEAD		FB3302	1-414-864-11	FERRITE 0UH		
886		DEM	FERRITE BEAD		FB3304	1-414-445-11	FERRITE 0UH		
887		DEM	FERRITE BEAD		FB3305	1-414-864-11	FERRITE 0UH		
888		DEM	FERRITE BEAD		FB3306	1-414-445-11	FERRITE 0UH		
889		DEM	FERRITE BEAD		FB3308	1-414-445-11	FERRITE 0UH		
890		DEM	FERRITE BEAD		FB3352	1-414-864-11	FERRITE 0UH		
891		DEM	FERRITE BEAD		FB3402	1-414-445-11	FERRITE 0UH		
892		DEM	FERRITE BEAD		FB3403	1-414-445-11	FERRITE 0UH		
893		DEM	FERRITE BEAD		FB3404	1-414-445-11	FERRITE 0UH		
894		DEM	FERRITE BEAD		FB3501	1-414-864-11	FERRITE 0UH		
895		DEM	FERRITE BEAD		FB3502	1-414-864-11	FERRITE 0UH		
896		DEM	FERRITE BEAD		FB3503	1-414-864-11	FERRITE 0UH		
897		DEM	FERRITE BEAD		FB3504	1-414-864-11	FERRITE 0UH		
898		DEM	FERRITE BEAD		FB3601	1-414-864-11	FERRITE 0UH		
899		DEM	FERRITE BEAD		FB3602	1-414-864-11	FERRITE 0UH		
900		DEM	FERRITE BEAD		FB3603	1-414-864-11	FERRITE 0UH		
901		DEM	FERRITE BEAD		FB3701	1-414-864-11	FERRITE 0UH		
902		DEM	FERRITE BEAD		FB3702	1-414-864-11	FERRITE 0UH		
903		DEM	FERRITE BEAD		FB3801	1-414-445-11	FERRITE 0UH		
904		DEM	FERRITE BEAD		FB3802	1-414-445-11	FERRITE 0UH		
905		DEM	FERRITE BEAD		FB3803	1-414-445-11	FERRITE 0UH		
906		DEM	IC		IC3101	8-759-338-95	IC NJM2903V(TE2)		
907		DEM	IC		IC3102	8-759-549-01	IC SN74LV125APWR		
908		DEM	IC		IC3103	6-705-382-01	IC SN65LVDS179DGKR		
909		DEM	IC		IC3104	8-759-683-99	IC BA8274F-E2		
910		DEM	IC		IC3105	8-759-596-39	IC SN74LV4052APWR		
911		DEM	IC		IC3106	8-759-672-79	IC M24C02-WMN6T(A)		
912		DEM	IC		IC3107	8-759-596-39	IC SN74LV4052APWR		
913		DEM	IC		IC3108	6-704-602-01	IC M24C04-WMN6T(B)		
914		DEM	IC		IC3109	6-703-097-01	IC TFP501PZP		
915		DEM	IC		IC3110	6-702-982-01	IC TC7SA00FU(TE85R)		
916		DEM	IC		IC3111	6-705-382-01	IC SN65LVDS179DGKR		
917		DEM	IC		IC3112	6-704-351-01	IC SN74LVC2G08DCUR		
918		DEM	IC		IC3251	6-700-394-01	IC BA25BC0FP-E2		
919		DEM	IC		IC3252	6-704-713-01	IC XC2S50-5TQG144C		
920		DEM	IC		IC3253	6-704-718-01	IC XC18V02VQG44C		
921		DEM	IC		IC3301	6-704-351-01	IC SN74LVC2G08DCUR		
922		DEM	IC		IC3303	8-759-579-31	IC PQ20WZ1U		
923		DEM	IC		IC3304	6-701-977-01	IC MM1565AFBE		
924		DEM	IC		IC3305	6-702-362-01	IC MM1563DFBE		
925		DEM	IC		IC3306	6-702-481-01	IC PCA9555DB-118		
926		DEM	IC		IC3308	8-759-567-08	IC MB88141APF-ER		
927		DEM	IC		IC3351	6-702-688-01	IC M24C64-WMN6T(B)		
928		DEM	IC		IC3352	6-700-394-01	IC BA25BC0FP-E2		
929		DEM	IC	*	IC3353	8-759-649-45	IC SN74AHC1G04DCKR		
930		DEM	IC	*	IC3354	8-759-649-45	IC SN74AHC1G04DCKR		
931		DEM	IC		IC3401	6-704-654-01	IC MB91306RPFV-G-BND-E1		
932		DEM	IC		IC3402	6-703-175-01	IC PST3629UL		
933		DEM	IC		IC3403	6-803-742-01	IC MBM29LV800TA-70PFTN-DE100		
934		DEM	IC		IC3405	6-703-006-01	IC SN74CBTLV16210GR		
935		DEM	IC		IC3406	6-703-006-01	IC SN74CBTLV16210GR		
936		DEM	IC		IC3451	6-700-263-01	IC NJM2870F18(TE2)		
937		DEM	IC		IC3501	6-704-515-01	IC CXD9762GF		
938		DEM	IC		IC3502	8-759-694-55	IC MAX1644EAE-TG074		
939		DEM	IC		IC3602	6-705-089-01	IC K4D263238F-UC50T		
940		DEM	IC		IC3603	6-704-520-01	IC MAX1809EEE+TG068		
941		DEM	IC		IC3801	6-700-592-01	IC DS90C387VJDX		
942		DEM	IC		IC3802	6-701-762-11	IC DS90LV018ATMX		
943		DEM	COIL		L3301	1-469-553-21	INDUCTOR 4.7UH		
944		DEM	COIL		L3303	1-419-630-21	INDUCTOR 4.7UH		
945		DEM	COIL		L3304	1-469-553-21	INDUCTOR 4.7UH		
946		DEM	COIL		L3501	1-419-630-21	INDUCTOR 4.7UH		
947		DEM	COIL		L3601	1-419-630-21	INDUCTOR 4.7UH		
948		DEM	TRANSISTOR		Q3101	8-729-029-14	TRANSISTOR DTC144EUA-T106		
949		DEM	TRANSISTOR		Q3102	8-729-907-00	TRANSISTOR DTC114EU		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
950		DEM	TRANSISTOR		Q3105	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
951		DEM	TRANSISTOR		Q3106	8-729-907-00	TRANSISTOR DTC114EU		
952		DEM	TRANSISTOR		Q3107	8-729-046-75	TRANSISTOR SI2301DS-T1		
953		DEM	TRANSISTOR		Q3108	8-729-907-00	TRANSISTOR DTC114EU		
954		DEM	TRANSISTOR		Q3110	8-729-907-00	TRANSISTOR DTC114EU		
955		DEM	TRANSISTOR		Q3111	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
956		DEM	TRANSISTOR		Q3116	8-729-924-39	TRANSISTOR DTC143XU		
957		DEM	TRANSISTOR		Q3117	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
958		DEM	TRANSISTOR		Q3118	8-729-021-23	TRANSISTOR RN4902(TE85R)		
959		DEM	TRANSISTOR		Q3119	8-729-021-23	TRANSISTOR RN4902(TE85R)		
960		DEM	TRANSISTOR		Q3120	8-729-021-23	TRANSISTOR RN4902(TE85R)		
961		DEM	TRANSISTOR		Q3251	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
962		DEM	TRANSISTOR		Q3303	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
963		DEM	TRANSISTOR		Q3304	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
964		DEM	TRANSISTOR		Q3305	8-729-046-75	TRANSISTOR SI2301DS-T1		
965		DEM	TRANSISTOR		Q3306	8-729-907-00	TRANSISTOR DTC114EU		
966		DEM	TRANSISTOR		Q3351	8-729-021-23	TRANSISTOR RN4902(TE85R)		
967		DEM	RESISTOR		R3101	1-216-864-11	SHORT CHIP 0		
968		DEM	RESISTOR		R3102	1-216-864-11	SHORT CHIP 0		
969		DEM	RESISTOR		R3103	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
970		DEM	RESISTOR		R3104	1-216-864-11	SHORT CHIP 0		
971		DEM	RESISTOR		R3105	1-218-965-11	RES-CHIP 10K 5% 1/16W		
972		DEM	RESISTOR		R3106	1-216-864-11	SHORT CHIP 0		
973		DEM	RESISTOR		R3107	1-218-941-81	RES-CHIP 100 5% 1/16W		
974		DEM	RESISTOR		R3108	1-218-941-81	RES-CHIP 100 5% 1/16W		
975		DEM	RESISTOR		R3109	1-218-933-11	RES-CHIP 22 5% 1/16W		
976		DEM	RESISTOR		R3110	1-218-973-11	RES-CHIP 47K 5% 1/16W		
977		DEM	RESISTOR		R3111	1-218-965-11	RES-CHIP 10K 5% 1/16W		
978		DEM	RESISTOR		R3112	1-218-953-11	RES-CHIP 1K 5% 1/16W		
979		DEM	RESISTOR		R3113	1-218-941-81	RES-CHIP 100 5% 1/16W		
980		DEM	RESISTOR		R3114	1-218-941-81	RES-CHIP 100 5% 1/16W		
981		DEM	RESISTOR		R3115	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
982		DEM	RESISTOR		R3116	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
983		DEM	RESISTOR		R3117	1-218-965-11	RES-CHIP 10K 5% 1/16W		
984		DEM	RESISTOR		R3118	1-218-973-11	RES-CHIP 47K 5% 1/16W		
985		DEM	RESISTOR		R3119	1-218-965-11	RES-CHIP 10K 5% 1/16W		
986		DEM	RESISTOR		R3120	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
987		DEM	RESISTOR		R3121	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
988		DEM	RESISTOR		R3126	1-218-941-11	RES-CHIP 100 5% 1/16W		
989		DEM	RESISTOR		R3127	1-218-941-11	RES-CHIP 100 5% 1/16W		
990		DEM	RESISTOR		R3132	1-218-965-11	RES-CHIP 10K 5% 1/16W		
991		DEM	RESISTOR		R3133	1-218-965-11	RES-CHIP 10K 5% 1/16W		
992		DEM	RESISTOR		R3135	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
993		DEM	RESISTOR		R3136	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
994		DEM	RESISTOR		R3137	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
995		DEM	RESISTOR		R3138	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
996		DEM	RESISTOR		R3139	1-218-953-11	RES-CHIP 1K 5% 1/16W		
997		DEM	RESISTOR		R3141	1-218-965-11	RES-CHIP 10K 5% 1/16W		
998		DEM	RESISTOR		R3142	1-218-965-11	RES-CHIP 10K 5% 1/16W		
999		DEM	RESISTOR		R3144	1-218-990-11	SHORT CHIP 0		
1000		DEM	RESISTOR		R3146	1-218-990-11	SHORT CHIP 0		
1001		DEM	RESISTOR		R3147	1-218-990-11	SHORT CHIP 0		
1002		DEM	RESISTOR		R3150	1-218-933-11	RES-CHIP 22 5% 1/16W		
1003		DEM	RESISTOR		R3152	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1004		DEM	RESISTOR		R3153	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1005		DEM	RESISTOR		R3155	1-218-933-11	RES-CHIP 22 5% 1/16W		
1006		DEM	RESISTOR		R3156	1-218-933-11	RES-CHIP 22 5% 1/16W		
1007		DEM	RESISTOR		R3157	1-218-933-11	RES-CHIP 22 5% 1/16W		
1008		DEM	RESISTOR		R3158	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1009		DEM	RESISTOR		R3159	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1010		DEM	RESISTOR		R3160	1-218-953-11	RES-CHIP 1K 5% 1/16W		
1011		DEM	RESISTOR		R3162	1-218-941-81	RES-CHIP 100 5% 1/16W		
1012		DEM	RESISTOR		R3163	1-218-941-81	RES-CHIP 100 5% 1/16W		
1013		DEM	RESISTOR		R3164	1-218-941-81	RES-CHIP 100 5% 1/16W		
1014		DEM	RESISTOR		R3165	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1015		DEM	RESISTOR		R3166	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1016		DEM	RESISTOR		R3167	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1017		DEM	RESISTOR		R3168	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1018		DEM	RESISTOR		R3170	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1019		DEM	RESISTOR		R3171	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1020		DEM	RESISTOR		R3172	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1021		DEM	RESISTOR		R3251	1-218-990-11	SHORT CHIP 0		
1022		DEM	RESISTOR		R3252	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1023		DEM	RESISTOR		R3253	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1024		DEM	RESISTOR		R3254	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1025		DEM	RESISTOR		R3255	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1026		DEM	RESISTOR		R3256	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1027		DEM	RESISTOR		R3257	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1028		DEM	RESISTOR		R3259	1-218-933-11	RES-CHIP 22 5% 1/16W		
1029		DEM	RESISTOR		R3260	1-218-933-11	RES-CHIP 22 5% 1/16W		
1030		DEM	RESISTOR		R3261	1-218-933-11	RES-CHIP 22 5% 1/16W		
1031		DEM	RESISTOR		R3262	1-218-947-11	RES-CHIP 330 5% 1/16W		
1032		DEM	RESISTOR		R3263	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1033		DEM	RESISTOR		R3264	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1034		DEM	RESISTOR		R3265	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1035		DEM	RESISTOR		R3266	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1036		DEM	RESISTOR		R3267	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1037		DEM	RESISTOR		R3268	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1038		DEM	RESISTOR		R3269	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1039		DEM	RESISTOR		R3303	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1040		DEM	RESISTOR		R3304	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1041		DEM	RESISTOR		R3305	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1042		DEM	RESISTOR		R3307	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1043		DEM	RESISTOR		R3308	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1044		DEM	RESISTOR		R3309	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W		
1045		DEM	RESISTOR		R3310	1-208-702-11	METAL CHIP 6.2K 0.5% 1/16W		
1046		DEM	RESISTOR		R3311	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
1047		DEM	RESISTOR		R3314	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1048		DEM	RESISTOR		R3317	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1049		DEM	RESISTOR		R3318	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1050		DEM	RESISTOR		R3320	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1051		DEM	RESISTOR		R3321	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1052		DEM	RESISTOR		R3323	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1053		DEM	RESISTOR		R3325	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1054		DEM	RESISTOR		R3326	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1055		DEM	RESISTOR		R3327	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1056		DEM	RESISTOR		R3328	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1057		DEM	RESISTOR		R3329	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1058		DEM	RESISTOR		R3330	1-218-990-11	SHORT CHIP 0		
1059		DEM	RESISTOR		R3331	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1060		DEM	RESISTOR		R3332	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1061		DEM	RESISTOR		R3333	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1062		DEM	RESISTOR		R3334	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1063		DEM	RESISTOR		R3335	1-218-990-11	SHORT CHIP 0		
1064		DEM	RESISTOR		R3337	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1065		DEM	RESISTOR		R3338	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1066		DEM	RESISTOR		R3341	1-216-864-11	SHORT CHIP 0		
1067		DEM	RESISTOR		R3342	1-216-864-11	SHORT CHIP 0		
1068		DEM	RESISTOR		R3351	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1069		DEM	RESISTOR		R3352	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1070		DEM	RESISTOR		R3357	1-218-990-11	SHORT CHIP 0		
1071		DEM	RESISTOR		R3403	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1072		DEM	RESISTOR		R3404	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1073		DEM	RESISTOR		R3405	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1074		DEM	RESISTOR		R3406	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1075		DEM	RESISTOR		R3408	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1076		DEM	RESISTOR		R3409	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1077		DEM	RESISTOR		R3410	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1078		DEM	RESISTOR		R3411	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1079		DEM	RESISTOR		R3412	1-218-953-11	RES-CHIP 1K 5% 1/16W		
1080		DEM	RESISTOR		R3413	1-218-941-81	RES-CHIP 100 5% 1/16W		
1081		DEM	RESISTOR		R3414	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1082		DEM	RESISTOR		R3415	1-218-941-81	RES-CHIP 100 5% 1/16W		
1083		DEM	RESISTOR		R3416	1-218-941-81	RES-CHIP 100 5% 1/16W		
1084		DEM	RESISTOR		R3419	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1085		DEM	RESISTOR		R3422	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1086		DEM	RESISTOR		R3423	1-218-990-11	SHORT CHIP 0		
1087		DEM	RESISTOR		R3425	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1088		DEM	RESISTOR		R3427	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1089		DEM	RESISTOR		R3428	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1090		DEM	RESISTOR		R3429	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1091		DEM	RESISTOR		R3436	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1092		DEM	RESISTOR		R3437	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1093		DEM	RESISTOR		R3440	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1094		DEM	RESISTOR		R3441	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1095		DEM	RESISTOR		R3442	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description			Remarks-1	Remarks-2
1096		DEM	RESISTOR		R3445	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
1097		DEM	RESISTOR		R3446	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
1098		DEM	RESISTOR		R3447	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
1099		DEM	RESISTOR		R3448	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
1100		DEM	RESISTOR		R3455	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1101		DEM	RESISTOR		R3456	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1102		DEM	RESISTOR		R3457	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1103		DEM	RESISTOR		R3458	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1104		DEM	RESISTOR		R3459	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1105		DEM	RESISTOR		R3460	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1106		DEM	RESISTOR		R3461	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1107		DEM	RESISTOR		R3464	1-218-941-81	RES-CHIP	100	5%	1/16W	
1108		DEM	RESISTOR		R3465	1-218-941-81	RES-CHIP	100	5%	1/16W	
1109		DEM	RESISTOR		R3468	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1110		DEM	RESISTOR		R3469	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1111		DEM	RESISTOR		R3470	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1112		DEM	RESISTOR		R3471	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1113		DEM	RESISTOR		R3505	1-218-933-11	RES-CHIP	22	5%	1/16W	
1114		DEM	RESISTOR		R3506	1-218-990-11	SHORT CHIP	0			
1115		DEM	RESISTOR		R3507	1-218-990-11	SHORT CHIP	0			
1116		DEM	RESISTOR		R3509	1-208-635-11	METAL CHIP	10	0.5%	1/16W	
1117		DEM	RESISTOR		R3510	1-218-981-11	RES-CHIP	220K	5%	1/16W	
1118		DEM	RESISTOR		R3511	1-208-920-81	METAL CHIP	24K	0.5%	1/16W	
1119		DEM	RESISTOR		R3512	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	
1120		DEM	RESISTOR		R3513	1-240-247-91	RES, SQUARE TYPE CHIP	0.1			
1121		DEM	RESISTOR		R3514	1-240-247-91	RES, SQUARE TYPE CHIP	0.1			
1122		DEM	RESISTOR		R3601	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1123		DEM	RESISTOR		R3602	1-218-937-11	RES-CHIP	47	5%	1/16W	
1124		DEM	RESISTOR		R3603	1-218-933-11	RES-CHIP	22	5%	1/16W	
1125		DEM	RESISTOR		R3604	1-218-933-11	RES-CHIP	22	5%	1/16W	
1126		DEM	RESISTOR		R3605	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	
1127		DEM	RESISTOR		R3606	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	
1128		DEM	RESISTOR		R3607	1-208-635-11	METAL CHIP	10	0.5%	1/16W	
1129		DEM	RESISTOR		R3608	1-220-205-11	RES-CHIP	75K	5%	1/16W	
1130		DEM	RESISTOR		R3609	1-216-864-11	SHORT CHIP	0			
1131		DEM	RESISTOR		R3701	1-218-990-11	SHORT CHIP	0			
1132		DEM	RESISTOR		R3702	1-218-990-11	SHORT CHIP	0			
1133		DEM	RESISTOR		R3705	1-218-933-11	RES-CHIP	22	5%	1/16W	
1134		DEM	RESISTOR		R3706	1-218-990-11	SHORT CHIP	0			
1135		DEM	RESISTOR		R3707	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1136		DEM	RESISTOR		R3708	1-218-990-11	SHORT CHIP	0			
1137		DEM	RESISTOR		R3709	1-218-990-11	SHORT CHIP	0			
1138		DEM	RESISTOR		R3710	1-218-990-11	SHORT CHIP	0			
1139		DEM	RESISTOR		R3711	1-218-989-11	RES-CHIP	1M	5%	1/16W	
1140		DEM	RESISTOR		R3712	1-218-941-81	RES-CHIP	100	5%	1/16W	
1141		DEM	RESISTOR		R3713	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1142		DEM	RESISTOR		R3801	1-218-990-11	SHORT CHIP	0			
1143		DEM	RESISTOR		R3802	1-218-990-11	SHORT CHIP	0			
1144		DEM	RESISTOR		R3803	1-218-990-11	SHORT CHIP	0			
1145		DEM	RESISTOR		R3804	1-218-990-11	SHORT CHIP	0			
1146		DEM	RESISTOR		R3805	1-218-933-11	RES-CHIP	22	5%	1/16W	
1147		DEM	RESISTOR		R3807	1-218-990-11	SHORT CHIP	0			
1148		DEM	RESISTOR		R3808	1-218-990-11	SHORT CHIP	0			
1149		DEM	RESISTOR		R3811	1-218-990-11	SHORT CHIP	0			
1150		DEM	RESISTOR		R3812	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1151		DEM	RESISTOR		R3813	1-218-990-11	SHORT CHIP	0			
1152		DEM	RESISTOR		R3814	1-218-990-11	SHORT CHIP	0			
1153		DEM	RESISTOR		R3815	1-218-941-11	RES-CHIP	100	5%	1/16W	
1154		DEM	RESISTOR		R3818	1-218-990-11	SHORT CHIP	0			
1155		DEM	RESISTOR		R3819	1-218-933-11	RES-CHIP	22	5%	1/16W	
1156		DEM	RESISTOR		R3820	1-218-965-11	RES-CHIP	10K	5%	1/16W	
1157		DEM	NETWORK		RB3101	1-233-785-91	RES, NETWORK	100	(1608)		
1158		DEM	NETWORK		RB3102	1-233-785-91	RES, NETWORK	100	(1608)		
1159		DEM	NETWORK		RB3103	1-234-370-21	RES, NETWORK	22X4	(1005)		
1160		DEM	NETWORK		RB3104	1-234-370-21	RES, NETWORK	22X4	(1005)		
1161		DEM	NETWORK		RB3105	1-234-370-21	RES, NETWORK	22X4	(1005)		
1162		DEM	NETWORK		RB3106	1-234-370-21	RES, NETWORK	22X4	(1005)		
1163		DEM	NETWORK		RB3108	1-234-370-21	RES, NETWORK	22X4	(1005)		
1164		DEM	NETWORK		RB3109	1-234-370-21	RES, NETWORK	22X4	(1005)		
1165		DEM	NETWORK		RB3258	1-234-370-21	RES, NETWORK	22X4	(1005)		
1166		DEM	NETWORK		RB3259	1-234-370-21	RES, NETWORK	22X4	(1005)		
1167		DEM	NETWORK		RB3260	1-234-370-21	RES, NETWORK	22X4	(1005)		
1168		DEM	NETWORK		RB3261	1-234-370-21	RES, NETWORK	22X4	(1005)		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1169		DEM	NETWORK		RB3262	1-234-370-21	RES, NETWORK 22X4 (1005)		
1170		DEM	NETWORK		RB3263	1-234-370-21	RES, NETWORK 22X4 (1005)		
1171		DEM	NETWORK		RB3264	1-234-372-21	RES, NETWORK 100X4 (1005)		
1172		DEM	NETWORK		RB3302	1-234-372-21	RES, NETWORK 100X4 (1005)		
1173		DEM	NETWORK		RB3303	1-234-372-21	RES, NETWORK 100X4 (1005)		
1174		DEM	NETWORK		RB3306	1-234-372-21	RES, NETWORK 100X4 (1005)		
1175		DEM	NETWORK		RB3308	1-234-372-21	RES, NETWORK 100X4 (1005)		
1176		DEM	NETWORK		RB3309	1-234-372-21	RES, NETWORK 100X4 (1005)		
1177		DEM	NETWORK		RB3312	1-234-372-21	RES, NETWORK 100X4 (1005)		
1178		DEM	NETWORK		RB3313	1-234-372-21	RES, NETWORK 100X4 (1005)		
1179		DEM	NETWORK		RB3314	1-233-785-91	RES, NETWORK 100 (1608)		
1180		DEM	NETWORK		RB3352	1-233-785-91	RES, NETWORK 100 (1608)		
1181		DEM	NETWORK		RB3402	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1182		DEM	NETWORK		RB3503	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1183		DEM	NETWORK		RB3601	1-234-370-21	RES, NETWORK 22X4 (1005)		
1184		DEM	NETWORK		RB3602	1-234-370-21	RES, NETWORK 22X4 (1005)		
1185		DEM	NETWORK		RB3603	1-234-370-21	RES, NETWORK 22X4 (1005)		
1186		DEM	NETWORK		RB3604	1-234-370-21	RES, NETWORK 22X4 (1005)		
1187		DEM	NETWORK		RB3605	1-234-370-21	RES, NETWORK 22X4 (1005)		
1188		DEM	NETWORK		RB3606	1-234-370-21	RES, NETWORK 22X4 (1005)		
1189		DEM	NETWORK		RB3607	1-234-370-21	RES, NETWORK 22X4 (1005)		
1190		DEM	NETWORK		RB3608	1-234-370-21	RES, NETWORK 22X4 (1005)		
1191		DEM	NETWORK		RB3609	1-234-370-21	RES, NETWORK 22X4 (1005)		
1192		DEM	NETWORK		RB3610	1-234-370-21	RES, NETWORK 22X4 (1005)		
1193		DEM	NETWORK		RB3611	1-234-370-21	RES, NETWORK 22X4 (1005)		
1194		DEM	NETWORK		RB3612	1-234-370-21	RES, NETWORK 22X4 (1005)		
1195		DEM	NETWORK		RB3613	1-234-370-21	RES, NETWORK 22X4 (1005)		
1196		DEM	NETWORK		RB3614	1-234-370-21	RES, NETWORK 22X4 (1005)		
1197		DEM	NETWORK		RB3615	1-234-370-21	RES, NETWORK 22X4 (1005)		
1198		DEM	NETWORK		RB3616	1-234-371-21	RES, NETWORK 47X4 (1005)		
1199		DEM	NETWORK		RB3617	1-234-371-21	RES, NETWORK 47X4 (1005)		
1200		DEM	NETWORK		RB3618	1-234-371-21	RES, NETWORK 47X4 (1005)		
1201		DEM	NETWORK		RB3619	1-234-371-21	RES, NETWORK 47X4 (1005)		
1202		DEM	NETWORK		RB3620	1-234-371-21	RES, NETWORK 47X4 (1005)		
1203		DEM	NETWORK		RB3621	1-234-371-21	RES, NETWORK 47X4 (1005)		
1204		DEM	NETWORK		RB3622	1-234-371-21	RES, NETWORK 47X4 (1005)		
1205		DEM	NETWORK		RB3623	1-234-371-21	RES, NETWORK 47X4 (1005)		
1206		DEM	NETWORK		RB3624	1-234-371-21	RES, NETWORK 47X4 (1005)		
1207		DEM	NETWORK		RB3625	1-234-371-21	RES, NETWORK 47X4 (1005)		
1208		DEM	NETWORK		RB3626	1-234-371-21	RES, NETWORK 47X4 (1005)		
1209		DEM	NETWORK		RB3627	1-234-371-21	RES, NETWORK 47X4 (1005)		
1210		DEM	NETWORK		RB3628	1-234-371-21	RES, NETWORK 47X4 (1005)		
1211		DEM	NETWORK		RB3629	1-234-371-21	RES, NETWORK 47X4 (1005)		
1212		DEM	NETWORK		RB3630	1-234-371-21	RES, NETWORK 47X4 (1005)		
1213		DEM	NETWORK		RB3705	1-234-370-21	RES, NETWORK 22X4 (1005)		
1214		DEM	NETWORK		RB3706	1-234-370-21	RES, NETWORK 22X4 (1005)		
1215		DEM	NETWORK		RB3707	1-234-370-21	RES, NETWORK 22X4 (1005)		
1216		DEM	NETWORK		RB3708	1-234-370-21	RES, NETWORK 22X4 (1005)		
1217		DEM	NETWORK		RB3709	1-234-370-21	RES, NETWORK 22X4 (1005)		
1218		DEM	NETWORK		RB3710	1-234-370-21	RES, NETWORK 22X4 (1005)		
1219		DEM	NETWORK		RB3711	1-234-370-21	RES, NETWORK 22X4 (1005)		
1220		DEM	NETWORK		RB3712	1-234-370-21	RES, NETWORK 22X4 (1005)		
1221		DEM	NETWORK		RB3714	1-234-370-21	RES, NETWORK 22X4 (1005)		
1222		DEM	NETWORK		RB3801	1-234-370-21	RES, NETWORK 22X4 (1005)		
1223		DEM	SWITCH		S3351	1-692-271-21	SWITCH, SLIDE		
1224		DEM	CHIP CHCKER		TP3101	1-535-757-11	CHIP, CHECKER		
1225		DEM	CHIP CHCKER		TP3102	1-535-757-11	CHIP, CHECKER		
1226		DEM	CHIP CHCKER		TP3103	1-535-757-11	CHIP, CHECKER		
1227		DEM	CHIP CHCKER		TP3301	1-535-757-11	CHIP, CHECKER		
1228		DEM	CHIP CHCKER		TP3302	1-535-757-11	CHIP, CHECKER		
1229		DEM	CHIP CHCKER		TP3303	1-535-757-11	CHIP, CHECKER		
1230		DEM	CHIP CHCKER		TP3305	1-535-757-11	CHIP, CHECKER		
1231		DEM	CHIP CHCKER		TP3306	1-535-757-11	CHIP, CHECKER		
1232		DEM	CHIP CHCKER		TP3307	1-535-757-11	CHIP, CHECKER		
1233		DEM	CHIP CHCKER		TP3801	1-535-757-11	CHIP, CHECKER		
1234		DEM	CHIP CHCKER		TP3802	1-535-757-11	CHIP, CHECKER		
1235		DEM	CHIP CHCKER		TP3803	1-535-757-11	CHIP, CHECKER		
1236		DEM	CHIP CHCKER		TP3804	1-535-757-11	CHIP, CHECKER		
1237		DEM	CHIP CHCKER		TP3805	1-535-757-11	CHIP, CHECKER		
1238		DEM	VARISTOR		VD3101	1-805-043-11	ABSORBER, CHIP SURGE		
1239		DEM	VARISTOR		VD3102	1-805-043-11	ABSORBER, CHIP SURGE		
1240		DEM	VARISTOR		VD3103	1-805-043-11	ABSORBER, CHIP SURGE		
1241		DEM	VARISTOR		VD3104	1-805-043-11	ABSORBER, CHIP SURGE		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1242		DEM	VARISTOR		VD3105	1-805-043-11	ABSORBER, CHIP SURGE		
1243		DEM	VARISTOR		VD3106	1-805-043-11	ABSORBER, CHIP SURGE		
1244		DEM	VARISTOR		VD3107	1-805-043-11	ABSORBER, CHIP SURGE		
1245		DEM	VARISTOR		VD3108	1-805-043-11	ABSORBER, CHIP SURGE		
1246		DEM	CRYSTAL		X3401	1-813-070-21	PIEZOELECTRIC OSCILLATOR		
1247		DEM	CRYSTAL		X3701	1-813-071-21	VIBRATOR, CRYSTAL		
1248	F	CAPACITOR			C601	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1249	F	CAPACITOR			C602	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1250	F	CAPACITOR			C603	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1251	F	CAPACITOR			C604	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1252	F	CAPACITOR			C605	1-107-680-91	ELECT 22UF 20.00% 450V		
1253	F	CAPACITOR			C607	1-101-821-00	CERAMIC 0.0022UF 500V		
1254	F	CAPACITOR			C608	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
1255	F	CAPACITOR			C609	1-165-531-11	MYLAR 1UF 10 275V		
1256	F	CAPACITOR			C610	1-164-161-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1257	F	CAPACITOR			C611	1-165-531-11	MYLAR 1UF 10 275V		
1258	F	CAPACITOR			C612	1-126-964-11	ELECT 10UF 20.00% 50V		
1259	F	CAPACITOR	*		C613	1-165-909-21	CERAMIC CHIP 470PF 10% 630V		
1260	F	CAPACITOR			C617	1-119-886-51	CERAMIC 470PF 10.00% 250V		
1261	F	CAPACITOR			C618	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
1262	F	CAPACITOR			C619	1-128-949-31	ELECT 470UF 20% 16V		
1263	F	CAPACITOR			C620	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
1264	F	CAPACITOR			C621	1-104-665-11	ELECT 100UF 20.00% 25V		
1265	F	CAPACITOR			C622	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1266	F	CAPACITOR			C623	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
1267	F	CONNECTOR	*		CN601	1-580-843-11	PIN, CONNECTOR (POWER)		
1268	F	CONNECTOR	*		CN603	1-580-843-11	PIN, CONNECTOR (POWER)		
1269	F	CONNECTOR	*		CN604	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		
1270	F	DIODE			D601	8-719-051-93	DIODE DF06M-6031		
1271	F	DIODE			D602	8-719-030-33	DIODE EG01CV1		
1272	F	DIODE			D603	8-719-063-74	DIODE D1NL20U-TR2		
1273	F	DIODE			D604	8-719-063-74	DIODE D1NL20U-TR2		
1274	F	DIODE			D605	8-719-041-97	DIODE MA113-(TX)		
1275	F	FUSE	▲		F601	1-576-764-11	FUSE 10A 250V		
1276	F	IC			IC601	6-703-136-01	IC MIP2C20MP1SO		
1277	F	IC			IC602	8-759-682-42	IC MM1431ATT		
1278	F	COIL			L602	1-412-525-31	INDUCTOR 10UH		
1279	F	PHOTO COUPLER			PH601	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
1280	F	TRANSISTOR			Q601	8-729-023-22	TRANSISTOR 2SD2114K		
1281	F	RESISTOR			R601	1-218-642-11	METAL OXIDE 100K 5% 1W		
1282	F	RESISTOR			R603	1-216-111-00	RES-CHIP 390K 5% 1/10W		
1283	F	RESISTOR			R604	1-249-402-11	CARBON 56 5% 1/4W		
1284	F	RESISTOR			R605	1-216-077-91	RES-CHIP 15K 5% 1/10W		
1285	F	RESISTOR			R606	1-216-017-91	RES-CHIP 47 5% 1/10W		
1286	F	RESISTOR			R607	1-216-041-00	RES-CHIP 470 5% 1/10W		
1287	F	RESISTOR			R608	1-216-081-00	RES-CHIP 22K 5% 1/10W		
1288	F	RESISTOR			R609	1-216-077-91	RES-CHIP 15K 5% 1/10W		
1289	F	RESISTOR			R610	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
1290	F	RESISTOR			R611	1-216-077-91	RES-CHIP 15K 5% 1/10W		
1291	F	RESISTOR			R614	1-216-360-11	METAL OXIDE 8.2 5% 1W		
1292	F	RESISTOR			R615	1-249-377-11	CARBON 0.47 5% 1/4W		
1293	F	RESISTOR			R616	1-216-049-11	RES-CHIP 1K 5% 1/10W		
1294	F	RELAY			RY601	1-755-266-11	RELAY, AC POWER		
1295	F	TRANSFORMER			T601	1-456-562-11	LINE FILTER COIL		
1296	F	TRANSFORMER			T602	1-456-562-11	LINE FILTER COIL		
1297	F	TRANSFORMER			T603	1-443-116-11	DC-DC CONVERTER TRANSFORMER		
1298	F	TRANSFORMER			T604	1-409-586-11	COIL, LINE FILTER		
1299	F	THERMISTOR			TH601	1-803-586-11	THERMISTOR, NTC		
1300	F	VARISTOR			VDR601	1-803-830-31	VARISTOR (ERZV14D621)		
1301	F	VARISTOR			VDR602	1-803-830-31	VARISTOR (ERZV14D621)		
1302	F	VARISTOR			VDR603	1-810-977-21	VARISTOR		
1303	K	CAPACITOR			C3001	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1304	K	CAPACITOR			C3002	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1305	K	CAPACITOR			C3003	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1306	K	CAPACITOR			C3004	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1307	K	CAPACITOR			C3005	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1308	K	CAPACITOR			C3006	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1309	K	CAPACITOR			C3007	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1310	K	CAPACITOR			C3008	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V		
1311	K	CAPACITOR			C3009	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V		
1312	K	CAPACITOR			C3010	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1313	K	CAPACITOR			C3011	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1314	K	CAPACITOR			C3012	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1315		K	CAPACITOR		C3013	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1316		K	CAPACITOR		C3014	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1317		K	CAPACITOR		C3015	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1318		K	CAPACITOR		C3016	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1319		K	CAPACITOR		C3017	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1320		K	CAPACITOR		C3018	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1321		K	CAPACITOR		C3021	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1322		K	CAPACITOR		C3022	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1323		K	CAPACITOR		C3023	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1324		K	CAPACITOR		C3024	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
1325		K	CAPACITOR		C3025	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
1326		K	CAPACITOR		C3026	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1327		K	CAPACITOR		C3027	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1328		K	CAPACITOR		C3028	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1329		K	CAPACITOR		C3029	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1330		K	CAPACITOR		C3030	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1331		K	CAPACITOR		C3031	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
1332		K	CAPACITOR		C3032	1-136-177-00	FILM 1UF 5.00% 50V		
1333		K	CAPACITOR		C3033	1-136-177-00	FILM 1UF 5.00% 50V		
1334		K	CAPACITOR		C3034	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
1335		K	CAPACITOR		C3035	1-119-938-51	ELECT 4700UF 20.00% 35V		
1336		K	CAPACITOR		C3036	1-119-938-51	ELECT 4700UF 20.00% 35V		
1337		K	CAPACITOR		C3037	1-119-938-51	ELECT 4700UF 20.00% 35V		
1338		K	CAPACITOR		C3038	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1339		K	CAPACITOR		C3039	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1340		K	CAPACITOR		C3042	1-126-200-11	ELECT CHIP 10UF 20.00% 35V		
1341		K	CAPACITOR		C3043	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1342		K	CAPACITOR		C3044	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1343		K	CAPACITOR		C3045	1-117-319-51	ELECT 4700UF 20.00% 25V		
1344		K	CAPACITOR		C3046	1-117-319-51	ELECT 4700UF 20.00% 25V		
1345		K	CAPACITOR		C3047	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1346		K	CAPACITOR		C3048	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1347		K	CAPACITOR		C3049	1-117-319-51	ELECT 4700UF 20.00% 25V		
1348		K	CAPACITOR		C3050	1-117-319-51	ELECT 4700UF 20.00% 25V		
1349		K	CAPACITOR		C3051	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1350		K	CAPACITOR		C3052	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1351		K	CAPACITOR		C3054	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1352		K	CAPACITOR		C3055	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1353		K	CAPACITOR		C3056	1-136-169-00	FILM 0.22UF 5.00% 50V		
1354		K	CAPACITOR		C3057	1-136-169-00	FILM 0.22UF 5.00% 50V		
1355		K	CAPACITOR		C3058	1-136-165-00	FILM 0.1UF 5.00% 50V		
1356		K	CAPACITOR		C3059	1-136-165-00	FILM 0.1UF 5.00% 50V		
1357		K	CAPACITOR		C3061	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1358		K	CAPACITOR		C3062	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1359		K	CAPACITOR		C3063	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1360		K	CAPACITOR		C3064	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1361		K	CAPACITOR		C3065	1-128-006-11	ELECT CHIP 4.7UF 20.00% 25V		
1362		K	CAPACITOR		C3066	1-107-717-11	ELECT 47UF 20.00% 50V		
1363		K	CAPACITOR		C3067	1-126-948-11	ELECT 100UF 20.00% 35V		
1364		K	CAPACITOR		C3068	1-126-949-11	ELECT 220UF 20.00% 35V		
1365		K	CONNECTOR	*	CN3001	1-779-268-21	PIN, CONNECTOR (1.5MM)(SMD)11P		
1366		K	CONNECTOR	*	CN3002	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		
1367		K	CONNECTOR	*	CN3003	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P		
1368		K	DIODE		D3002	8-719-404-50	DIODE MA111-TX		
1369		K	DIODE		D3003	8-719-017-35	DIODE 02DZ22-TPH3		
1370		K	DIODE		D3004	8-719-041-97	DIODE MA113-(TX)		
1371		K	DIODE		D3005	8-719-041-97	DIODE MA113-(TX)		
1372		K	DIODE		D3006	8-719-041-97	DIODE MA113-(TX)		
1373		K	DIODE		D3007	8-719-404-50	DIODE MA111-TX		
1374		K	DIODE		D3008	8-719-404-50	DIODE MA111-TX		
1375		K	DIODE		D3009	8-719-404-50	DIODE MA111-TX		
1376		K	DIODE		D3010	8-719-404-50	DIODE MA111-TX		
1377		K	DIODE		D3011	8-719-083-71	DIODE UDVSTE-1730B		
1378		K	DIODE		D3012	8-719-083-71	DIODE UDVSTE-1730B		
1379		K	DIODE		D3013	8-719-083-71	DIODE UDVSTE-1730B		
1380		K	DIODE		D3014	8-719-083-71	DIODE UDVSTE-1730B		
1381		K	DIODE		D3015	8-719-083-71	DIODE UDVSTE-1730B		
1382		K	DIODE		D3016	8-719-083-71	DIODE UDVSTE-1730B		
1383		K	DIODE		D3017	8-719-404-50	DIODE MA111-TX		
1384		K	DIODE		D3018	8-719-404-50	DIODE MA111-TX		
1385		K	FUSE	▲	F3001	1-576-458-21	FUSE 6.3A 63V		
1386		K	FUSE	▲	F3002	1-576-458-21	FUSE 6.3A 63V		
1387		K	FUSE	▲	F3003	1-576-430-21	FUSE 0.32A 63V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1388		K	FERRITE BEAD		FB3001	1-414-229-11	FERRITE 0UH		
1389		K	FERRITE BEAD		FB3002	1-414-229-11	FERRITE 0UH		
1390		K	FERRITE BEAD		FB3003	1-414-229-11	FERRITE 0UH		
1391		K	FERRITE BEAD		FB3004	1-414-229-11	FERRITE 0UH		
1392		K	FERRITE BEAD		FB3005	1-414-229-11	FERRITE 0UH		
1393		K	FERRITE BEAD		FB3006	1-414-229-11	FERRITE 0UH		
1394		K	FERRITE BEAD		FB3008	1-414-864-11	FERRITE 0UH		
1395		K	IC		IC3001	6-702-979-01	IC AK4114VQ-L		
1396		K	IC		IC3002	6-702-986-01	IC TAS5001PFBR		
1397		K	IC		IC3003	6-702-980-01	IC TAS5101DAPR		
1398		K	IC		IC3004	8-759-548-99	IC SN74LV08APWR		
1399		K	COIL		L3001	1-412-537-31	INDUCTOR 100UH		
1400		K	COIL		L3002	1-469-555-21	INDUCTOR 10UH		
1401		K	COIL		L3003	1-469-555-21	INDUCTOR 10UH		
1402		K	COIL		L3004	1-456-177-11	INDUCTOR 22UH		
1403		K	COIL		L3005	1-456-177-11	INDUCTOR 22UH		
1404		K	COIL		L3006	1-406-659-11	INDUCTOR 10UH		
1405		K	TRANSISTOR		Q3001	8-729-928-90	TRANSISTOR DTC114EE		
1406		K	TRANSISTOR		Q3002	8-729-106-68	TRANSISTOR 2SD1615A-GP		
1407		K	TRANSISTOR		Q3003	8-729-230-49	TRANSISTOR 2SC2712-YG		
1408		K	TRANSISTOR		Q3004	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
1409		K	TRANSISTOR		Q3005	8-729-230-49	TRANSISTOR 2SC2712-YG		
1410		K	TRANSISTOR		Q3006	8-729-230-49	TRANSISTOR 2SC2712-YG		
1411		K	TRANSISTOR		Q3007	8-729-106-68	TRANSISTOR 2SD1615A-GP		
1412		K	RESISTOR		R3001	1-216-864-11	SHORT CHIP 0		
1413		K	RESISTOR		R3002	1-216-817-11	METAL CHIP 470 5% 1/10W		
1414		K	RESISTOR		R3003	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1415		K	RESISTOR		R3004	1-216-836-11	METAL CHIP 18K 5% 1/10W		
1416		K	RESISTOR		R3007	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1417		K	RESISTOR		R3008	1-216-809-11	METAL CHIP 100 5% 1/10W		
1418		K	RESISTOR		R3009	1-216-809-11	METAL CHIP 100 5% 1/10W		
1419		K	RESISTOR		R3010	1-216-797-11	METAL CHIP 10 5% 1/10W		
1420		K	RESISTOR		R3011	1-216-797-11	METAL CHIP 10 5% 1/10W		
1421		K	RESISTOR		R3012	1-216-797-11	METAL CHIP 10 5% 1/10W		
1422		K	RESISTOR		R3013	1-216-797-11	METAL CHIP 10 5% 1/10W		
1423		K	RESISTOR		R3014	1-216-797-11	METAL CHIP 10 5% 1/10W		
1424		K	RESISTOR		R3015	1-216-813-11	METAL CHIP 220 5% 1/10W		
1425		K	RESISTOR		R3016	1-216-864-11	SHORT CHIP 0		
1426		K	RESISTOR		R3019	1-216-994-11	METAL CHIP 13K 5% 1/10W		
1427		K	RESISTOR		R3020	1-216-994-11	METAL CHIP 13K 5% 1/10W		
1428		K	RESISTOR		R3022	1-249-381-11	CARBON 1 5% 1/4W		
1429		K	RESISTOR		R3023	1-249-381-11	CARBON 1 5% 1/4W		
1430		K	RESISTOR		R3026	1-214-871-81	METAL 2K 1% 1/2W		
1431		K	RESISTOR		R3027	1-214-871-81	METAL 2K 1% 1/2W		
1432		K	RESISTOR		R3028	1-214-871-81	METAL 2K 1% 1/2W		
1433		K	RESISTOR		R3029	1-214-871-81	METAL 2K 1% 1/2W		
1434		K	RESISTOR		R3030	1-215-872-11	METAL OXIDE 3.3K 5% 1W		
1435		K	RESISTOR		R3031	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
1436		K	RESISTOR		R3032	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
1437		K	RESISTOR		R3033	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
1438		K	RESISTOR		R3034	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
1439		K	RESISTOR		R3035	1-214-871-81	METAL 2K 1% 1/2W		
1440		K	RESISTOR		R3036	1-214-871-81	METAL 2K 1% 1/2W		
1441		K	RESISTOR		R3037	1-216-864-11	SHORT CHIP 0		
1442		K	RESISTOR		R3038	1-216-797-11	METAL CHIP 10 5% 1/10W		
1443		K	RESISTOR		R3039	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1444		K	RESISTOR		R3040	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1445		K	RESISTOR		R3041	1-214-871-81	METAL 2K 1% 1/2W		
1446		K	RESISTOR		R3042	1-214-871-81	METAL 2K 1% 1/2W		
1447		K	RESISTOR		R3043	1-216-864-11	SHORT CHIP 0		
1448		K	RESISTOR		R3044	1-216-864-11	SHORT CHIP 0		
1449		K	RESISTOR		R3045	1-216-809-11	METAL CHIP 100 5% 1/10W		
1450		K	RESISTOR		R3046	1-216-809-11	METAL CHIP 100 5% 1/10W		
1451		K	RESISTOR		R3047	1-216-809-11	METAL CHIP 100 5% 1/10W		
1452		K	RESISTOR		R3048	1-216-809-11	METAL CHIP 100 5% 1/10W		
1453		K	RESISTOR		R3049	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1454		K	RESISTOR		R3050	1-216-797-11	METAL CHIP 10 5% 1/10W		
1455		K	RESISTOR		R3051	1-216-864-11	SHORT CHIP 0		
1456		K	RESISTOR		R3052	1-216-797-11	METAL CHIP 10 5% 1/10W		
1457		K	RESISTOR		R3053	1-216-864-11	SHORT CHIP 0		
1458		K	RESISTOR		R3054	1-216-797-11	METAL CHIP 10 5% 1/10W		
1459		K	RESISTOR		R3060	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1460		K	RESISTOR		R3061	1-260-304-51	CARBON 10 5% 1/2W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1461		K	RESISTOR		R3062	1-260-304-51	CARBON 10 5% 1/2W		
1462		K	RESISTOR		R3063	1-216-158-00	RES-CHIP 22 5% 1/8W		
1463		K	RESISTOR		R3064	1-216-158-00	RES-CHIP 22 5% 1/8W		
1464		K	RESISTOR		R3069	1-216-295-91	SHORT CHIP 0		
1465		K	RESISTOR		R3070	1-216-809-11	METAL CHIP 100 5% 1/10W		
1466		K	RESISTOR		R3071	1-216-809-11	METAL CHIP 100 5% 1/10W		
1467		K	RESISTOR		R3072	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1468		K	RESISTOR		R3073	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1469		K	RESISTOR		R3074	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1470		K	RESISTOR		R3075	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1471		K	RESISTOR		R3076	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1472		K	RESISTOR		R3077	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1473		K	RESISTOR		R3078	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1474		K	RESISTOR		R3079	1-216-809-11	METAL CHIP 100 5% 1/10W		
1475		K	RESISTOR		R3080	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1476		K	RESISTOR		R3081	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1477		K	RESISTOR		R3082	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1478		K	RESISTOR		R3083	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1479		K	RESISTOR		R3084	1-218-879-11	METAL CHIP 22K 0.5% 1/10W		
1480		K	RESISTOR		R3085	1-218-879-11	METAL CHIP 22K 0.5% 1/10W		
1481		K	CHIP CHCKER		TP3001	1-535-757-11	CHIP, CHECKER		
1482		K	CHIP CHCKER		TP3002	1-535-757-11	CHIP, CHECKER		
1483		K	CHIP CHCKER		TP3003	1-535-757-11	CHIP, CHECKER		
1484		K	CHIP CHCKER		TP3004	1-535-757-11	CHIP, CHECKER		
1485		K	CHIP CHCKER		TP3005	1-535-877-22	CHIP, CHECKER		
1486		K	CHIP CHCKER		TP3006	1-535-877-22	CHIP, CHECKER		
1487		K	CHIP CHCKER		TP3007	1-535-877-22	CHIP, CHECKER		
1488		K	CRYSTAL		X3001	1-795-420-21	VIBRATOR, CRYSTAL		
1489		R1	CAPACITOR		C701	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1490		R1	CAPACITOR		C702	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1491		R1	CAPACITOR		C712	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1492		R1	CAPACITOR		C714	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1493		R1	CAPACITOR		C715	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1494		R1	CONNECTOR	*	CN701	1-565-882-11	PIN, CONNECTOR (PC BOARD) 10P		
1495		R1	DIODE		D701	6-500-487-01	DIODE SMLU12D16W		
1496		R1	DIODE		D703	6-500-487-01	DIODE SMLU12D16W		
1497		R1	DIODE		D705	6-500-425-01	DIODE SELU1E50CM		
1498		R1	IC		IC701	6-600-117-01	IC GP1UM27SRK		
1499		R1	TRANSISTOR		Q701	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1500		R1	TRANSISTOR		Q702	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1501		R1	TRANSISTOR		Q703	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1502		R1	TRANSISTOR		Q704	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1503		R1	TRANSISTOR		Q705	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1504		R1	TRANSISTOR		Q706	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1505		R1	RESISTOR		R701	1-216-812-11	METAL CHIP 180 5% 1/10W		
1506		R1	RESISTOR		R702	1-216-809-11	METAL CHIP 100 5% 1/10W		
1507		R1	RESISTOR		R703	1-216-812-11	METAL CHIP 180 5% 1/10W		
1508		R1	RESISTOR		R704	1-216-820-11	METAL CHIP 820 5% 1/10W		
1509		R1	RESISTOR		R705	1-216-814-11	METAL CHIP 270 5% 1/10W		
1510		R1	RESISTOR		R706	1-216-820-11	METAL CHIP 820 5% 1/10W		
1511		R1	RESISTOR		R710	1-216-805-11	METAL CHIP 47 5% 1/10W		
1512		R1	RESISTOR		R712	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1513		R1	RESISTOR		R714	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1514		R1	RESISTOR		R715	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1515		R2	CONNECTOR	*	CN751	1-565-876-11	PIN, CONNECTOR (PC BOARD) 4P		
1516		R2	DIODE		D751	6-500-808-01	DIODE NSPW515BSA0		
1517		R2	DIODE		D752	6-500-808-01	DIODE NSPW515BSA0		
1518		R2	DIODE		D753	6-500-808-01	DIODE NSPW515BSA0		
1519		R2	DIODE		D754	6-500-808-01	DIODE NSPW515BSA0		
1520		R2	TRANSISTOR		Q751	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1521		R2	TRANSISTOR		Q752	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1522		R2	TRANSISTOR		Q753	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1523		R2	TRANSISTOR		Q754	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1524		R2	RESISTOR		R751	1-216-809-11	METAL CHIP 100 5% 1/10W		
1525		R2	RESISTOR		R752	1-216-809-11	METAL CHIP 100 5% 1/10W		
1526		R2	RESISTOR		R753	1-216-809-11	METAL CHIP 100 5% 1/10W		
1527		R2	RESISTOR		R754	1-216-809-11	METAL CHIP 100 5% 1/10W		
1528		A	CAPACITOR		C8000	1-128-407-11	ELECT CHIP 47UF 20% 50V		
1529		A	CAPACITOR		C8001	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1530		A	CAPACITOR		C8002	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1531		A	CAPACITOR		C8003	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1532		A	CAPACITOR		C8004	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1533		A	CAPACITOR		C8005	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1534		A	CAPACITOR		C8007	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1535		A	CAPACITOR		C8008	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1536		A	CAPACITOR		C8010	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1537		A	CAPACITOR		C8011	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1538		A	CAPACITOR		C8012	1-115-156-11	CERAMIC CHIP 1UF 10V		
1539		A	CAPACITOR		C8013	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1540		A	CAPACITOR		C8014	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1541		A	CAPACITOR		C8015	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1542		A	CAPACITOR		C8016	1-128-407-11	ELECT CHIP 47UF 20% 50V		
1543		A	CAPACITOR		C8017	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1544		A	CAPACITOR		C8018	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1545		A	CAPACITOR		C8019	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1546		A	CAPACITOR		C8020	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1547		A	CAPACITOR		C8021	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1548		A	CAPACITOR		C8022	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1549		A	CAPACITOR		C8024	1-107-778-11	ELECT CHIP 470UF 20% 16V		
1550		A	CAPACITOR		C8025	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1551		A	CAPACITOR		C8026	1-115-156-11	CERAMIC CHIP 1UF 10V		
1552		A	CAPACITOR		C8027	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1553		A	CAPACITOR		C8028	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1554		A	CAPACITOR		C8029	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1555		A	CAPACITOR		C8031	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1556		A	CAPACITOR		C8032	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1557		A	CAPACITOR		C8033	1-104-607-11	ELECT CHIP 47UF 20.00% 16V		
1558		A	CAPACITOR		C8034	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1559		A	CAPACITOR		C8035	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1560		A	CAPACITOR		C8036	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1561		A	CAPACITOR		C8037	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1562		A	CAPACITOR		C8041	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1563		A	CAPACITOR		C8200	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1564		A	CAPACITOR		C8201	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1565		A	CAPACITOR		C8202	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1566		A	CAPACITOR		C8203	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1567		A	CAPACITOR		C8204	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1568		A	CAPACITOR		C8205	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1569		A	CAPACITOR		C8206	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1570		A	CAPACITOR		C8207	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1571		A	CAPACITOR		C8208	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1572		A	CAPACITOR		C8210	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1573		A	CAPACITOR		C8211	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1574		A	CAPACITOR		C8212	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1575		A	CAPACITOR		C8214	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1576		A	CAPACITOR		C8215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1577		A	CAPACITOR		C8216	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1578		A	CAPACITOR		C8217	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1579		A	CAPACITOR		C8218	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1580		A	CAPACITOR		C8219	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1581		A	CAPACITOR		C8221	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1582		A	CAPACITOR		C8222	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1583		A	CAPACITOR		C8223	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1584		A	CAPACITOR		C8227	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1585		A	CAPACITOR		C8228	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1586		A	CAPACITOR		C8229	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1587		A	CAPACITOR		C8230	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1588		A	CAPACITOR		C8231	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1589		A	CAPACITOR		C8232	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1590		A	CAPACITOR		C8233	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1591		A	CAPACITOR		C8234	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1592		A	CAPACITOR		C8235	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1593		A	CAPACITOR		C8400	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
1594		A	CAPACITOR		C8401	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1595		A	CAPACITOR		C8402	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1596		A	CAPACITOR		C8403	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1597		A	CAPACITOR		C8404	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1598		A	CAPACITOR		C8405	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1599		A	CAPACITOR		C8406	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1600		A	CAPACITOR		C8407	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1601		A	CAPACITOR		C8408	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1602		A	CAPACITOR		C8409	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1603		A	CAPACITOR		C8410	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1604		A	CAPACITOR		C8411	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1605		A	CAPACITOR		C8412	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1606		A	CAPACITOR		C8413	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1607		A	CAPACITOR		C8414	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1608		A	CAPACITOR		C8415	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1609		A	CAPACITOR		C8416	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1610		A	CAPACITOR		C8417	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
1611		A	CAPACITOR		C8418	1-128-590-11	ELECT CHIP 100UF 20.00% 6.3V		
1612		A	CAPACITOR		C8420	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1613		A	CAPACITOR		C8421	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1614		A	CAPACITOR		C8422	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1615		A	CAPACITOR		C8424	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1616		A	CAPACITOR		C8425	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1617		A	CAPACITOR		C8426	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1618		A	CAPACITOR		C8427	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1619		A	CAPACITOR		C8429	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1620		A	CAPACITOR		C8430	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1621		A	CAPACITOR		C8431	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1622		A	CAPACITOR		C8432	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1623		A	CAPACITOR		C8433	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1624		A	CAPACITOR		C8434	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1625		A	CAPACITOR		C8435	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1626		A	CAPACITOR		C8436	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
1627		A	CAPACITOR		C8437	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1628		A	CAPACITOR		C8438	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1629		A	CAPACITOR		C8439	1-128-394-11	ELECT CHIP 220UF 20% 10V		
1630		A	CAPACITOR		C8501	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1631		A	CAPACITOR		C8502	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1632		A	CAPACITOR		C8503	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1633		A	CAPACITOR		C8504	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1634		A	CAPACITOR		C8507	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
1635		A	CAPACITOR		C8508	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1636		A	CAPACITOR		C8509	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1637		A	CAPACITOR		C8510	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1638		A	CAPACITOR		C8512	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1639		A	CAPACITOR		C8514	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1640		A	CAPACITOR		C8515	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
1641		A	CAPACITOR		C8516	1-162-916-11	CERAMIC CHIP 12PF 5.00% 50V		
1642		A	CAPACITOR		C8520	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1643		A	CAPACITOR		C8521	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1644		A	CAPACITOR		C8522	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1645		A	CAPACITOR		C8523	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1646		A	CAPACITOR		C8524	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1647		A	CAPACITOR		C8525	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1648		A	CAPACITOR		C8526	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1649		A	CAPACITOR		C8527	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1650		A	CAPACITOR		C8528	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1651		A	CAPACITOR		C8529	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1652		A	CAPACITOR		C8530	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1653		A	CAPACITOR		C8531	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1654		A	CAPACITOR		C8532	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1655		A	CAPACITOR		C8533	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1656		A	CAPACITOR		C8534	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1657		A	CAPACITOR		C8535	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1658		A	CAPACITOR		C8536	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1659		A	CAPACITOR		C8537	1-216-864-11	SHORT CHIP 0		
1660		A	CAPACITOR		C8540	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1661		A	CAPACITOR		C8541	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1662		A	CAPACITOR		C8542	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1663		A	CAPACITOR		C8544	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1664		A	CAPACITOR		C8545	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1665		A	CAPACITOR		C8546	1-216-864-11	SHORT CHIP 0		
1666		A	CAPACITOR		C8547	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1667		A	CAPACITOR		C8548	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1668		A	CAPACITOR		C8549	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1669		A	CAPACITOR		C8550	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1670		A	CAPACITOR		C8551	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1671		A	CAPACITOR		C8552	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1672		A	CAPACITOR		C8553	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1673		A	CAPACITOR		C8600	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1674		A	CAPACITOR		C8601	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1675		A	CAPACITOR		C8602	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1676		A	CAPACITOR		C8603	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1677		A	CAPACITOR		C8604	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
1678		A	CAPACITOR		C8605	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1679		A	CAPACITOR		C8606	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1680		A	CAPACITOR		C8607	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1681		A	CAPACITOR		C8608	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
1682		A	CAPACITOR		C8609	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1683		A	CAPACITOR		C8610	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1684		A	CAPACITOR		C8611	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1685		A	CAPACITOR		C8612	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1686		A	CAPACITOR		C8613	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1687		A	CAPACITOR		C8614	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1688		A	CAPACITOR		C8615	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1689		A	CAPACITOR		C8616	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1690		A	CAPACITOR		C8617	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1691		A	CAPACITOR		C8618	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1692		A	CAPACITOR		C8619	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1693		A	CAPACITOR		C8620	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1694		A	CAPACITOR		C8621	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1695		A	CAPACITOR		C8622	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1696		A	CAPACITOR		C8623	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1697		A	CAPACITOR		C8624	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1698		A	CAPACITOR		C8625	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1699		A	CAPACITOR		C8626	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1700		A	CAPACITOR		C8627	1-128-394-11	ELECT CHIP 220UF 20% 10V		
1701		A	CAPACITOR		C8628	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1702		A	CAPACITOR		C8629	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1703		A	CAPACITOR		C8630	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1704		A	CAPACITOR		C8631	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1705		A	CAPACITOR		C8632	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1706		A	CAPACITOR		C8633	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1707		A	CAPACITOR		C8634	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1708		A	CAPACITOR		C8635	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1709		A	CAPACITOR		C8636	1-164-172-11	CERAMIC CHIP 0.0056UF 10.00% 25V		
1710		A	CAPACITOR		C8637	1-110-563-11	CERAMIC CHIP 0.068UF 10.00% 16V		
1711		A	CAPACITOR		C8638	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1712		A	CAPACITOR		C8639	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1713		A	CAPACITOR		C8640	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1714		A	CAPACITOR		C8643	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1715		A	CAPACITOR		C8644	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1716		A	CAPACITOR		C8645	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1717		A	CAPACITOR		C8646	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
1718		A	CAPACITOR		C8648	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1719		A	CAPACITOR		C8649	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1720		A	CAPACITOR		C8650	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1721		A	CAPACITOR		C8661	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1722		A	CAPACITOR		C8662	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1723		A	CAPACITOR		C8666	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1724		A	CAPACITOR		C8667	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1725		A	CAPACITOR		C8668	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1726		A	CAPACITOR		C8669	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1727		A	CAPACITOR		C8670	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1728		A	CAPACITOR		C8671	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1729		A	CAPACITOR		C8672	1-216-295-91	SHORT CHIP 0		
1730		A	CAPACITOR		C8673	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1731		A	CAPACITOR		C8674	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1732		A	CAPACITOR		C8802	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1733		A	CAPACITOR		C8803	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1734		A	CAPACITOR		C8805	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
1735		A	CAPACITOR		C8806	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1736		A	CAPACITOR		C8807	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1737		A	CAPACITOR		C8808	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1738		A	CAPACITOR		C8809	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1739		A	CAPACITOR		C8810	1-127-804-91	CERAMIC CHIP 100PF 1% 50V		
1740		A	CAPACITOR		C8811	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1741		A	CAPACITOR		C8812	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1742		A	CAPACITOR		C8813	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1743		A	CAPACITOR		C8814	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1744		A	CAPACITOR		C8815	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1745		A	CAPACITOR		C8816	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1746		A	CAPACITOR		C8817	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1747		A	CAPACITOR		C8818	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1748		A	CAPACITOR		C8819	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1749		A	CAPACITOR		C8820	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1750		A	CAPACITOR		C8821	1-127-804-91	CERAMIC CHIP 100PF 1% 50V		
1751		A	CAPACITOR		C8822	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1752		A	CAPACITOR		C8823	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1753		A	CAPACITOR		C8824	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1754		A	CAPACITOR		C8826	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1755		A	CAPACITOR		C8827	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1756		A	CAPACITOR		C8828	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
1757		A	CAPACITOR		C8829	1-162-977-11	CERAMIC CHIP 0.0018UF 10.00% 50V		
1758		A	CAPACITOR		C8830	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1759		A	CAPACITOR		C8831	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1760		A	CAPACITOR		C8832	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1761		A	CAPACITOR		C8833	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1762		A	CAPACITOR		C8834	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1763		A	CAPACITOR		C8835	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1764		A	CAPACITOR		C8836	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
1765		A	CAPACITOR		C8837	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1766		A	CAPACITOR		C8838	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1767		A	CAPACITOR		C8839	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1768		A	CAPACITOR		C8840	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1769		A	CAPACITOR		C8841	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
1770		A	CAPACITOR		C8842	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1771		A	CAPACITOR		C8843	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1772		A	CAPACITOR		C8844	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
1773		A	CAPACITOR		C8845	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1774		A	CAPACITOR		C8847	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1775		A	CAPACITOR		C8849	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1776		A	CAPACITOR		C8850	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1777		A	CAPACITOR		C8854	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1778		A	CAPACITOR		C8855	1-107-778-11	ELECT CHIP 470UF 20% 16V		
1779		A	CAPACITOR		C8856	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1780		A	CAPACITOR		C8857	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1781		A	CAPACITOR		C8858	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
1782		A	CAPACITOR		C8859	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1783		A	CAPACITOR		C8860	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1784		A	CAPACITOR		C8861	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1785		A	CAPACITOR		C8862	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
1786		A	CAPACITOR		C8863	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1787		A	CAPACITOR		C8864	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1788		A	CAPACITOR		C8865	1-216-864-11	SHORT CHIP 0		
1789		A	CAPACITOR		C8866	1-216-864-11	SHORT CHIP 0		
1790		A	CAPACITOR		C8867	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
1791		A	CAPACITOR		C8868	1-162-977-11	CERAMIC CHIP 0.0018UF 10.00% 50V		
1792		A	CAPACITOR		C8869	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1793		A	CAPACITOR		C8870	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1794		A	CAPACITOR		C8871	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1795		A	CAPACITOR		C8872	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1796		A	CAPACITOR		C8873	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1797		A	CAPACITOR		C8874	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1798		A	CAPACITOR		C8875	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1799		A	CAPACITOR		C8876	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1800		A	CAPACITOR		C8877	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1801		A	CAPACITOR		C8878	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1802		A	CAPACITOR		C8879	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1803		A	CAPACITOR		C8880	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1804		A	CAPACITOR		C8881	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1805		A	CAPACITOR		C9301	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1806		A	CAPACITOR		C9302	1-100-165-21	ELECT CHIP 47UF 20% 20V		
1807		A	CAPACITOR		C9303	1-100-390-21	ELECT CHIP 180UF 20% 6.3V		
1808		A	CAPACITOR		C9304	1-110-530-11	ELECT CHIP 1000UF 20% 6.3V		
1809		A	CAPACITOR		C9305	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1810		A	CAPACITOR		C9306	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1811		A	CAPACITOR		C9307	1-100-165-21	ELECT CHIP 47UF 20% 20V		
1812		A	CAPACITOR		C9308	1-100-390-21	ELECT CHIP 180UF 20% 6.3V		
1813		A	CAPACITOR		C9309	1-110-530-11	ELECT CHIP 1000UF 20% 6.3V		
1814		A	CAPACITOR		C9310	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1815		A	CAPACITOR		C9311	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1816		A	CAPACITOR		C9312	1-100-165-21	ELECT CHIP 47UF 20% 20V		
1817		A	CAPACITOR		C9313	1-100-390-21	ELECT CHIP 180UF 20% 6.3V		
1818		A	CAPACITOR		C9314	1-110-530-11	ELECT CHIP 1000UF 20% 6.3V		
1819		A	CAPACITOR		C9315	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1820		A	CAPACITOR		C9316	1-125-988-21	ELECT CHIP 330UF 20% 25V		
1821		A	CAPACITOR		C9317	1-125-988-21	ELECT CHIP 330UF 20% 25V		
1822		A	CAPACITOR		C9318	1-125-988-21	ELECT CHIP 330UF 20% 25V		
1823		A	CAPACITOR		C9319	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1824		A	CAPACITOR		C9320	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1825		A	CAPACITOR		C9321	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1826		A	CAPACITOR		C9322	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V		
1827		A	CAPACITOR		C9323	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V		
1828		A	CAPACITOR		C9324	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V		
1829		A	CAPACITOR		C9402	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1830		A	CAPACITOR		C9403	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1831		A	CAPACITOR		C9404	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1832		A	CAPACITOR		C9405	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1833		A	CAPACITOR		C9406	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1834		A	CAPACITOR		C9407	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1835		A	CAPACITOR		C9408	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1836		A	CAPACITOR		C9409	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1837		A	CAPACITOR		C9410	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1838		A	CAPACITOR		C9411	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1839		A	CAPACITOR		C9412	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1840		A	CAPACITOR		C9413	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1841		A	CAPACITOR		C9414	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1842		A	CAPACITOR		C9415	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1843		A	CAPACITOR		C9416	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1844		A	CAPACITOR		C9417	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1845		A	CAPACITOR		C9418	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1846		A	CAPACITOR		C9419	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1847		A	CAPACITOR		C9420	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1848		A	CAPACITOR		C9421	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1849		A	CAPACITOR		C9422	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1850		A	CAPACITOR		C9423	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1851		A	CAPACITOR		C9424	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1852		A	CAPACITOR		C9425	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1853		A	CAPACITOR		C9426	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V		
1854		A	CAPACITOR		C9427	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1855		A	CAPACITOR		C9428	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1856		A	CONNECTOR		CN8001	1-817-900-11	CONNECTOR, BOARD TO BOARD 100P		
1857		A	CONNECTOR	*	CN8400	1-785-530-11	PIN, CONNECTOR (PC BOARD) 10P		
1858		A	CONNECTOR		CN8401	1-817-904-11	CONNECTOR, BOARD TO BOARD 100P		
1859		A	CONNECTOR		CN8402	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
1860		A	CONNECTOR	*	CN8403	1-691-591-11	PIN, CONNECTOR (1.5MM) (SMD)8P		
1861		A	CONNECTOR		CN9401	1-766-383-91	PIN, CONNECTOR 12P		
1862		A	CONNECTOR	*	CN9403	1-564-515-11	PLUG, CONNECTOR 12P		
1863		A	CONNECTOR	*	CN9404	1-564-511-11	PLUG, CONNECTOR 8P		
1864		A	CONNECTOR	*	CN9405	1-564-510-11	PLUG, CONNECTOR 7P		
1865		A	CONNECTOR		CN9406	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
1866		A	CONNECTOR	*	CN9407	1-785-531-11	PIN, CONNECTOR (PC BOARD) 12P		
1867		A	LEAD PIN	*	CP8601	4-042-408-01	PIN, COATING LEAD		
1868		A	LEAD PIN	*	CP9401	4-042-408-01	PIN, COATING LEAD		
1869		A	LEAD PIN	*	CP9402	4-042-408-01	PIN, COATING LEAD		
1870		A	LEAD PIN	*	CP9403	4-042-408-01	PIN, COATING LEAD		
1871		A	DIODE		D8006	8-719-158-02	DIODE RD3.9SB2		
1872		A	DIODE		D8800	8-719-041-97	DIODE MA113-(TX)		
1873		A	DIODE		D8801	8-719-914-44	DIODE DAP202K		
1874		A	DIODE		D8802	8-719-041-97	DIODE MA113-(TX)		
1875		A	DIODE		D8803	8-719-404-50	DIODE MA111-TX		
1876		A	DIODE		D8806	8-719-914-44	DIODE DAP202K		
1877		A	DIODE		D8807	8-719-041-97	DIODE MA113-(TX)		
1878		A	DIODE		D8808	8-719-041-97	DIODE MA113-(TX)		
1879		A	DIODE		D8809	8-719-404-50	DIODE MA111-TX		
1880		A	DIODE		D8810	8-719-071-74	DIODE HZU11B1TRF		
1881		A	DIODE		D8811	8-719-050-37	DIODE M1MA152WA-T1		
1882		A	DIODE		D8812	8-719-050-38	DIODE M1MA152WK-T1		
1883		A	DIODE		D9301	8-719-036-94	DIODE RD5.6SB-T1		
1884		A	DIODE		D9302	8-719-081-97	DIODE MMDL914T1		
1885		A	DIODE		D9303	8-719-081-67	DIODE M1FM3		
1886		A	DIODE		D9304	6-500-021-01	DIODE MM3Z4V7ST1		
1887		A	DIODE		D9305	8-719-081-97	DIODE MMDL914T1		
1888		A	DIODE		D9306	8-719-081-67	DIODE M1FM3		
1889		A	DIODE		D9307	6-500-020-01	DIODE MM3Z4V3ST1		
1890		A	DIODE		D9308	8-719-081-97	DIODE MMDL914T1		
1891		A	DIODE		D9309	8-719-081-67	DIODE M1FM3		
1892		A	DIODE		D9310	8-719-081-97	DIODE MMDL914T1		
1893		A	DIODE		D9311	8-719-081-99	DIODE MM3Z13VT1		
1894		A	DIODE		D9400	8-719-977-28	DIODE DTZ10B		
1895		A	DIODE		D9401	8-719-977-28	DIODE DTZ10B		
1896		A	DIODE		D9402	8-719-977-28	DIODE DTZ10B		
1897		A	DIODE		D9403	8-719-977-28	DIODE DTZ10B		
1898		A	DIODE		D9407	8-719-977-28	DIODE DTZ10B		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1899		A	DIODE		D9408	8-719-977-28	DIODE DTZ10B		
1900		A	DIODE		D9409	8-719-977-28	DIODE DTZ10B		
1901		A	DIODE		D9410	8-719-977-28	DIODE DTZ10B		
1902		A	DIODE		D9411	8-719-977-28	DIODE DTZ10B		
1903		A	DIODE		D9412	8-719-977-28	DIODE DTZ10B		
1904		A	DIODE		D9413	8-719-977-28	DIODE DTZ10B		
1905		A	DIODE		D9414	8-719-977-28	DIODE DTZ10B		
1906		A	DIODE		D9415	8-719-977-28	DIODE DTZ10B		
1907		A	DIODE		D9416	8-719-977-28	DIODE DTZ10B		
1908		A	DIODE		D9417	8-719-977-28	DIODE DTZ10B		
1909		A	DIODE		D9418	8-719-977-28	DIODE DTZ10B		
1910		A	DIODE		D9419	8-719-977-28	DIODE DTZ10B		
1911		A	DIODE		D9420	8-719-977-28	DIODE DTZ10B		
1912		A	DIODE		D9421	8-719-081-97	DIODE MMDL914T1		
1913		A	DIODE		D9422	8-719-941-86	DIODE DAN202U		
1914		A	FERRITE BEAD		FB8000	1-216-295-91	SHORT CHIP 0		
1915		A	FERRITE BEAD		FB8001	1-216-295-91	SHORT CHIP 0		
1916		A	FERRITE BEAD		FB8002	1-216-295-91	SHORT CHIP 0		
1917		A	FERRITE BEAD		FB8003	1-414-233-22	FERRITE 0UH		
1918		A	FERRITE BEAD		FB8004	1-414-233-22	FERRITE 0UH		
1919		A	FERRITE BEAD		FB8005	1-216-295-91	SHORT CHIP 0		
1920		A	FERRITE BEAD		FB8006	1-216-295-91	SHORT CHIP 0		
1921		A	FERRITE BEAD		FB8007	1-216-295-91	SHORT CHIP 0		
1922		A	FERRITE BEAD		FB8008	1-216-295-91	SHORT CHIP 0		
1923		A	FERRITE BEAD		FB8009	1-414-233-22	FERRITE 0UH		
1924		A	FERRITE BEAD		FB8010	1-414-233-22	FERRITE 0UH		
1925		A	FERRITE BEAD		FB8011	1-216-295-91	SHORT CHIP 0		
1926		A	FERRITE BEAD		FB8200	1-216-295-91	SHORT CHIP 0		
1927		A	FERRITE BEAD		FB8400	1-216-295-91	SHORT CHIP 0		
1928		A	FERRITE BEAD		FB8501	1-414-233-22	FERRITE 0UH		
1929		A	FERRITE BEAD		FB8502	1-414-228-11	FERRITE 0UH		
1930		A	FERRITE BEAD		FB8503	1-414-233-22	FERRITE 0UH		
1931		A	FERRITE BEAD		FB8504	1-414-228-11	FERRITE 0UH		
1932		A	FERRITE BEAD		FB8601	1-414-228-11	FERRITE 0UH		
1933		A	FERRITE BEAD		FB9301	1-469-650-22	FERRITE 0UH		
1934		A	FERRITE BEAD		FB9302	1-469-650-22	FERRITE 0UH		
1935		A	FERRITE BEAD		FB9303	1-469-650-22	FERRITE 0UH		
1936		A	FERRITE BEAD		FB9401	1-216-295-91	SHORT CHIP 0		
1937		A	FILTER		FL8001	1-234-177-21	FERRITE 0UH		
1938		A	FILTER		FL8002	1-234-128-21	FERRITE 0UH		
1939		A	FILTER		FL8003	1-234-124-21	FERRITE 0UH		
1940		A	FILTER		FL8004	1-234-124-21	FERRITE 0UH		
1941		A	FILTER		FL8005	1-234-177-21	FERRITE 0UH		
1942		A	FILTER		FL8006	1-234-128-21	FERRITE 0UH		
1943		A	IC		IC8200	8-752-080-04	IC CXA2069Q		
1944		A	IC		IC8201	8-759-278-58	IC NJM4558V-TE2		
1945		A	IC		IC8400	8-752-108-36	IC CXA2171AQ-T6		
1946		A	IC		IC8402	8-759-548-56	IC M52055FP		
1947		A	IC		IC8501	6-704-643-01	IC R3112N221A-TR-FA		
1948		A	IC		IC8502	8-759-475-43	IC TC74LCX125FT(EL)		
1949		A	IC		IC8503	8-759-475-43	IC TC74LCX125FT(EL)		
1950		A	IC		IC8504	6-704-777-01	IC NJU26103FR1		
1951		A	IC		IC8506	6-702-527-01	IC AK5380VT-E2		
1952		A	IC		IC8507	8-759-643-25	IC AK4351VT		
1953		A	IC		IC8508	8-759-278-58	IC NJM4558V-TE2		
1954		A	IC		IC8510	8-759-278-58	IC NJM4558V-TE2		
1955		A	IC		IC8600	6-700-393-01	IC NJW1106FC2		
1956		A	IC		IC8601	8-759-578-49	IC NJM2370U10-TE2		
1957		A	IC		IC8800	8-759-278-58	IC NJM4558V-TE2		
1958		A	IC		IC8801	8-759-278-58	IC NJM4558V-TE2		
1959		A	IC		IC8802	8-759-278-58	IC NJM4558V-TE2		
1960		A	IC		IC8803	8-759-082-61	IC TC4W53FU		
1961		A	IC		IC8804	8-759-278-58	IC NJM4558V-TE2		
1962		A	IC		IC8805	6-702-716-01	IC NJW1149		
1963		A	IC		IC8806	8-759-278-58	IC NJM4558V-TE2		
1964		A	IC		IC9301	6-702-142-01	IC PQ1CY1032ZP		
1965		A	IC		IC9302	6-702-142-01	IC PQ1CY1032ZP		
1966		A	IC		IC9303	6-702-142-01	IC PQ1CY1032ZP		
1967		A	IC		IC9400	8-752-080-04	IC CXA2069Q		
1968		A	JACK		J9401	1-565-790-21	JACK, SMALL TYPE 2P		
1969		A	JACK		J9402	1-780-062-11	S TERMINAL BLOCK		
1970		A	JACK		J9403	1-817-903-11	PIN JACK 3P		
1971		A	JACK		J9404	1-817-902-11	PIN JACK		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1972		A	JACK		J9406	1-817-902-11	PIN JACK		
1973		A	COIL		L8000	1-416-510-21	INDUCTOR 100UH		
1974		A	COIL		L8001	1-416-510-21	INDUCTOR 100UH		
1975		A	COIL		L8002	1-416-344-11	INDUCTOR 10UH		
1976		A	COIL		L8003	1-416-510-21	INDUCTOR 100UH		
1977		A	COIL		L8004	1-416-510-21	INDUCTOR 100UH		
1978		A	COIL		L8005	1-416-344-11	INDUCTOR 10UH		
1979		A	COIL		L8200	1-469-856-21	INDUCTOR 10UH		
1980		A	COIL		L8201	1-412-058-11	INDUCTOR 10UH		
1981		A	COIL		L8400	1-412-058-11	INDUCTOR 10UH		
1982		A	COIL		L8401	1-469-856-21	INDUCTOR 10UH		
1983		A	COIL		L8501	1-412-058-11	INDUCTOR 10UH		
1984		A	COIL		L8502	1-412-054-21	INDUCTOR 2.2UH		
1985		A	COIL		L8504	1-412-058-11	INDUCTOR 10UH		
1986		A	COIL		L8505	1-412-058-11	INDUCTOR 10UH		
1987		A	COIL		L8506	1-412-058-11	INDUCTOR 10UH		
1988		A	COIL		L8507	1-412-058-11	INDUCTOR 10UH		
1989		A	COIL		L8508	1-412-058-11	INDUCTOR 10UH		
1990		A	COIL		L8509	1-412-058-11	INDUCTOR 10UH		
1991		A	COIL		L8510	1-412-058-11	INDUCTOR 10UH		
1992		A	COIL		L8600	1-469-555-21	INDUCTOR 10UH		
1993		A	COIL		L8800	1-412-058-11	INDUCTOR 10UH		
1994		A	COIL		L8801	1-412-058-11	INDUCTOR 10UH		
1995		A	COIL		L8802	1-412-058-11	INDUCTOR 10UH		
1996		A	COIL		L9301	1-412-525-31	INDUCTOR 10UH		
1997		A	COIL		L9302	1-400-175-21	INDUCTOR 47UH		
1998		A	COIL		L9303	1-412-525-31	INDUCTOR 10UH		
1999		A	COIL		L9304	1-412-525-31	INDUCTOR 10UH		
2000		A	COIL		L9305	1-419-823-21	INDUCTOR 33UH		
2001		A	COIL		L9306	1-412-525-31	INDUCTOR 10UH		
2002		A	COIL		L9307	1-412-525-31	INDUCTOR 10UH		
2003		A	COIL		L9308	1-419-823-21	INDUCTOR 33UH		
2004		A	COIL		L9309	1-412-525-31	INDUCTOR 10UH		
2005		A	COIL		L9401	1-469-856-21	INDUCTOR 10UH		
2006		A	COIL		L9402	1-412-026-11	INDUCTOR 1UH		
2007		A	COIL		L9403	1-412-026-11	INDUCTOR 1UH		
2008		A	IC LINK	△	PS8501	1-533-940-21	IC LINK 1.2A 50V		
2009		A	TRANSISTOR		Q8000	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2010		A	TRANSISTOR		Q8001	8-729-216-22	TRANSISTOR 2SA1162-G		
2011		A	TRANSISTOR		Q8002	8-729-422-29	TRANSISTOR 2SD601A-S		
2012		A	TRANSISTOR		Q8003	8-729-216-22	TRANSISTOR 2SA1162-G		
2013		A	TRANSISTOR		Q8004	8-729-422-29	TRANSISTOR 2SD601A-S		
2014		A	TRANSISTOR		Q8005	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2015		A	TRANSISTOR		Q8006	8-729-422-29	TRANSISTOR 2SD601A-S		
2016		A	TRANSISTOR		Q8200	8-729-905-35	TRANSISTOR 2SC4081-R		
2017		A	TRANSISTOR		Q8201	8-729-905-35	TRANSISTOR 2SC4081-R		
2018		A	TRANSISTOR		Q8202	8-729-905-35	TRANSISTOR 2SC4081-R		
2019		A	TRANSISTOR		Q8204	8-729-905-35	TRANSISTOR 2SC4081-R		
2020		A	TRANSISTOR		Q8205	8-729-905-35	TRANSISTOR 2SC4081-R		
2021		A	TRANSISTOR		Q8206	8-729-905-35	TRANSISTOR 2SC4081-R		
2022		A	TRANSISTOR		Q8209	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2023		A	TRANSISTOR		Q8210	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2024		A	TRANSISTOR		Q8406	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2025		A	TRANSISTOR		Q8407	8-729-905-35	TRANSISTOR 2SC4081-R		
2026		A	TRANSISTOR		Q8410	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2027		A	TRANSISTOR		Q8411	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2028		A	TRANSISTOR		Q8412	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2029		A	TRANSISTOR		Q8501	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
2030		A	TRANSISTOR		Q8502	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2031		A	TRANSISTOR		Q8801	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2032		A	TRANSISTOR		Q8802	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2033		A	TRANSISTOR		Q8803	8-729-905-35	TRANSISTOR 2SC4081-R		
2034		A	TRANSISTOR		Q8804	8-729-905-35	TRANSISTOR 2SC4081-R		
2035		A	TRANSISTOR		Q8805	8-729-907-00	TRANSISTOR DTC114EU		
2036		A	TRANSISTOR		Q8806	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2037		A	TRANSISTOR		Q8807	8-729-216-22	TRANSISTOR 2SA1162-G		
2038		A	TRANSISTOR		Q8808	8-729-216-22	TRANSISTOR 2SA1162-G		
2039		A	TRANSISTOR		Q8809	1-801-806-11	TR DTC144EKA		
2040		A	TRANSISTOR		Q8810	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2041		A	TRANSISTOR		Q9301	8-729-905-35	TRANSISTOR 2SC4081-R		
2042		A	TRANSISTOR		Q9401	8-729-216-22	TRANSISTOR 2SA1162-G		
2043		A	TRANSISTOR		Q9402	8-729-905-35	TRANSISTOR 2SC4081-R		
2044		A	TRANSISTOR		Q9403	8-729-905-35	TRANSISTOR 2SC4081-R		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2045		A	TRANSISTOR		Q9404	8-729-905-35	TRANSISTOR 2SC4081-R		
2046		A	TRANSISTOR		Q9405	8-729-905-35	TRANSISTOR 2SC4081-R		
2047		A	TRANSISTOR		Q9406	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2048		A	TRANSISTOR		Q9407	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2049		A	TRANSISTOR		Q9408	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2050		A	TRANSISTOR		Q9409	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2051		A	TRANSISTOR		Q9410	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2052		A	TRANSISTOR		Q9411	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2053		A	TRANSISTOR		Q9412	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2054		A	TRANSISTOR		Q9413	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2055		A	TRANSISTOR		Q9414	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2056		A	TRANSISTOR		Q9415	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2057		A	TRANSISTOR		Q9416	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2058		A	TRANSISTOR		Q9417	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2059		A	RESISTOR		R8000	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2060		A	RESISTOR		R8001	1-216-805-11	METAL CHIP 47 5% 1/10W		
2061		A	RESISTOR		R8002	1-216-805-11	METAL CHIP 47 5% 1/10W		
2062		A	RESISTOR		R8004	1-216-864-11	SHORT CHIP 0		
2063		A	RESISTOR		R8005	1-216-839-11	METAL CHIP 33K 5% 1/10W		
2064		A	RESISTOR		R8006	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2065		A	RESISTOR		R8007	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2066		A	RESISTOR		R8008	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2067		A	RESISTOR		R8009	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2068		A	RESISTOR		R8010	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2069		A	RESISTOR		R8014	1-216-864-11	SHORT CHIP 0		
2070		A	RESISTOR		R8016	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2071		A	RESISTOR		R8017	1-216-864-11	SHORT CHIP 0		
2072		A	RESISTOR		R8018	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2073		A	RESISTOR		R8019	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2074		A	RESISTOR		R8020	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2075		A	RESISTOR		R8022	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2076		A	RESISTOR		R8024	1-216-805-11	METAL CHIP 47 5% 1/10W		
2077		A	RESISTOR		R8025	1-216-805-11	METAL CHIP 47 5% 1/10W		
2078		A	RESISTOR		R8026	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2079		A	RESISTOR		R8028	1-216-864-11	SHORT CHIP 0		
2080		A	RESISTOR		R8029	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2081		A	RESISTOR		R8030	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2082		A	RESISTOR		R8031	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2083		A	RESISTOR		R8032	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2084		A	RESISTOR		R8033	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2085		A	RESISTOR		R8034	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2086		A	RESISTOR		R8035	1-216-839-11	METAL CHIP 33K 5% 1/10W		
2087		A	RESISTOR		R8036	1-216-813-11	METAL CHIP 220 5% 1/10W		
2088		A	RESISTOR		R8037	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2089		A	RESISTOR		R8038	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2090		A	RESISTOR		R8039	1-216-864-11	SHORT CHIP 0		
2091		A	RESISTOR		R8040	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2092		A	RESISTOR		R8041	1-216-864-11	SHORT CHIP 0		
2093		A	RESISTOR		R8042	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2094		A	RESISTOR		R8043	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2095		A	RESISTOR		R8044	1-216-809-11	METAL CHIP 100 5% 1/10W		
2096		A	RESISTOR		R8045	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2097		A	RESISTOR		R8046	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2098		A	RESISTOR		R8047	1-216-864-11	SHORT CHIP 0		
2099		A	RESISTOR		R8048	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2100		A	RESISTOR		R8049	1-216-809-11	METAL CHIP 100 5% 1/10W		
2101		A	RESISTOR		R8050	1-216-809-11	METAL CHIP 100 5% 1/10W		
2102		A	RESISTOR		R8067	1-216-864-11	SHORT CHIP 0		
2103		A	RESISTOR		R8068	1-216-864-11	SHORT CHIP 0		
2104		A	RESISTOR		R8069	1-216-864-11	SHORT CHIP 0		
2105		A	RESISTOR		R8070	1-216-864-11	SHORT CHIP 0		
2106		A	RESISTOR		R8075	1-216-809-11	METAL CHIP 100 5% 1/10W		
2107		A	RESISTOR		R8082	1-216-864-11	SHORT CHIP 0		
2108		A	RESISTOR		R8200	1-216-805-11	METAL CHIP 47 5% 1/10W		
2109		A	RESISTOR		R8201	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2110		A	RESISTOR		R8202	1-216-805-11	METAL CHIP 47 5% 1/10W		
2111		A	RESISTOR		R8203	1-216-809-11	METAL CHIP 100 5% 1/10W		
2112		A	RESISTOR		R8204	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2113		A	RESISTOR		R8205	1-216-809-11	METAL CHIP 100 5% 1/10W		
2114		A	RESISTOR		R8206	1-216-809-11	METAL CHIP 100 5% 1/10W		
2115		A	RESISTOR		R8207	1-216-809-11	METAL CHIP 100 5% 1/10W		
2116		A	RESISTOR		R8208	1-216-809-11	METAL CHIP 100 5% 1/10W		
2117		A	RESISTOR		R8209	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2118		A	RESISTOR		R8210	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2119		A	RESISTOR		R8211	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2120		A	RESISTOR		R8212	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2121		A	RESISTOR		R8214	1-216-805-11	METAL CHIP 47 5% 1/10W		
2122		A	RESISTOR		R8215	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2123		A	RESISTOR		R8216	1-216-809-11	METAL CHIP 100 5% 1/10W		
2124		A	RESISTOR		R8217	1-216-809-11	METAL CHIP 100 5% 1/10W		
2125		A	RESISTOR		R8220	1-216-805-11	METAL CHIP 47 5% 1/10W		
2126		A	RESISTOR		R8221	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2127		A	RESISTOR		R8223	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2128		A	RESISTOR		R8224	1-216-809-11	METAL CHIP 100 5% 1/10W		
2129		A	RESISTOR		R8225	1-216-809-11	METAL CHIP 100 5% 1/10W		
2130		A	RESISTOR		R8228	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2131		A	RESISTOR		R8230	1-216-809-11	METAL CHIP 100 5% 1/10W		
2132		A	RESISTOR		R8231	1-216-809-11	METAL CHIP 100 5% 1/10W		
2133		A	RESISTOR		R8232	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2134		A	RESISTOR		R8233	1-216-809-11	METAL CHIP 100 5% 1/10W		
2135		A	RESISTOR		R8236	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2136		A	RESISTOR		R8238	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2137		A	RESISTOR		R8239	1-216-809-11	METAL CHIP 100 5% 1/10W		
2138		A	RESISTOR		R8240	1-216-809-11	METAL CHIP 100 5% 1/10W		
2139		A	RESISTOR		R8241	1-216-809-11	METAL CHIP 100 5% 1/10W		
2140		A	RESISTOR		R8242	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2141		A	RESISTOR		R8243	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2142		A	RESISTOR		R8244	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2143		A	RESISTOR		R8245	1-216-809-11	METAL CHIP 100 5% 1/10W		
2144		A	RESISTOR		R8246	1-216-049-11	RES-CHIP 1K 5% 1/10W		
2145		A	RESISTOR		R8247	1-216-049-11	RES-CHIP 1K 5% 1/10W		
2146		A	RESISTOR		R8248	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
2147		A	RESISTOR		R8249	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
2148		A	RESISTOR		R8250	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2149		A	RESISTOR		R8251	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2150		A	RESISTOR		R8252	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2151		A	RESISTOR		R8253	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2152		A	RESISTOR		R8256	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2153		A	RESISTOR		R8257	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2154		A	RESISTOR		R8258	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2155		A	RESISTOR		R8259	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2156		A	RESISTOR		R8260	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2157		A	RESISTOR		R8261	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2158		A	RESISTOR		R8400	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2159		A	RESISTOR		R8401	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2160		A	RESISTOR		R8402	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2161		A	RESISTOR		R8410	1-216-809-11	METAL CHIP 100 5% 1/10W		
2162		A	RESISTOR		R8411	1-216-809-11	METAL CHIP 100 5% 1/10W		
2163		A	RESISTOR		R8412	1-216-809-11	METAL CHIP 100 5% 1/10W		
2164		A	RESISTOR		R8422	1-216-809-11	METAL CHIP 100 5% 1/10W		
2165		A	RESISTOR		R8423	1-216-809-11	METAL CHIP 100 5% 1/10W		
2166		A	RESISTOR		R8424	1-216-809-11	METAL CHIP 100 5% 1/10W		
2167		A	RESISTOR		R8425	1-216-809-11	METAL CHIP 100 5% 1/10W		
2168		A	RESISTOR		R8426	1-216-809-11	METAL CHIP 100 5% 1/10W		
2169		A	RESISTOR		R8427	1-216-809-11	METAL CHIP 100 5% 1/10W		
2170		A	RESISTOR		R8428	1-216-809-11	METAL CHIP 100 5% 1/10W		
2171		A	RESISTOR		R8429	1-218-285-11	METAL CHIP 75 5% 1/10W		
2172		A	RESISTOR		R8430	1-216-805-11	METAL CHIP 47 5% 1/10W		
2173		A	RESISTOR		R8431	1-216-809-11	METAL CHIP 100 5% 1/10W		
2174		A	RESISTOR		R8432	1-216-805-11	METAL CHIP 47 5% 1/10W		
2175		A	RESISTOR		R8433	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2176		A	RESISTOR		R8434	1-216-809-11	METAL CHIP 100 5% 1/10W		
2177		A	RESISTOR		R8435	1-216-851-11	METAL CHIP 330K 5% 1/10W		
2178		A	RESISTOR		R8436	1-216-809-11	METAL CHIP 100 5% 1/10W		
2179		A	RESISTOR		R8437	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2180		A	RESISTOR		R8439	1-218-285-11	METAL CHIP 75 5% 1/10W		
2181		A	RESISTOR		R8440	1-218-285-11	METAL CHIP 75 5% 1/10W		
2182		A	RESISTOR		R8441	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2183		A	RESISTOR		R8442	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
2184		A	RESISTOR		R8443	1-216-797-11	METAL CHIP 10 5% 1/10W		
2185		A	RESISTOR		R8445	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2186		A	RESISTOR		R8446	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2187		A	RESISTOR		R8447	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2188		A	RESISTOR		R8448	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2189		A	RESISTOR		R8450	1-216-809-11	METAL CHIP 100 5% 1/10W		
2190		A	RESISTOR		R8451	1-216-809-11	METAL CHIP 100 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2191		A	RESISTOR		R8452	1-216-809-11	METAL CHIP 100 5% 1/10W		
2192		A	RESISTOR		R8454	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
2193		A	RESISTOR		R8455	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
2194		A	RESISTOR		R8456	1-216-041-00	RES-CHIP 470 5% 1/10W		
2195		A	RESISTOR		R8457	1-216-806-11	METAL CHIP 56 5% 1/10W		
2196		A	RESISTOR		R8458	1-216-806-11	METAL CHIP 56 5% 1/10W		
2197		A	RESISTOR		R8459	1-216-806-11	METAL CHIP 56 5% 1/10W		
2198		A	RESISTOR		R8460	1-216-864-11	SHORT CHIP 0		
2199		A	RESISTOR		R8461	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2200		A	RESISTOR		R8462	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2201		A	RESISTOR		R8463	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2202		A	RESISTOR		R8502	1-249-385-11	CARBON 2.2 5% 1/4W		
2203		A	RESISTOR		R8504	1-216-803-11	METAL CHIP 33 5% 1/10W		
2204		A	RESISTOR		R8505	1-216-803-11	METAL CHIP 33 5% 1/10W		
2205		A	RESISTOR		R8506	1-216-803-11	METAL CHIP 33 5% 1/10W		
2206		A	RESISTOR		R8507	1-216-803-11	METAL CHIP 33 5% 1/10W		
2207		A	RESISTOR		R8512	1-216-809-11	METAL CHIP 100 5% 1/10W		
2208		A	RESISTOR		R8515	1-216-803-11	METAL CHIP 33 5% 1/10W		
2209		A	RESISTOR		R8517	1-216-803-11	METAL CHIP 33 5% 1/10W		
2210		A	RESISTOR		R8519	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2211		A	RESISTOR		R8520	1-216-813-11	METAL CHIP 220 5% 1/10W		
2212		A	RESISTOR		R8523	1-216-803-11	METAL CHIP 33 5% 1/10W		
2213		A	RESISTOR		R8524	1-216-803-11	METAL CHIP 33 5% 1/10W		
2214		A	RESISTOR		R8527	1-216-809-11	METAL CHIP 100 5% 1/10W		
2215		A	RESISTOR		R8528	1-216-809-11	METAL CHIP 100 5% 1/10W		
2216		A	RESISTOR		R8535	1-216-864-11	SHORT CHIP 0		
2217		A	RESISTOR		R8536	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2218		A	RESISTOR		R8537	1-216-864-11	SHORT CHIP 0		
2219		A	RESISTOR		R8538	1-216-041-00	RES-CHIP 470 5% 1/10W		
2220		A	RESISTOR		R8539	1-216-041-00	RES-CHIP 470 5% 1/10W		
2221		A	RESISTOR		R8540	1-216-041-00	RES-CHIP 470 5% 1/10W		
2222		A	RESISTOR		R8541	1-216-041-00	RES-CHIP 470 5% 1/10W		
2223		A	RESISTOR		R8543	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2224		A	RESISTOR		R8544	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2225		A	RESISTOR		R8545	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2226		A	RESISTOR		R8546	1-216-809-11	METAL CHIP 100 5% 1/10W		
2227		A	RESISTOR		R8547	1-216-817-11	METAL CHIP 470 5% 1/10W		
2228		A	RESISTOR		R8548	1-216-803-11	METAL CHIP 33 5% 1/10W		
2229		A	RESISTOR		R8549	1-216-817-11	METAL CHIP 470 5% 1/10W		
2230		A	RESISTOR		R8550	1-216-817-11	METAL CHIP 470 5% 1/10W		
2231		A	RESISTOR		R8552	1-216-809-11	METAL CHIP 100 5% 1/10W		
2232		A	RESISTOR		R8553	1-216-803-11	METAL CHIP 33 5% 1/10W		
2233		A	RESISTOR		R8554	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2234		A	RESISTOR		R8555	1-216-803-11	METAL CHIP 33 5% 1/10W		
2235		A	RESISTOR		R8556	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2236		A	RESISTOR		R8557	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2237		A	RESISTOR		R8558	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2238		A	RESISTOR		R8559	1-216-803-11	METAL CHIP 33 5% 1/10W		
2239		A	RESISTOR		R8560	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2240		A	RESISTOR		R8561	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2241		A	RESISTOR		R8562	1-216-803-11	METAL CHIP 33 5% 1/10W		
2242		A	RESISTOR		R8563	1-216-803-11	METAL CHIP 33 5% 1/10W		
2243		A	RESISTOR		R8564	1-216-864-11	SHORT CHIP 0		
2244		A	RESISTOR		R8565	1-216-803-11	METAL CHIP 33 5% 1/10W		
2245		A	RESISTOR		R8567	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2246		A	RESISTOR		R8569	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2247		A	RESISTOR		R8570	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2248		A	RESISTOR		R8571	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2249		A	RESISTOR		R8572	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2250		A	RESISTOR		R8573	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2251		A	RESISTOR		R8574	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2252		A	RESISTOR		R8575	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2253		A	RESISTOR		R8578	1-216-864-11	SHORT CHIP 0		
2254		A	RESISTOR		R8579	1-216-864-11	SHORT CHIP 0		
2255		A	RESISTOR		R8580	1-216-864-11	SHORT CHIP 0		
2256		A	RESISTOR		R8581	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2257		A	RESISTOR		R8582	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2258		A	RESISTOR		R8583	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
2259		A	RESISTOR		R8584	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2260		A	RESISTOR		R8585	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2261		A	RESISTOR		R8600	1-218-752-11	METAL CHIP 330K 0.5% 1/10W		
2262		A	RESISTOR		R8601	1-218-720-11	METAL CHIP 15K 0.5% 1/10W		
2263		A	RESISTOR		R8602	1-218-720-11	METAL CHIP 15K 0.5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2264		A	RESISTOR		R8603	1-216-861-11	METAL CHIP 2.2M 5% 1/10W		
2265		A	RESISTOR		R8604	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2266		A	RESISTOR		R8605	1-216-861-11	METAL CHIP 2.2M 5% 1/10W		
2267		A	RESISTOR		R8606	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W		
2268		A	RESISTOR		R8607	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
2269		A	RESISTOR		R8608	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W		
2270		A	RESISTOR		R8609	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
2271		A	RESISTOR		R8610	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2272		A	RESISTOR		R8611	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2273		A	RESISTOR		R8612	1-216-809-11	METAL CHIP 100 5% 1/10W		
2274		A	RESISTOR		R8613	1-216-809-11	METAL CHIP 100 5% 1/10W		
2275		A	RESISTOR		R8615	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2276		A	RESISTOR		R8616	1-218-740-11	METAL CHIP 100K 0.5% 1/10W		
2277		A	RESISTOR		R8617	1-216-809-11	METAL CHIP 100 5% 1/10W		
2278		A	RESISTOR		R8618	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2279		A	RESISTOR		R8619	1-216-809-11	METAL CHIP 100 5% 1/10W		
2280		A	RESISTOR		R8620	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2281		A	RESISTOR		R8621	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2282		A	RESISTOR		R8622	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2283		A	RESISTOR		R8625	1-216-864-11	SHORT CHIP 0		
2284		A	RESISTOR		R8626	1-216-864-11	SHORT CHIP 0		
2285		A	RESISTOR		R8627	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2286		A	RESISTOR		R8628	1-216-851-11	METAL CHIP 330K 5% 1/10W		
2287		A	RESISTOR		R8629	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2288		A	RESISTOR		R8630	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2289		A	RESISTOR		R8631	1-216-864-11	SHORT CHIP 0		
2290		A	RESISTOR		R8632	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2291		A	RESISTOR		R8633	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2292		A	RESISTOR		R8634	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2293		A	RESISTOR		R8635	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2294		A	RESISTOR		R8636	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2295		A	RESISTOR		R8682	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2296		A	RESISTOR		R8683	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2297		A	RESISTOR		R8684	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2298		A	RESISTOR		R8685	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2299		A	RESISTOR		R8691	1-216-864-11	SHORT CHIP 0		
2300		A	RESISTOR		R8801	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2301		A	RESISTOR		R8802	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2302		A	RESISTOR		R8803	1-216-836-11	METAL CHIP 18K 5% 1/10W		
2303		A	RESISTOR		R8804	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2304		A	RESISTOR		R8805	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2305		A	RESISTOR		R8806	1-216-838-11	METAL CHIP 27K 5% 1/10W		
2306		A	RESISTOR		R8807	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2307		A	RESISTOR		R8808	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2308		A	RESISTOR		R8809	1-216-037-00	RES-CHIP 330 5% 1/10W		
2309		A	RESISTOR		R8810	1-216-037-00	RES-CHIP 330 5% 1/10W		
2310		A	RESISTOR		R8811	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2311		A	RESISTOR		R8812	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2312		A	RESISTOR		R8813	1-216-815-11	METAL CHIP 330 5% 1/10W		
2313		A	RESISTOR		R8814	1-216-815-11	METAL CHIP 330 5% 1/10W		
2314		A	RESISTOR		R8815	1-216-864-11	SHORT CHIP 0		
2315		A	RESISTOR		R8816	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2316		A	RESISTOR		R8817	1-216-853-11	METAL CHIP 470K 5% 1/10W		
2317		A	RESISTOR		R8818	1-216-853-11	METAL CHIP 470K 5% 1/10W		
2318		A	RESISTOR		R8819	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2319		A	RESISTOR		R8820	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2320		A	RESISTOR		R8821	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2321		A	RESISTOR		R8822	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2322		A	RESISTOR		R8823	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2323		A	RESISTOR		R8824	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2324		A	RESISTOR		R8825	1-216-809-11	METAL CHIP 100 5% 1/10W		
2325		A	RESISTOR		R8826	1-216-844-11	METAL CHIP 82K 5% 1/10W		
2326		A	RESISTOR		R8827	1-216-844-11	METAL CHIP 82K 5% 1/10W		
2327		A	RESISTOR		R8828	1-216-809-11	METAL CHIP 100 5% 1/10W		
2328		A	RESISTOR		R8829	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2329		A	RESISTOR		R8830	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2330		A	RESISTOR		R8831	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2331		A	RESISTOR		R8832	1-216-864-11	SHORT CHIP 0		
2332		A	RESISTOR		R8833	1-216-864-11	SHORT CHIP 0		
2333		A	RESISTOR		R8836	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2334		A	RESISTOR		R8837	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2335		A	RESISTOR		R8838	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2336		A	RESISTOR		R8839	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2337		A	RESISTOR		R8840	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2338		A	RESISTOR		R8841	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2339		A	RESISTOR		R8842	1-216-815-11	METAL CHIP 330 5% 1/10W		
2340		A	RESISTOR		R8843	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2341		A	RESISTOR		R8845	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2342		A	RESISTOR		R8846	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2343		A	RESISTOR		R8848	1-216-838-11	METAL CHIP 27K 5% 1/10W		
2344		A	RESISTOR		R8849	1-216-836-11	METAL CHIP 18K 5% 1/10W		
2345		A	RESISTOR		R8850	1-216-864-11	SHORT CHIP 0		
2346		A	RESISTOR		R8851	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2347		A	RESISTOR		R8852	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2348		A	RESISTOR		R8853	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2349		A	RESISTOR		R8854	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2350		A	RESISTOR		R8855	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2351		A	RESISTOR		R8856	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
2352		A	RESISTOR		R8857	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2353		A	RESISTOR		R8858	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2354		A	RESISTOR		R8859	1-216-809-11	METAL CHIP 100 5% 1/10W		
2355		A	RESISTOR		R8860	1-216-809-11	METAL CHIP 100 5% 1/10W		
2356		A	RESISTOR		R8861	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
2357		A	RESISTOR		R8862	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
2358		A	RESISTOR		R8863	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2359		A	RESISTOR		R8864	1-216-683-11	METAL CHIP 22K 0.5% 1/10W		
2360		A	RESISTOR		R8865	1-216-683-11	METAL CHIP 22K 0.5% 1/10W		
2361		A	RESISTOR		R8866	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2362		A	RESISTOR		R8869	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2363		A	RESISTOR		R8870	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2364		A	RESISTOR		R8872	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2365		A	RESISTOR		R8873	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
2366		A	RESISTOR		R8874	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2367		A	RESISTOR		R9301	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2368		A	RESISTOR		R9302	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2369		A	RESISTOR		R9303	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
2370		A	RESISTOR		R9304	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2371		A	RESISTOR		R9305	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2372		A	RESISTOR		R9306	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2373		A	RESISTOR		R9307	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
2374		A	RESISTOR		R9308	1-249-377-11	CARBON 0.47 5% 1/4W		
2375		A	RESISTOR		R9309	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
2376		A	RESISTOR		R9310	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2377		A	RESISTOR		R9311	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2378		A	RESISTOR		R9312	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2379		A	RESISTOR		R9313	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
2380		A	RESISTOR		R9314	1-218-658-11	METAL CHIP 39 0.5% 1/10W		
2381		A	RESISTOR		R9315	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2382		A	RESISTOR		R9316	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2383		A	RESISTOR		R9317	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2384		A	RESISTOR		R9318	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2385		A	RESISTOR		R9319	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2386		A	RESISTOR		R9320	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2387		A	RESISTOR		R9321	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2388		A	RESISTOR		R9322	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2389		A	RESISTOR		R9401	1-216-864-11	SHORT CHIP 0		
2390		A	RESISTOR		R9402	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2391		A	RESISTOR		R9403	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2392		A	RESISTOR		R9404	1-216-811-11	METAL CHIP 150 5% 1/10W		
2393		A	RESISTOR		R9405	1-216-811-11	METAL CHIP 150 5% 1/10W		
2394		A	RESISTOR		R9406	1-216-811-11	METAL CHIP 150 5% 1/10W		
2395		A	RESISTOR		R9407	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2396		A	RESISTOR		R9408	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2397		A	RESISTOR		R9409	1-216-811-11	METAL CHIP 150 5% 1/10W		
2398		A	RESISTOR		R9410	1-216-811-11	METAL CHIP 150 5% 1/10W		
2399		A	RESISTOR		R9411	1-216-811-11	METAL CHIP 150 5% 1/10W		
2400		A	RESISTOR		R9412	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2401		A	RESISTOR		R9413	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2402		A	RESISTOR		R9414	1-216-811-11	METAL CHIP 150 5% 1/10W		
2403		A	RESISTOR		R9415	1-216-811-11	METAL CHIP 150 5% 1/10W		
2404		A	RESISTOR		R9416	1-216-811-11	METAL CHIP 150 5% 1/10W		
2405		A	RESISTOR		R9417	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2406		A	RESISTOR		R9418	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2407		A	RESISTOR		R9419	1-216-811-11	METAL CHIP 150 5% 1/10W		
2408		A	RESISTOR		R9420	1-216-811-11	METAL CHIP 150 5% 1/10W		
2409		A	RESISTOR		R9421	1-216-811-11	METAL CHIP 150 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2410		A	RESISTOR		R9422	1-216-811-11	METAL CHIP 150 5% 1/10W		
2411		A	RESISTOR		R9423	1-216-811-11	METAL CHIP 150 5% 1/10W		
2412		A	RESISTOR		R9424	1-216-811-11	METAL CHIP 150 5% 1/10W		
2413		A	RESISTOR		R9425	1-216-811-11	METAL CHIP 150 5% 1/10W		
2414		A	RESISTOR		R9426	1-216-811-11	METAL CHIP 150 5% 1/10W		
2415		A	RESISTOR		R9427	1-216-811-11	METAL CHIP 150 5% 1/10W		
2416		A	RESISTOR		R9428	1-216-811-11	METAL CHIP 150 5% 1/10W		
2417		A	RESISTOR		R9429	1-216-811-11	METAL CHIP 150 5% 1/10W		
2418		A	RESISTOR		R9430	1-216-811-11	METAL CHIP 150 5% 1/10W		
2419		A	RESISTOR		R9431	1-216-811-11	METAL CHIP 150 5% 1/10W		
2420		A	RESISTOR		R9432	1-216-811-11	METAL CHIP 150 5% 1/10W		
2421		A	RESISTOR		R9433	1-216-811-11	METAL CHIP 150 5% 1/10W		
2422		A	RESISTOR		R9434	1-216-864-11	SHORT CHIP 0		
2423		A	RESISTOR		R9435	1-216-864-11	SHORT CHIP 0		
2424		A	RESISTOR		R9436	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2425		A	RESISTOR		R9438	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2426		A	RESISTOR		R9439	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2427		A	RESISTOR		R9440	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2428		A	RESISTOR		R9441	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2429		A	RESISTOR		R9442	1-216-864-11	SHORT CHIP 0		
2430		A	RESISTOR		R9443	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2431		A	RESISTOR		R9445	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2432		A	RESISTOR		R9446	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2433		A	RESISTOR		R9447	1-216-813-11	METAL CHIP 220 5% 1/10W		
2434		A	RESISTOR		R9448	1-216-813-11	METAL CHIP 220 5% 1/10W		
2435		A	RESISTOR		R9449	1-216-813-11	METAL CHIP 220 5% 1/10W		
2436		A	RESISTOR		R9450	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2437		A	RESISTOR		R9451	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2438		A	RESISTOR		R9452	1-216-813-11	METAL CHIP 220 5% 1/10W		
2439		A	RESISTOR		R9453	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2440		A	RESISTOR		R9454	1-216-813-11	METAL CHIP 220 5% 1/10W		
2441		A	RESISTOR		R9455	1-216-813-11	METAL CHIP 220 5% 1/10W		
2442		A	RESISTOR		R9456	1-216-809-11	METAL CHIP 100 5% 1/10W		
2443		A	RESISTOR		R9457	1-216-809-11	METAL CHIP 100 5% 1/10W		
2444		A	RESISTOR		R9458	1-216-809-11	METAL CHIP 100 5% 1/10W		
2445		A	RESISTOR		R9459	1-216-809-11	METAL CHIP 100 5% 1/10W		
2446		A	RESISTOR		R9460	1-216-809-11	METAL CHIP 100 5% 1/10W		
2447		A	RESISTOR		R9461	1-216-809-11	METAL CHIP 100 5% 1/10W		
2448		A	RESISTOR		R9462	1-216-809-11	METAL CHIP 100 5% 1/10W		
2449		A	RESISTOR		R9463	1-216-809-11	METAL CHIP 100 5% 1/10W		
2450		A	RESISTOR		R9464	1-216-809-11	METAL CHIP 100 5% 1/10W		
2451		A	RESISTOR		R9465	1-216-809-11	METAL CHIP 100 5% 1/10W		
2452		A	RESISTOR		R9466	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2453		A	RESISTOR		R9467	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2454		A	RESISTOR		R9468	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2455		A	RESISTOR		R9471	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2456		A	RESISTOR		R9472	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2457		A	RESISTOR		R9475	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2458		A	RESISTOR		R9476	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2459		A	RESISTOR		R9477	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2460		A	RESISTOR		R9478	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2461		A	RESISTOR		R9479	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2462		A	RESISTOR		R9480	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2463		A	RESISTOR		R9481	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2464		A	RESISTOR		R9482	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2465		A	RESISTOR		R9483	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2466		A	RESISTOR		R9484	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2467		A	RESISTOR		R9485	1-216-813-11	METAL CHIP 220 5% 1/10W		
2468		A	RESISTOR		R9486	1-216-813-11	METAL CHIP 220 5% 1/10W		
2469		A	RESISTOR		R9487	1-216-813-11	METAL CHIP 220 5% 1/10W		
2470		A	RESISTOR		R9489	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2471		A	RESISTOR		R9490	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2472		A	RESISTOR		R9491	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2473		A	RESISTOR		R9492	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2474		A	RESISTOR		R9493	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2475		A	RESISTOR		R9494	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2476		A	RESISTOR		R9495	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2477		A	RESISTOR		R9496	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2478		A	RESISTOR		R9497	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2479		A	RESISTOR		R9498	1-216-809-11	METAL CHIP 100 5% 1/10W		
2480		A	RESISTOR		R9499	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2481		A	TUNER		TU8000	8-598-594-30	TUNER, FSS BTF-FA421		
2482		A	TUNER		TU8001	8-598-593-50	TUNER, FSS BTF-WA421		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2483		A	VARISTOR		VD9400	1-803-974-21	VARISTOR, CHIP (1608)		
2484		A	VARISTOR		VD9401	1-803-974-21	VARISTOR, CHIP (1608)		
2485		A	VARISTOR		VD9402	1-803-974-21	VARISTOR, CHIP (1608)		
2486		A	VARISTOR		VD9403	1-803-974-21	VARISTOR, CHIP (1608)		
2487		A	VARISTOR		VD9404	1-803-974-21	VARISTOR, CHIP (1608)		
2488		A	VARISTOR		VD9405	1-803-974-21	VARISTOR, CHIP (1608)		
2489		A	VARISTOR		VD9406	1-803-974-21	VARISTOR, CHIP (1608)		
2490		A	VARISTOR		VD9407	1-803-974-21	VARISTOR, CHIP (1608)		
2491		A	VARISTOR		VD9408	1-803-974-21	VARISTOR, CHIP (1608)		
2492		A	VARISTOR		VD9409	1-803-974-21	VARISTOR, CHIP (1608)		
2493		A	VARISTOR		VD9410	1-803-974-21	VARISTOR, CHIP (1608)		
2494		A	VARISTOR		VD9411	1-803-974-21	VARISTOR, CHIP (1608)		
2495		A	VARISTOR		VD9412	1-803-974-21	VARISTOR, CHIP (1608)		
2496		A	VARISTOR		VD9413	1-803-974-21	VARISTOR, CHIP (1608)		
2497		A	VARISTOR		VD9414	1-803-974-21	VARISTOR, CHIP (1608)		
2498		A	CRYSTAL		X8400	1-795-214-21	VIBRATOR, CERAMIC (4MHZ)		
2499		A	CRYSTAL		X8501	1-813-094-11	VIBRATOR, CRYSTAL		
2500		A	CRYSTAL		X8601	1-781-646-21	VIBRATOR, CERAMIC		
2501	G	CAPACITOR			C6001	1-165-530-11	MYLAR 0.47UF 10 275V		
2502	G	CAPACITOR			C6002	1-165-528-11	MYLAR 0.1UF 10 275V		
2503	G	CAPACITOR			C6003	1-119-895-51	CERAMIC 4700PF 20.00% 250V		
2504	G	CAPACITOR			C6004	1-119-895-51	CERAMIC 4700PF 20.00% 250V		
2505	G	CAPACITOR			C6005	1-119-887-51	CERAMIC 1000PF 20.00% 250V		
2506	G	CAPACITOR			C6006	1-119-887-51	CERAMIC 1000PF 20.00% 250V		
2507	G	CAPACITOR			C6007	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2508	G	CAPACITOR			C6008	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2509	G	CAPACITOR			C6010	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
2510	G	CAPACITOR			C6011	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
2511	G	CAPACITOR			C6012	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
2512	G	CAPACITOR			C6013	1-136-479-11	FILM 0.001UF 5.00% 100V		
2513	G	CAPACITOR			C6014	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2514	G	CAPACITOR			C6015	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2515	G	CAPACITOR			C6016	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2516	G	CAPACITOR			C6017	1-107-894-11	ELECT 220UF 20.00% 35V		
2517	G	CAPACITOR			C6018	1-107-903-11	ELECT 2.2UF 20.00% 50V		
2518	G	CAPACITOR			C6019	1-107-906-11	ELECT 10UF 20.00% 50V		
2519	G	CAPACITOR			C6020	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2520	G	CAPACITOR			C6021	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2521	G	CAPACITOR			C6022	1-130-495-00	MYLAR 0.1UF 5.00% 50V		
2522	G	CAPACITOR			C6023	1-126-947-11	ELECT 47UF 20.00% 35V		
2523	G	CAPACITOR			C6024	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
2524	G	CAPACITOR			C6025	1-107-680-91	ELECT 22UF 20.00% 450V		
2525	G	CAPACITOR			C6026	1-101-821-00	CERAMIC 0.0022UF 500V		
2526	G	CAPACITOR			C6027	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
2527	G	CAPACITOR			C6028	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
2528	G	CAPACITOR			C6029	1-126-964-11	ELECT 10UF 20.00% 50V		
2529	G	CAPACITOR			C6030	1-164-690-91	CERAMIC CHIP 0.0022UF 5.00% 50V		
2530	G	CAPACITOR			C6031	1-100-732-11	FILM 18000PF 3% 1KV		
2531	G	CAPACITOR			C6032	1-102-228-00	CERAMIC 470PF 10.00% 500V		
2532	G	CAPACITOR			C6033	1-107-909-11	ELECT 47UF 20.00% 50V		
2533	G	CAPACITOR			C6035	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2534	G	CAPACITOR			C6036	1-102-228-00	CERAMIC 470PF 10.00% 500V		
2535	G	CAPACITOR			C6037	1-126-967-11	ELECT 47UF 20.00% 50V		
2536	G	CAPACITOR			C6038	1-107-904-11	ELECT 3.3UF 20.00% 50V		
2537	G	CAPACITOR			C6039	1-135-372-31	ELECT 470UF 20% 10V		
2538	G	CAPACITOR			C6040	1-128-582-11	ELECT 10UF 20.00% 100V		
2539	G	CAPACITOR			C6041	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2540	G	CAPACITOR			C6042	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
2541	G	CAPACITOR			C6043	1-126-926-11	ELECT 1000UF 20.00% 10V		
2542	G	CAPACITOR			C6045	1-128-945-31	ELECT 1000UF 20% 10V		
2543	G	CAPACITOR			C6046	1-104-665-11	ELECT 100UF 20.00% 25V		
2544	G	CAPACITOR			C6048	1-135-362-31	ELECT 1500UF 20% 16V		
2545	G	CAPACITOR			C6049	1-136-169-00	FILM 0.22UF 5.00% 50V		
2546	G	CAPACITOR			C6050	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
2547	G	CAPACITOR			C6052	1-126-947-11	ELECT 47UF 20.00% 35V		
2548	G	CAPACITOR			C6053	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2549	G	CAPACITOR			C6056	1-126-960-11	ELECT 1UF 20.00% 50V		
2550	G	CAPACITOR			C6057	1-107-888-11	ELECT 47UF 20.00% 25V		
2551	G	CAPACITOR			C6058	1-126-934-11	ELECT 220UF 20.00% 16V		
2552	G	CAPACITOR			C6059	1-126-934-11	ELECT 220UF 20.00% 16V		
2553	G	CAPACITOR			C6061	1-126-934-11	ELECT 220UF 20.00% 16V		
2554	G	CAPACITOR			C6062	1-107-928-11	ELECT 4.7UF 20.00% 100V		
2555	G	CAPACITOR			C6064	1-130-497-00	MYLAR 0.15UF 5.00% 50V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description			Remarks-1	Remarks-2
2556		G	CAPACITOR		C6065	1-126-934-11	ELECT	220UF	20.00% 16V		
2557		G	CAPACITOR		C6067	1-126-934-11	ELECT	220UF	20.00% 16V		
2558		G	CAPACITOR		C6068	1-126-934-11	ELECT	220UF	20.00% 16V		
2559		G	CAPACITOR		C6069	1-126-934-11	ELECT	220UF	20.00% 16V		
2560		G	CAPACITOR		C6070	1-104-665-11	ELECT	100UF	20.00% 25V		
2561		G	CAPACITOR		C6071	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
2562		G	CAPACITOR		C6072	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V		
2563		G	CAPACITOR		C6074	1-107-823-11	CERAMIC CHIP	0.47UF	10.00% 16V		
2564		G	CAPACITOR		C6079	1-107-826-11	CERAMIC CHIP	0.1UF	10.00% 16V		
2565		G	CAPACITOR		C6082	1-107-826-11	CERAMIC CHIP	0.1UF	10.00% 16V		
2566		G	CAPACITOR		C6101	1-126-960-11	ELECT	1UF	20.00% 50V		
2567		G	CAPACITOR		C6102	1-164-156-11	CERAMIC CHIP	0.1UF	25V		
2568		G	CAPACITOR		C6751	1-165-908-11	CERAMIC CHIP	1UF	10% 10V		
2569		G	CAPACITOR		C6753	1-107-826-11	CERAMIC CHIP	0.1UF	10.00% 16V		
2570		G	CAPACITOR		C6755	1-135-960-91	CERAMIC CHIP	10UF	10% 25V		
2571		G	CAPACITOR		C6756	1-115-339-11	CERAMIC CHIP	0.1UF	10.00% 50V		
2572		G	CAPACITOR		C6759	1-128-949-31	ELECT	470UF	20% 16V		
2573		G	CAPACITOR		C6760	1-126-767-11	ELECT	1000UF	20.00% 16V		
2574		G	CAPACITOR		C6761	1-165-176-11	CERAMIC CHIP	0.047UF	10.00% 16V		
2575		G	CAPACITOR		C6762	1-100-566-91	CERAMIC CHIP	0.1UF	10.00% 25V		
2576		G	CAPACITOR		C6764	1-162-964-11	CERAMIC CHIP	0.001UF	10.00% 50V		
2577		G	CAPACITOR		C6766	1-128-950-31	ELECT	1000UF	20% 16V		
2578		G	CAPACITOR		C6767	1-165-730-31	ELECT	680UF	20% 16V		
2579		G	CAPACITOR		C6768	1-164-245-11	CERAMIC CHIP	0.015UF	10.00% 25V		
2580		G	CAPACITOR		C6770	1-100-591-91	CERAMIC CHIP	1UF	10% 25V		
2581		G	LEAD PIN	*	CLP601	4-042-408-01	PIN, COATING LEAD				
2582		G	LEAD PIN	*	CLP602	4-042-408-01	PIN, COATING LEAD				
2583		G	CONNECTOR		CN6001	1-785-294-11	PIN, CONNECTOR (PC BOARD)	3P			
2584		G	CONNECTOR	*	CN6002	1-564-515-11	PLUG, CONNECTOR	12P			
2585		G	CONNECTOR	*	CN6003	1-564-511-11	PLUG, CONNECTOR	8P			
2586		G	CONNECTOR	*	CN6004	1-564-510-11	PLUG, CONNECTOR	7P			
2587		G	CONNECTOR	*	CN6005	1-566-765-11	PIN, CONNECTOR (PC BOARD)	10P			
2588		G	CONNECTOR		CN6009	1-695-915-11	TAB (CONTACT)				
2589		G	CONNECTOR		CN6010	1-695-915-11	TAB (CONTACT)				
2590		G	CONNECTOR		CN6011	1-695-915-11	TAB (CONTACT)				
2591		G	CONNECTOR	*	CN6101	1-566-761-11	PIN, CONNECTOR (PC BOARD)	6P			
2592		G	DIODE		D6001	8-719-041-97	DIODE MA113-(TX)				
2593		G	DIODE		D6002	8-719-041-97	DIODE MA113-(TX)				
2594		G	DIODE		D6003	8-719-948-45	DIODE ERA22-08				
2595		G	DIODE		D6004	8-719-077-77	DIODE D3SB60F3				
2596		G	DIODE		D6005	8-719-031-79	DIODE D5SC4M				
2597		G	DIODE		D6006	8-719-404-50	DIODE MA111-TX				
2598		G	DIODE		D6007	8-719-077-76	DIODE D2SB60A-F04				
2599		G	DIODE		D6008	8-719-979-64	DIODE UF4005PKG23				
2600		G	DIODE		D6009	8-719-404-50	DIODE MA111-TX				
2601		G	DIODE		D6010	8-719-052-90	DIODE D1NL40-TA2				
2602		G	DIODE		D6011	8-719-052-90	DIODE D1NL40-TA2				
2603		G	DIODE		D6012	8-719-052-90	DIODE D1NL40-TA2				
2604		G	DIODE		D6013	8-719-052-90	DIODE D1NL40-TA2				
2605		G	DIODE		D6014	8-719-948-45	DIODE ERA22-08				
2606		G	DIODE		D6015	8-719-063-73	DIODE D1NL20U-TR				
2607		G	DIODE		D6016	8-719-063-73	DIODE D1NL20U-TR				
2608		G	DIODE		D6017	8-719-041-97	DIODE MA113-(TX)				
2609		G	DIODE		D6018	8-719-063-73	DIODE D1NL20U-TR				
2610		G	DIODE		D6019	8-719-063-73	DIODE D1NL20U-TR				
2611		G	DIODE		D6020	8-719-510-09	DIODE D10SC6M				
2612		G	DIODE		D6021	8-719-069-56	DIODE UDZSTE-176.2B				
2613		G	DIODE		D6022	8-719-031-79	DIODE D5SC4M				
2614		G	DIODE		D6023	8-719-404-50	DIODE MA111-TX				
2615		G	DIODE		D6024	8-719-056-85	DIODE UDZ-TE-17-8.2B				
2616		G	DIODE		D6025	8-719-404-50	DIODE MA111-TX				
2617		G	DIODE		D6026	8-719-033-53	DIODE RD6.8SB2-T1				
2618		G	DIODE		D6027	8-719-404-50	DIODE MA111-TX				
2619		G	DIODE		D6028	8-719-404-50	DIODE MA111-TX				
2620		G	DIODE		D6029	8-719-404-50	DIODE MA111-TX				
2621		G	DIODE		D6030	8-719-404-50	DIODE MA111-TX				
2622		G	DIODE		D6031	8-719-083-71	DIODE UDZSTE-1730B				
2623		G	DIODE		D6032	8-719-983-37	DIODE MTZJ-T-77-36A				
2624		G	DIODE		D6033	8-719-063-73	DIODE D1NL20U-TR				
2625		G	DIODE		D6034	8-719-083-83	DIODE UDZS-TE17-15B				
2626		G	DIODE		D6035	8-719-083-83	DIODE UDZS-TE17-15B				
2627		G	DIODE		D6036	8-719-083-83	DIODE UDZS-TE17-15B				
2628		G	DIODE		D6037	8-719-083-83	DIODE UDZS-TE17-15B				

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2629		G	DIODE		D6038	8-719-083-83	DIODE UDZS-TE17-15B		
2630		G	DIODE		D6101	8-719-404-50	DIODE MA111-TX		
2631		G	DIODE		D6102	8-719-404-50	DIODE MA111-TX		
2632		G	DIODE		D6750	8-719-081-67	DIODE M1FM3		
2633		G	DIODE		D6751	8-719-081-97	DIODE MMML914T1		
2634		G	DIODE		D6752	8-719-081-97	DIODE MMML914T1		
2635		G	DIODE		D6753	8-719-977-28	DIODE DTZ10B		
2636		G	DIODE		D6755	8-719-056-85	DIODE UDZ-TE-17-8.2B		
2637		G	FUSE	▲	F6001	1-576-233-12	FUSE 6.3A 250V		
2638		G	FUSE HOLDER		FH6001	1-533-223-11	FUSE HOLDER 0A 0V		
2639		G	FUSE HOLDER		FH6002	1-533-223-11	FUSE HOLDER 0A 0V		
2640		G	IC		IC6001	8-759-009-51	IC MC14538BF		
2641		G	IC		IC6002	8-759-670-30	IC MCZ3001D		
2642		G	IC		IC6003	6-703-136-01	IC MIP2C20MP1SO		
2643		G	IC		IC6004	8-759-198-31	IC UPC1093J-1-T		
2644		G	IC		IC6005	8-759-198-31	IC UPC1093J-1-T		
2645		G	IC		IC6006	8-759-471-81	IC PQ05RD11		
2646		G	IC		IC6007	8-759-653-07	IC PQ09RD21		
2647		G	IC		IC6009	6-700-898-01	IC PQ05RD21		
2648		G	IC		IC6010	8-759-471-81	IC PQ05RD11		
2649		G	IC		IC6750	6-704-120-01	IC MD3221N		
2650		G	IC		IC6751	8-759-521-89	IC PQ20WZ5U		
2651		G	COIL		L6001	1-424-677-11	TRANSFORMER, LINE FILTER		
2652		G	COIL		L6003	1-414-158-11	INDUCTOR 2.2UH		
2653		G	COIL		L6004	1-414-158-11	INDUCTOR 2.2UH		
2654		G	COIL		L6007	1-412-521-31	INDUCTOR 4.7UH		
2655		G	COIL		L6008	1-412-521-31	INDUCTOR 4.7UH		
2656		G	COIL		L6010	1-412-525-31	INDUCTOR 10UH		
2657		G	COIL		L6750	1-419-740-12	INDUCTOR 15UH		
2658		G	COIL		L6751	1-412-525-31	INDUCTOR 10UH		
2659		G	COIL		L6752	1-412-525-31	INDUCTOR 10UH		
2660		G	PHOTO COUPLER		PH6001	8-749-016-81	PHOTO COUPLER PC123Y22		
2661		G	PHOTO COUPLER		PH6002	8-749-924-35	PHOTO COUPLER ON3171-R		
2662		G	PHOTO COUPLER		PH6003	8-749-924-35	PHOTO COUPLER ON3171-R		
2663		G	PHOTO COUPLER		PH6004	8-749-016-81	PHOTO COUPLER PC123Y22		
2664		G	IC LINK	▲	PS6001	1-576-607-11	FUSE 6.3A 125V		
2665		G	IC LINK	▲	PS6002	1-576-390-91	IC LINK 2.5A 50V		
2666		G	TRANSISTOR		Q6001	8-729-023-22	TRANSISTOR 2SD2114K		
2667		G	TRANSISTOR		Q6002	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2668		G	TRANSISTOR		Q6003	8-729-052-32	TRANSISTOR IRFB7N50A-LF31		
2669		G	TRANSISTOR		Q6004	8-729-052-32	TRANSISTOR IRFB7N50A-LF31		
2670		G	TRANSISTOR		Q6005	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2671		G	TRANSISTOR		Q6006	8-729-216-22	TRANSISTOR 2SA1162-G		
2672		G	TRANSISTOR		Q6007	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2673		G	TRANSISTOR		Q6008	8-729-216-22	TRANSISTOR 2SA1162-G		
2674		G	TRANSISTOR		Q6009	1-801-806-11	TR DTC144EKA		
2675		G	TRANSISTOR		Q6010	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2676		G	TRANSISTOR		Q6011	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2677		G	TRANSISTOR		Q6012	8-729-140-96	TRANSISTOR 2SD774-34		
2678		G	TRANSISTOR		Q6014	8-729-010-25	TRANSISTOR MSD601-RT1		
2679		G	TRANSISTOR		Q6751	8-729-010-25	TRANSISTOR MSD601-RT1		
2680		G	RESISTOR		R6001	1-219-759-11	METAL 1M 5% 1/2W		
2681		G	RESISTOR		R6002	1-247-289-00	METAL 8.2M 5% 1W		
2682		G	RESISTOR		R6003	1-240-251-11	CEMENTED 6.8 5% 10W		
2683		G	RESISTOR		R6004	1-247-752-11	CARBON 1K 5% 1/2W		
2684		G	RESISTOR		R6005	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2685		G	RESISTOR		R6006	1-249-399-11	CARBON 33 5% 1/4W		
2686		G	RESISTOR		R6007	1-249-397-11	CARBON 22 5% 1/4W		
2687		G	RESISTOR		R6008	1-249-397-11	CARBON 22 5% 1/4W		
2688		G	RESISTOR		R6009	1-202-933-61	FUSE 0.1 10% 1/2W		
2689		G	RESISTOR		R6010	1-218-728-11	METAL CHIP 33K 0.5% 1/10W		
2690		G	RESISTOR		R6011	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
2691		G	RESISTOR		R6014	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2692		G	RESISTOR		R6015	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2693		G	RESISTOR		R6016	1-249-389-11	CARBON 4.7 5% 1/4W		
2694		G	RESISTOR		R6017	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2695		G	RESISTOR		R6018	1-249-417-11	CARBON 1K 5% 1/4W		
2696		G	RESISTOR		R6019	1-249-393-11	CARBON 10 5% 1/4W		
2697		G	RESISTOR		R6020	1-249-393-11	CARBON 10 5% 1/4W		
2698		G	RESISTOR		R6021	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2699		G	RESISTOR		R6022	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2700		G	RESISTOR		R6023	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2701		G	RESISTOR		R6024	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2702		G	RESISTOR		R6025	1-218-642-11	METAL OXIDE 100K 5% 1W		
2703		G	RESISTOR		R6026	1-216-852-11	METAL CHIP 390K 5% 1/10W		
2704		G	RESISTOR		R6027	1-249-402-11	CARBON 56 5% 1/4W		
2705		G	RESISTOR		R6028	1-243-979-71	METAL OXIDE 0.1 5% 2W		
2706		G	RESISTOR		R6029	1-249-393-11	CARBON 10 5% 1/4W		
2707		G	RESISTOR		R6030	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2708		G	RESISTOR		R6031	1-216-817-11	METAL CHIP 470 5% 1/10W		
2709		G	RESISTOR		R6032	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2710		G	RESISTOR		R6033	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2711		G	RESISTOR		R6034	1-249-417-11	CARBON 1K 5% 1/4W		
2712		G	RESISTOR		R6035	1-218-724-11	METAL CHIP 22K 0.5% 1/10W		
2713		G	RESISTOR		R6036	1-218-724-11	METAL CHIP 22K 0.5% 1/10W		
2714		G	RESISTOR		R6037	1-216-805-11	METAL CHIP 47 5% 1/10W		
2715		G	RESISTOR		R6038	1-216-041-00	RES-CHIP 470 5% 1/10W		
2716		G	RESISTOR		R6039	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2717		G	RESISTOR		R6040	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2718		G	RESISTOR		R6041	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2719		G	RESISTOR		R6042	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2720		G	RESISTOR		R6043	1-249-405-11	CARBON 100 5% 1/4W		
2721		G	RESISTOR		R6044	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W		
2722		G	RESISTOR		R6045	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
2723		G	RESISTOR		R6047	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
2724		G	RESISTOR		R6048	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2725		G	RESISTOR		R6049	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2726		G	RESISTOR		R6050	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2727		G	RESISTOR		R6051	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2728		G	RESISTOR		R6052	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2729		G	RESISTOR		R6053	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2730		G	RESISTOR		R6054	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2731		G	RESISTOR		R6055	1-249-405-11	CARBON 100 5% 1/4W		
2732		G	RESISTOR		R6056	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2733		G	RESISTOR		R6057	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2734		G	RESISTOR		R6059	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2735		G	RESISTOR		R6060	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2736		G	RESISTOR		R6062	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2737		G	RESISTOR		R6063	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2738		G	RESISTOR		R6064	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2739		G	RESISTOR		R6065	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2740		G	RESISTOR		R6067	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2741		G	RESISTOR		R6068	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2742		G	RESISTOR		R6069	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2743		G	RESISTOR		R6070	1-216-864-11	SHORT CHIP 0		
2744		G	RESISTOR		R6071	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2745		G	RESISTOR		R6072	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2746		G	RESISTOR		R6073	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2747		G	RESISTOR		R6075	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2748		G	RESISTOR		R6076	1-249-393-11	CARBON 10 5% 1/4W		
2749		G	RESISTOR		R6079	1-218-728-11	METAL CHIP 33K 0.5% 1/10W		
2750		G	RESISTOR		R6080	1-245-477-21	METAL 430K 1% 1/4W		
2751		G	RESISTOR		R6081	1-245-480-21	METAL 560K 1% 1/4W		
2752		G	RESISTOR		R6082	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2753		G	RESISTOR		R6084	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2754		G	RESISTOR		R6085	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2755		G	RESISTOR		R6088	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2756		G	RESISTOR		R6089	1-216-864-11	SHORT CHIP 0		
2757		G	RESISTOR		R6092	1-216-864-11	SHORT CHIP 0		
2758		G	RESISTOR		R6101	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2759		G	RESISTOR		R6102	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2760		G	RESISTOR		R6103	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2761		G	RESISTOR		R6751	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2762		G	RESISTOR		R6752	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2763		G	RESISTOR		R6753	1-216-295-91	SHORT CHIP 0		
2764		G	RESISTOR		R6754	1-216-295-91	SHORT CHIP 0		
2765		G	RESISTOR		R6755	1-216-295-91	SHORT CHIP 0		
2766		G	RESISTOR		R6756	1-216-295-91	SHORT CHIP 0		
2767		G	RESISTOR		R6758	1-216-864-11	SHORT CHIP 0		
2768		G	RESISTOR		R6760	1-216-864-11	SHORT CHIP 0		
2769		G	RESISTOR		R6761	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2770		G	RESISTOR		R6762	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2771		G	RESISTOR		R6763	1-216-641-11	METAL CHIP 390 0.5% 1/10W		
2772		G	RESISTOR		R6764	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
2773		G	RESISTOR		R6766	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2774		G	RESISTOR		R6767	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2775		G	RESISTOR		R6768	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2776		G	RESISTOR		R6769	1-216-809-11	METAL CHIP 100 5% 1/10W		
2777		G	RESISTOR		R6770	1-216-813-11	METAL CHIP 220 5% 1/10W		
2778		G	RESISTOR		R6771	1-216-803-11	METAL CHIP 33 5% 1/10W		
2779		G	RESISTOR		R6773	1-216-295-91	SHORT CHIP 0		
2780		G	RELAY		RY6001	1-755-388-11	RELAY (AC POWER)		
2781		G	RELAY		RY6002	1-755-407-11	RELAY (AC POWER)		
2782		G	SPARK GAP		SG6001	1-417-339-11	SURGE ARRESTERS		
2783		G	TRANSFORMER		T6003	1-443-116-11	DC-DC CONVERTER TRANSFORMER		
2784		G	TRANSFORMER		T6004	1-443-113-11	CONVERTER TRANSFORMER (PIT)		
2785		G	THERMISTOR		TH6001	1-803-586-41	THERMISTOR		
2786		G	VARISTOR		VD6001	1-803-830-31	VARISTOR (ERZV14D621)		
2787		G	VARISTOR		VD6002	1-803-830-31	VARISTOR (ERZV14D621)		
2788		DIC2	CAPACITOR		C1000	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2789		DIC2	CAPACITOR		C1001	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2790		DIC2	CAPACITOR		C1002	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2791		DIC2	CAPACITOR		C1003	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2792		DIC2	CAPACITOR		C1004	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2793		DIC2	CAPACITOR		C1005	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2794		DIC2	CAPACITOR		C1006	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2795		DIC2	CAPACITOR		C1009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2796		DIC2	CAPACITOR		C1010	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2797		DIC2	CAPACITOR		C1011	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2798		DIC2	CAPACITOR		C1012	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2799		DIC2	CAPACITOR		C1013	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2800		DIC2	CAPACITOR		C1014	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2801		DIC2	CAPACITOR		C1015	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2802		DIC2	CAPACITOR		C1016	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2803		DIC2	CAPACITOR		C1017	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2804		DIC2	CAPACITOR		C1018	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2805		DIC2	CAPACITOR		C1019	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V		
2806		DIC2	CAPACITOR		C1020	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2807		DIC2	CAPACITOR		C1021	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2808		DIC2	CAPACITOR		C1029	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2809		DIC2	CAPACITOR		C1030	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2810		DIC2	CAPACITOR		C1031	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V		
2811		DIC2	CAPACITOR		C1032	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2812		DIC2	CAPACITOR		C1033	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2813		DIC2	CAPACITOR		C1034	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2814		DIC2	CAPACITOR		C1038	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2815		DIC2	CAPACITOR		C1040	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2816		DIC2	CAPACITOR		C1041	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
2817		DIC2	CAPACITOR		C1042	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2818		DIC2	CAPACITOR		C1043	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2819		DIC2	CAPACITOR		C1045	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2820		DIC2	CAPACITOR		C1047	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2821		DIC2	CAPACITOR		C1049	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2822		DIC2	CAPACITOR		C1051	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2823		DIC2	CAPACITOR		C1053	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2824		DIC2	CAPACITOR		C1055	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2825		DIC2	CAPACITOR		C1057	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2826		DIC2	CAPACITOR		C1063	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2827		DIC2	CAPACITOR		C1200	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2828		DIC2	CAPACITOR		C1201	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2829		DIC2	CAPACITOR		C1202	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2830		DIC2	CAPACITOR		C1203	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2831		DIC2	CAPACITOR		C1204	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2832		DIC2	CAPACITOR		C1205	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2833		DIC2	CAPACITOR		C1206	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2834		DIC2	CAPACITOR		C1207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2835		DIC2	CAPACITOR		C1208	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2836		DIC2	CAPACITOR		C1209	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
2837		DIC2	CAPACITOR		C1210	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2838		DIC2	CAPACITOR		C1211	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2839		DIC2	CAPACITOR		C1212	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2840		DIC2	CAPACITOR		C1213	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2841		DIC2	CAPACITOR		C1214	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2842		DIC2	CAPACITOR		C1215	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2843		DIC2	CAPACITOR		C1216	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2844		DIC2	CAPACITOR		C1217	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2845		DIC2	CAPACITOR		C1218	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2846		DIC2	CAPACITOR		C1219	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2847		DIC2	CAPACITOR		C1220	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2848		DIC2	CAPACITOR		C1221	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2849		DIC2	CAPACITOR		C1222	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2850		DIC2	CAPACITOR		C1223	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2851		DIC2	CAPACITOR		C1224	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2852		DIC2	CAPACITOR		C1226	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2853		DIC2	CAPACITOR		C1227	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2854		DIC2	CAPACITOR		C1228	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2855		DIC2	CAPACITOR		C1229	1-137-710-11	CERAMIC CHIP 10UF	20% 6.3V	
2856		DIC2	CAPACITOR		C1230	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2857		DIC2	CAPACITOR		C1231	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2858		DIC2	CAPACITOR		C1232	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2859		DIC2	CAPACITOR		C1233	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2860		DIC2	CAPACITOR		C1234	1-137-710-11	CERAMIC CHIP 10UF	20% 6.3V	
2861		DIC2	CAPACITOR		C1235	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2862		DIC2	CAPACITOR		C1236	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2863		DIC2	CAPACITOR		C1237	1-137-710-11	CERAMIC CHIP 10UF	20% 6.3V	
2864		DIC2	CAPACITOR		C1238	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2865		DIC2	CAPACITOR		C1239	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2866		DIC2	CAPACITOR		C1240	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2867		DIC2	CAPACITOR		C1241	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2868		DIC2	CAPACITOR		C1242	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2869		DIC2	CAPACITOR		C1243	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2870		DIC2	CAPACITOR		C1244	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2871		DIC2	CAPACITOR		C1245	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2872		DIC2	CAPACITOR		C1246	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2873		DIC2	CAPACITOR		C1247	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2874		DIC2	CAPACITOR		C1248	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2875		DIC2	CAPACITOR		C1249	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2876		DIC2	CAPACITOR		C1250	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2877		DIC2	CAPACITOR		C1251	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2878		DIC2	CAPACITOR		C1252	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2879		DIC2	CAPACITOR		C1253	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2880		DIC2	CAPACITOR		C1254	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2881		DIC2	CAPACITOR		C1255	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2882		DIC2	CAPACITOR		C1256	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	
2883		DIC2	CAPACITOR		C1257	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2884		DIC2	CAPACITOR		C1258	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2885		DIC2	CAPACITOR		C1259	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2886		DIC2	CAPACITOR		C1260	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2887		DIC2	CAPACITOR		C1261	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2888		DIC2	CAPACITOR		C1262	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2889		DIC2	CAPACITOR		C1263	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2890		DIC2	CAPACITOR		C1264	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2891		DIC2	CAPACITOR		C1265	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2892		DIC2	CAPACITOR		C1266	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2893		DIC2	CAPACITOR		C1267	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2894		DIC2	CAPACITOR		C1268	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2895		DIC2	CAPACITOR		C1269	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2896		DIC2	CAPACITOR		C1270	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2897		DIC2	CAPACITOR		C1271	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2898		DIC2	CAPACITOR		C1272	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2899		DIC2	CAPACITOR		C1273	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2900		DIC2	CAPACITOR		C1400	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	
2901		DIC2	CAPACITOR		C1401	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	
2902		DIC2	CAPACITOR		C1403	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	
2903		DIC2	CAPACITOR		C1405	1-128-357-11	ELECT CHIP 10UF	20.00% 16V	
2904		DIC2	CAPACITOR		C1406	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	
2905		DIC2	CAPACITOR		C1407	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	
2906		DIC2	CAPACITOR		C1408	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	
2907		DIC2	CAPACITOR		C1409	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	
2908		DIC2	CAPACITOR		C1410	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2909		DIC2	CAPACITOR		C1411	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	
2910		DIC2	CAPACITOR		C1412	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	
2911		DIC2	CAPACITOR		C1413	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2912		DIC2	CAPACITOR		C1414	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2913		DIC2	CAPACITOR		C1415	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2914		DIC2	CAPACITOR		C1416	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2915		DIC2	CAPACITOR		C1417	1-164-943-11	CERAMIC CHIP 0.01UF	10.00% 16V	
2916		DIC2	CAPACITOR		C1418	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2917		DIC2	CAPACITOR		C1419	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2918		DIC2	CAPACITOR		C1420	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2919		DIC2	CAPACITOR		C1421	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	
2920		DIC2	CAPACITOR		C1422	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2921		DIC2	CAPACITOR		C1423	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2922		DIC2	CAPACITOR		C1424	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2923		DIC2	CAPACITOR		C1425	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2924		DIC2	CAPACITOR		C1426	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2925		DIC2	CAPACITOR		C1427	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2926		DIC2	CAPACITOR		C1428	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2927		DIC2	CAPACITOR		C1429	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2928		DIC2	CAPACITOR		C1430	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2929		DIC2	CAPACITOR		C1431	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2930		DIC2	CAPACITOR		C1432	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2931		DIC2	CAPACITOR		C1433	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2932		DIC2	CAPACITOR		C1434	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2933		DIC2	CAPACITOR		C1435	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2934		DIC2	CAPACITOR		C1436	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2935		DIC2	CAPACITOR		C1437	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2936		DIC2	CAPACITOR		C1438	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2937		DIC2	CAPACITOR		C1439	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2938		DIC2	CAPACITOR		C1440	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2939		DIC2	CAPACITOR		C1441	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2940		DIC2	CAPACITOR		C1442	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2941		DIC2	CAPACITOR		C1443	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2942		DIC2	CAPACITOR		C1444	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2943		DIC2	CAPACITOR		C1445	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2944		DIC2	CAPACITOR		C1446	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2945		DIC2	CAPACITOR		C1447	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2946		DIC2	CAPACITOR		C1448	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2947		DIC2	CAPACITOR		C1449	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2948		DIC2	CAPACITOR		C1450	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2949		DIC2	CAPACITOR		C1451	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2950		DIC2	CAPACITOR		C1452	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2951		DIC2	CAPACITOR		C1453	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2952		DIC2	CAPACITOR		C1454	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2953		DIC2	CAPACITOR		C1455	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2954		DIC2	CAPACITOR		C1456	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2955		DIC2	CAPACITOR		C1457	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2956		DIC2	CAPACITOR		C1458	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2957		DIC2	CAPACITOR		C1459	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2958		DIC2	CAPACITOR		C1600	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2959		DIC2	CAPACITOR		C1601	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2960		DIC2	CAPACITOR		C1604	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2961		DIC2	CAPACITOR		C1605	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
2962		DIC2	CAPACITOR		C1606	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2963		DIC2	CAPACITOR		C1608	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2964		DIC2	CAPACITOR		C1609	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2965		DIC2	CAPACITOR		C1610	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2966		DIC2	CAPACITOR		C1612	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2967		DIC2	CAPACITOR		C1613	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2968		DIC2	CAPACITOR		C1614	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
2969		DIC2	CAPACITOR		C1615	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
2970		DIC2	CAPACITOR		C1616	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2971		DIC2	CAPACITOR		C1617	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2972		DIC2	CAPACITOR		C1618	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2973		DIC2	CAPACITOR		C1619	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2974		DIC2	CAPACITOR		C1620	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2975		DIC2	CAPACITOR		C1621	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2976		DIC2	CAPACITOR		C1622	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2977		DIC2	CAPACITOR		C1623	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2978		DIC2	CAPACITOR		C1624	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2979		DIC2	CAPACITOR		C1625	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2980		DIC2	CAPACITOR		C1626	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2981		DIC2	CAPACITOR		C1627	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2982		DIC2	CAPACITOR		C1628	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2983		DIC2	CAPACITOR		C1629	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2984		DIC2	CAPACITOR		C1630	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2985		DIC2	CAPACITOR		C1631	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2986		DIC2	CAPACITOR		C1632	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2987		DIC2	CAPACITOR		C1633	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2988		DIC2	CAPACITOR		C1634	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2989		DIC2	CAPACITOR		C1635	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2990		DIC2	CAPACITOR		C1636	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2991		DIC2	CAPACITOR		C1637	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2992		DIC2	CAPACITOR		C1638	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2993		DIC2	CAPACITOR		C1639	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2994		DIC2	CAPACITOR		C1640	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2995		DIC2	CAPACITOR		C1641	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2996		DIC2	CAPACITOR		C1643	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2997		DIC2	CAPACITOR		C1644	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2998		DIC2	CAPACITOR		C1645	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2999		DIC2	CAPACITOR		C1646	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3000		DIC2	CAPACITOR		C1647	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3001		DIC2	CAPACITOR		C1703	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3002		DIC2	CAPACITOR		C1704	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3003		DIC2	CAPACITOR		C1708	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3004		DIC2	CAPACITOR		C1710	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3005		DIC2	CAPACITOR		C1712	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3006		DIC2	CAPACITOR		C1713	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
3007		DIC2	CAPACITOR		C1714	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3008		DIC2	CAPACITOR		C1715	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3009		DIC2	CAPACITOR		C1716	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3010		DIC2	CAPACITOR		C1717	1-165-643-21	ELECT CHIP 150UF 20% 4V		
3011		DIC2	CAPACITOR		C1723	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3012		DIC2	CAPACITOR		C1724	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3013		DIC2	CAPACITOR		C1726	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3014		DIC2	CAPACITOR		C1727	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3015		DIC2	CAPACITOR		C1728	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3016		DIC2	CAPACITOR		C1729	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3017		DIC2	CAPACITOR		C1730	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3018		DIC2	CAPACITOR		C1731	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3019		DIC2	CAPACITOR		C1732	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3020		DIC2	CAPACITOR		C1738	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3021		DIC2	CAPACITOR		C1739	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3022		DIC2	CAPACITOR		C1740	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3023		DIC2	CAPACITOR		C1741	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3024		DIC2	CAPACITOR		C1742	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3025		DIC2	CAPACITOR		C1743	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3026		DIC2	CAPACITOR		C1745	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3027		DIC2	CAPACITOR		C1746	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3028		DIC2	CAPACITOR		C1747	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3029		DIC2	CAPACITOR		C1748	1-164-854-11	CERAMIC CHIP 15PF 5.00% 50V		
3030		DIC2	CAPACITOR		C1749	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3031		DIC2	CAPACITOR		C1750	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3032		DIC2	CAPACITOR		C1751	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3033		DIC2	CAPACITOR		C1752	1-164-854-11	CERAMIC CHIP 15PF 5.00% 50V		
3034		DIC2	CAPACITOR		C1753	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3035		DIC2	CAPACITOR		C1754	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3036		DIC2	CAPACITOR		C1755	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3037		DIC2	CAPACITOR		C1756	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3038		DIC2	CAPACITOR		C1757	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3039		DIC2	CAPACITOR		C1758	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3040		DIC2	CAPACITOR		C1759	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3041		DIC2	CAPACITOR		C1760	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3042		DIC2	CAPACITOR		C1761	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3043		DIC2	CAPACITOR		C1762	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3044		DIC2	CAPACITOR		C1764	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3045		DIC2	CAPACITOR		C1765	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3046		DIC2	CAPACITOR		C1766	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3047		DIC2	CAPACITOR		C1767	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3048		DIC2	CAPACITOR		C1768	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3049		DIC2	CAPACITOR		C1769	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3050		DIC2	CAPACITOR		C1770	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3051		DIC2	CAPACITOR		C1771	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3052		DIC2	CAPACITOR		C1772	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3053		DIC2	CAPACITOR		C1773	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3054		DIC2	CAPACITOR		C1774	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3055		DIC2	CAPACITOR		C1775	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3056		DIC2	CAPACITOR		C1776	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3057		DIC2	CAPACITOR		C1777	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3058		DIC2	CAPACITOR		C1778	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3059		DIC2	CAPACITOR		C1779	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3060		DIC2	CAPACITOR		C1780	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3061		DIC2	CAPACITOR		C1781	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3062		DIC2	CAPACITOR		C1782	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3063		DIC2	CAPACITOR		C1783	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3064		DIC2	CAPACITOR		C1784	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3065		DIC2	CAPACITOR		C1785	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3066		DIC2	CAPACITOR		C1786	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3067		DIC2	CAPACITOR		C1787	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3068		DIC2	CAPACITOR		C1788	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3069		DIC2	CAPACITOR		C1789	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3070		DIC2	CAPACITOR		C1790	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3071		DIC2	CAPACITOR		C1791	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3072		DIC2	CAPACITOR		C1792	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3073		DIC2	CAPACITOR		C1793	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3074		DIC2	CAPACITOR		C1794	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3075		DIC2	CAPACITOR		C1795	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3076		DIC2	CAPACITOR		C1796	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3077		DIC2	CAPACITOR		C1797	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3078		DIC2	CAPACITOR		C1798	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3079		DIC2	CAPACITOR		C1799	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3080		DIC2	CAPACITOR		C1800	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3081		DIC2	CAPACITOR		C1801	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3082		DIC2	CAPACITOR		C1802	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3083		DIC2	CAPACITOR		C1803	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3084		DIC2	CAPACITOR		C1804	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3085		DIC2	CAPACITOR		C1900	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3086		DIC2	CAPACITOR		C1902	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3087		DIC2	CAPACITOR		C1903	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3088		DIC2	CAPACITOR		C1904	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3089		DIC2	CAPACITOR		C1905	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
3090		DIC2	CAPACITOR		C1906	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3091		DIC2	CAPACITOR		C1907	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3092		DIC2	CAPACITOR		C1908	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3093		DIC2	CAPACITOR		C1910	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3094		DIC2	CAPACITOR		C1911	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3095		DIC2	CAPACITOR		C1912	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3096		DIC2	CAPACITOR		C1915	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3097		DIC2	CAPACITOR		C1916	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3098		DIC2	CAPACITOR		C1917	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3099		DIC2	CAPACITOR		C1918	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3100		DIC2	CAPACITOR		C1919	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3101		DIC2	CAPACITOR		C1920	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3102		DIC2	CAPACITOR		C1921	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3103		DIC2	CAPACITOR		C1922	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3104		DIC2	CAPACITOR		C1923	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3105		DIC2	CAPACITOR		C1924	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3106		DIC2	CAPACITOR		C1925	1-100-503-11	CERAMIC CHIP 4.7UF 10% 10V		
3107		DIC2	CAPACITOR		C1926	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3108		DIC2	CAPACITOR		C1927	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3109		DIC2	CAPACITOR		C1928	1-100-503-11	CERAMIC CHIP 4.7UF 10% 10V		
3110		DIC2	CAPACITOR		C1929	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3111		DIC2	CAPACITOR		C1930	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3112		DIC2	CAPACITOR		C1931	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3113		DIC2	CAPACITOR		C1932	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3114		DIC2	CAPACITOR		C1933	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3115		DIC2	CAPACITOR		C1934	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3116		DIC2	CAPACITOR		C1935	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3117		DIC2	CAPACITOR		C1936	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3118		DIC2	CAPACITOR		C1937	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
3119		DIC2	CAPACITOR		C1938	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
3120		DIC2	CAPACITOR		C1939	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
3121		DIC2	CAPACITOR		C1940	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3122		DIC2	DIODE		D1200	8-719-066-10	DIODE 1PS181-115		
3123		DIC2	DIODE		D1201	8-719-066-11	DIODE 1PS184-115		
3124		DIC2	DIODE		D1701	8-719-066-11	DIODE 1PS184-115		
3125		DIC2	DIODE		D1702	8-719-066-10	DIODE 1PS181-115		
3126		DIC2	DIODE		D1900	8-719-025-34	DIODE 02CZ6.8-TE85L		
3127		DIC2	DIODE		D1901	8-719-081-97	DIODE MMCL914T1		
3128		DIC2	DIODE		D1902	8-719-800-76	DIODE 1SS226		
3129		DIC2	DIODE		D1903	8-719-800-76	DIODE 1SS226		
3130		DIC2	FUSE	▲	F1000	1-576-604-21	FUSE 1A 72V		
3131		DIC2	FUSE	▲	F1001	1-576-604-21	FUSE 1A 72V		
3132		DIC2	FUSE	▲	F1002	1-576-604-21	FUSE 1A 72V		
3133		DIC2	FERRITE BEAD		FB1000	1-414-228-11	FERRITE 0UH		
3134		DIC2	FERRITE BEAD		FB1001	1-414-228-11	FERRITE 0UH		
3135		DIC2	FERRITE BEAD		FB1002	1-414-228-11	FERRITE 0UH		
3136		DIC2	FERRITE BEAD		FB1003	1-414-228-11	FERRITE 0UH		
3137		DIC2	FERRITE BEAD		FB1004	1-414-228-11	FERRITE 0UH		
3138		DIC2	FERRITE BEAD		FB1005	1-414-228-11	FERRITE 0UH		
3139		DIC2	FERRITE BEAD		FB1200	1-414-234-22	FERRITE 0UH		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3140		DIC2	FERRITE BEAD		FB1701	1-414-445-11	FERRITE 0UH		
3141		DIC2	FERRITE BEAD		FB1703	1-414-445-11	FERRITE 0UH		
3142		DIC2	FILTER		FL1200	1-234-177-21	FERRITE 0UH		
3143		DIC2	FILTER		FL1201	1-234-560-21	FILTER, LOW PASS		
3144		DIC2	FILTER		FL1202	1-234-559-21	FILTER, LOW PASS		
3145		DIC2	FILTER		FL1203	1-234-559-21	FILTER, LOW PASS		
3146		DIC2	FILTER		FL1204	1-234-177-21	FERRITE 0UH		
3147		DIC2	FILTER		FL1205	1-234-177-21	FERRITE 0UH		
3148		DIC2	FILTER		FL1206	1-234-177-21	FERRITE 0UH		
3149		DIC2	FILTER		FL1207	1-234-177-21	FERRITE 0UH		
3150		DIC2	FILTER		FL1208	1-234-177-21	FERRITE 0UH		
3151		DIC2	IC		IC1000	6-701-680-01	IC PST3629NR		
3152		DIC2	IC		IC1001	6-701-680-01	IC PST3629NR		
3153		DIC2	IC		IC1002	8-759-677-29	IC TC74LVX125FT(EL)		
3154		DIC2	IC		IC1003	6-703-073-01	IC THC63LVDM83C-T		
3155		DIC2	IC		IC1006	8-759-677-29	IC TC74LVX125FT(EL)		
3156		DIC2	IC		IC1200	8-759-712-65	IC PQ070XZ01ZP		
3157		DIC2	IC		IC1201	6-705-529-01	IC LMH6658MMX/J5000172		
3158		DIC2	IC		IC1202	6-705-529-01	IC LMH6658MMX/J5000172		
3159		DIC2	IC		IC1203	8-752-425-02	IC CXD3802BQ		
3160		DIC2	IC		IC1204	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
3161		DIC2	IC		IC1402	8-752-425-02	IC CXD3802BQ		
3162		DIC2	IC		IC1600	8-759-669-78	IC TLC2933IPWR-12		
3163		DIC2	IC		IC1602	8-759-676-70	IC MSM56V16160F-10TS-K		
3164		DIC2	IC		IC1603	8-752-422-52	IC CXD2097BQ		
3165		DIC2	IC		IC1702	6-700-120-01	IC IMISM560BZD		
3166		DIC2	IC		IC1703	6-704-992-01	IC CXD9707DGP		
3167		DIC2	IC		IC1704	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
3168		DIC2	IC		IC1705	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
3169		DIC2	IC		IC1900	6-702-688-01	IC M24C64-WMN6T(B)		
3170		DIC2	IC		IC1901	8-759-349-11	IC PST9145NL		
3171		DIC2	IC		IC1902	8-752-937-39	IC CXP964032-003R		
3172		DIC2	IC		IC1903	8-752-937-39	IC CXP964032-003R		
3173		DIC2	IC		IC1910	6-803-756-01	IC MB94P918PF-G-166A		
3174		DIC2	COIL		L1000	1-412-029-11	INDUCTOR 10UH		
3175		DIC2	COIL		L1003	1-412-058-11	INDUCTOR 10UH		
3176		DIC2	COIL		L1004	1-412-058-11	INDUCTOR 10UH		
3177		DIC2	COIL		L1200	1-469-555-21	INDUCTOR 10UH		
3178		DIC2	COIL		L1201	1-469-549-21	INDUCTOR 1UH		
3179		DIC2	COIL		L1202	1-469-549-21	INDUCTOR 1UH		
3180		DIC2	COIL		L1203	1-469-549-21	INDUCTOR 1UH		
3181		DIC2	COIL		L1204	1-469-549-21	INDUCTOR 1UH		
3182		DIC2	COIL		L1205	1-469-549-21	INDUCTOR 1UH		
3183		DIC2	COIL		L1206	1-412-029-11	INDUCTOR 10UH		
3184		DIC2	COIL		L1207	1-469-549-21	INDUCTOR 1UH		
3185		DIC2	COIL		L1208	1-469-549-21	INDUCTOR 1UH		
3186		DIC2	COIL		L1209	1-469-549-21	INDUCTOR 1UH		
3187		DIC2	COIL		L1210	1-469-549-21	INDUCTOR 1UH		
3188		DIC2	COIL		L1400	1-469-555-21	INDUCTOR 10UH		
3189		DIC2	COIL		L1401	1-412-029-11	INDUCTOR 10UH		
3190		DIC2	COIL		L1600	1-412-064-11	INDUCTOR 100UH		
3191		DIC2	COIL		L1601	1-412-064-11	INDUCTOR 100UH		
3192		DIC2	COIL		L1602	1-412-058-11	INDUCTOR 10UH		
3193		DIC2	COIL		L1603	1-469-549-21	INDUCTOR 1UH		
3194		DIC2	COIL		L1604	1-412-058-11	INDUCTOR 10UH		
3195		DIC2	COIL		L1605	1-469-549-21	INDUCTOR 1UH		
3196		DIC2	COIL		L1701	1-412-053-21	INDUCTOR 1.5UH		
3197		DIC2	COIL		L1702	1-412-053-21	INDUCTOR 1.5UH		
3198		DIC2	COIL		L1703	1-469-555-21	INDUCTOR 10UH		
3199		DIC2	COIL		L1704	1-469-549-21	INDUCTOR 1UH		
3200		DIC2	COIL		L1705	1-469-549-21	INDUCTOR 1UH		
3201		DIC2	COIL		L1706	1-469-549-21	INDUCTOR 1UH		
3202		DIC2	COIL		L1707	1-469-549-21	INDUCTOR 1UH		
3203		DIC2	COIL		L1708	1-469-549-21	INDUCTOR 1UH		
3204		DIC2	COIL		L1709	1-469-549-21	INDUCTOR 1UH		
3205		DIC2	COIL		L1900	1-412-058-11	INDUCTOR 10UH		
3206		DIC2	COIL		L1901	1-469-555-21	INDUCTOR 10UH		
3207		DIC2	COIL		L1902	1-469-555-21	INDUCTOR 10UH		
3208		DIC2	COIL		L1903	1-469-555-21	INDUCTOR 10UH		
3209		DIC2	TRANSISTOR		Q1000	8-729-117-73	TRANSISTOR 2SC4178-F14		
3210		DIC2	TRANSISTOR		Q1002	8-729-117-73	TRANSISTOR 2SC4178-F14		
3211		DIC2	TRANSISTOR		Q1003	8-729-117-73	TRANSISTOR 2SC4178-F14		
3212		DIC2	TRANSISTOR		Q1007	8-729-117-73	TRANSISTOR 2SC4178-F14		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3213		DIC2	TRANSISTOR		Q1008	8-729-117-73	TRANSISTOR 2SC4178-F14		
3214		DIC2	TRANSISTOR		Q1200	8-729-122-63	TRANSISTOR 2SA1226-E4		
3215		DIC2	TRANSISTOR		Q1201	8-729-122-63	TRANSISTOR 2SA1226-E4		
3216		DIC2	TRANSISTOR		Q1202	8-729-122-63	TRANSISTOR 2SA1226-E4		
3217		DIC2	TRANSISTOR		Q1203	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3218		DIC2	TRANSISTOR		Q1204	8-729-117-73	TRANSISTOR 2SC4178-F14		
3219		DIC2	TRANSISTOR		Q1205	8-729-117-73	TRANSISTOR 2SC4178-F14		
3220		DIC2	TRANSISTOR		Q1206	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
3221		DIC2	TRANSISTOR		Q1208	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
3222		DIC2	TRANSISTOR		Q1209	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3223		DIC2	TRANSISTOR		Q1400	8-729-122-63	TRANSISTOR 2SA1226-E4		
3224		DIC2	TRANSISTOR		Q1401	8-729-122-63	TRANSISTOR 2SA1226-E4		
3225		DIC2	TRANSISTOR		Q1403	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3226		DIC2	TRANSISTOR		Q1407	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3227		DIC2	TRANSISTOR		Q1600	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
3228		DIC2	TRANSISTOR		Q1601	8-729-905-35	TRANSISTOR 2SC4081-R		
3229		DIC2	TRANSISTOR		Q1701	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
3230		DIC2	TRANSISTOR		Q1702	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
3231		DIC2	TRANSISTOR		Q1900	8-729-043-29	TRANSISTOR PDTC144EK-115		
3232		DIC2	TRANSISTOR		Q1901	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3233		DIC2	TRANSISTOR		Q1903	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3234		DIC2	TRANSISTOR		Q1904	8-729-028-97	TRANSISTOR DTC114TUA-T106		
3235		DIC2	TRANSISTOR		Q1905	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3236		DIC2	TRANSISTOR		Q1906	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3237		DIC2	TRANSISTOR		Q1907	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3238		DIC2	TRANSISTOR		Q1908	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3239		DIC2	RESISTOR		R1000	1-216-864-11	SHORT CHIP 0		
3240		DIC2	RESISTOR		R1003	1-218-990-11	SHORT CHIP 0		
3241		DIC2	RESISTOR		R1004	1-218-990-11	SHORT CHIP 0		
3242		DIC2	RESISTOR		R1005	1-218-990-11	SHORT CHIP 0		
3243		DIC2	RESISTOR		R1006	1-218-990-11	SHORT CHIP 0		
3244		DIC2	RESISTOR		R1007	1-218-990-11	SHORT CHIP 0		
3245		DIC2	RESISTOR		R1014	1-216-864-11	SHORT CHIP 0		
3246		DIC2	RESISTOR		R1016	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3247		DIC2	RESISTOR		R1017	1-218-990-11	SHORT CHIP 0		
3248		DIC2	RESISTOR		R1018	1-218-933-11	RES-CHIP 22 5% 1/16W		
3249		DIC2	RESISTOR		R1019	1-218-933-11	RES-CHIP 22 5% 1/16W		
3250		DIC2	RESISTOR		R1020	1-218-933-11	RES-CHIP 22 5% 1/16W		
3251		DIC2	RESISTOR		R1021	1-218-937-11	RES-CHIP 47 5% 1/16W		
3252		DIC2	RESISTOR		R1023	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3253		DIC2	RESISTOR		R1026	1-218-937-11	RES-CHIP 47 5% 1/16W		
3254		DIC2	RESISTOR		R1028	1-218-937-11	RES-CHIP 47 5% 1/16W		
3255		DIC2	RESISTOR		R1030	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3256		DIC2	RESISTOR		R1031	1-218-949-11	RES-CHIP 470 5% 1/16W		
3257		DIC2	RESISTOR		R1032	1-218-937-11	RES-CHIP 47 5% 1/16W		
3258		DIC2	RESISTOR		R1036	1-218-937-11	RES-CHIP 47 5% 1/16W		
3259		DIC2	RESISTOR		R1040	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3260		DIC2	RESISTOR		R1041	1-218-949-11	RES-CHIP 470 5% 1/16W		
3261		DIC2	RESISTOR		R1049	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3262		DIC2	RESISTOR		R1050	1-218-941-81	RES-CHIP 100 5% 1/16W		
3263		DIC2	RESISTOR		R1051	1-218-941-81	RES-CHIP 100 5% 1/16W		
3264		DIC2	RESISTOR		R1052	1-218-941-81	RES-CHIP 100 5% 1/16W		
3265		DIC2	RESISTOR		R1053	1-218-941-81	RES-CHIP 100 5% 1/16W		
3266		DIC2	RESISTOR		R1056	1-216-864-11	SHORT CHIP 0		
3267		DIC2	RESISTOR		R1059	1-216-296-11	SHORT CHIP 0		
3268		DIC2	RESISTOR		R1060	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3269		DIC2	RESISTOR		R1062	1-218-990-11	SHORT CHIP 0		
3270		DIC2	RESISTOR		R1063	1-216-296-11	SHORT CHIP 0		
3271		DIC2	RESISTOR		R1064	1-218-941-81	RES-CHIP 100 5% 1/16W		
3272		DIC2	RESISTOR		R1065	1-218-941-81	RES-CHIP 100 5% 1/16W		
3273		DIC2	RESISTOR		R1066	1-218-968-11	RES-CHIP 18K 5% 1/16W		
3274		DIC2	RESISTOR		R1068	1-216-864-11	SHORT CHIP 0		
3275		DIC2	RESISTOR		R1070	1-216-864-11	SHORT CHIP 0		
3276		DIC2	RESISTOR		R1076	1-218-941-81	RES-CHIP 100 5% 1/16W		
3277		DIC2	RESISTOR		R1077	1-218-990-11	SHORT CHIP 0		
3278		DIC2	RESISTOR		R1078	1-218-941-81	RES-CHIP 100 5% 1/16W		
3279		DIC2	RESISTOR		R1080	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3280		DIC2	RESISTOR		R1081	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3281		DIC2	RESISTOR		R1085	1-218-990-11	SHORT CHIP 0		
3282		DIC2	RESISTOR		R1088	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3283		DIC2	RESISTOR		R1089	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3284		DIC2	RESISTOR		R1200	1-216-864-11	SHORT CHIP 0		
3285		DIC2	RESISTOR		R1201	1-216-864-11	SHORT CHIP 0		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3286		DIC2	RESISTOR		R1202	1-220-174-11	METAL CHIP 200 5% 1/16W		
3287		DIC2	RESISTOR		R1203	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3288		DIC2	RESISTOR		R1204	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3289		DIC2	RESISTOR		R1205	1-220-174-11	METAL CHIP 200 5% 1/16W		
3290		DIC2	RESISTOR		R1206	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3291		DIC2	RESISTOR		R1207	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3292		DIC2	RESISTOR		R1208	1-218-941-81	RES-CHIP 100 5% 1/16W		
3293		DIC2	RESISTOR		R1209	1-218-941-81	RES-CHIP 100 5% 1/16W		
3294		DIC2	RESISTOR		R1210	1-218-941-81	RES-CHIP 100 5% 1/16W		
3295		DIC2	RESISTOR		R1211	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3296		DIC2	RESISTOR		R1212	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3297		DIC2	RESISTOR		R1214	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3298		DIC2	RESISTOR		R1215	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3299		DIC2	RESISTOR		R1216	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3300		DIC2	RESISTOR		R1217	1-218-990-11	SHORT CHIP 0		
3301		DIC2	RESISTOR		R1218	1-218-990-11	SHORT CHIP 0		
3302		DIC2	RESISTOR		R1219	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W		
3303		DIC2	RESISTOR		R1220	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3304		DIC2	RESISTOR		R1225	1-208-643-11	METAL CHIP 22 0.5% 1/16W		
3305		DIC2	RESISTOR		R1226	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3306		DIC2	RESISTOR		R1227	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3307		DIC2	RESISTOR		R1228	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3308		DIC2	RESISTOR		R1229	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3309		DIC2	RESISTOR		R1230	1-218-979-11	RES-CHIP 150K 5% 1/16W		
3310		DIC2	RESISTOR		R1231	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3311		DIC2	RESISTOR		R1232	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3312		DIC2	RESISTOR		R1235	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3313		DIC2	RESISTOR		R1236	1-218-941-11	METAL CHIP 100 5% 1/16W		
3314		DIC2	RESISTOR		R1238	1-218-951-11	RES-CHIP 680 5% 1/16W		
3315		DIC2	RESISTOR		R1239	1-216-864-11	SHORT CHIP 0		
3316		DIC2	RESISTOR		R1240	1-216-864-11	SHORT CHIP 0		
3317		DIC2	RESISTOR		R1241	1-218-990-11	SHORT CHIP 0		
3318		DIC2	RESISTOR		R1242	1-218-990-11	SHORT CHIP 0		
3319		DIC2	RESISTOR		R1243	1-218-941-11	METAL CHIP 100 5% 1/16W		
3320		DIC2	RESISTOR		R1244	1-216-864-11	SHORT CHIP 0		
3321		DIC2	RESISTOR		R1246	1-218-990-11	SHORT CHIP 0		
3322		DIC2	RESISTOR		R1247	1-216-864-11	SHORT CHIP 0		
3323		DIC2	RESISTOR		R1248	1-218-951-11	RES-CHIP 680 5% 1/16W		
3324		DIC2	RESISTOR		R1250	1-218-990-11	SHORT CHIP 0		
3325		DIC2	RESISTOR		R1251	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3326		DIC2	RESISTOR		R1252	1-218-990-11	SHORT CHIP 0		
3327		DIC2	RESISTOR		R1253	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3328		DIC2	RESISTOR		R1255	1-208-908-11	METAL CHIP 7.5K 0.5% 1/16W		
3329		DIC2	RESISTOR		R1256	1-208-692-11	METAL CHIP 2.4K 0.5% 1/16W		
3330		DIC2	RESISTOR		R1258	1-218-990-11	SHORT CHIP 0		
3331		DIC2	RESISTOR		R1259	1-218-990-11	SHORT CHIP 0		
3332		DIC2	RESISTOR		R1260	1-218-990-11	SHORT CHIP 0		
3333		DIC2	RESISTOR		R1263	1-218-990-11	SHORT CHIP 0		
3334		DIC2	RESISTOR		R1268	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3335		DIC2	RESISTOR		R1269	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3336		DIC2	RESISTOR		R1270	1-218-937-11	RES-CHIP 47 5% 1/16W		
3337		DIC2	RESISTOR		R1271	1-218-937-11	RES-CHIP 47 5% 1/16W		
3338		DIC2	RESISTOR		R1272	1-218-990-11	SHORT CHIP 0		
3339		DIC2	RESISTOR		R1273	1-218-933-11	RES-CHIP 22 5% 1/16W		
3340		DIC2	RESISTOR		R1274	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3341		DIC2	RESISTOR		R1275	1-218-990-11	SHORT CHIP 0		
3342		DIC2	RESISTOR		R1276	1-218-990-11	SHORT CHIP 0		
3343		DIC2	RESISTOR		R1277	1-218-990-11	SHORT CHIP 0		
3344		DIC2	RESISTOR		R1278	1-218-990-11	SHORT CHIP 0		
3345		DIC2	RESISTOR		R1279	1-218-990-11	SHORT CHIP 0		
3346		DIC2	RESISTOR		R1280	1-218-990-11	SHORT CHIP 0		
3347		DIC2	RESISTOR		R1281	1-218-990-11	SHORT CHIP 0		
3348		DIC2	RESISTOR		R1282	1-218-937-11	RES-CHIP 47 5% 1/16W		
3349		DIC2	RESISTOR		R1283	1-218-937-11	RES-CHIP 47 5% 1/16W		
3350		DIC2	RESISTOR		R1284	1-218-990-11	SHORT CHIP 0		
3351		DIC2	RESISTOR		R1285	1-218-990-11	SHORT CHIP 0		
3352		DIC2	RESISTOR		R1286	1-218-990-11	SHORT CHIP 0		
3353		DIC2	RESISTOR		R1287	1-218-990-11	SHORT CHIP 0		
3354		DIC2	RESISTOR		R1288	1-218-990-11	SHORT CHIP 0		
3355		DIC2	RESISTOR		R1289	1-218-990-11	SHORT CHIP 0		
3356		DIC2	RESISTOR		R1290	1-218-933-11	RES-CHIP 22 5% 1/16W		
3357		DIC2	RESISTOR		R1291	1-216-864-11	SHORT CHIP 0		
3358		DIC2	RESISTOR		R1292	1-218-933-11	RES-CHIP 22 5% 1/16W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3359		DIC2	RESISTOR		R1293	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3360		DIC2	RESISTOR		R1294	1-218-990-11	SHORT CHIP 0		
3361		DIC2	RESISTOR		R1295	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3362		DIC2	RESISTOR		R1296	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3363		DIC2	RESISTOR		R1297	1-218-937-11	RES-CHIP 47 5% 1/16W		
3364		DIC2	RESISTOR		R1298	1-218-937-11	RES-CHIP 47 5% 1/16W		
3365		DIC2	RESISTOR		R1300	1-218-937-11	RES-CHIP 47 5% 1/16W		
3366		DIC2	RESISTOR		R1301	1-218-937-11	RES-CHIP 47 5% 1/16W		
3367		DIC2	RESISTOR		R1302	1-218-937-11	RES-CHIP 47 5% 1/16W		
3368		DIC2	RESISTOR		R1311	1-218-990-11	SHORT CHIP 0		
3369		DIC2	RESISTOR		R1312	1-218-990-11	SHORT CHIP 0		
3370		DIC2	RESISTOR		R1400	1-216-864-11	SHORT CHIP 0		
3371		DIC2	RESISTOR		R1404	1-218-933-11	RES-CHIP 22 5% 1/16W		
3372		DIC2	RESISTOR		R1411	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3373		DIC2	RESISTOR		R1412	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3374		DIC2	RESISTOR		R1413	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3375		DIC2	RESISTOR		R1416	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W		
3376		DIC2	RESISTOR		R1417	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3377		DIC2	RESISTOR		R1419	1-218-990-11	SHORT CHIP 0		
3378		DIC2	RESISTOR		R1420	1-218-990-11	SHORT CHIP 0		
3379		DIC2	RESISTOR		R1422	1-208-643-11	METAL CHIP 22 0.5% 1/16W		
3380		DIC2	RESISTOR		R1426	1-218-979-11	RES-CHIP 150K 5% 1/16W		
3381		DIC2	RESISTOR		R1427	1-218-939-11	METAL CHIP 68 5% 1/16W		
3382		DIC2	RESISTOR		R1429	1-218-939-11	METAL CHIP 68 5% 1/16W		
3383		DIC2	RESISTOR		R1434	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3384		DIC2	RESISTOR		R1440	1-218-990-11	SHORT CHIP 0		
3385		DIC2	RESISTOR		R1443	1-218-990-11	SHORT CHIP 0		
3386		DIC2	RESISTOR		R1444	1-218-990-11	SHORT CHIP 0		
3387		DIC2	RESISTOR		R1446	1-208-908-11	METAL CHIP 7.5K 0.5% 1/16W		
3388		DIC2	RESISTOR		R1447	1-208-692-11	METAL CHIP 2.4K 0.5% 1/16W		
3389		DIC2	RESISTOR		R1449	1-218-990-11	SHORT CHIP 0		
3390		DIC2	RESISTOR		R1452	1-218-990-11	SHORT CHIP 0		
3391		DIC2	RESISTOR		R1453	1-218-937-11	RES-CHIP 47 5% 1/16W		
3392		DIC2	RESISTOR		R1454	1-218-937-11	RES-CHIP 47 5% 1/16W		
3393		DIC2	RESISTOR		R1455	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3394		DIC2	RESISTOR		R1456	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3395		DIC2	RESISTOR		R1457	1-218-990-11	SHORT CHIP 0		
3396		DIC2	RESISTOR		R1458	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3397		DIC2	RESISTOR		R1459	1-218-990-11	SHORT CHIP 0		
3398		DIC2	RESISTOR		R1460	1-218-990-11	SHORT CHIP 0		
3399		DIC2	RESISTOR		R1461	1-218-990-11	SHORT CHIP 0		
3400		DIC2	RESISTOR		R1462	1-218-941-81	RES-CHIP 100 5% 1/16W		
3401		DIC2	RESISTOR		R1463	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3402		DIC2	RESISTOR		R1464	1-218-990-11	SHORT CHIP 0		
3403		DIC2	RESISTOR		R1465	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3404		DIC2	RESISTOR		R1466	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3405		DIC2	RESISTOR		R1467	1-218-933-11	RES-CHIP 22 5% 1/16W		
3406		DIC2	RESISTOR		R1468	1-218-937-11	RES-CHIP 47 5% 1/16W		
3407		DIC2	RESISTOR		R1469	1-218-937-11	RES-CHIP 47 5% 1/16W		
3408		DIC2	RESISTOR		R1475	1-218-937-11	RES-CHIP 47 5% 1/16W		
3409		DIC2	RESISTOR		R1476	1-218-937-11	RES-CHIP 47 5% 1/16W		
3410		DIC2	RESISTOR		R1477	1-218-937-11	RES-CHIP 47 5% 1/16W		
3411		DIC2	RESISTOR		R1479	1-218-941-81	RES-CHIP 100 5% 1/16W		
3412		DIC2	RESISTOR		R1480	1-218-941-81	RES-CHIP 100 5% 1/16W		
3413		DIC2	RESISTOR		R1482	1-218-990-11	SHORT CHIP 0		
3414		DIC2	RESISTOR		R1483	1-218-990-11	SHORT CHIP 0		
3415		DIC2	RESISTOR		R1484	1-218-990-11	SHORT CHIP 0		
3416		DIC2	RESISTOR		R1600	1-218-945-11	RES-CHIP 220 5% 1/16W		
3417		DIC2	RESISTOR		R1601	1-218-947-11	RES-CHIP 330 5% 1/16W		
3418		DIC2	RESISTOR		R1602	1-218-941-81	RES-CHIP 100 5% 1/16W		
3419		DIC2	RESISTOR		R1603	1-218-990-11	SHORT CHIP 0		
3420		DIC2	RESISTOR		R1604	1-218-941-81	RES-CHIP 100 5% 1/16W		
3421		DIC2	RESISTOR		R1605	1-218-990-11	SHORT CHIP 0		
3422		DIC2	RESISTOR		R1606	1-218-985-11	RES-CHIP 470K 5% 1/16W		
3423		DIC2	RESISTOR		R1607	1-218-990-11	SHORT CHIP 0		
3424		DIC2	RESISTOR		R1608	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3425		DIC2	RESISTOR		R1609	1-218-945-11	RES-CHIP 220 5% 1/16W		
3426		DIC2	RESISTOR		R1610	1-208-898-11	METAL CHIP 3K 0.5% 1/16W		
3427		DIC2	RESISTOR		R1612	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3428		DIC2	RESISTOR		R1614	1-216-295-91	SHORT CHIP 0		
3429		DIC2	RESISTOR		R1615	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3430		DIC2	RESISTOR		R1617	1-218-985-11	RES-CHIP 470K 5% 1/16W		
3431		DIC2	RESISTOR		R1618	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description			Remarks-1	Remarks-2
3432		DIC2	RESISTOR		R1619	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3433		DIC2	RESISTOR		R1621	1-218-937-11	RES-CHIP	47	5%	1/16W	
3434		DIC2	RESISTOR		R1622	1-218-937-11	RES-CHIP	47	5%	1/16W	
3435		DIC2	RESISTOR		R1623	1-218-942-11	RES-CHIP	120	5%	1/16W	
3436		DIC2	RESISTOR		R1624	1-218-942-11	RES-CHIP	120	5%	1/16W	
3437		DIC2	RESISTOR		R1625	1-218-935-11	RES-CHIP	33	5%	1/16W	
3438		DIC2	RESISTOR		R1626	1-218-937-11	RES-CHIP	47	5%	1/16W	
3439		DIC2	RESISTOR		R1627	1-218-935-11	RES-CHIP	33	5%	1/16W	
3440		DIC2	RESISTOR		R1628	1-218-941-81	RES-CHIP	100	5%	1/16W	
3441		DIC2	RESISTOR		R1629	1-208-635-11	METAL CHIP	10	0.5%	1/16W	
3442		DIC2	RESISTOR		R1630	1-218-941-81	RES-CHIP	100	5%	1/16W	
3443		DIC2	RESISTOR		R1631	1-218-941-81	RES-CHIP	100	5%	1/16W	
3444		DIC2	RESISTOR		R1632	1-218-941-81	RES-CHIP	100	5%	1/16W	
3445		DIC2	RESISTOR		R1633	1-218-937-11	RES-CHIP	47	5%	1/16W	
3446		DIC2	RESISTOR		R1634	1-216-295-91	SHORT CHIP	0			
3447		DIC2	RESISTOR		R1635	1-218-937-11	RES-CHIP	47	5%	1/16W	
3448		DIC2	RESISTOR		R1636	1-218-990-11	SHORT CHIP	0			
3449		DIC2	RESISTOR		R1704	1-218-990-11	SHORT CHIP	0			
3450		DIC2	RESISTOR		R1705	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
3451		DIC2	RESISTOR		R1707	1-218-990-11	SHORT CHIP	0			
3452		DIC2	RESISTOR		R1709	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3453		DIC2	RESISTOR		R1712	1-218-990-11	SHORT CHIP	0			
3454		DIC2	RESISTOR		R1715	1-218-935-11	RES-CHIP	33	5%	1/16W	
3455		DIC2	RESISTOR		R1716	1-218-990-11	SHORT CHIP	0			
3456		DIC2	RESISTOR		R1717	1-216-295-91	SHORT CHIP	0			
3457		DIC2	RESISTOR		R1719	1-218-935-11	RES-CHIP	33	5%	1/16W	
3458		DIC2	RESISTOR		R1730	1-218-990-11	SHORT CHIP	0			
3459		DIC2	RESISTOR		R1731	1-218-990-11	SHORT CHIP	0			
3460		DIC2	RESISTOR		R1732	1-218-933-11	RES-CHIP	22	5%	1/16W	
3461		DIC2	RESISTOR		R1733	1-218-933-11	RES-CHIP	22	5%	1/16W	
3462		DIC2	RESISTOR		R1734	1-218-937-11	RES-CHIP	47	5%	1/16W	
3463		DIC2	RESISTOR		R1736	1-218-990-11	SHORT CHIP	0			
3464		DIC2	RESISTOR		R1737	1-218-990-11	SHORT CHIP	0			
3465		DIC2	RESISTOR		R1738	1-218-990-11	SHORT CHIP	0			
3466		DIC2	RESISTOR		R1739	1-218-990-11	SHORT CHIP	0			
3467		DIC2	RESISTOR		R1740	1-218-933-11	RES-CHIP	22	5%	1/16W	
3468		DIC2	RESISTOR		R1741	1-218-990-11	SHORT CHIP	0			
3469		DIC2	RESISTOR		R1742	1-218-933-11	RES-CHIP	22	5%	1/16W	
3470		DIC2	RESISTOR		R1743	1-218-937-11	RES-CHIP	47	5%	1/16W	
3471		DIC2	RESISTOR		R1745	1-218-990-11	SHORT CHIP	0			
3472		DIC2	RESISTOR		R1747	1-218-990-11	SHORT CHIP	0			
3473		DIC2	RESISTOR		R1750	1-218-933-11	RES-CHIP	22	5%	1/16W	
3474		DIC2	RESISTOR		R1751	1-218-937-11	RES-CHIP	47	5%	1/16W	
3475		DIC2	RESISTOR		R1752	1-218-990-11	SHORT CHIP	0			
3476		DIC2	RESISTOR		R1753	1-218-933-11	RES-CHIP	22	5%	1/16W	
3477		DIC2	RESISTOR		R1754	1-218-990-11	SHORT CHIP	0			
3478		DIC2	RESISTOR		R1755	1-218-945-11	METAL CHIP	220	5%	1/16W	
3479		DIC2	RESISTOR		R1756	1-218-990-11	SHORT CHIP	0			
3480		DIC2	RESISTOR		R1758	1-218-990-11	SHORT CHIP	0			
3481		DIC2	RESISTOR		R1759	1-218-937-11	RES-CHIP	47	5%	1/16W	
3482		DIC2	RESISTOR		R1760	1-218-937-11	RES-CHIP	47	5%	1/16W	
3483		DIC2	RESISTOR		R1761	1-218-990-11	SHORT CHIP	0			
3484		DIC2	RESISTOR		R1762	1-218-990-11	SHORT CHIP	0			
3485		DIC2	RESISTOR		R1763	1-218-990-11	SHORT CHIP	0			
3486		DIC2	RESISTOR		R1764	1-218-990-11	SHORT CHIP	0			
3487		DIC2	RESISTOR		R1765	1-218-990-11	SHORT CHIP	0			
3488		DIC2	RESISTOR		R1766	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3489		DIC2	RESISTOR		R1767	1-218-990-11	SHORT CHIP	0			
3490		DIC2	RESISTOR		R1768	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3491		DIC2	RESISTOR		R1769	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3492		DIC2	RESISTOR		R1770	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3493		DIC2	RESISTOR		R1771	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3494		DIC2	RESISTOR		R1772	1-218-965-11	RES-CHIP	10K	5%	1/16W	
3495		DIC2	RESISTOR		R1773	1-218-990-11	SHORT CHIP	0			
3496		DIC2	RESISTOR		R1774	1-218-990-11	SHORT CHIP	0			
3497		DIC2	RESISTOR		R1775	1-218-933-11	RES-CHIP	22	5%	1/16W	
3498		DIC2	RESISTOR		R1776	1-218-933-11	RES-CHIP	22	5%	1/16W	
3499		DIC2	RESISTOR		R1777	1-218-933-11	RES-CHIP	22	5%	1/16W	
3500		DIC2	RESISTOR		R1779	1-218-990-11	SHORT CHIP	0			
3501		DIC2	RESISTOR		R1780	1-218-933-11	RES-CHIP	22	5%	1/16W	
3502		DIC2	RESISTOR		R1781	1-218-933-11	RES-CHIP	22	5%	1/16W	
3503		DIC2	RESISTOR		R1782	1-218-933-11	RES-CHIP	22	5%	1/16W	
3504		DIC2	RESISTOR		R1783	1-218-933-11	RES-CHIP	22	5%	1/16W	

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3505		DIC2	RESISTOR		R1784	1-218-933-11	RES-CHIP 22 5% 1/16W		
3506		DIC2	RESISTOR		R1786	1-218-933-11	RES-CHIP 22 5% 1/16W		
3507		DIC2	RESISTOR		R1787	1-218-933-11	RES-CHIP 22 5% 1/16W		
3508		DIC2	RESISTOR		R1788	1-218-933-11	RES-CHIP 22 5% 1/16W		
3509		DIC2	RESISTOR		R1789	1-218-933-11	RES-CHIP 22 5% 1/16W		
3510		DIC2	RESISTOR		R1790	1-218-933-11	RES-CHIP 22 5% 1/16W		
3511		DIC2	RESISTOR		R1791	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3512		DIC2	RESISTOR		R1792	1-216-295-91	SHORT CHIP 0		
3513		DIC2	RESISTOR		R1793	1-216-295-91	SHORT CHIP 0		
3514		DIC2	RESISTOR		R1796	1-218-990-11	SHORT CHIP 0		
3515		DIC2	RESISTOR		R1797	1-218-990-11	SHORT CHIP 0		
3516		DIC2	RESISTOR		R1901	1-218-937-11	RES-CHIP 47 5% 1/16W		
3517		DIC2	RESISTOR		R1903	1-218-937-11	RES-CHIP 47 5% 1/16W		
3518		DIC2	RESISTOR		R1905	1-218-949-11	RES-CHIP 470 5% 1/16W		
3519		DIC2	RESISTOR		R1914	1-218-990-11	SHORT CHIP 0		
3520		DIC2	RESISTOR		R1915	1-218-941-81	RES-CHIP 100 5% 1/16W		
3521		DIC2	RESISTOR		R1918	1-218-941-81	RES-CHIP 100 5% 1/16W		
3522		DIC2	RESISTOR		R1919	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3523		DIC2	RESISTOR		R1920	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3524		DIC2	RESISTOR		R1921	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3525		DIC2	RESISTOR		R1923	1-218-977-11	RES-CHIP 100K 5% 1/16W		
3526		DIC2	RESISTOR		R1924	1-218-977-11	RES-CHIP 100K 5% 1/16W		
3527		DIC2	RESISTOR		R1925	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3528		DIC2	RESISTOR		R1926	1-218-990-11	SHORT CHIP 0		
3529		DIC2	RESISTOR		R1928	1-218-990-11	SHORT CHIP 0		
3530		DIC2	RESISTOR		R1929	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3531		DIC2	RESISTOR		R1930	1-218-941-81	RES-CHIP 100 5% 1/16W		
3532		DIC2	RESISTOR		R1931	1-218-941-81	RES-CHIP 100 5% 1/16W		
3533		DIC2	RESISTOR		R1932	1-218-941-81	RES-CHIP 100 5% 1/16W		
3534		DIC2	RESISTOR		R1935	1-218-941-81	RES-CHIP 100 5% 1/16W		
3535		DIC2	RESISTOR		R1938	1-218-947-11	RES-CHIP 330 5% 1/16W		
3536		DIC2	RESISTOR		R1939	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3537		DIC2	RESISTOR		R1944	1-216-295-91	SHORT CHIP 0		
3538		DIC2	RESISTOR		R1945	1-218-941-81	RES-CHIP 100 5% 1/16W		
3539		DIC2	RESISTOR		R1946	1-218-941-81	RES-CHIP 100 5% 1/16W		
3540		DIC2	RESISTOR		R1947	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3541		DIC2	RESISTOR		R1948	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3542		DIC2	RESISTOR		R1949	1-218-937-11	RES-CHIP 47 5% 1/16W		
3543		DIC2	RESISTOR		R1950	1-218-937-11	RES-CHIP 47 5% 1/16W		
3544		DIC2	RESISTOR		R1951	1-218-937-11	RES-CHIP 47 5% 1/16W		
3545		DIC2	RESISTOR		R1952	1-218-937-11	RES-CHIP 47 5% 1/16W		
3546		DIC2	RESISTOR		R1953	1-218-990-11	SHORT CHIP 0		
3547		DIC2	RESISTOR		R1954	1-218-990-11	SHORT CHIP 0		
3548		DIC2	RESISTOR		R1955	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3549		DIC2	RESISTOR		R1956	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3550		DIC2	RESISTOR		R1957	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3551		DIC2	RESISTOR		R1958	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3552		DIC2	RESISTOR		R1959	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3553		DIC2	RESISTOR		R1960	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3554		DIC2	RESISTOR		R1961	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3555		DIC2	RESISTOR		R1962	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3556		DIC2	RESISTOR		R1963	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3557		DIC2	RESISTOR		R1964	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3558		DIC2	RESISTOR		R1965	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3559		DIC2	RESISTOR		R1966	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3560		DIC2	RESISTOR		R1967	1-218-971-11	RES-CHIP 33K 5% 1/16W		
3561		DIC2	RESISTOR		R1968	1-218-971-11	RES-CHIP 33K 5% 1/16W		
3562		DIC2	RESISTOR		R1969	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
3563		DIC2	RESISTOR		R1970	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
3564		DIC2	RESISTOR		R1971	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3565		DIC2	RESISTOR		R1972	1-218-937-11	RES-CHIP 47 5% 1/16W		
3566		DIC2	RESISTOR		R1973	1-218-937-11	RES-CHIP 47 5% 1/16W		
3567		DIC2	RESISTOR		R1974	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3568		DIC2	NETWORK		RB1204	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3569		DIC2	NETWORK		RB1205	1-234-795-21	RES, NETWORK 0X4 (2010)		
3570		DIC2	NETWORK		RB1206	1-234-372-21	RES, NETWORK 100X4 (1005)		
3571		DIC2	NETWORK		RB1207	1-234-372-21	RES, NETWORK 100X4 (1005)		
3572		DIC2	NETWORK		RB1208	1-234-372-21	RES, NETWORK 100X4 (1005)		
3573		DIC2	NETWORK		RB1209	1-234-795-21	RES, NETWORK 0X4 (2010)		
3574		DIC2	NETWORK		RB1210	1-234-372-21	RES, NETWORK 100X4 (1005)		
3575		DIC2	NETWORK		RB1211	1-234-795-21	RES, NETWORK 0X4 (2010)		
3576		DIC2	NETWORK		RB1212	1-234-372-21	RES, NETWORK 100X4 (1005)		
3577		DIC2	NETWORK		RB1213	1-234-372-21	RES, NETWORK 100X4 (1005)		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3578		DIC2	NETWORK		RB1214	1-234-372-21	RES, NETWORK 100X4 (1005)		
3579		DIC2	NETWORK		RB1215	1-234-372-21	RES, NETWORK 100X4 (1005)		
3580		DIC2	NETWORK		RB1216	1-234-369-21	RES, NETWORK 10X4 (1005)		
3581		DIC2	NETWORK		RB1217	1-234-369-21	RES, NETWORK 10X4 (1005)		
3582		DIC2	NETWORK		RB1218	1-234-369-21	RES, NETWORK 10X4 (1005)		
3583		DIC2	NETWORK		RB1219	1-234-369-21	RES, NETWORK 10X4 (1005)		
3584		DIC2	NETWORK		RB1221	1-234-371-21	RES, NETWORK 47X4 (1005)		
3585		DIC2	NETWORK		RB1222	1-234-371-21	RES, NETWORK 47X4 (1005)		
3586		DIC2	NETWORK		RB1223	1-234-371-21	RES, NETWORK 47X4 (1005)		
3587		DIC2	NETWORK		RB1224	1-234-371-21	RES, NETWORK 47X4 (1005)		
3588		DIC2	NETWORK		RB1225	1-234-371-21	RES, NETWORK 47X4 (1005)		
3589		DIC2	NETWORK		RB1226	1-234-372-21	RES, NETWORK 100X4 (1005)		
3590		DIC2	NETWORK		RB1400	1-234-702-11	RES, NETWORK 68X4 (1005)		
3591		DIC2	NETWORK		RB1401	1-234-702-11	RES, NETWORK 68X4 (1005)		
3592		DIC2	NETWORK		RB1402	1-234-702-11	RES, NETWORK 68X4 (1005)		
3593		DIC2	NETWORK		RB1403	1-234-702-11	RES, NETWORK 68X4 (1005)		
3594		DIC2	NETWORK		RB1404	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3595		DIC2	NETWORK		RB1405	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3596		DIC2	NETWORK		RB1406	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3597		DIC2	NETWORK		RB1407	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3598		DIC2	NETWORK		RB1408	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3599		DIC2	NETWORK		RB1409	1-234-369-21	RES, NETWORK 10X4 (1005)		
3600		DIC2	NETWORK		RB1410	1-234-369-21	RES, NETWORK 10X4 (1005)		
3601		DIC2	NETWORK		RB1411	1-234-369-21	RES, NETWORK 10X4 (1005)		
3602		DIC2	NETWORK		RB1412	1-234-369-21	RES, NETWORK 10X4 (1005)		
3603		DIC2	NETWORK		RB1418	1-234-371-21	RES, NETWORK 47X4 (1005)		
3604		DIC2	NETWORK		RB1419	1-234-371-21	RES, NETWORK 47X4 (1005)		
3605		DIC2	NETWORK		RB1420	1-234-371-21	RES, NETWORK 47X4 (1005)		
3606		DIC2	NETWORK		RB1421	1-234-371-21	RES, NETWORK 47X4 (1005)		
3607		DIC2	NETWORK		RB1422	1-234-371-21	RES, NETWORK 47X4 (1005)		
3608		DIC2	NETWORK		RB1423	1-234-372-21	RES, NETWORK 100X4 (1005)		
3609		DIC2	NETWORK		RB1424	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3610		DIC2	NETWORK		RB1425	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3611		DIC2	NETWORK		RB1426	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3612		DIC2	NETWORK		RB1427	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3613		DIC2	NETWORK		RB1428	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3614		DIC2	NETWORK		RB1429	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3615		DIC2	NETWORK		RB1430	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3616		DIC2	NETWORK		RB1431	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3617		DIC2	NETWORK		RB1600	1-234-372-21	RES, NETWORK 100X4 (1005)		
3618		DIC2	NETWORK		RB1601	1-234-372-21	RES, NETWORK 100X4 (1005)		
3619		DIC2	NETWORK		RB1602	1-234-372-21	RES, NETWORK 100X4 (1005)		
3620		DIC2	NETWORK		RB1603	1-234-372-21	RES, NETWORK 100X4 (1005)		
3621		DIC2	NETWORK		RB1604	1-234-372-21	RES, NETWORK 100X4 (1005)		
3622		DIC2	NETWORK		RB1605	1-234-372-21	RES, NETWORK 100X4 (1005)		
3623		DIC2	NETWORK		RB1606	1-234-372-21	RES, NETWORK 100X4 (1005)		
3624		DIC2	NETWORK		RB1607	1-234-372-21	RES, NETWORK 100X4 (1005)		
3625		DIC2	NETWORK		RB1608	1-234-372-21	RES, NETWORK 100X4 (1005)		
3626		DIC2	NETWORK		RB1609	1-234-372-21	RES, NETWORK 100X4 (1005)		
3627		DIC2	NETWORK		RB1610	1-234-372-21	RES, NETWORK 100X4 (1005)		
3628		DIC2	NETWORK		RB1700	1-234-370-21	RES, NETWORK 22X4 (1005)		
3629		DIC2	NETWORK		RB1701	1-234-370-21	RES, NETWORK 22X4 (1005)		
3630		DIC2	NETWORK		RB1702	1-234-370-21	RES, NETWORK 22X4 (1005)		
3631		DIC2	NETWORK		RB1703	1-234-370-21	RES, NETWORK 22X4 (1005)		
3632		DIC2	NETWORK		RB1704	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3633		DIC2	NETWORK		RB1705	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3634		DIC2	NETWORK		RB1706	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3635		DIC2	NETWORK		RB1707	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3636		DIC2	NETWORK		RB1708	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3637		DIC2	NETWORK		RB1709	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3638		DIC2	NETWORK		RB1710	1-234-370-21	RES, NETWORK 22X4 (1005)		
3639		DIC2	NETWORK		RB1711	1-234-370-21	RES, NETWORK 22X4 (1005)		
3640		DIC2	NETWORK		RB1900	1-234-371-21	RES, NETWORK 47X4 (1005)		
3641		DIC2	NETWORK		RB1901	1-234-371-21	RES, NETWORK 47X4 (1005)		
3642		DIC2	CRYSTAL		X1200	1-795-951-21	QUARTZ CRYSTAL OSCILLATOR(SMD)		
3643		DIC2	CRYSTAL		X1700	1-795-951-21	QUARTZ CRYSTAL OSCILLATOR(SMD)		
3644		DIC2	CRYSTAL		X1702	1-813-114-21	VIBRATOR, CRYSTAL		
3645		DIC2	CRYSTAL		X1900	1-781-945-21	VIBRATOR, CERAMIC		
3646		DIC2	CRYSTAL		X1901	1-795-244-11	VIBRATOR, CERAMIC		
3647		DIC2	CRYSTAL		X1902	1-795-244-11	VIBRATOR, CERAMIC		
3648		IF	CONNECTOR		CN9851	1-817-900-11	CONNECTOR, BOARD TO BOARD 100P		
3649		QT	CAPACITOR		C7901	1-128-551-11	ELECT 22UF 20.00% 63V		
3650		QT	CAPACITOR		C7902	1-162-995-11	CERAMIC CHIP 0.022UF 50V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3651		QT	CAPACITOR		C7903	1-162-995-11	CERAMIC CHIP 0.022UF 50V		
3652		QT	CAPACITOR		C7904	1-126-963-11	ELECT 4.7UF 20.00% 50V		
3653		QT	CAPACITOR		C7905	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
3654		QT	CAPACITOR		C7906	1-126-964-11	ELECT 10UF 20.00% 50V		
3655		QT	CAPACITOR		C7907	1-126-933-11	ELECT 100UF 20.00% 16V		
3656		QT	CAPACITOR		C7908	1-126-933-11	ELECT 100UF 20.00% 16V		
3657		QT	CAPACITOR		C7909	1-126-935-11	ELECT 470UF 20.00% 16V		
3658		QT	CAPACITOR		C7910	1-126-964-11	ELECT 10UF 20.00% 50V		
3659		QT	CAPACITOR		C7911	1-126-933-11	ELECT 100UF 20.00% 16V		
3660		QT	CAPACITOR		C7912	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3661		QT	CAPACITOR		C7913	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3662		QT	CAPACITOR		C7914	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3663		QT	CAPACITOR		C7915	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
3664		QT	CAPACITOR		C7916	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3665		QT	CAPACITOR		C7917	1-126-947-11	ELECT 47UF 20.00% 35V		
3666		QT	CAPACITOR		C7918	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3667		QT	CAPACITOR		C7923	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3668		QT	CAPACITOR		C7924	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3669		QT	CAPACITOR		C7925	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3670		QT	CAPACITOR		C7926	1-104-665-11	ELECT 100UF 20.00% 25V		
3671		QT	CAPACITOR		C7927	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3672		QT	CAPACITOR		C7928	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
3673		QT	CAPACITOR		C7929	1-128-551-11	ELECT 22UF 20.00% 63V		
3674		QT	CAPACITOR		C7930	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3675		QT	CAPACITOR		C7931	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3676		QT	CAPACITOR		C7932	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
3677		QT	CAPACITOR		C7933	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3678		QT	CONNECTOR	*	CN7900	1-817-700-11	CONNECTOR, BOARD TO BOARD 24P		
3679		QT	CONNECTOR		CN7902	6-600-234-01	IC GP1FA313TZ0F		
3680		QT	DIODE		D7900	8-719-046-91	DIODE MA2S111		
3681		QT	DIODE		D7901	8-719-066-99	DIODE SML-210VTT86		
3682		QT	DIODE		D7902	8-719-060-99	DIODE SML-210MT-T86		
3683		QT	FERRITE BEAD		FB7900	1-414-135-11	FERRITE 0UH		
3684		QT	FERRITE BEAD		FB7901	1-414-135-11	FERRITE 0UH		
3685		QT	FERRITE BEAD		FB7903	1-469-835-21	FERRITE 0UH		
3686		QT	FERRITE BEAD		FB7904	1-414-135-11	FERRITE 0UH		
3687		QT	FERRITE BEAD		FB7905	1-216-864-11	SHORT CHIP 0		
3688		QT	IC		IC7900	8-749-925-00	IC TK11819MTL		
3689		QT	IC		IC7903	8-759-832-05	IC BA18BC0FP-E2		
3690		QT	IC		IC7904	8-759-475-12	IC TC74LCX08F(EL)		
3691		QT	COIL		L7901	1-414-755-11	INDUCTOR 22UH		
3692		QT	COIL		L7902	1-410-120-11	INDUCTOR 1.2MH		
3693		QT	COIL		L7903	1-408-615-31	INDUCTOR 100UH		
3694		QT	COIL		L7904	1-414-754-11	INDUCTOR 10UH		
3695		QT	COIL		L7905	1-414-754-11	INDUCTOR 10UH		
3696		QT	COIL		L7906	1-414-754-11	INDUCTOR 10UH		
3697		QT	COIL		L7907	1-414-754-11	INDUCTOR 10UH		
3698		QT	COIL		L7908	1-414-754-11	INDUCTOR 10UH		
3699		QT	TRANSISTOR		Q7900	8-719-012-57	DIODE UZ-2.0BS-TP		
3700		QT	TRANSISTOR		Q7901	8-719-012-57	DIODE UZ-2.0BS-TP		
3701		QT	TRANSISTOR		Q7902	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
3702		QT	TRANSISTOR		Q7903	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
3703		QT	RESISTOR		R7900	1-216-821-11	METAL CHIP 1K 5% 1/10W		
3704		QT	RESISTOR		R7901	1-216-845-11	METAL CHIP 100K 5% 1/10W		
3705		QT	RESISTOR		R7902	1-216-821-11	METAL CHIP 1K 5% 1/10W		
3706		QT	RESISTOR		R7903	1-216-864-11	SHORT CHIP 0		
3707		QT	RESISTOR		R7904	1-216-864-11	SHORT CHIP 0		
3708		QT	RESISTOR		R7907	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3709		QT	RESISTOR		R7908	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3710		QT	RESISTOR		R7909	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3711		QT	RESISTOR		R7910	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3712		QT	RESISTOR		R7927	1-216-801-11	METAL CHIP 22 5% 1/10W		
3713		QT	RESISTOR		R7928	1-216-801-11	METAL CHIP 22 5% 1/10W		
3714		QT	RESISTOR		R7930	1-216-801-11	METAL CHIP 22 5% 1/10W		
3715		QT	RESISTOR		R7931	1-216-809-11	METAL CHIP 100 5% 1/10W		
3716		QT	RESISTOR		R7932	1-216-809-11	METAL CHIP 100 5% 1/10W		
3717		QT	RESISTOR		R7934	1-216-801-11	METAL CHIP 22 5% 1/10W		
3718		QT	RESISTOR		R7935	1-216-801-11	METAL CHIP 22 5% 1/10W		
3719		QT	RESISTOR		R7936	1-216-817-11	METAL CHIP 470 5% 1/10W		
3720		QT	RESISTOR		R7937	1-216-841-11	METAL CHIP 47K 5% 1/10W		
3721		QT	RESISTOR		R7938	1-216-817-11	METAL CHIP 470 5% 1/10W		
3722		QT	RESISTOR		R7939	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
3723		QT	RESISTOR		R7940	1-216-817-11	METAL CHIP 470 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3724		QT	RESISTOR		R7941	1-216-805-11	METAL CHIP 47 5% 1/10W		
3725		QT	RESISTOR		R7943	1-216-805-11	METAL CHIP 47 5% 1/10W		
3726		QT	RESISTOR		R7944	1-216-805-11	METAL CHIP 47 5% 1/10W		
3727		QT	RESISTOR		R7945	1-216-809-11	METAL CHIP 100 5% 1/10W		
3728		QT	RESISTOR		R7947	1-216-864-11	SHORT CHIP 0		
3729		QT	RESISTOR		R7948	1-216-864-11	SHORT CHIP 0		
3730		QT	RESISTOR		R7949	1-216-864-11	SHORT CHIP 0		
3731		QT	RESISTOR		R7950	1-216-864-11	SHORT CHIP 0		
3732		QT	TUNER		TU7900	8-598-647-00	TUNER UNIT,DIGITAL BTD-UA402SC		
3733		QI	CAPACITOR		C601	1-165-845-21	TANTAL. CHIP 47UF 20% 6.3V		
3734		QI	CAPACITOR		C602	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3735		QI	CAPACITOR		C603	1-165-845-21	TANTAL. CHIP 47UF 20% 6.3V		
3736		QI	CAPACITOR		C604	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3737		QI	CAPACITOR		C605	1-165-845-21	TANTAL. CHIP 47UF 20% 6.3V		
3738		QI	CAPACITOR		C606	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3739		QI	CAPACITOR		C607	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3740		QI	CAPACITOR		C608	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3741		QI	CAPACITOR		C609	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
3742		QI	CAPACITOR		C610	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3743		QI	CAPACITOR		C611	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3744		QI	CAPACITOR		C612	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3745		QI	CAPACITOR		C613	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3746		QI	CAPACITOR		C614	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
3747		QI	CAPACITOR		C615	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3748		QI	CAPACITOR		C616	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3749		QI	CAPACITOR		C617	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3750		QI	CAPACITOR		C618	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3751		QI	CAPACITOR		C619	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3752		QI	CAPACITOR		C620	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3753		QI	CAPACITOR		C621	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3754		QI	CAPACITOR		C702	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3755		QI	CAPACITOR		C703	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3756		QI	CAPACITOR		C704	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3757		QI	CAPACITOR		C705	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3758		QI	CAPACITOR		C706	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3759		QI	CAPACITOR		C707	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3760		QI	CAPACITOR		C708	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3761		QI	CAPACITOR		C709	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3762		QI	CAPACITOR		C710	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3763		QI	CAPACITOR		C711	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3764		QI	CAPACITOR		C712	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3765		QI	CAPACITOR		C713	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3766		QI	CAPACITOR		C714	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3767		QI	CAPACITOR		C715	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3768		QI	CAPACITOR		C716	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3769		QI	CAPACITOR		C717	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3770		QI	CAPACITOR		C718	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3771		QI	CAPACITOR		C719	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3772		QI	CAPACITOR		C720	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3773		QI	CAPACITOR		C721	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3774		QI	CAPACITOR		C722	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3775		QI	CAPACITOR		C723	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3776		QI	CAPACITOR		C724	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3777		QI	CAPACITOR		C725	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3778		QI	CAPACITOR		C726	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3779		QI	CAPACITOR		C727	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3780		QI	CAPACITOR		C728	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3781		QI	CAPACITOR		C729	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3782		QI	CAPACITOR		C730	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3783		QI	CAPACITOR		C731	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3784		QI	CAPACITOR		C732	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3785		QI	CAPACITOR		C733	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3786		QI	CAPACITOR		C734	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3787		QI	CAPACITOR		C735	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3788		QI	CAPACITOR		C736	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3789		QI	CAPACITOR		C737	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
3790		QI	CAPACITOR		C738	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3791		QI	CAPACITOR		C739	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
3792		QI	CAPACITOR		C740	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
3793		QI	CAPACITOR		C741	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
3794		QI	CAPACITOR		C742	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
3795		QI	CAPACITOR		C743	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
3796		QI	CAPACITOR		C744	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3797		QI	CAPACITOR		C745	1-164-388-91	CERAMIC CHIP 270PF 5.00% 50V		
3798		QI	CAPACITOR		C746	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3799		QI	CAPACITOR		C747	1-164-388-91	CERAMIC CHIP 270PF 5.00% 50V		
3800		QI	CAPACITOR		C748	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3801		QI	CAPACITOR		C749	1-164-388-91	CERAMIC CHIP 270PF 5.00% 50V		
3802		QI	CAPACITOR		C750	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3803		QI	CAPACITOR		C803	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3804		QI	CAPACITOR		C804	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3805		QI	CAPACITOR		C805	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3806		QI	CAPACITOR		C806	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3807		QI	CAPACITOR		C807	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3808		QI	CAPACITOR		C808	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3809		QI	CAPACITOR		C809	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3810		QI	CAPACITOR		C810	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3811		QI	CAPACITOR		C811	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3812		QI	CAPACITOR		C812	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3813		QI	CAPACITOR		C813	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3814		QI	CAPACITOR		C814	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3815		QI	CAPACITOR		C815	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3816		QI	CAPACITOR		C816	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3817		QI	CAPACITOR		C817	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3818		QI	CAPACITOR		C818	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3819		QI	CAPACITOR		C819	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3820		QI	CAPACITOR		C820	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3821		QI	CAPACITOR		C821	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3822		QI	CAPACITOR		C822	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3823		QI	CAPACITOR		C823	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3824		QI	CAPACITOR		C824	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
3825		QI	CAPACITOR		C825	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3826		QI	CAPACITOR		C826	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3827		QI	CAPACITOR		C828	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3828		QI	CAPACITOR		C829	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
3829		QI	CAPACITOR		C830	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
3830		QI	CAPACITOR		C832	1-162-971-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3831		QI	CAPACITOR		C833	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
3832		QI	CAPACITOR		C834	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
3833		QI	CAPACITOR		C835	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3834		QI	CAPACITOR		C836	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3835		QI	CAPACITOR		C837	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3836		QI	CAPACITOR		C838	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3837		QI	CAPACITOR		C839	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3838		QI	CAPACITOR		C840	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3839		QI	CAPACITOR		C841	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3840		QI	CONNECTOR	*	CN602	1-817-738-11	CONNECTOR, BOARD TO BOARD 80P		
3841		QI	CONNECTOR	*	CN701	1-817-737-11	CONNECTOR, BOARD TO BOARD 40P		
3842		QI	CONNECTOR		CN702	1-815-033-21	CONNECTOR, I LINK(FLANGE TYPE)		
3843		QI	CONNECTOR	*	CN703	1-815-164-21	CONNECTOR, I LINK(FLANGE TYPE)		
3844		QI	CONNECTOR	*	CN704	1-815-164-21	CONNECTOR, I LINK(FLANGE TYPE)		
3845		QI	DIODE		D701	8-719-421-71	DIODE MA132WA		
3846		QI	DIODE		D702	8-719-421-71	DIODE MA132WA		
3847		QI	DIODE		D703	8-719-421-71	DIODE MA132WA		
3848		QI	FERRITE BEAD		FB601	1-469-835-21	FERRITE 0UH		
3849		QI	FERRITE BEAD		FB602	1-469-835-21	FERRITE 0UH		
3850		QI	FERRITE BEAD		FB801	1-469-835-21	FERRITE 0UH		
3851		QI	FERRITE BEAD		FB802	1-469-835-21	FERRITE 0UH		
3852		QI	IC		IC601	6-702-958-01	IC CXD9740GA		
3853		QI	IC		IC602	8-759-832-05	IC BA18BC0FP-E2		
3854		QI	IC		IC703	6-702-511-11	IC MT48LC8M16A2TG-75-Y95WT		
3855		QI	IC		IC704	6-704-487-01	IC TC74LVX74FT(EL)		
3856		QI	IC		IC802	6-704-488-01	IC UPD72894GD-LML-A		
3857		QI	IC		IC803	8-759-031-84	IC SC7S04F		
3858		QI	IC		IC804	8-759-031-84	IC SC7S04F		
3859		QI	IC		IC805	6-702-552-01	IC BU2374FV-E2		
3860		QI	IC		IC807	6-704-285-01	IC IC42S16101-7TG(T&R)		
3861		QI	IC		IC808	6-704-487-01	IC TC74LVX74FT(EL)		
3862		QI	COIL		L601	1-414-394-11	INDUCTOR 2.2UH		
3863		QI	COIL		L701	1-414-394-11	INDUCTOR 2.2UH		
3864		QI	COIL		L702	1-216-296-11	SHORT CHIP 0		
3865		QI	COIL		L703	1-781-667-22	INDUCTOR 0UH		
3866		QI	COIL		L704	1-781-667-22	INDUCTOR 0UH		
3867		QI	COIL		L705	1-781-667-22	INDUCTOR 0UH		
3868		QI	COIL		L706	1-781-667-22	INDUCTOR 0UH		
3869		QI	COIL		L707	1-781-667-22	INDUCTOR 0UH		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3870		QI	COIL		L708	1-781-667-22	INDUCTOR 0UH		
3871		QI	COIL		L801	1-414-394-11	INDUCTOR 2.2UH		
3872		QI	RESISTOR		R601	1-216-801-11	METAL CHIP 22 5% 1/10W		
3873		QI	RESISTOR		R602	1-216-801-11	METAL CHIP 22 5% 1/10W		
3874		QI	RESISTOR		R603	1-216-801-11	METAL CHIP 22 5% 1/10W		
3875		QI	RESISTOR		R604	1-216-801-11	METAL CHIP 22 5% 1/10W		
3876		QI	RESISTOR		R605	1-216-801-11	METAL CHIP 22 5% 1/10W		
3877		QI	RESISTOR		R606	1-216-801-11	METAL CHIP 22 5% 1/10W		
3878		QI	RESISTOR		R607	1-216-801-11	METAL CHIP 22 5% 1/10W		
3879		QI	RESISTOR		R608	1-216-845-11	METAL CHIP 100K 5% 1/10W		
3880		QI	RESISTOR		R609	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3881		QI	RESISTOR		R610	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3882		QI	RESISTOR		R611	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3883		QI	RESISTOR		R612	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3884		QI	RESISTOR		R613	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3885		QI	RESISTOR		R614	1-216-845-11	METAL CHIP 100K 5% 1/10W		
3886		QI	RESISTOR		R616	1-216-845-11	METAL CHIP 100K 5% 1/10W		
3887		QI	RESISTOR		R617	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3888		QI	RESISTOR		R618	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3889		QI	RESISTOR		R619	1-216-864-11	SHORT CHIP 0		
3890		QI	RESISTOR		R620	1-216-864-11	SHORT CHIP 0		
3891		QI	RESISTOR		R621	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3892		QI	RESISTOR		R622	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3893		QI	RESISTOR		R623	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3894		QI	RESISTOR		R624	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3895		QI	RESISTOR		R625	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3896		QI	RESISTOR		R627	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3897		QI	RESISTOR		R701	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3898		QI	RESISTOR		R702	1-216-801-11	METAL CHIP 22 5% 1/10W		
3899		QI	RESISTOR		R704	1-216-801-11	METAL CHIP 22 5% 1/10W		
3900		QI	RESISTOR		R707	1-216-801-11	METAL CHIP 22 5% 1/10W		
3901		QI	RESISTOR		R708	1-218-672-11	METAL CHIP 150 0.5% 1/10W		
3902		QI	RESISTOR		R709	1-216-801-11	METAL CHIP 22 5% 1/10W		
3903		QI	RESISTOR		R710	1-218-711-11	METAL CHIP 6.2K 0.5% 1/10W		
3904		QI	RESISTOR		R711	1-216-801-11	METAL CHIP 22 5% 1/10W		
3905		QI	RESISTOR		R712	1-216-801-11	METAL CHIP 22 5% 1/10W		
3906		QI	RESISTOR		R713	1-216-801-11	METAL CHIP 22 5% 1/10W		
3907		QI	RESISTOR		R714	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3908		QI	RESISTOR		R715	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3909		QI	RESISTOR		R716	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3910		QI	RESISTOR		R717	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3911		QI	RESISTOR		R719	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3912		QI	RESISTOR		R721	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3913		QI	RESISTOR		R723	1-216-857-11	METAL CHIP 1M 5% 1/10W		
3914		QI	RESISTOR		R724	1-216-857-11	METAL CHIP 1M 5% 1/10W		
3915		QI	RESISTOR		R725	1-216-857-11	METAL CHIP 1M 5% 1/10W		
3916		QI	RESISTOR		R726	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3917		QI	RESISTOR		R727	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3918		QI	RESISTOR		R728	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3919		QI	RESISTOR		R729	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3920		QI	RESISTOR		R730	1-218-709-11	METAL CHIP 5.1K 0.5% 1/10W		
3921		QI	RESISTOR		R731	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3922		QI	RESISTOR		R732	1-218-709-11	METAL CHIP 5.1K 0.5% 1/10W		
3923		QI	RESISTOR		R733	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
3924		QI	RESISTOR		R734	1-218-709-11	METAL CHIP 5.1K 0.5% 1/10W		
3925		QI	RESISTOR		R735	1-216-864-11	SHORT CHIP 0		
3926		QI	RESISTOR		R736	1-216-864-11	SHORT CHIP 0		
3927		QI	RESISTOR		R737	1-216-864-11	SHORT CHIP 0		
3928		QI	RESISTOR		R801	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3929		QI	RESISTOR		R802	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3930		QI	RESISTOR		R803	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3931		QI	RESISTOR		R804	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3932		QI	RESISTOR		R805	1-216-864-11	SHORT CHIP 0		
3933		QI	RESISTOR		R806	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3934		QI	RESISTOR		R807	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3935		QI	RESISTOR		R808	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3936		QI	RESISTOR		R809	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3937		QI	RESISTOR		R810	1-216-809-11	METAL CHIP 100 5% 1/10W		
3938		QI	RESISTOR		R811	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3939		QI	RESISTOR		R812	1-216-864-11	SHORT CHIP 0		
3940		QI	RESISTOR		R813	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3941		QI	RESISTOR		R814	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3942		QI	RESISTOR		R815	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3943		QI	RESISTOR		R816	1-216-803-11	METAL CHIP 33 5% 1/10W		
3944		QI	RESISTOR		R817	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3945		QI	RESISTOR		R818	1-216-801-11	METAL CHIP 22 5% 1/10W		
3946		QI	RESISTOR		R820	1-216-803-11	METAL CHIP 33 5% 1/10W		
3947		QI	RESISTOR		R821	1-218-699-11	METAL CHIP 2K 0.5% 1/10W		
3948		QI	RESISTOR		R822	1-216-803-11	METAL CHIP 33 5% 1/10W		
3949		QI	RESISTOR		R823	1-216-841-11	METAL CHIP 47K 5% 1/10W		
3950		QI	RESISTOR		R824	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3951		QI	RESISTOR		R825	1-216-841-11	METAL CHIP 47K 5% 1/10W		
3952		QI	RESISTOR		R826	1-216-841-11	METAL CHIP 47K 5% 1/10W		
3953		QI	NETWORK		RB601	1-234-370-21	RES, NETWORK 22X4 (1005)		
3954		QI	NETWORK		RB602	1-234-370-21	RES, NETWORK 22X4 (1005)		
3955		QI	NETWORK		RB603	1-234-370-21	RES, NETWORK 22X4 (1005)		
3956		QI	NETWORK		RB604	1-234-370-21	RES, NETWORK 22X4 (1005)		
3957		QI	NETWORK		RB605	1-234-370-21	RES, NETWORK 22X4 (1005)		
3958		QI	NETWORK		RB606	1-234-370-21	RES, NETWORK 22X4 (1005)		
3959		QI	NETWORK		RB607	1-234-370-21	RES, NETWORK 22X4 (1005)		
3960		QI	NETWORK		RB608	1-234-370-21	RES, NETWORK 22X4 (1005)		
3961		QI	NETWORK		RB609	1-234-370-21	RES, NETWORK 22X4 (1005)		
3962		QI	NETWORK		RB610	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3963		QI	NETWORK		RB611	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3964		QI	NETWORK		RB612	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3965		QI	NETWORK		RB613	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3966		QI	NETWORK		RB614	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3967		QI	NETWORK		RB701	1-234-370-21	RES, NETWORK 22X4 (1005)		
3968		QI	NETWORK		RB702	1-234-370-21	RES, NETWORK 22X4 (1005)		
3969		QI	NETWORK		RB703	1-234-370-21	RES, NETWORK 22X4 (1005)		
3970		QI	NETWORK		RB704	1-234-370-21	RES, NETWORK 22X4 (1005)		
3971		QI	NETWORK		RB705	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3972		QI	NETWORK		RB706	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3973		QI	NETWORK		RB707	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3974		QI	NETWORK		RB708	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3975		QI	NETWORK		RB709	1-234-371-21	RES, NETWORK 47X4 (1005)		
3976		QI	NETWORK		RB710	1-234-371-21	RES, NETWORK 47X4 (1005)		
3977		QI	NETWORK		RB711	1-234-371-21	RES, NETWORK 47X4 (1005)		
3978		QI	NETWORK		RB712	1-234-371-21	RES, NETWORK 47X4 (1005)		
3979		QI	NETWORK		RB713	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3980		QI	NETWORK		RB714	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3981		QI	NETWORK		RB715	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3982		QI	NETWORK		RB716	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3983		QI	NETWORK		RB801	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3984		QI	NETWORK		RB802	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3985		QI	NETWORK		RB803	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3986		QI	NETWORK		RB804	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3987		QI	NETWORK		RB814	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3988		QI	NETWORK		RB815	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3989		QI	NETWORK		RB816	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3990		QI	NETWORK		RB817	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3991		QI	NETWORK		RB818	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3992		QI	NETWORK		RB819	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3993		QI	NETWORK		RB820	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3994		QI	NETWORK		RB821	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3995		QI	NETWORK		RB822	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3996		QI	NETWORK		RB823	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3997		QI	NETWORK		RB824	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3998		QI	NETWORK		RB825	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3999		QI	NETWORK		RB826	1-234-372-21	RES, NETWORK 100X4 (1005)		
4000		QI	NETWORK		RB827	1-234-372-21	RES, NETWORK 100X4 (1005)		
4001		QI	NETWORK		RB828	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4002		QI	NETWORK		RB829	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4003		QI	NETWORK		RB830	1-234-372-21	RES, NETWORK 100X4 (1005)		
4004		QI	NETWORK		RB831	1-234-372-21	RES, NETWORK 100X4 (1005)		
4005		QI	NETWORK		RB832	1-234-372-21	RES, NETWORK 100X4 (1005)		
4006		QI	NETWORK		RB833	1-234-372-21	RES, NETWORK 100X4 (1005)		
4007		QI	NETWORK		RB834	1-234-372-21	RES, NETWORK 100X4 (1005)		
4008		QI	NETWORK		RB835	1-234-372-21	RES, NETWORK 100X4 (1005)		
4009		QI	NETWORK		RB836	1-234-372-21	RES, NETWORK 100X4 (1005)		
4010		QI	NETWORK		RB837	1-234-372-21	RES, NETWORK 100X4 (1005)		
4011		QI	NETWORK		RB838	1-234-372-21	RES, NETWORK 100X4 (1005)		
4012		QI	NETWORK		RB839	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4013		QI	NETWORK		RB840	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4014		QI	NETWORK		RB841	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4015		QI	NETWORK		RB842	1-234-378-21	RES, NETWORK 10KX4 (1005)		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4016		QI	CRYSTAL		X701	1-795-415-21	VIBRATOR, CRYSTAL		
4017		QI	CRYSTAL		X801	1-813-058-21	OSCILLATOR, CRYSTAL		
4018		QM	CAPACITOR		C7301	1-165-811-91	CERAMIC CHIP 22UF 10% 16V		
4019		QM	CAPACITOR		C7302	1-164-346-11	CERAMIC CHIP 1UF 16V		
4020		QM	CAPACITOR		C7303	1-164-346-11	CERAMIC CHIP 1UF 16V		
4021		QM	CAPACITOR		C7304	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
4022		QM	CAPACITOR		C7305	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4023		QM	CAPACITOR		C7306	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4024		QM	CAPACITOR		C7307	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
4025		QM	CAPACITOR		C7308	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4026		QM	CAPACITOR		C7309	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4027		QM	CAPACITOR		C7310	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4028		QM	CAPACITOR		C7311	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4029		QM	CAPACITOR		C7312	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4030		QM	CAPACITOR		C7313	1-164-346-11	CERAMIC CHIP 1UF 16V		
4031		QM	CAPACITOR		C7314	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4032		QM	CAPACITOR		C7315	1-164-346-11	CERAMIC CHIP 1UF 16V		
4033		QM	CAPACITOR		C7316	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
4034		QM	CAPACITOR		C7317	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
4035		QM	CAPACITOR		C7318	1-100-118-21	ELECT CHIP 82UF 20% 16V		
4036		QM	CAPACITOR		C7319	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4037		QM	CAPACITOR		C7320	1-100-118-21	ELECT CHIP 82UF 20% 16V		
4038		QM	CAPACITOR		C7321	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4039		QM	CAPACITOR		C7322	1-137-897-21	ELECT CHIP 150UF 20% 4V		
4040		QM	CAPACITOR		C7323	1-137-897-21	ELECT CHIP 150UF 20% 4V		
4041		QM	CAPACITOR		C7326	1-137-897-21	ELECT CHIP 150UF 20% 4V		
4042		QM	CAPACITOR		C7327	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4043		QM	CAPACITOR		C7328	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4044		QM	CAPACITOR		C7329	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4045		QM	CAPACITOR		C7330	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4046		QM	CAPACITOR		C7331	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4047		QM	CAPACITOR		C7332	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4048		QM	CAPACITOR		C7333	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4049		QM	CAPACITOR		C7334	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4050		QM	CAPACITOR		C7335	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4051		QM	CAPACITOR		C7336	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4052		QM	CAPACITOR		C7337	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4053		QM	CAPACITOR		C7338	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4054		QM	CAPACITOR		C7339	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4055		QM	CAPACITOR		C7340	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4056		QM	CAPACITOR		C7341	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4057		QM	CAPACITOR		C7342	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4058		QM	CAPACITOR		C7343	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4059		QM	CAPACITOR		C7344	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4060		QM	CAPACITOR		C7345	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4061		QM	CAPACITOR		C7346	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4062		QM	CAPACITOR		C7347	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4063		QM	CAPACITOR		C7348	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4064		QM	CAPACITOR		C7349	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4065		QM	CAPACITOR		C7350	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4066		QM	CAPACITOR		C7351	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4067		QM	CAPACITOR		C7352	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4068		QM	CAPACITOR		C7353	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4069		QM	CAPACITOR		C7354	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4070		QM	CAPACITOR		C7355	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4071		QM	CAPACITOR		C7356	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4072		QM	CAPACITOR		C7357	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4073		QM	CAPACITOR		C7358	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4074		QM	CAPACITOR		C7359	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4075		QM	CAPACITOR		C7360	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4076		QM	CAPACITOR		C7361	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4077		QM	CAPACITOR		C7362	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4078		QM	CAPACITOR		C7363	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4079		QM	CAPACITOR		C7364	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4080		QM	CAPACITOR		C7365	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4081		QM	CAPACITOR		C7366	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4082		QM	CAPACITOR		C7367	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4083		QM	CAPACITOR		C7368	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4084		QM	CAPACITOR		C7369	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4085		QM	CAPACITOR		C7370	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4086		QM	CAPACITOR		C7371	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4087		QM	CAPACITOR		C7372	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4088		QM	CAPACITOR		C7373	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4089		QM	CAPACITOR		C7374	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4090		QM	CAPACITOR		C7375	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4091		QM	CAPACITOR		C7376	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4092		QM	CAPACITOR		C7377	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4093		QM	CAPACITOR		C7378	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4094		QM	CAPACITOR		C7379	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4095		QM	CAPACITOR		C7380	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4096		QM	CAPACITOR		C7381	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4097		QM	CAPACITOR		C7382	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4098		QM	CAPACITOR		C7383	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4099		QM	CAPACITOR		C7384	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4100		QM	CAPACITOR		C7385	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4101		QM	CAPACITOR		C7386	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4102		QM	CAPACITOR		C7387	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4103		QM	CAPACITOR		C7388	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4104		QM	CAPACITOR		C7389	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4105		QM	CAPACITOR		C7390	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4106		QM	CAPACITOR		C7391	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4107		QM	CAPACITOR		C7392	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4108		QM	CAPACITOR		C7393	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4109		QM	CAPACITOR		C7394	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4110		QM	CAPACITOR		C7395	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4111		QM	CAPACITOR		C7396	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4112		QM	CAPACITOR		C7397	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4113		QM	CAPACITOR		C7398	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4114		QM	CAPACITOR		C7399	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4115		QM	CAPACITOR		C7400	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V		
4116		QM	CAPACITOR		C7401	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4117		QM	CAPACITOR		C7402	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4118		QM	CAPACITOR		C7403	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4119		QM	CAPACITOR		C7404	1-162-911-11	CERAMIC CHIP 6PF 0.50PF 50V		
4120		QM	CAPACITOR		C7405	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4121		QM	CAPACITOR		C7406	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4122		QM	CAPACITOR		C7407	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4123		QM	CAPACITOR		C7408	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4124		QM	CAPACITOR		C7409	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4125		QM	CAPACITOR		C7410	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4126		QM	CAPACITOR		C7411	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4127		QM	CAPACITOR		C7412	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4128		QM	CAPACITOR		C7413	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4129		QM	CAPACITOR		C7414	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4130		QM	CAPACITOR		C7415	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4131		QM	CAPACITOR		C7416	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4132		QM	CAPACITOR		C7417	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4133		QM	CAPACITOR		C7418	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4134		QM	CAPACITOR		C7419	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4135		QM	CAPACITOR		C7420	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4136		QM	CAPACITOR		C7421	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4137		QM	CAPACITOR		C7422	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4138		QM	CAPACITOR		C7423	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4139		QM	CAPACITOR		C7424	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4140		QM	CAPACITOR		C7425	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4141		QM	CAPACITOR		C7426	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4142		QM	CAPACITOR		C7428	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4143		QM	CAPACITOR		C7429	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4144		QM	CAPACITOR		C7430	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4145		QM	CAPACITOR		C7431	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4146		QM	CAPACITOR		C7432	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4147		QM	CAPACITOR		C7433	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4148		QM	CAPACITOR		C7434	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4149		QM	CAPACITOR		C7435	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4150		QM	CAPACITOR		C7436	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4151		QM	CAPACITOR		C7437	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4152		QM	CAPACITOR		C7438	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4153		QM	CAPACITOR		C7439	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4154		QM	CAPACITOR		C7440	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4155		QM	CAPACITOR		C7441	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4156		QM	CAPACITOR		C7442	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4157		QM	CAPACITOR		C7443	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4158		QM	CAPACITOR		C7444	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4159		QM	CAPACITOR		C7445	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4160		QM	CAPACITOR		C7446	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4161		QM	CAPACITOR		C7447	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4162		QM	CAPACITOR		C7448	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4163		QM	CAPACITOR		C7449	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4164		QM	CAPACITOR		C7450	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4165		QM	CAPACITOR		C7451	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4166		QM	CAPACITOR		C7452	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4167		QM	CAPACITOR		C7453	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4168		QM	CAPACITOR		C7454	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4169		QM	CAPACITOR		C7455	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4170		QM	CAPACITOR		C7456	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4171		QM	CAPACITOR		C7457	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4172		QM	CAPACITOR		C7458	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4173		QM	CAPACITOR		C7459	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4174		QM	CAPACITOR		C7460	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4175		QM	CAPACITOR		C7461	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4176		QM	CAPACITOR		C7462	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4177		QM	CAPACITOR		C7463	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4178		QM	CAPACITOR		C7464	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4179		QM	CAPACITOR		C7465	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4180		QM	CAPACITOR		C7466	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4181		QM	CAPACITOR		C7467	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4182		QM	CAPACITOR		C7468	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4183		QM	CAPACITOR		C7469	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4184		QM	CAPACITOR		C7470	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4185		QM	CAPACITOR		C7472	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4186		QM	CAPACITOR		C7473	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4187		QM	CAPACITOR		C7474	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4188		QM	CAPACITOR		C7475	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
4189		QM	CAPACITOR		C7476	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4190		QM	CAPACITOR		C7477	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4191		QM	CAPACITOR		C7478	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4192		QM	CAPACITOR		C7479	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4193		QM	CAPACITOR		C7480	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4194		QM	CAPACITOR		C7481	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4195		QM	CAPACITOR		C7482	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4196		QM	CAPACITOR		C7483	1-164-346-11	CERAMIC CHIP 1UF 16V		
4197		QM	CAPACITOR		C7484	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4198		QM	CAPACITOR		C7485	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4199		QM	CAPACITOR		C7486	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4200		QM	CAPACITOR		C7487	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4201		QM	CAPACITOR		C7488	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4202		QM	CAPACITOR		C7489	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4203		QM	CAPACITOR		C7491	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4204		QM	CAPACITOR		C7492	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4205		QM	CAPACITOR		C7494	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4206		QM	CAPACITOR		C7495	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4207		QM	CAPACITOR		C7496	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4208		QM	CAPACITOR		C7497	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4209		QM	CAPACITOR		C7498	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4210		QM	CAPACITOR		C7499	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4211		QM	CAPACITOR		C7501	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4212		QM	CAPACITOR		C7502	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4213		QM	CAPACITOR		C7503	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4214		QM	CAPACITOR		C7504	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4215		QM	CAPACITOR		C7506	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
4216		QM	CAPACITOR		C7509	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
4217		QM	CAPACITOR		C7511	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4218		QM	CAPACITOR		C7528	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4219		QM	CAPACITOR		C7532	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
4220		QM	CAPACITOR		C7539	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4221		QM	CAPACITOR		C7540	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4222		QM	CAPACITOR		C7541	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4223		QM	CAPACITOR		C7542	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4224		QM	CONNECTOR	*	CN7300	1-816-598-11	PIN, CONNECTOR 12P		
4225		QM	CONNECTOR	*	CN7303	1-817-702-11	CONNECTOR, BOARD TO BOARD 4P		
4226		QM	CONNECTOR	*	CN7305	1-817-717-11	CONNECTOR, BOARD TO BOARD 80P		
4227		QM	CONNECTOR	*	CN7306	1-817-701-11	CONNECTOR, BOARD TO BOARD 24P		
4228		QM	CONNECTOR	*	CN7308	1-817-718-11	CONNECTOR, BOARD TO BOARD 40P		
4229		QM	CONNECTOR		CN7309	1-815-468-11	PIN, CONNECTOR (PC BOARD)		
4230		QM	CONNECTOR	*	CN7310	1-793-141-21	PIN, CONNECTOR (PC BOARD) 15P		
4231		QM	CONNECTOR		CN7311	1-785-842-11	CONNECTOR, USB (VERTICAL TYPE)		
4232		QM	DIODE		D7300	8-719-404-50	DIODE MA111-TX		
4233		QM	DIODE		D7301	8-719-404-50	DIODE MA111-TX		
4234		QM	DIODE		D7302	8-719-404-50	DIODE MA111-TX		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4235		QM	DIODE		D7303	8-719-404-50	DIODE MA111-TX		
4236		QM	DIODE		D7304	8-719-404-50	DIODE MA111-TX		
4237		QM	DIODE		D7305	8-719-404-50	DIODE MA111-TX		
4238		QM	DIODE		D7306	8-719-060-99	DIODE SML-210MT-T86		
4239		QM	DIODE		D7308	8-719-988-61	DIODE 1SS355TE-17		
4240		QM	DIODE		D7309	8-719-048-40	DIODE MBR5140T3		
4241		QM	DIODE		D7310	8-719-048-40	DIODE MBR5140T3		
4242		QM	FERRITE BEAD		FB7300	1-400-089-21	FERRITE 0UH		
4243		QM	FERRITE BEAD		FB7301	1-400-089-21	FERRITE 0UH		
4244		QM	FERRITE BEAD		FB7302	1-469-835-21	FERRITE 0UH		
4245		QM	FERRITE BEAD		FB7303	1-500-241-22	FERRITE 0UH		
4246		QM	FERRITE BEAD		FB7304	1-469-835-21	FERRITE 0UH		
4247		QM	FERRITE BEAD		FB7305	1-469-835-21	FERRITE 0UH		
4248		QM	FERRITE BEAD		FB7306	1-414-229-11	FERRITE 0UH		
4249		QM	FERRITE BEAD		FB7307	1-414-229-11	FERRITE 0UH		
4250		QM	FERRITE BEAD		FB7308	1-469-835-21	FERRITE 0UH		
4251		QM	FERRITE BEAD		FB7309	1-414-229-11	FERRITE 0UH		
4252		QM	FERRITE BEAD		FB7310	1-414-229-11	FERRITE 0UH		
4253		QM	FERRITE BEAD		FB7311	1-414-229-11	FERRITE 0UH		
4254		QM	FERRITE BEAD		FB7312	1-414-229-11	FERRITE 0UH		
4255		QM	FERRITE BEAD		FB7313	1-400-180-21	INDUCTOR 0UH		
4256		QM	FERRITE BEAD		FB7314	1-400-180-21	INDUCTOR 0UH		
4257		QM	FERRITE BEAD		FB7315	1-469-835-21	FERRITE 0UH		
4258		QM	FERRITE BEAD		FB7317	1-400-089-21	FERRITE 0UH		
4259		QM	FERRITE BEAD		FB7318	1-400-089-21	FERRITE 0UH		
4260		QM	FERRITE BEAD		FB7319	1-216-295-91	SHORT CHIP 0		
4261		QM	FERRITE BEAD		FB7321	1-469-835-21	FERRITE 0UH		
4262		QM	FERRITE BEAD		FB7322	1-469-835-21	FERRITE 0UH		
4263		QM	FERRITE BEAD		FB7323	1-469-835-21	FERRITE 0UH		
4264		QM	FILTER		FL7300	1-781-667-22	INDUCTOR 0UH		
4265		QM	IC		IC7300	6-704-629-01	IC 215H25AKA13G		
4266		QM	IC		IC7301	6-703-182-01	IC IRU3037CS		
4267		QM	IC		IC7302	6-703-182-01	IC IRU3037CS		
4268		QM	IC		IC7303	8-759-592-47	IC TC7SZ08FU(TE85R)		
4269		QM	IC		IC7304	8-759-592-47	IC TC7SZ08FU(TE85R)		
4270		QM	IC		IC7305	6-701-116-01	IC TPS3823-33DBVR		
4271		QM	IC		IC7306	8-729-044-83	TRANSISTOR IRF7313-TR		
4272		QM	IC		IC7307	8-729-044-83	TRANSISTOR IRF7313-TR		
4273		QM	IC		IC7308	8-759-538-95	IC TC74LVX08FT(EL)		
4274		QM	IC		IC7309	6-704-622-01	IC PQ015Y3H3ZP		
4275		QM	IC		IC7310	6-703-048-01	IC XC6209B182MR		
4276		QM	IC		IC7311	6-703-048-01	IC XC6209B182MR		
4277		QM	IC		IC7312	6-703-048-01	IC XC6209B182MR		
4278		QM	IC		IC7313	6-703-048-01	IC XC6209B182MR		
4279		QM	IC		IC7314	6-703-048-01	IC XC6209B182MR		
4280		QM	IC		IC7315	8-759-698-08	IC SN74CBTLV1G125DCKR		
4281		QM	IC		IC7316	8-759-694-36	IC SN74CBTLV3257PWR		
4282		QM	IC		IC7317	8-759-058-54	IC TC7S00FU(TE85R)		
4283		QM	IC		IC7318	6-704-621-01	IC TC58DVM72A1TG00		
4284		QM	IC		IC7319	6-704-621-01	IC TC58DVM72A1TG00		
4285		QM	IC		IC7320	6-703-866-01	IC M25P10-AVMN6T		
4286		QM	IC		IC7322	6-704-849-01	IC MT46V8M16P-6T		
4287		QM	IC		IC7323	6-704-849-01	IC MT46V8M16P-6T		
4288		QM	IC		IC7324	6-704-849-01	IC MT46V8M16P-6T		
4289		QM	IC		IC7325	6-704-849-01	IC MT46V8M16P-6T		
4290		QM	IC		IC7326	6-702-688-01	IC M24C64-WMN6T(B)		
4291		QM	IC		IC7327	6-704-819-01	IC CS4335-KSZR		
4292		QM	IC		IC7330	8-759-672-72	IC LM3526MX-H		
4293		QM	IC		IC7335	8-759-592-47	IC TC7SZ08FU(TE85R)		
4294		QM	IC		IC7336	8-759-592-47	IC TC7SZ08FU(TE85R)		
4295		QM	IC		IC7337	8-759-592-50	IC TC7SZ126FU(TE85R)		
4296		QM	COIL		L7300	1-469-349-11	INDUCTOR 1UH		
4297		QM	COIL		L7301	1-416-948-21	INDUCTOR 10UH		
4298		QM	COIL		L7302	1-419-491-21	INDUCTOR 10UH		
4299		QM	COIL		L7303	1-414-751-11	INDUCTOR 1UH		
4300		QM	COIL		L7304	1-410-989-11	INDUCTOR 0.47UH		
4301		QM	COIL		L7305	1-410-989-11	INDUCTOR 0.47UH		
4302		QM	COIL		L7306	1-410-989-11	INDUCTOR 0.47UH		
4303		QM	COIL		L7307	1-410-989-11	INDUCTOR 0.47UH		
4304		QM	COIL		L7308	1-410-989-11	INDUCTOR 0.47UH		
4305		QM	COIL		L7309	1-410-989-11	INDUCTOR 0.47UH		
4306		QM	COIL		L7312	1-414-751-11	INDUCTOR 1UH		
4307		QM	TRANSISTOR		Q7300	8-729-422-27	TRANSISTOR 2SD601A-Q		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4308		QM	TRANSISTOR		Q7301	8-729-422-27	TRANSISTOR 2SD601A-Q		
4309		QM	TRANSISTOR		Q7302	8-729-422-27	TRANSISTOR 2SD601A-Q		
4310		QM	TRANSISTOR		Q7303	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
4311		QM	TRANSISTOR		Q7304	8-729-422-27	TRANSISTOR 2SD601A-Q		
4312		QM	TRANSISTOR		Q7305	8-729-422-27	TRANSISTOR 2SD601A-Q		
4313		QM	RESISTOR		R7300	1-216-864-11	SHORT CHIP 0		
4314		QM	RESISTOR		R7301	1-216-864-11	SHORT CHIP 0		
4315		QM	RESISTOR		R7303	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4316		QM	RESISTOR		R7304	1-216-809-11	METAL CHIP 100 5% 1/10W		
4317		QM	RESISTOR		R7305	1-216-809-11	METAL CHIP 100 5% 1/10W		
4318		QM	RESISTOR		R7306	1-216-864-11	SHORT CHIP 0		
4319		QM	RESISTOR		R7307	1-216-864-11	SHORT CHIP 0		
4320		QM	RESISTOR		R7308	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4321		QM	RESISTOR		R7309	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4322		QM	RESISTOR		R7310	1-216-801-11	METAL CHIP 22 5% 1/10W		
4323		QM	RESISTOR		R7311	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4324		QM	RESISTOR		R7312	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
4325		QM	RESISTOR		R7313	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
4326		QM	RESISTOR		R7314	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4327		QM	RESISTOR		R7315	1-216-864-11	SHORT CHIP 0		
4328		QM	RESISTOR		R7316	1-216-864-11	SHORT CHIP 0		
4329		QM	RESISTOR		R7317	1-216-809-11	METAL CHIP 100 5% 1/10W		
4330		QM	RESISTOR		R7318	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4331		QM	RESISTOR		R7319	1-216-838-11	METAL CHIP 27K 5% 1/10W		
4332		QM	RESISTOR		R7320	1-216-864-11	SHORT CHIP 0		
4333		QM	RESISTOR		R7321	1-216-809-11	METAL CHIP 100 5% 1/10W		
4334		QM	RESISTOR		R7322	1-216-801-11	METAL CHIP 22 5% 1/10W		
4335		QM	RESISTOR		R7324	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4336		QM	RESISTOR		R7326	1-216-809-11	METAL CHIP 100 5% 1/10W		
4337		QM	RESISTOR		R7328	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4338		QM	RESISTOR		R7329	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
4339		QM	RESISTOR		R7330	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
4340		QM	RESISTOR		R7332	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4341		QM	RESISTOR		R7333	1-216-864-11	SHORT CHIP 0		
4342		QM	RESISTOR		R7335	1-216-801-11	METAL CHIP 22 5% 1/10W		
4343		QM	RESISTOR		R7336	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4344		QM	RESISTOR		R7337	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4345		QM	RESISTOR		R7338	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4346		QM	RESISTOR		R7339	1-216-809-11	METAL CHIP 100 5% 1/10W		
4347		QM	RESISTOR		R7340	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4348		QM	RESISTOR		R7342	1-216-801-11	METAL CHIP 22 5% 1/10W		
4349		QM	RESISTOR		R7343	1-216-801-11	METAL CHIP 22 5% 1/10W		
4350		QM	RESISTOR		R7345	1-216-864-11	SHORT CHIP 0		
4351		QM	RESISTOR		R7346	1-216-864-11	SHORT CHIP 0		
4352		QM	RESISTOR		R7347	1-216-864-11	SHORT CHIP 0		
4353		QM	RESISTOR		R7348	1-216-864-11	SHORT CHIP 0		
4354		QM	RESISTOR		R7349	1-216-864-11	SHORT CHIP 0		
4355		QM	RESISTOR		R7350	1-216-864-11	SHORT CHIP 0		
4356		QM	RESISTOR		R7351	1-216-864-11	SHORT CHIP 0		
4357		QM	RESISTOR		R7352	1-216-864-11	SHORT CHIP 0		
4358		QM	RESISTOR		R7353	1-216-864-11	SHORT CHIP 0		
4359		QM	RESISTOR		R7354	1-216-864-11	SHORT CHIP 0		
4360		QM	RESISTOR		R7355	1-216-801-11	METAL CHIP 22 5% 1/10W		
4361		QM	RESISTOR		R7356	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4362		QM	RESISTOR		R7357	1-216-801-11	METAL CHIP 22 5% 1/10W		
4363		QM	RESISTOR		R7358	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4364		QM	RESISTOR		R7359	1-216-864-11	SHORT CHIP 0		
4365		QM	RESISTOR		R7360	1-216-864-11	SHORT CHIP 0		
4366		QM	RESISTOR		R7361	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4367		QM	RESISTOR		R7363	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4368		QM	RESISTOR		R7364	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4369		QM	RESISTOR		R7365	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4370		QM	RESISTOR		R7366	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4371		QM	RESISTOR		R7368	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4372		QM	RESISTOR		R7370	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4373		QM	RESISTOR		R7374	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4374		QM	RESISTOR		R7375	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4375		QM	RESISTOR		R7378	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4376		QM	RESISTOR		R7379	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4377		QM	RESISTOR		R7381	1-216-864-11	SHORT CHIP 0		
4378		QM	RESISTOR		R7382	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4379		QM	RESISTOR		R7384	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4380		QM	RESISTOR		R7385	1-216-845-11	METAL CHIP 100K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4381		QM	RESISTOR		R7386	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4382		QM	RESISTOR		R7387	1-216-801-11	METAL CHIP 22 5% 1/10W		
4383		QM	RESISTOR		R7388	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4384		QM	RESISTOR		R7389	1-216-809-11	METAL CHIP 100 5% 1/10W		
4385		QM	RESISTOR		R7390	1-216-809-11	METAL CHIP 100 5% 1/10W		
4386		QM	RESISTOR		R7391	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4387		QM	RESISTOR		R7392	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4388		QM	RESISTOR		R7393	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4389		QM	RESISTOR		R7400	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4390		QM	RESISTOR		R7401	1-218-667-11	METAL CHIP 91 0.5% 1/10W		
4391		QM	RESISTOR		R7402	1-218-667-11	METAL CHIP 91 0.5% 1/10W		
4392		QM	RESISTOR		R7403	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4393		QM	RESISTOR		R7404	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4394		QM	RESISTOR		R7405	1-216-801-11	METAL CHIP 22 5% 1/10W		
4395		QM	RESISTOR		R7406	1-216-801-11	METAL CHIP 22 5% 1/10W		
4396		QM	RESISTOR		R7407	1-216-801-11	METAL CHIP 22 5% 1/10W		
4397		QM	RESISTOR		R7408	1-216-801-11	METAL CHIP 22 5% 1/10W		
4398		QM	RESISTOR		R7410	1-216-801-11	METAL CHIP 22 5% 1/10W		
4399		QM	RESISTOR		R7411	1-216-801-11	METAL CHIP 22 5% 1/10W		
4400		QM	RESISTOR		R7413	1-216-803-11	METAL CHIP 33 5% 1/10W		
4401		QM	RESISTOR		R7414	1-216-803-11	METAL CHIP 33 5% 1/10W		
4402		QM	RESISTOR		R7415	1-216-803-11	METAL CHIP 33 5% 1/10W		
4403		QM	RESISTOR		R7416	1-216-803-11	METAL CHIP 33 5% 1/10W		
4404		QM	RESISTOR		R7417	1-216-803-11	METAL CHIP 33 5% 1/10W		
4405		QM	RESISTOR		R7418	1-216-803-11	METAL CHIP 33 5% 1/10W		
4406		QM	RESISTOR		R7419	1-216-803-11	METAL CHIP 33 5% 1/10W		
4407		QM	RESISTOR		R7420	1-216-803-11	METAL CHIP 33 5% 1/10W		
4408		QM	RESISTOR		R7421	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4409		QM	RESISTOR		R7422	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4410		QM	RESISTOR		R7423	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4411		QM	RESISTOR		R7424	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4412		QM	RESISTOR		R7425	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4413		QM	RESISTOR		R7426	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4414		QM	RESISTOR		R7427	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4415		QM	RESISTOR		R7428	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4416		QM	RESISTOR		R7429	1-216-809-11	METAL CHIP 100 5% 1/10W		
4417		QM	RESISTOR		R7430	1-216-809-11	METAL CHIP 100 5% 1/10W		
4418		QM	RESISTOR		R7431	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4419		QM	RESISTOR		R7432	1-216-864-11	SHORT CHIP 0		
4420		QM	RESISTOR		R7433	1-216-864-11	SHORT CHIP 0		
4421		QM	RESISTOR		R7434	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4422		QM	RESISTOR		R7435	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4423		QM	RESISTOR		R7436	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4424		QM	RESISTOR		R7437	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4425		QM	RESISTOR		R7438	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4426		QM	RESISTOR		R7439	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4427		QM	RESISTOR		R7440	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4428		QM	RESISTOR		R7441	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4429		QM	RESISTOR		R7442	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4430		QM	RESISTOR		R7443	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4431		QM	RESISTOR		R7444	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4432		QM	RESISTOR		R7445	1-216-864-11	SHORT CHIP 0		
4433		QM	RESISTOR		R7448	1-216-864-11	SHORT CHIP 0		
4434		QM	RESISTOR		R7451	1-216-864-11	SHORT CHIP 0		
4435		QM	RESISTOR		R7452	1-216-801-11	METAL CHIP 22 5% 1/10W		
4436		QM	RESISTOR		R7453	1-216-801-11	METAL CHIP 22 5% 1/10W		
4437		QM	RESISTOR		R7454	1-216-864-11	SHORT CHIP 0		
4438		QM	RESISTOR		R7455	1-216-809-11	METAL CHIP 100 5% 1/10W		
4439		QM	RESISTOR		R7456	1-216-801-11	METAL CHIP 22 5% 1/10W		
4440		QM	RESISTOR		R7457	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4441		QM	RESISTOR		R7458	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4442		QM	RESISTOR		R7459	1-216-801-11	METAL CHIP 22 5% 1/10W		
4443		QM	RESISTOR		R7460	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4444		QM	RESISTOR		R7461	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4445		QM	RESISTOR		R7462	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
4446		QM	RESISTOR		R7463	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
4447		QM	RESISTOR		R7464	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4448		QM	RESISTOR		R7465	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4449		QM	RESISTOR		R7466	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4450		QM	RESISTOR		R7468	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4451		QM	RESISTOR		R7469	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4452		QM	RESISTOR		R7470	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4453		QM	RESISTOR		R7471	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4454		QM	RESISTOR		R7472	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4455		QM	RESISTOR		R7473	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4456		QM	RESISTOR		R7474	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4457		QM	RESISTOR		R7475	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4458		QM	RESISTOR		R7476	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4459		QM	RESISTOR		R7477	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4460		QM	RESISTOR		R7478	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4461		QM	RESISTOR		R7479	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4462		QM	RESISTOR		R7480	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4463		QM	RESISTOR		R7481	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4464		QM	RESISTOR		R7482	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4465		QM	RESISTOR		R7483	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4466		QM	RESISTOR		R7484	1-216-850-11	METAL CHIP 270K 5% 1/10W		
4467		QM	RESISTOR		R7485	1-216-850-11	METAL CHIP 270K 5% 1/10W		
4468		QM	RESISTOR		R7486	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4469		QM	RESISTOR		R7487	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4470		QM	RESISTOR		R7488	1-216-818-11	METAL CHIP 560 5% 1/10W		
4471		QM	RESISTOR		R7489	1-216-818-11	METAL CHIP 560 5% 1/10W		
4472		QM	RESISTOR		R7490	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4473		QM	RESISTOR		R7491	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4474		QM	RESISTOR		R7493	1-216-809-11	METAL CHIP 100 5% 1/10W		
4475		QM	RESISTOR		R7494	1-216-809-11	METAL CHIP 100 5% 1/10W		
4476		QM	RESISTOR		R7497	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4477		QM	RESISTOR		R7498	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4478		QM	RESISTOR		R7499	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4479		QM	RESISTOR		R7500	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4480		QM	RESISTOR		R7501	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4481		QM	RESISTOR		R7502	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4482		QM	RESISTOR		R7503	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4483		QM	RESISTOR		R7504	1-216-864-11	SHORT CHIP 0		
4484		QM	RESISTOR		R7505	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4485		QM	RESISTOR		R7506	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4486		QM	RESISTOR		R7507	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4487		QM	RESISTOR		R7508	1-216-864-11	SHORT CHIP 0		
4488		QM	RESISTOR		R7509	1-216-801-11	METAL CHIP 22 5% 1/10W		
4489		QM	RESISTOR		R7510	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4490		QM	RESISTOR		R7512	1-216-864-11	SHORT CHIP 0		
4491		QM	RESISTOR		R7513	1-216-864-11	SHORT CHIP 0		
4492		QM	RESISTOR		R7514	1-216-864-11	SHORT CHIP 0		
4493		QM	RESISTOR		R7515	1-216-864-11	SHORT CHIP 0		
4494		QM	RESISTOR		R7516	1-216-864-11	SHORT CHIP 0		
4495		QM	RESISTOR		R7517	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4496		QM	RESISTOR		R7518	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4497		QM	RESISTOR		R7519	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4498		QM	RESISTOR		R7520	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4499		QM	RESISTOR		R7543	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4500		QM	RESISTOR		R7546	1-216-864-11	SHORT CHIP 0		
4501		QM	RESISTOR		R7547	1-216-864-11	SHORT CHIP 0		
4502		QM	RESISTOR		R7549	1-216-801-11	METAL CHIP 22 5% 1/10W		
4503		QM	RESISTOR		R7550	1-216-801-11	METAL CHIP 22 5% 1/10W		
4504		QM	RESISTOR		R7551	1-216-801-11	METAL CHIP 22 5% 1/10W		
4505		QM	RESISTOR		R7552	1-216-801-11	METAL CHIP 22 5% 1/10W		
4506		QM	RESISTOR		R7554	1-216-809-11	METAL CHIP 100 5% 1/10W		
4507		QM	RESISTOR		R7556	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4508		QM	RESISTOR		R7557	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4509		QM	RESISTOR		R7558	1-216-809-11	METAL CHIP 100 5% 1/10W		
4510		QM	RESISTOR		R7559	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4511		QM	RESISTOR		R7562	1-216-801-11	METAL CHIP 22 5% 1/10W		
4512		QM	RESISTOR		R7563	1-216-801-11	METAL CHIP 22 5% 1/10W		
4513		QM	RESISTOR		R7564	1-216-864-11	SHORT CHIP 0		
4514		QM	RESISTOR		R7565	1-216-864-11	SHORT CHIP 0		
4515		QM	RESISTOR		R7566	1-216-864-11	SHORT CHIP 0		
4516		QM	RESISTOR		R7567	1-216-864-11	SHORT CHIP 0		
4517		QM	RESISTOR		R7568	1-216-864-11	SHORT CHIP 0		
4518		QM	RESISTOR		R7569	1-216-864-11	SHORT CHIP 0		
4519		QM	RESISTOR		R7570	1-216-864-11	SHORT CHIP 0		
4520		QM	RESISTOR		R7571	1-216-864-11	SHORT CHIP 0		
4521		QM	RESISTOR		R7572	1-216-864-11	SHORT CHIP 0		
4522		QM	RESISTOR		R7573	1-216-864-11	SHORT CHIP 0		
4523		QM	NETWORK		RB7300	1-234-370-21	RES, NETWORK 22X4 (1005)		
4524		QM	NETWORK		RB7301	1-234-370-21	RES, NETWORK 22X4 (1005)		
4525		QM	NETWORK		RB7302	1-234-370-21	RES, NETWORK 22X4 (1005)		
4526		QM	NETWORK		RB7303	1-234-370-21	RES, NETWORK 22X4 (1005)		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4527		QM	NETWORK		RB7304	1-234-370-21	RES, NETWORK 22X4 (1005)		
4528		QM	NETWORK		RB7305	1-234-370-21	RES, NETWORK 22X4 (1005)		
4529		QM	NETWORK		RB7306	1-234-370-21	RES, NETWORK 22X4 (1005)		
4530		QM	NETWORK		RB7307	1-234-370-21	RES, NETWORK 22X4 (1005)		
4531		QM	NETWORK		RB7308	1-236-908-11	RES, CHIP NETWORK 10K		
4532		QM	NETWORK		RB7315	1-236-908-11	RES, CHIP NETWORK 10K		
4533		QM	NETWORK		RB7316	1-236-908-11	RES, CHIP NETWORK 10K		
4534		QM	NETWORK		RB7317	1-234-370-21	RES, NETWORK 22X4 (1005)		
4535		QM	NETWORK		RB7318	1-234-370-21	RES, NETWORK 22X4 (1005)		
4536		QM	NETWORK		RB7319	1-234-370-21	RES, NETWORK 22X4 (1005)		
4537		QM	NETWORK		RB7320	1-234-370-21	RES, NETWORK 22X4 (1005)		
4538		QM	NETWORK		RB7321	1-234-370-21	RES, NETWORK 22X4 (1005)		
4539		QM	NETWORK		RB7322	1-234-370-21	RES, NETWORK 22X4 (1005)		
4540		QM	NETWORK		RB7323	1-234-370-21	RES, NETWORK 22X4 (1005)		
4541		QM	NETWORK		RB7324	1-234-370-21	RES, NETWORK 22X4 (1005)		
4542		QM	NETWORK		RB7325	1-234-370-21	RES, NETWORK 22X4 (1005)		
4543		QM	NETWORK		RB7326	1-234-370-21	RES, NETWORK 22X4 (1005)		
4544		QM	NETWORK		RB7327	1-234-370-21	RES, NETWORK 22X4 (1005)		
4545		QM	NETWORK		RB7328	1-234-370-21	RES, NETWORK 22X4 (1005)		
4546		QM	NETWORK		RB7329	1-242-963-21	RES, NETWORK 33X4 (1005)		
4547		QM	NETWORK		RB7330	1-242-963-21	RES, NETWORK 33X4 (1005)		
4548		QM	NETWORK		RB7331	1-242-963-21	RES, NETWORK 33X4 (1005)		
4549		QM	NETWORK		RB7332	1-242-963-21	RES, NETWORK 33X4 (1005)		
4550		QM	NETWORK		RB7333	1-242-963-21	RES, NETWORK 33X4 (1005)		
4551		QM	NETWORK		RB7334	1-242-963-21	RES, NETWORK 33X4 (1005)		
4552		QM	NETWORK		RB7335	1-242-963-21	RES, NETWORK 33X4 (1005)		
4553		QM	NETWORK		RB7336	1-242-963-21	RES, NETWORK 33X4 (1005)		
4554		QM	NETWORK		RB7337	1-242-963-21	RES, NETWORK 33X4 (1005)		
4555		QM	NETWORK		RB7338	1-242-963-21	RES, NETWORK 33X4 (1005)		
4556		QM	NETWORK		RB7339	1-242-963-21	RES, NETWORK 33X4 (1005)		
4557		QM	NETWORK		RB7340	1-242-963-21	RES, NETWORK 33X4 (1005)		
4558		QM	NETWORK		RB7341	1-242-963-21	RES, NETWORK 33X4 (1005)		
4559		QM	NETWORK		RB7342	1-242-963-21	RES, NETWORK 33X4 (1005)		
4560		QM	NETWORK		RB7343	1-242-963-21	RES, NETWORK 33X4 (1005)		
4561		QM	NETWORK		RB7344	1-242-963-21	RES, NETWORK 33X4 (1005)		
4562		QM	NETWORK		RB7345	1-234-370-21	RES, NETWORK 22X4 (1005)		
4563		QM	NETWORK		RB7346	1-234-370-21	RES, NETWORK 22X4 (1005)		
4564		QM	NETWORK		RB7347	1-234-370-21	RES, NETWORK 22X4 (1005)		
4565		QM	NETWORK		RB7348	1-234-370-21	RES, NETWORK 22X4 (1005)		
4566		QM	NETWORK		RB7349	1-234-370-21	RES, NETWORK 22X4 (1005)		
4567		QM	NETWORK		RB7350	1-234-370-21	RES, NETWORK 22X4 (1005)		
4568		QM	NETWORK		RB7351	1-234-370-21	RES, NETWORK 22X4 (1005)		
4569		QM	NETWORK		RB7352	1-234-370-21	RES, NETWORK 22X4 (1005)		
4570		QM	NETWORK		RB7353	1-234-370-21	RES, NETWORK 22X4 (1005)		
4571		QM	NETWORK		RB7354	1-234-370-21	RES, NETWORK 22X4 (1005)		
4572		QM	NETWORK		RB7355	1-234-370-21	RES, NETWORK 22X4 (1005)		
4573		QM	NETWORK		RB7356	1-234-370-21	RES, NETWORK 22X4 (1005)		
4574		QM	NETWORK		RB7357	1-234-370-21	RES, NETWORK 22X4 (1005)		
4575		QM	NETWORK		RB7360	1-234-370-21	RES, NETWORK 22X4 (1005)		
4576		QM	NETWORK		RB7361	1-234-370-21	RES, NETWORK 22X4 (1005)		
4577		QM	NETWORK		RB7362	1-234-370-21	RES, NETWORK 22X4 (1005)		
4578		QM	NETWORK		RB7363	1-234-370-21	RES, NETWORK 22X4 (1005)		
4579		QM	NETWORK		RB7364	1-234-370-21	RES, NETWORK 22X4 (1005)		
4580		QM	NETWORK		RB7365	1-234-370-21	RES, NETWORK 22X4 (1005)		
4581		QM	NETWORK		RB7366	1-234-370-21	RES, NETWORK 22X4 (1005)		
4582		QM	NETWORK		RB7367	1-234-370-21	RES, NETWORK 22X4 (1005)		
4583		QM	NETWORK		RB7368	1-234-370-21	RES, NETWORK 22X4 (1005)		
4584		QM	NETWORK		RB7369	1-234-370-21	RES, NETWORK 22X4 (1005)		
4585		QM	CRYSTAL		X7300	1-579-922-11	VIBRATOR, CRYSTAL (CHIP TYPE)		
4586		H1	CAPACITOR		C9504	1-163-031-91	CERAMIC CHIP 0.01UF 50V		
4587		H1	CAPACITOR		C9506	1-163-038-91	CERAMIC CHIP 0.1UF 25V		
4588		H1	CAPACITOR		C9507	1-163-038-91	CERAMIC CHIP 0.1UF 25V		
4589		H1	CONNECTOR	*	CN9503	1-760-388-11	CONNECTOR PIN (SMD) 9P		
4590		H1	DIODE		D9520	6-500-487-01	DIODE SMLU12D16W		
4591		H1	DIODE		D9521	8-719-081-23	DIODE L-53SRD-H		
4592		H1	DIODE		D9525	8-719-081-23	DIODE L-53SRD-H		
4593		H1	TRANSISTOR		Q9511	8-729-216-22	TRANSISTOR 2SA1162-G		
4594		H1	TRANSISTOR		Q9512	1-801-806-11	TR DTC144EKA		
4595		H1	TRANSISTOR		Q9513	1-801-806-11	TR DTC144EKA		
4596		H1	TRANSISTOR		Q9514	1-801-806-11	TR DTC144EKA		
4597		H1	TRANSISTOR		Q9515	8-729-216-22	TRANSISTOR 2SA1162-G		
4598		H1	TRANSISTOR		Q9516	1-801-806-11	TR DTC144EKA		
4599		H1	TRANSISTOR		Q9517	1-801-806-11	TR DTC144EKA		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4600		H1	RESISTOR		R9517	1-216-295-91	SHORT CHIP 0		
4601		H1	RESISTOR		R9518	1-216-049-11	RES-CHIP 1K 5% 1/10W		
4602		H1	RESISTOR		R9519	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4603		H1	RESISTOR		R9520	1-216-029-00	RES-CHIP 150 5% 1/10W		
4604		H1	RESISTOR		R9521	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4605		H1	RESISTOR		R9522	1-216-049-11	RES-CHIP 1K 5% 1/10W		
4606		H1	RESISTOR		R9523	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4607		H1	RESISTOR		R9524	1-216-033-00	RES-CHIP 220 5% 1/10W		
4608		H1	RESISTOR		R9525	1-216-041-00	RES-CHIP 470 5% 1/10W		
4609		H1	RESISTOR		R9526	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4610		H1	RESISTOR		R9527	1-216-041-00	RES-CHIP 470 5% 1/10W		
4611		H1	RESISTOR		R9529	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4612		H1	RESISTOR		R9530	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4613		H1	RESISTOR		R9533	1-216-046-00	RES-CHIP 750 5% 1/10W		
4614		H1	SWITCH		S9501	1-554-419-00	SWITCH, PUSH (1 KEY)		
4615		H2	CAPACITOR		C9602	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
4616		H2	CAPACITOR		C9603	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
4617		H2	CAPACITOR		C9604	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
4618		H2	CAPACITOR		C9605	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4619		H2	CAPACITOR		C9606	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4620		H2	CAPACITOR		C9801	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
4621		H2	CAPACITOR		C9802	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
4622		H2	CAPACITOR		C9803	1-163-031-91	CERAMIC CHIP 0.01UF 50V		
4623		H2	CAPACITOR		C9804	1-163-031-91	CERAMIC CHIP 0.01UF 50V		
4624		H2	CONNECTOR	*	CN9601	1-764-007-11	PIN, CONNECTOR (SMD) 12P		
4625		H2	CONNECTOR	*	CN9802	1-764-097-11	PIN, CONNECTOR (PC BOARD) 12P		
4626		H2	CONNECTOR	*	CN9803	1-760-388-11	CONNECTOR PIN (SMD) 9P		
4627		H2	DIODE		D9601	8-719-977-28	DIODE DTZ10B		
4628		H2	DIODE		D9603	8-719-977-28	DIODE DTZ10B		
4629		H2	DIODE		D9604	8-719-977-28	DIODE DTZ10B		
4630		H2	DIODE		D9605	8-719-977-28	DIODE DTZ10B		
4631		H2	DIODE		D9606	8-719-977-28	DIODE DTZ10B		
4632		H2	DIODE		D9607	8-719-977-28	DIODE DTZ10B		
4633		H2	DIODE		D9801	6-500-763-01	DIODE E1L49-AW0C2-01		
4634		H2	DIODE		D9802	6-500-763-01	DIODE E1L49-AW0C2-01		
4635		H2	DIODE		D9803	6-500-763-01	DIODE E1L49-AW0C2-01		
4636		H2	DIODE		D9804	6-500-763-01	DIODE E1L49-AW0C2-01		
4637		H2	DIODE		D9805	6-500-763-01	DIODE E1L49-AW0C2-01		
4638		H2	DIODE		D9806	6-500-763-01	DIODE E1L49-AW0C2-01		
4639		H2	DIODE		D9807	8-719-024-77	DIODE HN1D03FU-TE85L		
4640		H2	DIODE		D9809	8-719-069-55	DIODE UDVZSTE-175.6B		
4641		H2	DIODE		D9812	6-500-763-01	DIODE E1L49-AW0C2-01		
4642		H2	IC		IC9801	8-759-567-08	IC MB88141APF-ER		
4643		H2	JACK		J9601	1-694-980-31	TERMINAL BOARD (S TERMINAL+3P)		
4644		H2	TRANSISTOR		Q9801	1-801-806-11	TR DTC144EKA		
4645		H2	TRANSISTOR		Q9802	1-801-806-11	TR DTC144EKA		
4646		H2	TRANSISTOR		Q9803	1-801-806-11	TR DTC144EKA		
4647		H2	TRANSISTOR		Q9804	1-801-806-11	TR DTC144EKA		
4648		H2	TRANSISTOR		Q9805	1-801-806-11	TR DTC144EKA		
4649		H2	TRANSISTOR		Q9806	1-801-806-11	TR DTC144EKA		
4650		H2	TRANSISTOR		Q9807	1-801-806-11	TR DTC144EKA		
4651		H2	RESISTOR		R9601	1-216-029-00	RES-CHIP 150 5% 1/10W		
4652		H2	RESISTOR		R9602	1-216-029-00	RES-CHIP 150 5% 1/10W		
4653		H2	RESISTOR		R9603	1-216-029-00	RES-CHIP 150 5% 1/10W		
4654		H2	RESISTOR		R9604	1-216-105-91	RES-CHIP 220K 5% 1/10W		
4655		H2	RESISTOR		R9605	1-216-105-91	RES-CHIP 220K 5% 1/10W		
4656		H2	RESISTOR		R9606	1-216-029-00	RES-CHIP 150 5% 1/10W		
4657		H2	RESISTOR		R9607	1-216-029-00	RES-CHIP 150 5% 1/10W		
4658		H2	RESISTOR		R9608	1-216-029-00	RES-CHIP 150 5% 1/10W		
4659		H2	RESISTOR		R9802	1-216-025-11	RES-CHIP 100 5% 1/10W		
4660		H2	RESISTOR		R9803	1-216-025-11	RES-CHIP 100 5% 1/10W		
4661		H2	RESISTOR		R9804	1-216-025-11	RES-CHIP 100 5% 1/10W		
4662		H2	RESISTOR		R9805	1-216-295-91	SHORT CHIP 0		
4663		H2	RESISTOR		R9806	1-216-025-11	RES-CHIP 100 5% 1/10W		
4664		H2	RESISTOR		R9807	1-216-025-11	RES-CHIP 100 5% 1/10W		
4665		H2	RESISTOR		R9808	1-216-025-11	RES-CHIP 100 5% 1/10W		
4666		H2	RESISTOR		R9809	1-216-025-11	RES-CHIP 100 5% 1/10W		
4667		H2	RESISTOR		R9810	1-216-025-11	RES-CHIP 100 5% 1/10W		
4668		H2	RESISTOR		R9811	1-216-025-11	RES-CHIP 100 5% 1/10W		
4669		H2	RESISTOR		R9812	1-216-025-11	RES-CHIP 100 5% 1/10W		
4670		H2	RESISTOR		R9813	1-216-295-91	SHORT CHIP 0		
4671		H2	RESISTOR		R9816	1-216-295-91	SHORT CHIP 0		
4672		H3	CONNECTOR	*	CN9705	1-580-055-21	PIN, CONNECTOR (SMD) 2P		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4673		H3	RESISTOR		R9702	1-216-679-11	METAL CHIP 15K 0.5% 1/10W		
4674		H3	RESISTOR		R9704	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		
4675		H3	RESISTOR		R9706	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		
4676		H3	RESISTOR		R9708	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
4677		H3	RESISTOR		R9710	1-216-647-11	METAL CHIP 680 0.5% 1/10W		
4678		H3	SWITCH		S9702	1-572-921-11	SWITCH, KEY BOARD		
4679		H3	SWITCH		S9704	1-572-921-11	SWITCH, KEY BOARD		
4680		H3	SWITCH		S9706	1-572-921-11	SWITCH, KEY BOARD		
4681		H3	SWITCH		S9708	1-572-921-11	SWITCH, KEY BOARD		
4682		H3	SWITCH		S9710	1-572-921-11	SWITCH, KEY BOARD		
4683		H3	SWITCH		S9712	1-572-921-11	SWITCH, KEY BOARD		
4684		H4	CONNECTOR	*	CN9704	1-580-055-21	PIN, CONNECTOR (SMD) 2P		
4685		H4	CONNECTOR		CN9707	1-580-056-21	PIN, CONNECTOR (SMD) 3P		
4686		H4	RESISTOR		R9703	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		
4687		H4	RESISTOR		R9705	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		
4688		H4	RESISTOR		R9707	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
4689		H4	RESISTOR		R9709	1-216-647-11	METAL CHIP 680 0.5% 1/10W		
4690		H4	RESISTOR		R9711	1-216-643-11	METAL CHIP 470 0.5% 1/10W		
4691		H4	RESISTOR		R9712	1-216-643-11	METAL CHIP 470 0.5% 1/10W		
4692		H4	SWITCH		S9701	1-572-921-11	SWITCH, KEY BOARD		
4693		H4	SWITCH		S9703	1-572-921-11	SWITCH, KEY BOARD		
4694		H4	SWITCH		S9705	1-572-921-11	SWITCH, KEY BOARD		
4695		H4	SWITCH		S9707	1-572-921-11	SWITCH, KEY BOARD		
4696		H4	SWITCH		S9709	1-572-921-11	SWITCH, KEY BOARD		
4697		H4	SWITCH		S9711	1-572-921-11	SWITCH, KEY BOARD		
4698		H4	SWITCH		S9713	1-572-921-11	SWITCH, KEY BOARD		
4699		QH	CAPACITOR		C7203	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V		
4700		QH	CAPACITOR		C7204	1-162-911-11	CERAMIC CHIP 6PF 0.50PF 50V		
4701		QH	CAPACITOR		C7205	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4702		QH	CAPACITOR		C7206	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4703		QH	CAPACITOR		C7207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4704		QH	CAPACITOR		C7208	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4705		QH	CAPACITOR		C7209	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4706		QH	CAPACITOR		C7210	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4707		QH	CAPACITOR		C7211	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
4708		QH	CAPACITOR		C7212	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4709		QH	CAPACITOR		C7213	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4710		QH	CAPACITOR		C7215	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4711		QH	CAPACITOR		C7216	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4712		QH	CAPACITOR		C7217	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4713		QH	CAPACITOR		C7218	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4714		QH	CAPACITOR		C7219	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4715		QH	CAPACITOR		C7220	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4716		QH	CAPACITOR		C7221	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4717		QH	CAPACITOR		C7224	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4718		QH	CONNECTOR	*	CN7201	1-784-010-11	CONNECTOR, USB (B)		
4719		QH	CONNECTOR		CN7202	1-695-915-11	TAB (CONTACT)		
4720		QH	CONNECTOR	*	CN7204	1-816-402-12	CONNECTOR, MEMORY STICK		
4721		QH	DIODE		D7201	8-719-800-76	DIODE 1SS226		
4722		QH	DIODE		D7202	8-719-083-58	DIODE UDVZSTE-173.9B		
4723		QH	DIODE		D7210	6-500-182-01	DIODE L1503CB/ID		
4724		QH	DIODE		D7212	8-719-083-58	DIODE UDVZSTE-173.9B		
4725		QH	FERRITE BEAD		FB7201	1-414-921-11	FERRITE 0UH		
4726		QH	FERRITE BEAD		FB7202	1-414-921-11	FERRITE 0UH		
4727		QH	FERRITE BEAD		FB7203	1-414-921-11	FERRITE 0UH		
4728		QH	IC		IC7201	6-703-076-01	IC XC6204B332MR		
4729		QH	IC		IC7202	6-704-548-01	IC 90C36LC1B		
4730		QH	IC		IC7203	6-704-067-01	IC M24128-BWMN6T(A)		
4731		QH	COIL		L7201	1-414-394-11	INDUCTOR 2.2UH		
4732		QH	TRANSISTOR		Q7201	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
4733		QH	TRANSISTOR		Q7202	8-729-422-27	TRANSISTOR 2SD601A-Q		
4734		QH	RESISTOR		R7201	1-216-864-11	SHORT CHIP 0		
4735		QH	RESISTOR		R7202	1-414-228-11	FERRITE 0UH		
4736		QH	RESISTOR		R7203	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4737		QH	RESISTOR		R7204	1-216-809-11	METAL CHIP 100 5% 1/10W		
4738		QH	RESISTOR		R7206	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4739		QH	RESISTOR		R7209	1-414-228-11	FERRITE 0UH		
4740		QH	RESISTOR		R7210	1-216-803-11	METAL CHIP 33 5% 1/10W		
4741		QH	RESISTOR		R7211	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4742		QH	RESISTOR		R7212	1-216-803-11	METAL CHIP 33 5% 1/10W		
4743		QH	RESISTOR		R7214	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
4744		QH	RESISTOR		R7215	1-414-228-11	FERRITE 0UH		
4745		QH	RESISTOR		R7216	1-216-821-11	METAL CHIP 1K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4746		QH	RESISTOR		R7217	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4747		QH	RESISTOR		R7218	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4748		QH	RESISTOR		R7219	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4749		QH	RESISTOR		R7221	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4750		QH	RESISTOR		R7222	1-216-811-11	METAL CHIP 150 5% 1/10W		
4751		QH	RESISTOR		R7223	1-216-809-11	METAL CHIP 100 5% 1/10W		
4752		QH	RESISTOR		R7224	1-216-809-11	METAL CHIP 100 5% 1/10W		
4753		QH	RESISTOR		R7225	1-216-809-11	METAL CHIP 100 5% 1/10W		
4754		QH	RESISTOR		R7226	1-216-864-11	SHORT CHIP 0		
4755		QH	RESISTOR		R7227	1-216-864-11	SHORT CHIP 0		
4756		QH	RESISTOR		R7228	1-216-864-11	SHORT CHIP 0		
4757		QH	RESISTOR		R7229	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4758		QH	RESISTOR		R7231	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4759		QH	CRYSTAL		X7201	1-760-965-21	VIBRATOR, CRYSTAL		
4760		UD	CAPACITOR		C7000	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4761		UD	CAPACITOR		C7001	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4762		UD	CAPACITOR		C7002	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4763		UD	CAPACITOR		C7003	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4764		UD	CAPACITOR		C7004	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4765		UD	CAPACITOR		C7005	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4766		UD	CAPACITOR		C7006	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4767		UD	CAPACITOR		C7007	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4768		UD	CAPACITOR		C7008	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4769		UD	CAPACITOR		C7009	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4770		UD	CAPACITOR		C7010	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4771		UD	CAPACITOR		C7011	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4772		UD	CAPACITOR		C7012	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4773		UD	CAPACITOR		C7013	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4774		UD	CAPACITOR		C7014	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4775		UD	CAPACITOR		C7016	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4776		UD	CAPACITOR		C7017	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4777		UD	CAPACITOR		C7018	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4778		UD	CAPACITOR		C7020	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4779		UD	CAPACITOR		C7022	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4780		UD	CAPACITOR		C7023	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4781		UD	CAPACITOR		C7025	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4782		UD	CAPACITOR		C7026	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
4783		UD	CAPACITOR		C7027	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
4784		UD	CAPACITOR		C7028	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4785		UD	CAPACITOR		C7030	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4786		UD	CAPACITOR		C7031	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4787		UD	CAPACITOR		C7032	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4788		UD	CAPACITOR		C7033	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4789		UD	CAPACITOR		C7034	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4790		UD	CAPACITOR		C7035	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4791		UD	CAPACITOR		C7036	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4792		UD	CAPACITOR		C7037	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4793		UD	CAPACITOR		C7038	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4794		UD	CAPACITOR		C7039	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4795		UD	CAPACITOR		C7040	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4796		UD	CAPACITOR		C7041	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4797		UD	CAPACITOR		C7042	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4798		UD	CAPACITOR		C7043	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4799		UD	CAPACITOR		C7048	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4800		UD	CAPACITOR		C7050	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
4801		UD	CAPACITOR		C7051	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
4802		UD	CAPACITOR		C7052	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4803		UD	CAPACITOR		C7053	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4804		UD	CAPACITOR		C7054	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4805		UD	CAPACITOR		C7055	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4806		UD	CAPACITOR		C7056	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4807		UD	CAPACITOR		C7057	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4808		UD	CAPACITOR		C7058	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
4809		UD	CAPACITOR		C7059	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
4810		UD	CAPACITOR		C7060	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4811		UD	CAPACITOR		C7061	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4812		UD	CAPACITOR		C7062	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4813		UD	CAPACITOR		C7063	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4814		UD	CAPACITOR		C7064	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4815		UD	CAPACITOR		C7065	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4816		UD	CAPACITOR		C7066	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4817		UD	CAPACITOR		C7067	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4818		UD	CAPACITOR		C7068	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4819		UD	CAPACITOR		C7069	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
4820		UD	CAPACITOR		C7070	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4821		UD	CAPACITOR		C7071	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4822		UD	CAPACITOR		C7072	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4823		UD	CAPACITOR		C7073	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4824		UD	CAPACITOR		C7074	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4825		UD	CAPACITOR		C7075	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4826		UD	CAPACITOR		C7076	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4827		UD	CAPACITOR		C7079	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4828		UD	CAPACITOR		C7080	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4829		UD	CAPACITOR		C7081	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4830		UD	CAPACITOR		C7082	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4831		UD	CAPACITOR		C7083	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4832		UD	CAPACITOR		C7085	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4833		UD	CAPACITOR		C7086	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4834		UD	CAPACITOR		C7087	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4835		UD	CAPACITOR		C7088	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4836		UD	CONNECTOR		CN7001	1-816-228-11	CONNECTOR, DVI		
4837		UD	CONNECTOR	*	CN7002	1-695-208-21	PIN, CONNECTOR (PC BOARD) 7P		
4838		UD	CONNECTOR	*	CN7003	1-695-890-21	PIN, CONNECTOR (PC BOARD) 12P		
4839		UD	DIODE		D7000	8-719-069-55	DIODE UDVZSTE-175.6B		
4840		UD	DIODE		D7001	8-719-069-55	DIODE UDVZSTE-175.6B		
4841		UD	DIODE		D7002	8-719-069-55	DIODE UDVZSTE-175.6B		
4842		UD	DIODE		D7003	8-719-069-55	DIODE UDVZSTE-175.6B		
4843		UD	DIODE		D7004	8-719-069-55	DIODE UDVZSTE-175.6B		
4844		UD	DIODE		D7005	8-719-069-55	DIODE UDVZSTE-175.6B		
4845		UD	DIODE		D7006	8-719-914-43	DIODE DAN202K		
4846		UD	DIODE		D7007	8-719-977-28	DIODE DTZ10B		
4847		UD	DIODE		D7008	8-719-977-28	DIODE DTZ10B		
4848		UD	FERRITE BEAD		FB7000	1-414-760-21	FERRITE 0UH		
4849		UD	FERRITE BEAD		FB7001	1-414-760-21	FERRITE 0UH		
4850		UD	FERRITE BEAD		FB7002	1-414-760-21	FERRITE 0UH		
4851		UD	FERRITE BEAD		FB7003	1-414-760-21	FERRITE 0UH		
4852		UD	FERRITE BEAD		FB7004	1-414-760-21	FERRITE 0UH		
4853		UD	FERRITE BEAD		FB7005	1-414-760-21	FERRITE 0UH		
4854		UD	FERRITE BEAD		FB7006	1-469-836-21	FERRITE 0UH		
4855		UD	FERRITE BEAD		FB7007	1-469-836-21	FERRITE 0UH		
4856		UD	FERRITE BEAD		FB7008	1-469-836-21	FERRITE 0UH		
4857		UD	FILTER		FL7000	1-234-560-21	FILTER, LOW PASS		
4858		UD	FILTER		FL7001	1-234-559-21	FILTER, LOW PASS		
4859		UD	FILTER		FL7002	1-234-559-21	FILTER, LOW PASS		
4860		UD	FILTER		FL7003	1-400-087-21	FILTER, EMI REMOVAL (SMD)		
4861		UD	IC		IC7000	6-702-170-01	IC PACDN006S		
4862		UD	IC		IC7001	6-702-170-01	IC PACDN006S		
4863		UD	IC		IC7002	6-802-346-01	IC ST72631K4M1/NNLTR		
4864		UD	IC		IC7003	6-702-170-01	IC PACDN006S		
4865		UD	IC		IC7004	6-702-080-01	IC GM7030-H		
4866		UD	IC		IC7005	6-704-001-01	IC BR24L02F-WE2		
4867		UD	IC		IC7006	6-704-004-01	IC BR24L16F-WE2		
4868		UD	IC		IC7007	8-749-015-18	IC PQ07VZ012ZP		
4869		UD	IC		IC7008	8-749-015-18	IC PQ07VZ012ZP		
4870		UD	JACK		J7001	1-794-623-11	JACK, PIN 2P		
4871		UD	COIL		L7000	1-469-856-21	INDUCTOR 10UH		
4872		UD	COIL		L7001	1-412-058-11	INDUCTOR 10UH		
4873		UD	COIL		L7002	1-469-856-21	INDUCTOR 10UH		
4874		UD	RESISTOR		R7001	1-216-813-11	METAL CHIP 220 5% 1/10W		
4875		UD	RESISTOR		R7002	1-216-813-11	METAL CHIP 220 5% 1/10W		
4876		UD	RESISTOR		R7006	1-216-803-11	METAL CHIP 33 5% 1/10W		
4877		UD	RESISTOR		R7009	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4878		UD	RESISTOR		R7010	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4879		UD	RESISTOR		R7014	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4880		UD	RESISTOR		R7015	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4881		UD	RESISTOR		R7016	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4882		UD	RESISTOR		R7017	1-216-803-11	METAL CHIP 33 5% 1/10W		
4883		UD	RESISTOR		R7019	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4884		UD	RESISTOR		R7020	1-216-864-11	SHORT CHIP 0		
4885		UD	RESISTOR		R7022	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4886		UD	RESISTOR		R7023	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4887		UD	RESISTOR		R7024	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4888		UD	RESISTOR		R7025	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4889		UD	RESISTOR		R7026	1-216-864-11	SHORT CHIP 0		
4890		UD	RESISTOR		R7027	1-216-864-11	SHORT CHIP 0		
4891		UD	RESISTOR		R7028	1-216-864-11	SHORT CHIP 0		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4892		UD	RESISTOR		R7029	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4893		UD	RESISTOR		R7030	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4894		UD	RESISTOR		R7031	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4895		UD	RESISTOR		R7032	1-414-760-21	FERRITE 0UH		
4896		UD	RESISTOR		R7033	1-414-760-21	FERRITE 0UH		
4897		UD	RESISTOR		R7034	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4898		UD	RESISTOR		R7035	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4899		UD	RESISTOR		R7036	1-216-805-11	METAL CHIP 47 5% 1/10W		
4900		UD	RESISTOR		R7037	1-216-805-11	METAL CHIP 47 5% 1/10W		
4901		UD	RESISTOR		R7038	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4902		UD	RESISTOR		R7039	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
4903		UD	RESISTOR		R7040	1-216-806-11	METAL CHIP 56 5% 1/10W		
4904		UD	RESISTOR		R7041	1-216-806-11	METAL CHIP 56 5% 1/10W		
4905		UD	RESISTOR		R7042	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4906		UD	RESISTOR		R7043	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
4907		UD	RESISTOR		R7044	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4908		UD	RESISTOR		R7046	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4909		UD	RESISTOR		R7048	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4910		UD	RESISTOR		R7050	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4911		UD	RESISTOR		R7052	1-216-805-11	METAL CHIP 47 5% 1/10W		
4912		UD	RESISTOR		R7053	1-216-805-11	METAL CHIP 47 5% 1/10W		
4913		UD	RESISTOR		R7055	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4914		UD	RESISTOR		R7056	1-216-805-11	METAL CHIP 47 5% 1/10W		
4915		UD	RESISTOR		R7057	1-216-805-11	METAL CHIP 47 5% 1/10W		
4916		UD	RESISTOR		R7058	1-216-805-11	METAL CHIP 47 5% 1/10W		
4917		UD	RESISTOR		R7059	1-216-864-11	SHORT CHIP 0		
4918		UD	RESISTOR		R7061	1-216-864-11	SHORT CHIP 0		
4919		UD	RESISTOR		R7064	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4920		UD	RESISTOR		R7065	1-216-864-11	SHORT CHIP 0		
4921		UD	RESISTOR		R7066	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4922		UD	RESISTOR		R7067	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4923		UD	RESISTOR		R7068	1-216-864-11	SHORT CHIP 0		
4924		UD	RESISTOR		R7070	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4925		UD	RESISTOR		R7071	1-414-760-21	FERRITE 0UH		
4926		UD	RESISTOR		R7072	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
4927		UD	RESISTOR		R7073	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
4928		UD	RESISTOR		R7074	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
4929		UD	RESISTOR		R7075	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
4930		UD	RESISTOR		R7076	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
4931		UD	RESISTOR		R7077	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
4932		UD	RESISTOR		R7079	1-216-864-11	SHORT CHIP 0		
4933		UD	RESISTOR		R7081	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
4934		UD	RESISTOR		R7083	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
4935		UD	RESISTOR		R7084	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4936		UD	RESISTOR		R7085	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4937		UD	RESISTOR		R7086	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
4938		UD	RESISTOR		R7087	1-218-680-11	METAL CHIP 330 0.5% 1/10W		
4939		UD	RESISTOR		R7088	1-218-680-11	METAL CHIP 330 0.5% 1/10W		
4940		UD	RESISTOR		R7089	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4941		UD	RESISTOR		R7090	1-218-852-11	METAL CHIP 1.6K 0.5% 1/10W		
4942		UD	RESISTOR		R7091	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
4943		UD	RESISTOR		R7092	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
4944		UD	RESISTOR		R7093	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
4945		UD	RESISTOR		R7094	1-216-849-11	METAL CHIP 220K 5% 1/10W		
4946		UD	RESISTOR		R7095	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4947		UD	RESISTOR		R7096	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4948		UD	RESISTOR		R7097	1-216-849-11	METAL CHIP 220K 5% 1/10W		
4949		UD	CRYSTAL		X7000	1-795-568-21	VIBRATOR, CRYSTAL		
4950		UD	CRYSTAL		X7001	1-795-567-21	VIBRATOR, CRYSTAL		
4951	M	CAPACITOR			C4000	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4952	M	CAPACITOR			C4001	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4953	M	CAPACITOR			C4003	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
4954	M	CAPACITOR			C4004	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
4955	M	CAPACITOR			C4005	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4956	M	CAPACITOR			C4006	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4957	M	CAPACITOR			C4007	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4958	M	CAPACITOR			C4008	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4959	M	CAPACITOR			C4009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4960	M	CAPACITOR			C4010	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4961	M	CAPACITOR			C4011	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
4962	M	CAPACITOR			C4012	1-128-416-11	ELECT CHIP 100UF 20.00% 16V		
4963	M	CAPACITOR			C4013	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4964	M	CAPACITOR			C4014	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4965		M	CAPACITOR		C4015	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4966		M	CAPACITOR		C4016	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4967		M	CAPACITOR		C4017	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4968		M	CAPACITOR		C4018	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4969		M	CAPACITOR		C4019	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
4970		M	CAPACITOR		C4020	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
4971		M	CAPACITOR		C4021	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4972		M	CAPACITOR		C4022	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4973		M	CAPACITOR		C4023	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4974		M	CAPACITOR		C4024	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
4975		M	CAPACITOR		C4025	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4976		M	CAPACITOR		C4026	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4977		M	CAPACITOR		C4027	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4978		M	CAPACITOR		C4028	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4979		M	CAPACITOR		C4029	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
4980		M	CAPACITOR		C4031	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4981		M	CAPACITOR		C4032	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4982		M	CAPACITOR		C4033	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4983		M	CAPACITOR		C4034	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4984		M	CAPACITOR		C4035	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4985		M	CAPACITOR		C4036	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4986		M	CAPACITOR		C4037	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4987		M	CAPACITOR		C4038	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
4988		M	CAPACITOR		C4039	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4989		M	CAPACITOR		C4040	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4990		M	CAPACITOR		C4041	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4991		M	CAPACITOR		C4042	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4992		M	CAPACITOR		C4043	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4993		M	CAPACITOR		C4044	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4994		M	CAPACITOR		C4045	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4995		M	CAPACITOR		C4046	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4996		M	CAPACITOR		C4047	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4997		M	CAPACITOR		C4048	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4998		M	CAPACITOR		C4049	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4999		M	CAPACITOR		C4050	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5000		M	CAPACITOR		C4051	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5001		M	CAPACITOR		C4052	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5002		M	CAPACITOR		C4053	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5003		M	CAPACITOR		C4054	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5004		M	CAPACITOR		C4055	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5005		M	CAPACITOR		C4056	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5006		M	CAPACITOR		C4057	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5007		M	CAPACITOR		C4058	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5008		M	CAPACITOR		C4059	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5009		M	CAPACITOR		C4060	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5010		M	CAPACITOR		C4061	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5011		M	CAPACITOR		C4062	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5012		M	CAPACITOR		C4063	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5013		M	CAPACITOR		C4064	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5014		M	CAPACITOR		C4065	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5015		M	CAPACITOR		C4100	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5016		M	CAPACITOR		C4101	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5017		M	CAPACITOR		C4102	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5018		M	CAPACITOR		C4103	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5019		M	CAPACITOR		C4104	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5020		M	CAPACITOR		C4105	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5021		M	CAPACITOR		C4106	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5022		M	CAPACITOR		C4108	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5023		M	CAPACITOR		C4109	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5024		M	CAPACITOR		C4110	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5025		M	CAPACITOR		C4111	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5026		M	CAPACITOR		C4200	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5027		M	CAPACITOR		C4201	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5028		M	CAPACITOR		C4202	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5029		M	CAPACITOR		C4203	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
5030		M	CAPACITOR		C4204	1-124-779-00	ELECT CHIP 100UF 20.00% 16V		
5031		M	CAPACITOR		C4205	1-124-779-00	ELECT CHIP 100UF 20.00% 16V		
5032		M	CAPACITOR		C4206	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5033		M	CAPACITOR		C4207	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5034		M	CAPACITOR		C4208	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5035		M	CAPACITOR		C4209	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5036		M	CAPACITOR		C4210	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5037		M	CAPACITOR		C4211	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5038		M	CAPACITOR		C4212	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5039		M	CAPACITOR		C4213	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5040		M	CAPACITOR		C4214	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5041		M	CAPACITOR		C4215	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5042		M	CAPACITOR		C4216	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5043		M	CAPACITOR		C4217	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5044		M	CAPACITOR		C4218	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5045		M	CAPACITOR		C4219	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5046		M	CAPACITOR		C4220	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5047		M	CAPACITOR		C4221	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5048		M	CAPACITOR		C4222	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5049		M	CAPACITOR		C4223	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5050		M	CAPACITOR		C4224	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5051		M	CAPACITOR		C4225	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5052		M	CAPACITOR		C4226	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5053		M	CAPACITOR		C4227	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5054		M	CAPACITOR		C4228	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
5055		M	CAPACITOR		C4229	1-162-920-11	CERAMIC CHIP 27PF 5.00% 50V		
5056		M	CAPACITOR		C4230	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5057		M	CAPACITOR		C4231	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5058		M	CAPACITOR		C4232	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5059		M	CAPACITOR		C4234	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
5060		M	CAPACITOR		C4235	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5061		M	CAPACITOR		C4236	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5062		M	CAPACITOR		C4237	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5063		M	CAPACITOR		C4238	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5064		M	CAPACITOR		C4239	1-164-392-11	CERAMIC CHIP 390PF 5.00% 50V		
5065		M	CAPACITOR		C4302	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5066		M	CAPACITOR		C4304	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5067		M	CAPACITOR		C4305	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5068		M	CAPACITOR		C4306	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5069		M	CAPACITOR		C4307	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5070		M	CAPACITOR		C4308	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5071		M	CAPACITOR		C4309	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5072		M	CAPACITOR		C4312	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5073		M	CAPACITOR		C4313	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5074		M	CAPACITOR		C4314	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5075		M	CAPACITOR		C4315	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5076		M	CAPACITOR		C4316	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5077		M	CAPACITOR		C4400	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5078		M	CAPACITOR		C4401	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5079		M	CAPACITOR		C4402	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5080		M	CAPACITOR		C4403	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5081		M	CAPACITOR		C4404	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5082		M	CAPACITOR		C4406	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5083		M	CAPACITOR		C4407	1-104-607-11	ELECT CHIP 47UF 20.00% 16V		
5084		M	CAPACITOR		C4409	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5085		M	CAPACITOR		C4410	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5086		M	CAPACITOR		C4411	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5087		M	CAPACITOR		C4412	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5088		M	CAPACITOR		C4414	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5089		M	CAPACITOR		C4415	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5090		M	CAPACITOR		C4416	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
5091		M	CAPACITOR		C4417	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5092		M	CAPACITOR		C4418	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5093		M	CAPACITOR		C4419	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5094		M	CAPACITOR		C4420	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
5095		M	CAPACITOR		C4421	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5096		M	CAPACITOR		C4422	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
5097		M	CAPACITOR		C4423	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5098		M	CAPACITOR		C4426	1-162-912-11	CERAMIC CHIP 7PF 0.50PF 50V		
5099		M	CAPACITOR		C4427	1-162-912-11	CERAMIC CHIP 7PF 0.50PF 50V		
5100		M	CAPACITOR		C4428	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
5101		M	CAPACITOR		C4430	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5102		M	CAPACITOR		C4432	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5103		M	CAPACITOR		C4433	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5104		M	CAPACITOR		C4434	1-115-156-11	CERAMIC CHIP 1UF 10V		
5105		M	CAPACITOR		C4435	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5106		M	CAPACITOR		C4442	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
5107		M	CAPACITOR		C4445	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
5108		M	CAPACITOR		C4501	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5109		M	CAPACITOR		C4502	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5110		M	CAPACITOR		C4601	1-164-156-11	CERAMIC CHIP 0.1UF 25V		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5111		M	CAPACITOR		C4602	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5112		M	CONNECTOR		CN4100	1-817-120-11	CONNECTOR, DVI-D		
5113		M	CONNECTOR		CN4300	1-817-112-11	HALF PITCH CONNECTOR (26PIN)		
5114		M	CONNECTOR		CN4301	1-784-210-21	CONNECTOR 7P		
5115		M	CONNECTOR	*	CN4401	1-695-210-21	PIN, CONNECTOR (PC BOARD) 15P		
5116		M	CONNECTOR		CN4403	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
5117		M	CONNECTOR		CN4406	1-816-466-21	PIN, CONNECTOR 10P		
5118		M	CONNECTOR		CN4501	1-580-057-11	PIN, CONNECTOR (SMD) 4P		
5119		M	DIODE		D4000	8-719-050-37	DIODE M1MA152WA-T1		
5120		M	DIODE		D4001	8-719-050-38	DIODE M1MA152WK-T1		
5121		M	DIODE		D4100	8-719-024-77	DIODE HN1D03FU-TE85L		
5122		M	DIODE		D4101	8-719-024-77	DIODE HN1D03FU-TE85L		
5123		M	DIODE		D4102	8-719-024-77	DIODE HN1D03FU-TE85L		
5124		M	DIODE		D4103	8-719-024-77	DIODE HN1D03FU-TE85L		
5125		M	DIODE		D4104	8-719-024-77	DIODE HN1D03FU-TE85L		
5126		M	DIODE		D4105	8-719-941-86	DIODE DAN202U		
5127		M	DIODE		D4106	8-719-069-55	DIODE UDVZSTE-175.6B		
5128		M	DIODE		D4107	8-719-069-55	DIODE UDVZSTE-175.6B		
5129		M	DIODE		D4200	8-719-404-50	DIODE MA111-TX		
5130		M	DIODE		D4300	8-719-069-55	DIODE UDVZSTE-175.6B		
5131		M	DIODE		D4301	8-719-069-55	DIODE UDVZSTE-175.6B		
5132		M	DIODE		D4304	8-719-069-55	DIODE UDVZSTE-175.6B		
5133		M	DIODE		D4306	8-719-024-77	DIODE HN1D03FU-TE85L		
5134		M	DIODE		D4307	8-719-024-77	DIODE HN1D03FU-TE85L		
5135		M	DIODE		D4308	8-719-024-77	DIODE HN1D03FU-TE85L		
5136		M	DIODE		D4309	8-719-024-77	DIODE HN1D03FU-TE85L		
5137		M	DIODE		D4312	8-719-404-50	DIODE MA111-TX		
5138		M	DIODE		D4313	8-719-941-86	DIODE DAN202U		
5139		M	DIODE		D4314	8-719-404-50	DIODE MA111-TX		
5140		M	DIODE		D4316	8-719-069-55	DIODE UDVZSTE-175.6B		
5141		M	DIODE		D4319	8-719-069-55	DIODE UDVZSTE-175.6B		
5142		M	DIODE		D4320	8-719-069-55	DIODE UDVZSTE-175.6B		
5143		M	DIODE		D4400	8-719-914-43	DIODE DAN202K		
5144		M	DIODE		D4401	8-719-914-44	DIODE DAP202K		
5145		M	DIODE		D4404	8-719-914-43	DIODE DAN202K		
5146		M	DIODE		D4405	8-719-914-44	DIODE DAP202K		
5147		M	DIODE		D4406	8-719-404-50	DIODE MA111-TX		
5148		M	DIODE		D4407	8-719-914-43	DIODE DAN202K		
5149		M	DIODE		D4410	8-719-404-50	DIODE MA111-TX		
5150		M	DIODE		D4411	8-719-404-50	DIODE MA111-TX		
5151		M	DIODE		D4412	8-719-404-50	DIODE MA111-TX		
5152		M	DIODE		D4413	8-719-914-43	DIODE DAN202K		
5153		M	DIODE		D4502	8-719-083-57	DIODE UDVZSTE-173.6B		
5154		M	DIODE		D4503	8-719-083-57	DIODE UDVZSTE-173.6B		
5155		M	FERRITE BEAD		FB4000	1-414-229-11	FERRITE 0UH		
5156		M	FERRITE BEAD		FB4100	1-414-445-11	FERRITE 0UH		
5157		M	FERRITE BEAD		FB4101	1-414-445-11	FERRITE 0UH		
5158		M	FERRITE BEAD		FB4102	1-414-445-11	FERRITE 0UH		
5159		M	FERRITE BEAD		FB4103	1-414-445-11	FERRITE 0UH		
5160		M	FERRITE BEAD		FB4104	1-414-229-11	FERRITE 0UH		
5161		M	FERRITE BEAD		FB4105	1-414-229-11	FERRITE 0UH		
5162		M	FERRITE BEAD		FB4106	1-414-229-11	FERRITE 0UH		
5163		M	FERRITE BEAD		FB4107	1-414-229-11	FERRITE 0UH		
5164		M	FERRITE BEAD		FB4108	1-414-229-11	FERRITE 0UH		
5165		M	FERRITE BEAD		FB4200	1-414-598-11	FERRITE 0UH		
5166		M	FERRITE BEAD		FB4201	1-414-598-11	FERRITE 0UH		
5167		M	FERRITE BEAD		FB4202	1-414-598-11	FERRITE 0UH		
5168		M	FERRITE BEAD		FB4203	1-414-598-11	FERRITE 0UH		
5169		M	FERRITE BEAD		FB4204	1-414-598-11	FERRITE 0UH		
5170		M	FERRITE BEAD		FB4205	1-414-598-11	FERRITE 0UH		
5171		M	FERRITE BEAD		FB4206	1-414-598-11	FERRITE 0UH		
5172		M	FERRITE BEAD		FB4207	1-414-598-11	FERRITE 0UH		
5173		M	FERRITE BEAD		FB4208	1-216-864-11	SHORT CHIP 0		
5174		M	FERRITE BEAD		FB4209	1-216-864-11	SHORT CHIP 0		
5175		M	FERRITE BEAD		FB4210	1-216-864-11	SHORT CHIP 0		
5176		M	FERRITE BEAD		FB4211	1-414-229-11	FERRITE 0UH		
5177		M	FERRITE BEAD		FB4212	1-414-229-11	FERRITE 0UH		
5178		M	FERRITE BEAD		FB4301	1-414-229-11	FERRITE 0UH		
5179		M	FERRITE BEAD		FB4302	1-414-229-11	FERRITE 0UH		
5180		M	FERRITE BEAD		FB4303	1-414-229-11	FERRITE 0UH		
5181		M	FERRITE BEAD		FB4401	1-414-228-11	FERRITE 0UH		
5182		M	FERRITE BEAD		FB4402	1-414-228-11	FERRITE 0UH		
5183		M	FERRITE BEAD		FB4403	1-414-228-11	FERRITE 0UH		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5184		M	FERRITE BEAD		FB4404	1-414-228-11	FERRITE 0UH		
5185		M	FERRITE BEAD		FB4405	1-414-228-11	FERRITE 0UH		
5186		M	FERRITE BEAD		FB4406	1-414-228-11	FERRITE 0UH		
5187		M	FERRITE BEAD		FB4407	1-414-228-11	FERRITE 0UH		
5188		M	FERRITE BEAD		FB4408	1-414-228-11	FERRITE 0UH		
5189		M	FERRITE BEAD		FB4410	1-414-228-11	FERRITE 0UH		
5190		M	FERRITE BEAD		FB4411	1-414-228-11	FERRITE 0UH		
5191		M	FERRITE BEAD		FB4412	1-414-234-22	FERRITE 0UH		
5192		M	FERRITE BEAD		FB4413	1-414-228-11	FERRITE 0UH		
5193		M	FERRITE BEAD		FB4414	1-414-228-11	FERRITE 0UH		
5194		M	FERRITE BEAD		FB4418	1-414-228-11	FERRITE 0UH		
5195		M	FERRITE BEAD		FB4419	1-414-228-11	FERRITE 0UH		
5196		M	FERRITE BEAD		FB4420	1-414-233-22	FERRITE 0UH		
5197		M	FERRITE BEAD		FB4421	1-414-228-11	FERRITE 0UH		
5198		M	FERRITE BEAD		FB4422	1-414-228-11	FERRITE 0UH		
5199		M	FERRITE BEAD		FB4423	1-414-228-11	FERRITE 0UH		
5200		M	FERRITE BEAD		FB4424	1-414-228-11	FERRITE 0UH		
5201		M	FERRITE BEAD		FB4425	1-414-228-11	FERRITE 0UH		
5202		M	FERRITE BEAD		FB4426	1-414-228-11	FERRITE 0UH		
5203		M	FERRITE BEAD		FB4427	1-414-228-11	FERRITE 0UH		
5204		M	FERRITE BEAD		FB4428	1-414-228-11	FERRITE 0UH		
5205		M	FERRITE BEAD		FB4429	1-414-228-11	FERRITE 0UH		
5206		M	FERRITE BEAD		FB4430	1-414-228-11	FERRITE 0UH		
5207		M	FERRITE BEAD		FB4431	1-414-228-11	FERRITE 0UH		
5208		M	FERRITE BEAD		FB4432	1-414-228-11	FERRITE 0UH		
5209		M	FERRITE BEAD		FB4433	1-414-228-11	FERRITE 0UH		
5210		M	FERRITE BEAD		FB4434	1-414-228-11	FERRITE 0UH		
5211		M	FERRITE BEAD		FB4435	1-414-228-11	FERRITE 0UH		
5212		M	FERRITE BEAD		FB4436	1-414-228-11	FERRITE 0UH		
5213		M	FERRITE BEAD		FB4437	1-414-228-11	FERRITE 0UH		
5214		M	FERRITE BEAD		FB4438	1-414-228-11	FERRITE 0UH		
5215		M	FERRITE BEAD		FB4439	1-414-228-11	FERRITE 0UH		
5216		M	FERRITE BEAD		FB4441	1-414-228-11	FERRITE 0UH		
5217		M	FERRITE BEAD		FB4443	1-414-228-11	FERRITE 0UH		
5218		M	FERRITE BEAD		FB4445	1-414-228-11	FERRITE 0UH		
5219		M	FERRITE BEAD		FB4446	1-414-228-11	FERRITE 0UH		
5220		M	FERRITE BEAD		FB4447	1-414-228-11	FERRITE 0UH		
5221		M	FERRITE BEAD		FB4448	1-414-228-11	FERRITE 0UH		
5222		M	FERRITE BEAD		FB4449	1-414-228-11	FERRITE 0UH		
5223		M	FERRITE BEAD		FB4450	1-414-228-11	FERRITE 0UH		
5224		M	FERRITE BEAD		FB4451	1-414-228-11	FERRITE 0UH		
5225		M	FERRITE BEAD		FB4453	1-414-228-11	FERRITE 0UH		
5226		M	FERRITE BEAD		FB4456	1-414-228-11	FERRITE 0UH		
5227		M	FERRITE BEAD		FB4457	1-414-228-11	FERRITE 0UH		
5228		M	FERRITE BEAD		FB4458	1-414-228-11	FERRITE 0UH		
5229		M	FERRITE BEAD		FB4460	1-414-228-11	FERRITE 0UH		
5230		M	FERRITE BEAD		FB4461	1-414-228-11	FERRITE 0UH		
5231		M	FERRITE BEAD		FB4462	1-414-228-11	FERRITE 0UH		
5232		M	FERRITE BEAD		FB4463	1-414-228-11	FERRITE 0UH		
5233		M	FERRITE BEAD		FB4464	1-414-228-11	FERRITE 0UH		
5234		M	FERRITE BEAD		FB4501	1-469-324-21	FERRITE 0UH		
5235		M	FILTER		FL4001	1-400-087-21	FILTER, EMI REMOVAL (SMD)		
5236		M	FILTER		FL4200	1-234-177-21	FERRITE 0UH		
5237		M	FILTER		FL4201	1-234-177-21	FERRITE 0UH		
5238		M	FILTER		FL4301	1-400-087-21	FILTER, EMI REMOVAL (SMD)		
5239		M	IC		IC4000	6-701-870-01	IC THC63LVDF84B-T		
5240		M	IC		IC4001	6-702-982-01	IC TC7SA00FU(TE85R)		
5241		M	IC		IC4002	8-759-712-65	IC PQ070XZ01ZP		
5242		M	IC		IC4003	8-759-712-65	IC PQ070XZ01ZP		
5243		M	IC		IC4004	6-703-365-01	IC PST9220NL		
5244		M	IC		IC4005	6-702-684-01	IC PST9225NL		
5245		M	IC		IC4006	6-702-973-01	IC CXD9690Q		
5246		M	IC		IC4007	8-759-712-65	IC PQ070XZ01ZP		
5247		M	IC		IC4100	6-703-364-01	IC TFP510PAP		
5248		M	IC		IC4200	8-759-641-26	IC NJM2391DL1-33(TE1)		
5249		M	IC		IC4201	8-759-100-96	IC UPC4558G2		
5250		M	IC		IC4202	8-759-579-68	IC AK4524		
5251		M	IC		IC4203	6-702-979-01	IC AK4114VQ-L		
5252		M	IC		IC4204	6-704-208-01	IC S-80845CNUA-B86T2G		
5253		M	IC		IC4300	8-759-688-12	IC TC74VHCT125AFT(EL)		
5254		M	IC		IC4301	6-700-150-01	IC M24C04-WMN6T(A)		
5255		M	IC		IC4302	8-759-675-46	IC SN65LVDS1050PWR		
5256		M	IC		IC4303	6-700-596-01	IC TC74LVX4053FT(EL)		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5257		M	IC		IC4304	6-700-596-01	IC TC74LVX4053FT(EL)		
5258		M	IC		IC4305	8-759-598-39	IC TC75W58FK(TE85R)		
5259		M	IC		IC4306	8-759-570-08	IC TC7SET32FU(TE85R)		
5260		M	IC		IC4307	8-759-058-54	IC TC7S00FU(TE85R)		
5261		M	IC		IC4400	6-702-983-01	IC TC74LCX273FT(EL)		
5262		M	IC		IC4401	8-759-683-99	IC BA8274F-E2		
5263		M	IC		IC4402	6-700-596-01	IC TC74LVX4053FT(EL)		
5264		M	IC		IC4404	8-759-592-43	IC TC7SZ02FU(TE85R)		
5265		M	IC		IC4405	8-759-475-39	IC TC74LCX74FT(EL)		
5266		M	IC		IC4406	8-759-596-29	IC SN74LV4066APWR		
5267		M	IC		IC4407	6-801-402-01	IC BD4729GTR		
5268		M	IC		IC4408	6-704-067-01	IC M24128-BWMN6T(A)		
5269		M	IC		IC4409	8-759-641-26	IC NJM2391DL1-33(TE1)		
5270		M	IC		IC4410	6-803-888-01	IC M306V7FHFP-PDPXBR1		
5271		M	IC		IC4411	6-703-224-01	IC S-80828CNNB-B8NT2G		
5272		M	IC		IC4601	8-759-082-61	IC TC4W53FU		
5273		M	COIL		L4000	1-412-029-11	INDUCTOR 10UH		
5274		M	COIL		L4001	1-412-029-11	INDUCTOR 10UH		
5275		M	COIL		L4002	1-412-029-11	INDUCTOR 10UH		
5276		M	COIL		L4003	1-412-030-11	INDUCTOR 22UH		
5277		M	COIL		L4004	1-412-030-11	INDUCTOR 22UH		
5278		M	COIL		L4005	1-412-029-11	INDUCTOR 10UH		
5279		M	COIL		L4006	1-412-029-11	INDUCTOR 10UH		
5280		M	COIL		L4007	1-412-029-11	INDUCTOR 10UH		
5281		M	COIL		L4008	1-412-029-11	INDUCTOR 10UH		
5282		M	COIL		L4009	1-412-029-11	INDUCTOR 10UH		
5283		M	COIL		L4010	1-412-029-11	INDUCTOR 10UH		
5284		M	COIL		L4011	1-412-029-11	INDUCTOR 10UH		
5285		M	COIL		L4012	1-412-029-11	INDUCTOR 10UH		
5286		M	COIL		L4200	1-412-029-11	INDUCTOR 10UH		
5287		M	COIL		L4201	1-412-029-11	INDUCTOR 10UH		
5288		M	COIL		L4202	1-412-029-11	INDUCTOR 10UH		
5289		M	COIL		L4300	1-419-370-21	INDUCTOR 0UH		
5290		M	COIL		L4301	1-419-370-21	INDUCTOR 0UH		
5291		M	COIL		L4302	1-419-370-21	INDUCTOR 0UH		
5292		M	COIL		L4303	1-419-370-21	INDUCTOR 0UH		
5293		M	COIL		L4400	1-412-026-11	INDUCTOR 1UH		
5294		M	COIL		L4401	1-412-029-11	INDUCTOR 10UH		
5295		M	COIL		L4402	1-412-029-11	INDUCTOR 10UH		
5296		M	COIL		L4501	1-416-510-21	INDUCTOR 100UH		
5297		M	TRANSISTOR		Q4000	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
5298		M	TRANSISTOR		Q4001	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
5299		M	TRANSISTOR		Q4100	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
5300		M	TRANSISTOR		Q4101	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
5301		M	TRANSISTOR		Q4102	8-729-928-90	TRANSISTOR DTC114EE		
5302		M	TRANSISTOR		Q4103	8-729-928-90	TRANSISTOR DTC114EE		
5303		M	TRANSISTOR		Q4104	8-729-928-90	TRANSISTOR DTC114EE		
5304		M	TRANSISTOR		Q4105	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
5305		M	TRANSISTOR		Q4300	8-729-900-53	TRANSISTOR DTC114EK		
5306		M	TRANSISTOR		Q4301	8-729-900-53	TRANSISTOR DTC114EK		
5307		M	TRANSISTOR		Q4303	8-729-900-53	TRANSISTOR DTC114EK		
5308		M	TRANSISTOR		Q4400	8-729-422-27	TRANSISTOR 2SD601A-Q		
5309		M	TRANSISTOR		Q4402	8-729-422-27	TRANSISTOR 2SD601A-Q		
5310		M	TRANSISTOR		Q4404	8-729-422-27	TRANSISTOR 2SD601A-Q		
5311		M	TRANSISTOR		Q4405	8-729-422-27	TRANSISTOR 2SD601A-Q		
5312		M	TRANSISTOR		Q4406	8-729-422-27	TRANSISTOR 2SD601A-Q		
5313		M	TRANSISTOR		Q4407	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
5314		M	TRANSISTOR		Q4408	8-729-422-27	TRANSISTOR 2SD601A-Q		
5315		M	TRANSISTOR		Q4409	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
5316		M	TRANSISTOR		Q4411	8-729-422-27	TRANSISTOR 2SD601A-Q		
5317		M	TRANSISTOR		Q4413	8-729-901-47	TRANSISTOR DTA143EK		
5318		M	TRANSISTOR		Q4414	8-729-422-27	TRANSISTOR 2SD601A-Q		
5319		M	TRANSISTOR		Q4415	8-729-422-27	TRANSISTOR 2SD601A-Q		
5320		M	TRANSISTOR		Q4417	8-729-422-27	TRANSISTOR 2SD601A-Q		
5321		M	TRANSISTOR		Q4419	8-729-422-27	TRANSISTOR 2SD601A-Q		
5322		M	TRANSISTOR		Q4420	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
5323		M	TRANSISTOR		Q4421	8-729-422-27	TRANSISTOR 2SD601A-Q		
5324		M	TRANSISTOR		Q4424	8-729-422-27	TRANSISTOR 2SD601A-Q		
5325		M	TRANSISTOR		Q4425	8-729-422-27	TRANSISTOR 2SD601A-Q		
5326		M	TRANSISTOR		Q4426	8-729-027-23	TRANSISTOR DTA114EKA-T146		
5327		M	TRANSISTOR		Q4427	8-729-422-27	TRANSISTOR 2SD601A-Q		
5328		M	TRANSISTOR		Q4428	8-729-422-27	TRANSISTOR 2SD601A-Q		
5329		M	TRANSISTOR		Q4429	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5330		M	TRANSISTOR		Q4501	8-729-422-29	TRANSISTOR 2SD601A-S		
5331		M	TRANSISTOR		Q4502	8-729-422-29	TRANSISTOR 2SD601A-S		
5332		M	RESISTOR		R4000	1-216-809-11	METAL CHIP 100 5% 1/10W		
5333		M	RESISTOR		R4001	1-216-809-11	METAL CHIP 100 5% 1/10W		
5334		M	RESISTOR		R4002	1-216-809-11	METAL CHIP 100 5% 1/10W		
5335		M	RESISTOR		R4003	1-216-809-11	METAL CHIP 100 5% 1/10W		
5336		M	RESISTOR		R4004	1-216-809-11	METAL CHIP 100 5% 1/10W		
5337		M	RESISTOR		R4005	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5338		M	RESISTOR		R4007	1-216-864-11	SHORT CHIP 0		
5339		M	RESISTOR		R4008	1-216-864-11	SHORT CHIP 0		
5340		M	RESISTOR		R4009	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5341		M	RESISTOR		R4010	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5342		M	RESISTOR		R4011	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5343		M	RESISTOR		R4012	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5344		M	RESISTOR		R4013	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5345		M	RESISTOR		R4014	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5346		M	RESISTOR		R4016	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
5347		M	RESISTOR		R4019	1-216-809-11	METAL CHIP 100 5% 1/10W		
5348		M	RESISTOR		R4020	1-216-809-11	METAL CHIP 100 5% 1/10W		
5349		M	RESISTOR		R4021	1-216-805-11	METAL CHIP 47 5% 1/10W		
5350		M	RESISTOR		R4022	1-216-801-11	METAL CHIP 22 5% 1/10W		
5351		M	RESISTOR		R4023	1-216-801-11	METAL CHIP 22 5% 1/10W		
5352		M	RESISTOR		R4024	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5353		M	RESISTOR		R4025	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5354		M	RESISTOR		R4028	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5355		M	RESISTOR		R4029	1-216-864-11	SHORT CHIP 0		
5356		M	RESISTOR		R4030	1-216-864-11	SHORT CHIP 0		
5357		M	RESISTOR		R4031	1-216-864-11	SHORT CHIP 0		
5358		M	RESISTOR		R4032	1-216-864-11	SHORT CHIP 0		
5359		M	RESISTOR		R4033	1-216-864-11	SHORT CHIP 0		
5360		M	RESISTOR		R4034	1-216-864-11	SHORT CHIP 0		
5361		M	RESISTOR		R4035	1-216-864-11	SHORT CHIP 0		
5362		M	RESISTOR		R4036	1-216-864-11	SHORT CHIP 0		
5363		M	RESISTOR		R4037	1-216-864-11	SHORT CHIP 0		
5364		M	RESISTOR		R4038	1-216-864-11	SHORT CHIP 0		
5365		M	RESISTOR		R4039	1-216-864-11	SHORT CHIP 0		
5366		M	RESISTOR		R4040	1-216-864-11	SHORT CHIP 0		
5367		M	RESISTOR		R4041	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5368		M	RESISTOR		R4042	1-216-864-11	SHORT CHIP 0		
5369		M	RESISTOR		R4043	1-216-864-11	SHORT CHIP 0		
5370		M	RESISTOR		R4044	1-216-801-11	METAL CHIP 22 5% 1/10W		
5371		M	RESISTOR		R4045	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5372		M	RESISTOR		R4047	1-216-864-11	SHORT CHIP 0		
5373		M	RESISTOR		R4048	1-216-809-11	METAL CHIP 100 5% 1/10W		
5374		M	RESISTOR		R4049	1-216-809-11	METAL CHIP 100 5% 1/10W		
5375		M	RESISTOR		R4050	1-216-805-11	METAL CHIP 47 5% 1/10W		
5376		M	RESISTOR		R4051	1-216-805-11	METAL CHIP 47 5% 1/10W		
5377		M	RESISTOR		R4052	1-216-805-11	METAL CHIP 47 5% 1/10W		
5378		M	RESISTOR		R4053	1-216-805-11	METAL CHIP 47 5% 1/10W		
5379		M	RESISTOR		R4054	1-216-805-11	METAL CHIP 47 5% 1/10W		
5380		M	RESISTOR		R4055	1-216-805-11	METAL CHIP 47 5% 1/10W		
5381		M	RESISTOR		R4056	1-216-805-11	METAL CHIP 47 5% 1/10W		
5382		M	RESISTOR		R4057	1-216-805-11	METAL CHIP 47 5% 1/10W		
5383		M	RESISTOR		R4058	1-216-809-11	METAL CHIP 100 5% 1/10W		
5384		M	RESISTOR		R4060	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5385		M	RESISTOR		R4061	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5386		M	RESISTOR		R4062	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
5387		M	RESISTOR		R4064	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5388		M	RESISTOR		R4100	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5389		M	RESISTOR		R4101	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5390		M	RESISTOR		R4102	1-218-840-11	METAL CHIP 510 0.5% 1/10W		
5391		M	RESISTOR		R4103	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5392		M	RESISTOR		R4104	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5393		M	RESISTOR		R4105	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5394		M	RESISTOR		R4106	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5395		M	RESISTOR		R4107	1-218-272-11	METAL CHIP 5.1K 5% 1/10W		
5396		M	RESISTOR		R4109	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5397		M	RESISTOR		R4110	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5398		M	RESISTOR		R4111	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5399		M	RESISTOR		R4112	1-216-864-11	SHORT CHIP 0		
5400		M	RESISTOR		R4113	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5401		M	RESISTOR		R4114	1-216-033-00	RES-CHIP 220 5% 1/10W		
5402		M	RESISTOR		R4115	1-216-033-00	RES-CHIP 220 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5403		M	RESISTOR		R4116	1-216-864-11	SHORT CHIP 0		
5404		M	RESISTOR		R4117	1-216-864-11	SHORT CHIP 0		
5405		M	RESISTOR		R4118	1-216-864-11	SHORT CHIP 0		
5406		M	RESISTOR		R4200	1-216-809-11	METAL CHIP 100 5% 1/10W		
5407		M	RESISTOR		R4201	1-216-809-11	METAL CHIP 100 5% 1/10W		
5408		M	RESISTOR		R4202	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5409		M	RESISTOR		R4203	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
5410		M	RESISTOR		R4204	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5411		M	RESISTOR		R4205	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5412		M	RESISTOR		R4206	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5413		M	RESISTOR		R4207	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5414		M	RESISTOR		R4208	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5415		M	RESISTOR		R4209	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5416		M	RESISTOR		R4210	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5417		M	RESISTOR		R4211	1-216-809-11	METAL CHIP 100 5% 1/10W		
5418		M	RESISTOR		R4212	1-216-809-11	METAL CHIP 100 5% 1/10W		
5419		M	RESISTOR		R4213	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5420		M	RESISTOR		R4214	1-216-809-11	METAL CHIP 100 5% 1/10W		
5421		M	RESISTOR		R4215	1-216-809-11	METAL CHIP 100 5% 1/10W		
5422		M	RESISTOR		R4216	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
5423		M	RESISTOR		R4217	1-216-809-11	METAL CHIP 100 5% 1/10W		
5424		M	RESISTOR		R4218	1-216-801-11	METAL CHIP 22 5% 1/10W		
5425		M	RESISTOR		R4219	1-216-809-11	METAL CHIP 100 5% 1/10W		
5426		M	RESISTOR		R4220	1-216-797-11	METAL CHIP 10 5% 1/10W		
5427		M	RESISTOR		R4222	1-216-797-11	METAL CHIP 10 5% 1/10W		
5428		M	RESISTOR		R4223	1-216-809-11	METAL CHIP 100 5% 1/10W		
5429		M	RESISTOR		R4224	1-216-797-11	METAL CHIP 10 5% 1/10W		
5430		M	RESISTOR		R4225	1-216-797-11	METAL CHIP 10 5% 1/10W		
5431		M	RESISTOR		R4226	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5432		M	RESISTOR		R4227	1-216-864-11	SHORT CHIP 0		
5433		M	RESISTOR		R4229	1-216-797-11	METAL CHIP 10 5% 1/10W		
5434		M	RESISTOR		R4230	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5435		M	RESISTOR		R4231	1-216-797-11	METAL CHIP 10 5% 1/10W		
5436		M	RESISTOR		R4232	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5437		M	RESISTOR		R4234	1-216-797-11	METAL CHIP 10 5% 1/10W		
5438		M	RESISTOR		R4235	1-216-864-11	SHORT CHIP 0		
5439		M	RESISTOR		R4237	1-216-864-11	SHORT CHIP 0		
5440		M	RESISTOR		R4238	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5441		M	RESISTOR		R4239	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5442		M	RESISTOR		R4240	1-216-809-11	METAL CHIP 100 5% 1/10W		
5443		M	RESISTOR		R4241	1-216-836-11	METAL CHIP 18K 5% 1/10W		
5444		M	RESISTOR		R4242	1-216-809-11	METAL CHIP 100 5% 1/10W		
5445		M	RESISTOR		R4243	1-216-809-11	METAL CHIP 100 5% 1/10W		
5446		M	RESISTOR		R4244	1-216-809-11	METAL CHIP 100 5% 1/10W		
5447		M	RESISTOR		R4300	1-216-864-11	SHORT CHIP 0		
5448		M	RESISTOR		R4301	1-216-864-11	SHORT CHIP 0		
5449		M	RESISTOR		R4302	1-216-864-11	SHORT CHIP 0		
5450		M	RESISTOR		R4304	1-216-864-11	SHORT CHIP 0		
5451		M	RESISTOR		R4305	1-216-864-11	SHORT CHIP 0		
5452		M	RESISTOR		R4306	1-216-857-11	METAL CHIP 1M 5% 1/10W		
5453		M	RESISTOR		R4308	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5454		M	RESISTOR		R4311	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5455		M	RESISTOR		R4321	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5456		M	RESISTOR		R4322	1-216-864-11	SHORT CHIP 0		
5457		M	RESISTOR		R4323	1-216-864-11	SHORT CHIP 0		
5458		M	RESISTOR		R4324	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5459		M	RESISTOR		R4325	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5460		M	RESISTOR		R4326	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5461		M	RESISTOR		R4327	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5462		M	RESISTOR		R4329	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5463		M	RESISTOR		R4330	1-216-809-11	METAL CHIP 100 5% 1/10W		
5464		M	RESISTOR		R4331	1-216-801-11	METAL CHIP 22 5% 1/10W		
5465		M	RESISTOR		R4332	1-216-801-11	METAL CHIP 22 5% 1/10W		
5466		M	RESISTOR		R4333	1-216-809-11	METAL CHIP 100 5% 1/10W		
5467		M	RESISTOR		R4334	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5468		M	RESISTOR		R4336	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5469		M	RESISTOR		R4337	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5470		M	RESISTOR		R4339	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5471		M	RESISTOR		R4340	1-216-801-11	METAL CHIP 22 5% 1/10W		
5472		M	RESISTOR		R4341	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5473		M	RESISTOR		R4342	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5474		M	RESISTOR		R4343	1-216-801-11	METAL CHIP 22 5% 1/10W		
5475		M	RESISTOR		R4344	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5476		M	RESISTOR		R4345	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5477		M	RESISTOR		R4346	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5478		M	RESISTOR		R4347	1-216-853-11	METAL CHIP 470K 5% 1/10W		
5479		M	RESISTOR		R4348	1-216-847-11	METAL CHIP 150K 5% 1/10W		
5480		M	RESISTOR		R4349	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5481		M	RESISTOR		R4350	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5482		M	RESISTOR		R4351	1-216-853-11	METAL CHIP 470K 5% 1/10W		
5483		M	RESISTOR		R4352	1-216-847-11	METAL CHIP 150K 5% 1/10W		
5484		M	RESISTOR		R4354	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5485		M	RESISTOR		R4358	1-216-809-11	METAL CHIP 100 5% 1/10W		
5486		M	RESISTOR		R4359	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5487		M	RESISTOR		R4360	1-216-801-11	METAL CHIP 22 5% 1/10W		
5488		M	RESISTOR		R4361	1-216-801-11	METAL CHIP 22 5% 1/10W		
5489		M	RESISTOR		R4363	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5490		M	RESISTOR		R4364	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5491		M	RESISTOR		R4365	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5492		M	RESISTOR		R4368	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5493		M	RESISTOR		R4370	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5494		M	RESISTOR		R4400	1-216-801-11	METAL CHIP 22 5% 1/10W		
5495		M	RESISTOR		R4401	1-216-801-11	METAL CHIP 22 5% 1/10W		
5496		M	RESISTOR		R4402	1-216-801-11	METAL CHIP 22 5% 1/10W		
5497		M	RESISTOR		R4403	1-216-801-11	METAL CHIP 22 5% 1/10W		
5498		M	RESISTOR		R4407	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5499		M	RESISTOR		R4408	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5500		M	RESISTOR		R4409	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5501		M	RESISTOR		R4411	1-216-801-11	METAL CHIP 22 5% 1/10W		
5502		M	RESISTOR		R4412	1-216-801-11	METAL CHIP 22 5% 1/10W		
5503		M	RESISTOR		R4413	1-216-801-11	METAL CHIP 22 5% 1/10W		
5504		M	RESISTOR		R4414	1-216-801-11	METAL CHIP 22 5% 1/10W		
5505		M	RESISTOR		R4415	1-216-801-11	METAL CHIP 22 5% 1/10W		
5506		M	RESISTOR		R4417	1-216-801-11	METAL CHIP 22 5% 1/10W		
5507		M	RESISTOR		R4418	1-216-801-11	METAL CHIP 22 5% 1/10W		
5508		M	RESISTOR		R4419	1-216-801-11	METAL CHIP 22 5% 1/10W		
5509		M	RESISTOR		R4421	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5510		M	RESISTOR		R4426	1-216-839-11	METAL CHIP 33K 5% 1/10W		
5511		M	RESISTOR		R4427	1-216-864-11	SHORT CHIP 0		
5512		M	RESISTOR		R4430	1-216-864-11	SHORT CHIP 0		
5513		M	RESISTOR		R4431	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
5514		M	RESISTOR		R4434	1-216-809-11	METAL CHIP 100 5% 1/10W		
5515		M	RESISTOR		R4435	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5516		M	RESISTOR		R4436	1-216-864-11	SHORT CHIP 0		
5517		M	RESISTOR		R4437	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
5518		M	RESISTOR		R4439	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5519		M	RESISTOR		R4440	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5520		M	RESISTOR		R4441	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5521		M	RESISTOR		R4442	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5522		M	RESISTOR		R4443	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5523		M	RESISTOR		R4444	1-216-801-11	METAL CHIP 22 5% 1/10W		
5524		M	RESISTOR		R4445	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5525		M	RESISTOR		R4446	1-216-817-11	METAL CHIP 470 5% 1/10W		
5526		M	RESISTOR		R4447	1-216-809-11	METAL CHIP 100 5% 1/10W		
5527		M	RESISTOR		R4448	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5528		M	RESISTOR		R4449	1-216-805-11	METAL CHIP 47 5% 1/10W		
5529		M	RESISTOR		R4450	1-216-805-11	METAL CHIP 47 5% 1/10W		
5530		M	RESISTOR		R4452	1-216-809-11	METAL CHIP 100 5% 1/10W		
5531		M	RESISTOR		R4453	1-216-809-11	METAL CHIP 100 5% 1/10W		
5532		M	RESISTOR		R4454	1-216-801-11	METAL CHIP 22 5% 1/10W		
5533		M	RESISTOR		R4455	1-216-805-11	METAL CHIP 47 5% 1/10W		
5534		M	RESISTOR		R4456	1-216-805-11	METAL CHIP 47 5% 1/10W		
5535		M	RESISTOR		R4457	1-216-805-11	METAL CHIP 47 5% 1/10W		
5536		M	RESISTOR		R4458	1-216-805-11	METAL CHIP 47 5% 1/10W		
5537		M	RESISTOR		R4459	1-216-805-11	METAL CHIP 47 5% 1/10W		
5538		M	RESISTOR		R4460	1-216-809-11	METAL CHIP 100 5% 1/10W		
5539		M	RESISTOR		R4461	1-216-809-11	METAL CHIP 100 5% 1/10W		
5540		M	RESISTOR		R4462	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5541		M	RESISTOR		R4464	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5542		M	RESISTOR		R4465	1-216-813-11	METAL CHIP 220 5% 1/10W		
5543		M	RESISTOR		R4466	1-216-857-11	METAL CHIP 1M 5% 1/10W		
5544		M	RESISTOR		R4467	1-216-805-11	METAL CHIP 47 5% 1/10W		
5545		M	RESISTOR		R4468	1-216-805-11	METAL CHIP 47 5% 1/10W		
5546		M	RESISTOR		R4469	1-216-801-11	METAL CHIP 22 5% 1/10W		
5547		M	RESISTOR		R4470	1-216-801-11	METAL CHIP 22 5% 1/10W		
5548		M	RESISTOR		R4471	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5549		M	RESISTOR		R4472	1-216-809-11	METAL CHIP 100 5% 1/10W		
5550		M	RESISTOR		R4473	1-216-809-11	METAL CHIP 100 5% 1/10W		
5551		M	RESISTOR		R4474	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5552		M	RESISTOR		R4475	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5553		M	RESISTOR		R4476	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5554		M	RESISTOR		R4477	1-216-801-11	METAL CHIP 22 5% 1/10W		
5555		M	RESISTOR		R4478	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5556		M	RESISTOR		R4479	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5557		M	RESISTOR		R4482	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5558		M	RESISTOR		R4483	1-216-805-11	METAL CHIP 47 5% 1/10W		
5559		M	RESISTOR		R4484	1-216-805-11	METAL CHIP 47 5% 1/10W		
5560		M	RESISTOR		R4485	1-216-805-11	METAL CHIP 47 5% 1/10W		
5561		M	RESISTOR		R4486	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5562		M	RESISTOR		R4487	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5563		M	RESISTOR		R4488	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5564		M	RESISTOR		R4489	1-216-809-11	METAL CHIP 100 5% 1/10W		
5565		M	RESISTOR		R4490	1-216-809-11	METAL CHIP 100 5% 1/10W		
5566		M	RESISTOR		R4491	1-216-668-11	METAL CHIP 100 0.5% 1/10W		
5567		M	RESISTOR		R4492	1-216-809-11	METAL CHIP 100 5% 1/10W		
5568		M	RESISTOR		R4493	1-216-805-11	METAL CHIP 47 5% 1/10W		
5569		M	RESISTOR		R4494	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5570		M	RESISTOR		R4495	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5571		M	RESISTOR		R4497	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5572		M	RESISTOR		R4498	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5573		M	RESISTOR		R4499	1-216-805-11	METAL CHIP 47 5% 1/10W		
5574		M	RESISTOR		R4500	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5575		M	RESISTOR		R4501	1-216-805-11	METAL CHIP 47 5% 1/10W		
5576		M	RESISTOR		R4502	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5577		M	RESISTOR		R4503	1-216-805-11	METAL CHIP 47 5% 1/10W		
5578		M	RESISTOR		R4504	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5579		M	RESISTOR		R4505	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5580		M	RESISTOR		R4506	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5581		M	RESISTOR		R4507	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5582		M	RESISTOR		R4508	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5583		M	RESISTOR		R4509	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5584		M	RESISTOR		R4510	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5585		M	RESISTOR		R4511	1-216-864-11	SHORT CHIP 0		
5586		M	RESISTOR		R4512	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5587		M	RESISTOR		R4513	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5588		M	RESISTOR		R4514	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5589		M	RESISTOR		R4515	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5590		M	RESISTOR		R4516	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5591		M	RESISTOR		R4518	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5592		M	RESISTOR		R4520	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5593		M	RESISTOR		R4521	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5594		M	RESISTOR		R4522	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5595		M	RESISTOR		R4523	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5596		M	RESISTOR		R4524	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5597		M	RESISTOR		R4525	1-216-809-11	METAL CHIP 100 5% 1/10W		
5598		M	RESISTOR		R4526	1-216-839-11	METAL CHIP 33K 5% 1/10W		
5599		M	RESISTOR		R4527	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5600		M	RESISTOR		R4529	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5601		M	RESISTOR		R4530	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5602		M	RESISTOR		R4531	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5603		M	RESISTOR		R4532	1-216-809-11	METAL CHIP 100 5% 1/10W		
5604		M	RESISTOR		R4533	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5605		M	RESISTOR		R4534	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5606		M	RESISTOR		R4535	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5607		M	RESISTOR		R4536	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5608		M	RESISTOR		R4537	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5609		M	RESISTOR		R4539	1-216-809-11	METAL CHIP 100 5% 1/10W		
5610		M	RESISTOR		R4540	1-216-809-11	METAL CHIP 100 5% 1/10W		
5611		M	RESISTOR		R4541	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5612		M	RESISTOR		R4542	1-216-809-11	METAL CHIP 100 5% 1/10W		
5613		M	RESISTOR		R4544	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5614		M	RESISTOR		R4545	1-216-801-11	METAL CHIP 22 5% 1/10W		
5615		M	RESISTOR		R4546	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5616		M	RESISTOR		R4547	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
5617		M	RESISTOR		R4548	1-216-809-11	METAL CHIP 100 5% 1/10W		
5618		M	RESISTOR		R4549	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5619		M	RESISTOR		R4550	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5620		M	RESISTOR		R4551	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5621		M	RESISTOR		R4552	1-216-837-11	METAL CHIP 22K 5% 1/10W		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5622		M	RESISTOR		R4553	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5623		M	RESISTOR		R4554	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5624		M	RESISTOR		R4555	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5625		M	RESISTOR		R4559	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5626		M	RESISTOR		R4560	1-216-817-11	METAL CHIP 470 5% 1/10W		
5627		M	RESISTOR		R4561	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5628		M	RESISTOR		R4563	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5629		M	RESISTOR		R4564	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5630		M	RESISTOR		R4565	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5631		M	RESISTOR		R4566	1-216-864-11	SHORT CHIP 0		
5632		M	RESISTOR		R4567	1-216-864-11	SHORT CHIP 0		
5633		M	RESISTOR		R4568	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5634		M	RESISTOR		R4572	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5635		M	RESISTOR		R4573	1-216-864-11	SHORT CHIP 0		
5636		M	RESISTOR		R4574	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5637		M	RESISTOR		R4576	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5638		M	RESISTOR		R4577	1-216-839-11	METAL CHIP 33K 5% 1/10W		
5639		M	RESISTOR		R4578	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5640		M	RESISTOR		R4579	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5641		M	RESISTOR		R4580	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5642		M	RESISTOR		R4583	1-216-864-11	SHORT CHIP 0		
5643		M	RESISTOR		R4584	1-216-864-11	SHORT CHIP 0		
5644		M	RESISTOR		R4585	1-216-864-11	SHORT CHIP 0		
5645		M	RESISTOR		R4586	1-216-864-11	SHORT CHIP 0		
5646		M	RESISTOR		R4587	1-216-864-11	SHORT CHIP 0		
5647		M	RESISTOR		R4588	1-216-864-11	SHORT CHIP 0		
5648		M	RESISTOR		R4589	1-216-864-11	SHORT CHIP 0		
5649		M	RESISTOR		R4592	1-216-864-11	SHORT CHIP 0		
5650		M	RESISTOR		R4593	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5651		M	RESISTOR		R4594	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5652		M	RESISTOR		R4595	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5653		M	RESISTOR		R4596	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5654		M	RESISTOR		R4597	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5655		M	RESISTOR		R4599	1-216-864-11	SHORT CHIP 0		
5656		M	RESISTOR		R4601	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5657		M	RESISTOR		R4603	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5658		M	RESISTOR		R4604	1-216-864-11	SHORT CHIP 0		
5659		M	RESISTOR		R4606	1-216-864-11	SHORT CHIP 0		
5660		M	RESISTOR		R4607	1-216-864-11	SHORT CHIP 0		
5661		M	RESISTOR		R4608	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5662		M	RESISTOR		R4609	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5663		M	RESISTOR		R4612	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5664		M	RESISTOR		R4613	1-216-809-11	METAL CHIP 100 5% 1/10W		
5665		M	RESISTOR		R4614	1-216-864-11	SHORT CHIP 0		
5666		M	RESISTOR		R4615	1-216-864-11	SHORT CHIP 0		
5667		M	RESISTOR		R4616	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		
5668		M	RESISTOR		R4617	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		
5669		M	RESISTOR		R4619	1-216-864-11	SHORT CHIP 0		
5670		M	RESISTOR		R4620	1-216-864-11	SHORT CHIP 0		
5671		M	RESISTOR		R4623	1-216-864-11	SHORT CHIP 0		
5672		M	RESISTOR		R4631	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5673		M	RESISTOR		R4632	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5674		M	RESISTOR		R4633	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5675		M	RESISTOR		R4635	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5676		M	NETWORK		RB4000	1-234-370-21	RES, NETWORK 22X4 (1005)		
5677		M	NETWORK		RB4001	1-234-370-21	RES, NETWORK 22X4 (1005)		
5678		M	NETWORK		RB4002	1-234-370-21	RES, NETWORK 22X4 (1005)		
5679		M	NETWORK		RB4003	1-234-370-21	RES, NETWORK 22X4 (1005)		
5680		M	NETWORK		RB4004	1-234-370-21	RES, NETWORK 22X4 (1005)		
5681		M	NETWORK		RB4005	1-233-796-11	RES, NETWORK (1608)		
5682		M	NETWORK		RB4006	1-239-711-91	NETWORK RESISTOR (CHIP) 0		
5683		M	NETWORK		RB4007	1-239-711-91	NETWORK RESISTOR (CHIP) 0		
5684		M	NETWORK		RB4008	1-233-796-11	RES, NETWORK (1608)		
5685		M	NETWORK		RB4009	1-234-371-21	RES, NETWORK 47X4 (1005)		
5686		M	NETWORK		RB4010	1-234-371-21	RES, NETWORK 47X4 (1005)		
5687		M	NETWORK		RB4011	1-234-371-21	RES, NETWORK 47X4 (1005)		
5688		M	NETWORK		RB4012	1-234-371-21	RES, NETWORK 47X4 (1005)		
5689		M	NETWORK		RB4013	1-234-371-21	RES, NETWORK 47X4 (1005)		
5690		M	NETWORK		RB4014	1-234-371-21	RES, NETWORK 47X4 (1005)		
5691		M	NETWORK		RB4015	1-234-371-21	RES, NETWORK 47X4 (1005)		
5692		M	VARISTOR		VD4100	1-805-043-11	ABSORBER, CHIP SURGE		
5693		M	VARISTOR		VD4101	1-805-043-11	ABSORBER, CHIP SURGE		
5694		M	VARISTOR		VD4102	1-805-043-11	ABSORBER, CHIP SURGE		

No.	#	Board	Type	▲/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5695		M	VARISTOR		VD4103	1-805-043-11	ABSORBER, CHIP SURGE		
5696		M	VARISTOR		VD4104	1-805-043-11	ABSORBER, CHIP SURGE		
5697		M	VARISTOR		VD4105	1-805-043-11	ABSORBER, CHIP SURGE		
5698		M	VARISTOR		VD4106	1-805-043-11	ABSORBER, CHIP SURGE		
5699		M	VARISTOR		VD4107	1-805-043-11	ABSORBER, CHIP SURGE		
5700		M	VARISTOR		VD4108	1-805-043-11	ABSORBER, CHIP SURGE		
5701		M	VARISTOR		VD4109	1-805-043-11	ABSORBER, CHIP SURGE		
5702		M	CRYSTAL		X4000	1-795-739-22	CRYSTAL OSCILLATOR (SMD)		
5703		M	CRYSTAL		X4200	1-781-465-21	VIBRATOR, CRYSTAL		
5704		M	CRYSTAL		X4400	1-781-829-22	OSCILLATOR, CRYSTAL (SMD)		
5705		M	CRYSTAL		X4401	1-813-095-11	VIBRATOR, CRYSTAL		

9-978-795-03

154 KDE42XBR950/KDE50XBR950 (UC)

**Sony EMCS Corporation  
Ichinomiya TEC**

**English**  
2005HL08-Data  
Made in Japan  
© 2005. 8